

AN-1367 Application Note

One Technology Way • P.O. Box 9106 • Norwood, MA 02062-9106, U.S.A. • Tel: 781.329.4700 • Fax: 781.461.3113 • www.analog.com

I²C Interface Between the ADE7953 and the ADuCM360

by Fermi Lim, Daniel Kim, and Hariharan Mani

INTRODUCTION

This application note demonstrates the implementation of an I²C interface between the ADE7953 (the slave) and the ADuCM360 (the master), using C programming language. The ADE7953 is a single-phase energy metering IC, and the ADuCM360 is an ARM* Cortex*-M3-based microcontroller. The ADE7953 contains registers that are 8, 16, 24, or 32 bits long. While writing the source code, it is important to make sure that the data size for the read/write operation is identified based on the address of the register. The register list in the ADE7953 data sheet contains all the relevant information.

This application note introduces the ARM Cortex-M3 core and the ADuCM360 microcontroller unit (MCU), followed by the initialization steps that need to be completed within the ADuCM360, and finally the implementation of the I²C interface between the ADE7953 and the ADuCM360. The sample codes described in this application note can also be used for other Analog Devices, Inc., processors that are based on the ARM Cortex-M core.

The complete source code for establishing the I²C interface is available as a downloadable file, AN_1367_I2C_interface.zip, at www.analog.com/ADE7953 or www.analogcom/ADuCM360.

This application note describes how to implement the source code in the Visual C++ 2012 integrated development environment (IDE), and provides useful insight regarding the I²C communication ports of the ADE7953 and the ADuCM360.

To validate the source code, the following equipment and software were used:

- ADE7953 and ADuCM360 evaluation module boards (EVMs)
- Software development environment: Keil MDK-ARM Version 4.72
- Terminal emulator: Tera Term Version 4.79
- IDE: Visual C++ 2012
- Laptop personal computer (PC)

The entire lab setup is shown in Figure 1. The two evaluation boards are connected with the help of wires, as shown in Figure 2. Because an isolation interface was not considered for this setup, both boards are powered by a common supply voltage and share a common ground. If isolating the I²C interface, the propagation delay of the isolators must be taken into account.



Figure 1. Lab Setup

TABLE OF CONTENTS

Introduction	1
Revision History	2
Setup Description	3
ARM Cortex-M3 Core and ADuCM360 MCU	5

REVISION HISTORY

9/15—Revision 0: Initial Version

Initializing the ADuCM360 for UART and I ² C8
I ² C Interface: ADuCM360 and ADE7953 10
Simulating an Embedded C Code Using Visual C++ 12
Conclusion

SETUP DESCRIPTION

The terminal emulator software, Tera Term Version 4.79, is used to read from or write to any of the ADE7953 registers through the ADuCM360. The universal asynchronous receiver/transmitter (UART) communication interface is used between the ADuCM360 and the PC to send and receive the read/write commands and data. The Tera Term Version 4.79 software, including examples of complete source code for the UART interface-based communication, is available for free from various sources, including the OSDN Corporation. Figure 3 shows the terminal window where the get and set commands of the example code are used to access the ADE7953 registers. The syntax for the two commands are

- Set REG_ADDR value The set command writes the register located at Address REG_ADDR with a specific value.
- Get START_REG_ADDR REGISTER_NUMBER
 The get command reads the contents of the registers
 starting from Address START_REG_ADDR continuously
 starting from REGISTER_NUMBER. The number of
 register locations to be read is determined by
 REGISTER_NUMBER.

The uniqueness of the source code is that it allows the PC to communicate with the ADE7953 even without the knowledge of the data size of each of the registers, because the register lookup table is already implemented.



Figure 2. Connection Between ADuCM360 EVM and ADE7953 EVM

ADDRESSES OF ADE7953

0x00000100 0x00003456 🖌 0x00000000

0×00000000

0x00000000

0x00000108

	/								
	🛎 COM13:115200bau	d - Tera Term VT							
/	File Edit Setup Co	ntrol Window H	elp						
	Love longSu/T2C1	not AvA Ava							
	0.00000000	0-00000000	0-00000000	0-00000000	0.00000000	00000000000	0.00000000	0-00000000	0.00000000
	0~00000000	0-00000000	0~00000000	0,00000000	0.00000000	0X00000040	000000000	0.00000000	000000000
\		ant 0-100 0-1	a						
	0-0000100	0-0000ffff	0~0000000	0-00008004	0-000003f	0-00000035	0-00000000	0-00000000	0~0000300
	0×00000100	0,0000000000	0_00000000	0x00000000	8×88887555	0,000000000	8x888888656	0_000000000	8×80888888
	GROUDIUS	01000000000	010000000	0100001111	0100001111	01100000000	0100000004	010000000	010000000
	LaveJonaSu/1201	get 0x200 0x2	0						
	0×00000200	0×00000000	0x003f0000	0×00000000	0x0000e419	0x0000e419	0x00000000	0x00000000	0x00000000
	0×00000208	0×00000000	0×00000000	0×00000000	0×00000000	8×00000000	0×00000000	0×00000000	0x00000000
	0×00000210	0x00000000	0×00000000	0x00000000	0x00fffffff	0×00000000	0x00000000	0x00Fffb3a	0x00fff273
	0×00000218	0x00000385	0x00fffe14	0x00000e14	0x00001946	0x000006ed	0x000006ed	0x00000000	0x0000000x0
	LaveJongSu/1201	get 0x300 0x2	0						
	0×00000300	0x00000000	0x003f0000	0x00000000	0x0000c419	0x0000e419	0x00000000	0x00000000	00000008x8
	0×00000308	0×00000000	0×00000000	0×00000000	0x00000000	0×00000000	0x00000000	0x00000000	0x000000000
	0×00000310	0x00000000	0×00000000	0×00000000	Øxfffffffff	8×00000000	0x00000000	0xfffffbf7	0xffffef2f
	0×00000318	0xffffffe12	0xfffffeb6	0x00000e69	0x00001994	0×000006ed	0x000006ed	0x00000000	0x00000000
	S								
	LoveJongSu/I2C1	1		REGIS	FER VALU	JES OF AI	DE7953		
	0x0000123	6							
	- 1. I2C test	on ADE7953 S1	ave and RDuCH3	60/361 Master					
	> Write Ux	1234 16-bit d	lata into 0x100	ADE 7953 inter	nal register ·				
	> Hfter re	ading Ux100 H	DE7953 interna	l register, sh	IOW				
	LoveJongSu/HUL7	7551			.				
		Figur	e 3. Termir	al Window	Showing	the Use of C	Set Commo	and	
COM10,115000baud Tara T.									
COMID:115200baud - Tera Te	erm vi								
e Edit Setup Control Wii	ndow Help								
nve.longSu/ADE79531set	0×100 0×3456	5							
voorngoarnigen voorgee		/							
veJongSu/ADE7953]get	0x100 0x10								

Figure 4. Terminal Window Showing the Use of Get and Set Commands

0x0000003f

0x00007fff

0x0000003f

0x0000afcf

0×00000000

0×00000000

0x00000000

0x000055be

0×00000300

0x00000000

13338-104

0x00001234

0x00001c71

ARM CORTEX-M3 CORE AND ADUCM360 MCU

The ARM Cortex-M3 core is based on the ARMv7-M architecture. The Cortex-M family is used primarily in the embedded market, in applications requiring a core clock frequency of less than 300 MHz. Most of the embedded applications such as ac motor control and other simple home appliances do not need any sophisticated features such as a memory management unit (MMU) and NEON[™], thus making the Cortex-M family a good choice. The architecture of the Cortex-M core is simpler than other Cortex families.

Cortex-M family of cores include the following unique features:

- A fixed memory map
- A common nested vectored interrupt controller (NVIC)
- Thumb[®]-2 instruction set support only

The code written for one Cortex-M family MCU can be easily modified to use with another Cortex-M family MCU, even if it is from another vendor. Furthermore, ARM provides useful Cortex Microcontroller Software Interface Standard (CMSIS) software for various applications, for free.

Figure 5 compares a fixed memory map of the Cortex-M family core with that of the ADuCM360.

As shown in Figure 5, the ADuCM360 includes 8 kB SRAM and 128 kB Flash/EE memory based on a fixed memory map for the Cortex-M family. All of the ADuCM360 peripherals are mapped into the 0x40000000 to 0x4004FFFF address range. The address range of 0xE000E000 to 0xE000EE000 is for the Cortex-M core memory mapped registers (MMRs); the 0x40000000 to 0x4004FFFF address range is for the ADuCM360 MMRs.

Note the following regarding the NVIC:

- The Cortex-M family of cores has only one core interrupt, whereas older ARM cores have a fast interrupt as well as a normal interrupt.
- Two sets of registers are available: interrupt set enable registers (ISERs) and interrupt clear enable registers (ICERs).

Usually, peripherals such as UART and I²C have their own registers to enable/disable the interrupts. Only one of the interrupts transferred by each peripheral can reach the core according to the ISER/ICER values. The ISERs are located in the 0xE000E100 to 0xE000E13C address range, and ICERs are located in the 0xE000E180 to 0xE000E1BC address range. When a Cortex-M family MCU is used, modify ISERs and ICERs as needed. Of all available IDE tools, Keil MDK-ARM and IAR Embedded Workbench® are the most popular. Both these tools can be used when the executable image is within the specified size limitations. The Keil MDK-ARM IDE was used in the lab setup for this application note. To use the code with the IAR Embedded Workbench IDE, the ADuCM360StartUp.s file, from the downloadable file, AN_1367_I2C_interface.zip, must be changed. When changing the IDE from Keil MDK-ARM to IAR Embedded Workbench, or vice versa, only the assembler directives have to be modified and not the instructions, because the assembler directives depend on the assembler being used and the instruction set depends on the MCU core.



Figure 5. Memory Map Comparison Between Cortex-M and the ADuCM360

Figure 6 and Figure 7 shows the tool chains of the Keil MDK-ARM and IAR Embedded Workbench IDE, respectively. In Figure 6, armcc, armasm, and armlink are displayed in shaded gray to indicate that they form the C/C++ compiler, assembler, and linker, respectively. Similarly, in Figure 7, iccarm, iasmarm, and ilinkarm are indicated in shaded gray to denote that they are the compiler, assembler, and linker, respectively. Figure 8 shows the architecture of the ADuCM360. Among the peripherals of the ADuCM360, only the I²C, UART, and GPIOs are used to communicate with the ADE7953 and the PC.

First, configure UART to communicate with PC, and then configure the I^2C to interface with the ADE7953.

Though the focus of this application note is the I²C interface, the sample codes provided in the downloadable file, AN_1367_I2C_interface.zip, have modules for UART interface as well as GPIO usage.



Figure 7. IAR Embedded Workbench Tool Chain

AN-1367



INITIALIZING THE ADUCM360 FOR UART AND I²C

When developing any embedded C code, first disable the watchdog timer, and then configure the clock for the core and peripherals as needed.

After any reset operation, the watchdog timer is enabled automatically. To disable the watchdog timer of the ADuCM360, write 0'b0 to T3CON[5], the watchdog timer enable bit.

// Step 1. Disable the watchdog timer.
*pT3CON=0x0;

Next, configure the clocks for the UART, I²C, and the Cortex-M3 core. Figure 9 and Figure 10 show how to configure the clocks for the UART and I²C. Configure the core clock as 16 MHz, and then set the control registers of the UART and the I²C interface accordingly. When selecting the I²C system clock divide ratio via CLKCON1, ensure that the core clock frequency is less than or equal to that of the I²C system clock, that is, HCLK \leq

I2CCLK. This is true for all peripherals whose clock can be divided by CLKCON1. If the peripheral clock is slower, the clock to the peripheral is gated and the peripheral does not work. For more information, refer to the ADuCM360/ ADuCM361 Hardware User Guide.

As shown in Figure 9, the UART interface with the PC is set up with a baud rate of 115,200 bps. Therefore, configure the Tera Term tool accordingly as well. Refer to the project file of Tera Term named 'MyTera_Setup2014.INI', which is available from the downloadable file, AN_1367_I2C_interface.zip.

To use the Tera Term project file, select the **Restore setup** option from the **Setup** menu, as shown in Figure 11. Next, select the **MyTera_Setup2014.INI** project file from the location saved on the PC.



Figure 11. Tera Term Configuration

The following C code instructions, which are extracted from the **ADuCM360_I2C_AppNote.c** file (from the downloadable file, AN_1367_I2C_interface.zip), show how to configure the UART interface. All the variables in the code denote MMRs related to the clock, GPIOs, and UART.

```
// Step 2. Configure clocks.
```

// UART speed rate is 115,200 bps: UCLK/DIV = 16 MHz.

```
*pCLKDIS=0x03F7;
```

*pCLKSYSDIV=0x00;

```
*pCLKCON0=0x0000;
```

*pCLKCON1=0x0000;

// Step 3. Set up the behavior of the chosen UART.

*pCOMCON=0x00; // UART peripheral is
enabling.

// P0.2 is UART Tx; P0.1 is UART Rx.

*pGP0CON=0x003C;

```
*pCOMDIV=0x0002; // COMDIV = 2;
```

*pCOMFBR=0x915C; // Set to 115,200 bps

```
// WordLength = 8 bits, stop bit = 1 bit,
no parity check.
```

*pCOMLCR=0x0003;

// COMTX and COMRX are enabled; COMIEN[1]
= COMIEN[0] = 1

```
*pCOMIEN=0x0003;
```

The interrupt enable register for the UART, COMIEN, is for UART peripheral interrupts only (see the ADuCM360/ADuCM361 Hardware User Guide for more information). For the UART transmitter (Tx)/receiver (Rx) interrupts to be transferred to Cortex-M3 core, set the corresponding ISER, as follows:

// ISER = 0xE000E100; enabling UART
interrupt.

write_reg(0xE000E100,0x00020000);

It is important to differentiate between an interrupt and an exception. An exception can be classified as synchronous or asynchronous. Any system fault can generally be called a synchronous exception, whereas an interrupt is an asynchronous exception. The UART is located in the 17th position in the interrupt vector table of the ADuCM360. Therefore, to enable the UART interrupt, set the 0xE000E100 address location of the ISER as 0x00020000. Similarly, to enable the I²C interrupts, set the ISER as follows:

OldRegVal=read_reg(0xE000E100);

RegVal = OldRegVal | 0x00200000; // for I2C

write_reg(0xE000E100,RegVal); //ISER =
0xE000E100;

Next, initialize the I²C peripheral of the ADuCM360. The ADE7953 is always the slave and, therefore, the ADuCM360 must be configured as the master.

As a master, the I²C modes available in the ADuCM360 include

- Standard mode: 100 kHz
 First set CLKSYSDIV[0] = 0, CLKCON1[8:6] = 000 and then then set I2CDIV[15:8] = 0x4E, I2CDIV[7:0] = 0x4F
- Fast mode: 400 kHz First set CLKSYSDIV[0] = 0, CLKCON1[8:6] = 000 and then set I2CDIV[15:8] = 0x12, I2CDIV[7:0] = 0x13

The generation method of SCL in standard mode is shown in Figure 12.



Figure 12. Generation Method of Standard 100 kHz SCL

As shown in Figure 10 and Figure 12, f_{12CCLK} is 16 MHz, and if CLKSYSDIV[0] = 0 and CLKCON1[8:6] = 0 are initialized, the SCL bit rate, f_{SCL} , is calculated using the following formula:

$$f_{SCL} = \frac{f_{I2CCLK}}{(Low + High + 3)} [Hz]$$

where:

Low is the low period of SCL, which is set by I2CDIV[7:0]. *High* is the high period of SCL, which is set by I2CDIV[15:8].

In standard mode, I2CDIV[7:0] is set as 0x4F (0d'78) and I2CDIV[15:8] is set as 0x4E (0d'79). Using these values, 100 kHz is obtained as the SCL clock rate.

To use this code with Visual C++, the following piece of instructions was added:

#ifdef FermiEmulation_Mode

//to initialize all of the ADuCM360
register set.

ADuCM360_RegsInit();

#endif

For more information about this sample code, see the I²C Interface: ADuCM360 and ADE7953 section. This sample code is based on the super loop architecture. Therefore, this code style cannot handle multiple tasks. The use of menus via the Tera Term tool allows any graphic user interface (GUI) component to be implemented easily with Visual C++ or Visual Basic. Most of factory automation systems use this approach.

I²C INTERFACE: ADUCM360 AND ADE7953

An I²C interface is implemented using two pins, SCL and SDA. (Note that, throughout this section, multifunction pins, such as P2.0/SCL/UARTCLK, are referred to by a single function, for example, SCL, when only that function is relevant.)

- SCL: serial clock pin. Only the master can generate the I²C clock; SCL can be used in either standard mode or fast mode.
- SDA: serial data pin.

Both SCL and SDA are bidirectional and must be connected to a positive supply voltage using a pull-up resistor. Although, SCL is generated by the ADuCM360 in this case, in theory, it can be bidirectional because the I²C interface of the ADuCM360 can be set as a slave. The I²C interface of the ADE7953 can only be used as a slave.

Note that the ADE7953 requires a minimum delay of 0.1 μ s between the SCL and SDA edges; see the t_{HD,DAT} specification in the data sheet. The ADE7953 data sheet also lists other timing specifications that must be maintained.

Figure 14 shows a typical I²C transfer sequence.

The ADuCM360 has two I²C interfaces: one via the P0.1/ SCLK1/SCL/SIN and P0.2/MOSI1/SDA/SOUT pins and the other via the P2.0/SCL/UARTCLK and P2.1/SDA/UARTDCD pins. For this example, the P2.0/SCL/UARTCLK and P2.1/SDA/UARTDCD pins are used.

// P2.0/SCL/UARTCLK is used for SCL, P2.1/SDA/UARTDCD is used for SDA. *pGP2CON |= 0x05;

// Master Enable, Tx/Rx Request Interrupt Enable.

```
*pI2CMCON = 0x131;
```

Every slave has an address for I^2C operation and a master can identify a slave using this address, which is set by the vendor. For example, the ADE7953 address is 0x38.

The I²C addressing type can be either 7-bit or 10-bit. Due to the addressing type of the ADE7953, 7-bit addressing is used in this case.

The I²C interface of the ADuCM360 has a 2-byte Tx and Rx FIFO scheme, as shown in Figure 13.

The core clock and peripheral clock are usually different. If data in one clock domain is transferred into the other clock domain, metastability can occur leading to error in communication. To avoid metastability, it is common to use a FIFO or dual-port RAM. Metastability cannot be resolved by the use of combinational logic.





Figure 14. Typical I²C Transfer Sequence





Figure 15 shows how the master sends the 7-bit address (Bits[7:1]) and the directional (read or write) bit (Bit 0) to the slave.

The I2CADR0 register stores the slave address and the directional bit.

The I²C interface of the ADE7953 operates at a maximum serial clock frequency of 400 kHz.

The I²C write and read operations of the ADE7953 are shown in Figure 16 and Figure 17, respectively.

The ADE7953 I²C address is 0b'0111000x, where x is a directional bit. A 0 indicates a write, and a 1 indicates a read.

A write operation on the ADE7953 is initiated when the master issues a 7-bit device address and the directional bit is set to 0 (that is, 0x70). It is then followed by the 16-bit address of an internal register. Whenever each byte is received, the ADE7953 issues an acknowledge to the master. Following that, the master sends the register data, MSB first. The length of this data can be 8, 16, 24, or 32 bits long, depending on the register. When transmission of the final byte is complete, the master issues a stop condition, and the bus returns to the idle condition.

When writing source code, it is essential to understand how the I²C is implemented in the target device.

The following piece of code represents the ADE7953 I²C write operation:

```
void I2C_Write_ADE7953(void)
```

```
{
   int i=0;
   if (((I2CMasterTxDat[0] >4) &&
(I2CMasterTxDat[0] <=
6)) | | ((I2CMasterTxDat[0] >9))) {
      printf("The specified ADE7953
register address is out of range\n");
   } else {
      ReadFlag=0;
      uiMasterTxIndex = 0;
      // Master case : send 1st data.
      *pI2CMTX =
I2CMasterTxDat[uiMasterTxIndex++];
      I2cMWrCfg(0x70);
      while (!ucComplete){}
      ucComplete = 0;
   }
}
```

The if condition in the preceding code is based on the ADE7953 address range. The MSB of the register address determines whether the address is out of range. Refer the ADE7953 data sheet and the ADE7953 Evaluation Board User Guide for more information.

The I2cMWrCfg(0x70) routine sends 0x01110000 (0x70) to the ADE7953, as shown in Figure 15 and Figure 16.

Whenever each byte is received, the ADE7953 issues an acknowledgement to the master and the ADuCM360 generates an I²C interrupt to invoke the I2C0_Master_Int_Handler function found in the ADuCM360_Test_Lib.h file, which changes the value of ucComplete in the preceding code. If the ucComplete value is changed, I2C_Write_ADE7953() exits from the while loop and continues to send a byte to the ADE7953.

When writing to any of the ADE7953 registers, it is essential to make sure that the length of the data matches the description of the register. The same concept applies while reading back data from the ADE7953 IC. The I2C0_Master_Int_Handler function considers the register data length during both write and read operations.

Use Visual C++ debugger to help with debugging when there are bugs in the code, particularly while working on initial projects or with new ICs. Using the Visual C++ debugger may also help the user understand how a piece of code works.

Generally, the embedded code involves physical addresses but Visual C++ can only interpret virtual addresses, which are assigned by the MMU of the operating system (OS). The virtual addresses may change when the program is run. The Cortex-M family microcontrollers do not include a MMU; therefore, a MCU based on the Cortex-M core cannot be ported to, for example, Windows[®] CE or Linux[®] OS, easily. To learn how to use Visual C++ with embedded C code, refer to the Simulating an Embedded C Code Using Visual C++ section.

SIMULATING AN EMBEDDED C CODE USING VISUAL C++

After completing the entire C code in Visual C++, to make an executable image for the ADuCM360, perform a rebuild in the Keil MDK-ARM or IAR Embedded Workbench IDE. This rebuild is possible because of the following C/C++ precompiler directive in the sample code:

#ifdef FermiEmulation_Mode

// to initialize all of the ADuCM360
register set.

ADuCM360_RegsInit();

#endif

The following step by step procedure is useful to understand the debugging process when using the Visual C++ 2012 debugger tool. Note that the following method can be used with any Visual Studio version.

1. Create a new project as shown in Figure 18.



Figure 18. Create New Project

Select Empty Project as shown in Figure 19.



Figure 19. Select Empty Project

2.

AN-1367

3338-022

3. Add all the sample files and existing items into the project, as shown in Figure 20 and Figure 21.

0 6 0	÷	đ 🗿 🥦 🔂					
earch Solution Exp	lorer	(Ctrl+;)	ρ- -				
Solution 'MS_ MS_I2C_La Sterma	I2C_La I b I Depi	ab' (1 project) endencies					
Header		Add	•	-	New Item	Ctrl+Shift+A	
Source E	₽.	Class Wizard	Ctrl+Shift+X	*0	Existing Item	Shift+Alt+A	
		Scope to This		**	New Filter		
	Ð	New Solution Explorer View	v		Class		
	ж	Cut	Ctrl+X	14	Resource		
	Ð	Сору	Ctrl + C	-			
	â	Paste	Ctrl+V				
	×	Delete	Del				
X:::	X :::	Rename	F2				
	ş	Properties					



Figure 21. Add Existing Items

4. Modify certain properties as shown in Figure 22 to Figure 25.



Figure 22. Select Properties

 Select the folder that contains the sample codes under C/C++. Click Additional Include Directories. Refer to Figure 23 and Figure 24.

Configuration: Active(Debug)	Platform: Active(Win32)	Configuration Manager
> Common Properties	Additional Include Directories Additional Busing Directories	-
General	Debug Information Format	Program Database for Edit And Continue (/ZD
Debugging	Common Language RunTime Support	-
VC++ Directories	Consume Windows Runtime Extension	
# C/C++	Suppress Startup Banner	Yes (/nologo)
General	Warning Level	Level3 (/W3)
Optimization	Treat Warnings As Errors	No (MXL)
Preprocessor	SDL checks	
Code Generation Language	Multi-processor Compilation	



Additional Include Directuries	- 17 - X	Additional Include Directories	
	New Line (Ctrl-In	El/Fermi_Lab/Q2C_AppNote	•
•	, "	• ()	. *
Inherited values:		Inherited values:	
	*		•
	1		
P Inherit from parent or project defaults	Macross	Dinherit from parent or project def	aulti (Macrosi)>

Figure 24. Select Folder with Visual Studio Sample Code

 For Visual C++ compiler only, define FermiEmulation_Mode, as shown in Figure 25. This step predefines FermiEmulation_Mode based on which Visual C++ code can be programmed to work with the embedded C code.

When using other Visual Studio versions, the corresponding options shown in Figure 22 to Figure 25 need to be searched in the menu options, but the procedure is the same. Add _CRT_SECURE_NO_ WARNINGS only for .NET (see Figure 25).

Configuration: Active(Debug)	Platform: Active(Win32)	•	Configuration Manager.
Common Properties Configuration Properties General Optimization Code Code	Preparento Celebation Underline Preprocesso Definitions Underline All Preprocesso Definitions Underline All Preprocesso Definitions Preprocess to File Preprocess Support Line Numbers Reep Comments	vitions) For mit mutation, Moder, CR No No No No No	t_secure_no_warnings

Figure 25. Define the Code

 Compile and link all the sample codes under Visual C++, as shown in Figure 26.

Search Solutions Feynore (Sriv) P Solutions WSL/DC.Lath (S. project) * CNAS DC.Lath * Status WSL/DC.Lath (S. project) * Solutions WSL/DC.Lath * Solutions Page * Solutio	<pre>D - void men_display(void); Usint main() { units_id, addr; int tite; unitSet f.emi20012000; to initialize all of the ADuCDIGGD register set. ADuCDIGG_Registric(); Findler fermismulation_Node intimumer units_reg(AntiBeclifor, BendB028000); // ISIR = ButBB02180; Emails intimumer units_reg(AntiBeclifor, BendB028000); // ISIR = ButBB028000; Emails intimumer units_reg(AntiBeclifor, BendB028000; Emails); // ISIR = ButBB02800; Emails</pre>
	Output Source of the second seco

Figure 26. Compile and Link all Sample Codes

As shown in Figure 26, there are no errors and warnings in the code.

13338-021

3338-019

Figure 27 shows how to simulate the embedded code using Visual C++.



Figure 27. Simulate Embedded Code

To understand how Visual C++ works, analyze both **ADuCM360_Regs.c** and **ADuCM360_Regs.h** carefully. These files define real addresses related to the ADuCM360 and enable the MMU to assign virtual addresses corresponding to the real addresses so that Visual C++ can debug the files. Note that the files can also be debugged by Keil MDK-ARM or IAR Embedded Workbench. If debugging is done using Keil MDK-ARM or IAR Embedded Workbench, FermiEmulation_Mode does not need to be used.

This debugging method is very simple and can be used on all types of processors. The advantage of using Visual C++

debugger is that the I2C0_Master_Int_Handler function and the set/get commands can be analyzed easily.

The following code of the I2C0_Master_Int_Handler function is for synchronization:

#ifndef FermiEmulation_Mode

a	sm{	nop}
asm{	nop	}
asm{	nop	}
asm{	DSE	8}
asm{	nop) }
asm{	nop	}
a' c		

#endif

The printf function in the downloaded sample code is specially developed to reduce code size when using Visual C++; therefore, if the Keil MDK-ARM or IAR Embedded Workbench runtime library is used, the code size may be larger. The compact printf function can be found in the **JongSuLib_V2.c** library file, which includes many other useful functions, such as register read/write functions. One useful library file, named **ADuCM360_Test_Lib.c**, includes functions to support **ADuCM360** peripherals such as I²C, SPI, UART, and ADCs/DACs. These two general-purpose libraries can be ported to other projects as well, as needed.

CONCLUSION

This application note demonstrates how to implement I^2C C code to monitor and modify the registers of the ADE7953 using the ADuCM360. To develop any embedded code, it is recommended that Visual C++ be used because coding and debugging are very simple using this tool. Then use Keil MDK-ARM or IAR Embedded Workbench to compile and link the C code to make an executable image without additional modification.

I²C refers to a communications protocol originally developed by Philips Semiconductors (now NXP Semiconductors).

©2015 Analog Devices, Inc. All rights reserved. Trademarks and registered trademarks are the property of their respective owners. AN13338-0-9/15(0)



Rev. 0 | Page 15 of 15