

Keysight X-Series EMI Receiver

This manual provides documentation for the following Analyzers:

MXE EMI Receiver N9038A

Notice: This document contains references to Agilent. Please note that Agilent's Test and Measurement business has become Keysight Technologies. For more information, go to www.keysight.com.

Notices

© Keysight Technologies, Inc.
2008-2014

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies as governed by United States and international copyright laws.

Trademark Acknowledgements

Manual Part Number

N9038-90031

Print Date

September 2014

Supersedes: Month 20xx

Published in USA

Keysight Technologies
1400 Fountaingrove Parkway
Santa Rosa, CA 95403

Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT WILL CONTROL.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

If software is for use in the performance of a U.S. Government

prime contract or subcontract, Software is delivered and licensed as "Commercial computer software" as defined in DFAR 252.227-7014 (June 1995), or as a "commercial item" as defined in FAR 2.101(a) or as "Restricted computer software" as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Keysight Technologies' standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Safety Notices

CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

Where to Find the Latest Information

Documentation is updated periodically. For the latest information about these products, including instrument software upgrades, application information, and product information, browse to one of the following URLs, according to the name of your product:

<http://www.keysight.com/find/mxe>

To receive the latest updates by email, subscribe to Keysight Email Updates at the following URL:

<http://www.keysight.com/find/MyKeysight>

Information on preventing analyzer damage can be found at:

www.keysight.com/find/PreventingInstrumentRepair

Is your product software up-to-date?

Periodically, Keysight releases software updates to fix known defects and incorporate product enhancements. To search for software updates for your product, go to the Keysight Technical Support website at:

<http://www.keysight.com/find/techsupport>

Table of Contents

1 Quick-Start

Initial Inspection	10
Verify the Contents	10
Shipping Problems?	10
Instrument Location and Rack Mounting Requirements	11
Locating the instrument	11
Cooling and rack mounting	11
Turning on the EMI Receiver the First Time	12
Initializing the instrument using a USB mouse	12
Initializing the instrument using front-panel navigation	17
Anti-Virus Software and Firewalls	21
Shortening the Instrument Power-On Time	22
Instrument Information	23
Power requirements	23
Protecting Against Overpowering	24
Instrument Maintenance	24
Protecting against electrostatic discharge	26

2 Front and Rear Panel Features

Front-Panel Features	30
Overview of key types	33
Display Annotations	37
Rear-Panel Features	39
Front and Rear Panel Symbols	41

3 Using the EMC32 Software

How to Set Up and Run the EMC32 Software	44
Configuring the MXE	44

Contents

4 Instrument Operating System

Microsoft Windows	46
Windows Help and Support Center	46
Keysight Software Installed	47
Keysight signal analyzer software	47
Customer Installation of Software	48
3rd party software verified by Keysight	48
Installation of other 3rd party software	48
User Accounts	49
Administrator account	49
Instrument accounts	49
Power Users accounts	49
Keysight Only user account	50
Keysight Service user accounts	50
Customer creation of accounts	50
Keysight X-Series EMI Receiver Licensing	51
Fixed Perpetual	51
Trial licenses	51
Licensing New Measurement Application Software - After Initial Purchase	52
Installation procedure over USB	52
Windows Configuration	54
Settings that can be changed	54
Settings that must not be changed	55
Autoplay/Autorun	57
Configuring Printers	58
Configuring LAN	59
Hostname	59
IP Address & Gateway	59
Connecting to a Network Shared Folder	59
Windows Security	61
Windows Firewall	61

Automatic Updates	61
Virus Protection	62
Spyware Protection	62
System Maintenance	63
Backup	63
System restore	63
Disk defragmenting	63
USB Connections	64
Disk Drive Partitioning and Use	66
Backing-up the factory calibration data	67
Disk Drive Recovery Process	68
Updating the software	70

5 Using Windows Tools

Navigating Windows Without a Mouse	74
Remote Desktop: Using the EMI Receiver Remotely	79
Overview of Remote Desktop operation	79
Setting up Remote Desktop operation	79
How to locate the computer name of the instrument	81
Running a Remote Desktop session	82
The Virtual Front Panel	92
Embedded Web Server: Using the X-Series Instruments Remotely	94
Accessing the instrument through the Internet	94
Accessing the Web Control SA tab	99
Selecting the Get Data tab	100
Selecting the Get Image tab	101
Selecting the SCPI Telnet tab	103
Selecting the Help tab	104
Capturing/Printing Displays and Windows	106
Windows Shortcuts and Miscellaneous Tasks	107
Windows shortcuts (key combinations)	107
Windows taskbar auto-hide feature	109

Contents

6 Troubleshooting

Check the Basics	112
Problems with Microsoft Windows 7	114
Returning an EMI Receiver for Service	115
Calling Keysight Technologies	115
Locations for Keysight Technologies	116
Read the Warranty	116
Service Options	117
Packaging the Instrument	117

1 Quick-Start

This section explains how to initialize the EMI Receiver.

The following topics can be found in this section:

[“Initial Inspection” on page 10](#)

[“Instrument Location and Rack Mounting Requirements” on page 11](#)

[“Turning on the EMI Receiver the First Time” on page 12](#)

[“Anti-Virus Software and Firewalls” on page 21](#)

[“Shortening the Instrument Power-On Time” on page 22](#)

[“Instrument Information” on page 23](#)

Initial Inspection

Inspect the shipping container and the cushioning material for signs of stress. Retain the shipping materials for future use, as you may wish to ship the instrument to another location or to Keysight Technologies for service.

Verify the Contents

Verify the shipping container contents using the inclosed box contents list.

Shipping Problems?

If the shipping materials are damaged or the contents of the container are incomplete:

- Contact the nearest Keysight Technologies office.
- Keep the shipping materials for the carrier's inspection.
- If you must return an EMI Receiver to Keysight Technologies, use the original (or comparable) shipping materials. See ["Returning an EMI Receiver for Service" on page 115.](#)

Instrument Location and Rack Mounting Requirements

Locating the instrument

Make sure that the fan inlet and exhaust vent areas on the sides of the instrument are not obstructed. The minimal required clearance is 2 inches. Airflow restrictions cause additional airflow noise and cause the fans to speed up so they can draw in enough air for the required cooling. This results in excessive audible noise.

Cooling and rack mounting

Do not rack mount the receiver side-by-side with any other instrument with side-by-side ventilation. Make sure the exhaust air from the first instrument is directed away from the inlet of the second unit. If the pre-heated air from the first instrument is directed into the second instrument, it can cause excessive operating temperatures in the second unit and can cause instrument failures. The instrument draws air in from the left side and exhausts air from the right side.

CAUTION

When installing the product in a cabinet, the convection into and out of the product must not be restricted. The ambient temperature (outside the cabinet) must be less than the maximum operating temperature of the product by 4° X for every 100 watts dissipated in the cabinet. If the total power dissipated in the cabinet is greater than 800 watts, then forced convection must be used.

Turning on the EMI Receiver the First Time

Initial power-on of the instrument can be accomplished using either of the following methods:

- “[Initializing the instrument using a USB mouse](#)” on page 12
- “[Initializing the instrument using front-panel navigation](#)” on page 17

NOTE During the initial power-on process, the instrument turns off and restarts several times. This **only** happens during the initial installation process.

Initializing the instrument using a USB mouse

Table 1-1

Steps	Actions	Notes
1. Connect the mouse	<ul style="list-style-type: none">• Connect the mouse to one of the instrument’s USB ports.	
2. Power on the instrument	<ul style="list-style-type: none">a. Position the instrument so you have easy access to the power cord and plug it in.b. Press the power switch (located in the lower left corner of the instrument’s front panel) to turn the instrument on.	<p>See “Instrument Location and Rack Mounting Requirements” and “Power requirements” on page 23 for more details.</p> <p>The instrument can require more than 5 minutes to power-on.</p> <p>The Keysight Technologies screen appears followed by a screen that allows you to select the operating system.</p> <div data-bbox="873 1367 1317 1614" data-label="Image">The image shows the Agilent Technologies logo, which consists of a stylized starburst icon to the left of the text "Agilent Technologies".</div>

Table 1-1

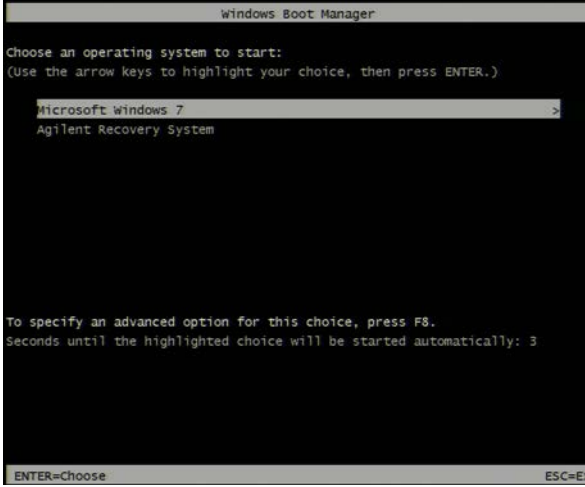
Steps	Actions	Notes
3. Launch Microsoft Setup	<ul style="list-style-type: none">Highlight Microsoft Windows 7 and press Enter to start the pre-installed operating system.	 <p>The screenshot shows the Windows Boot Manager interface. At the top, it says "Windows Boot Manager". Below that, it prompts the user to "Choose an operating system to start:" and provides instructions: "(Use the arrow keys to highlight your choice, then press ENTER.)". There are two options listed: "microsoft windows 7" (which is highlighted with a white bar) and "Agilent Recovery System". At the bottom of the screen, it says "To specify an advanced option for this choice, press F8." and "Seconds until the highlighted choice will be started automatically: 3". The bottom status bar shows "ENTER=Choose" on the left and "ESC=E" on the right.</p>

Table 1-1

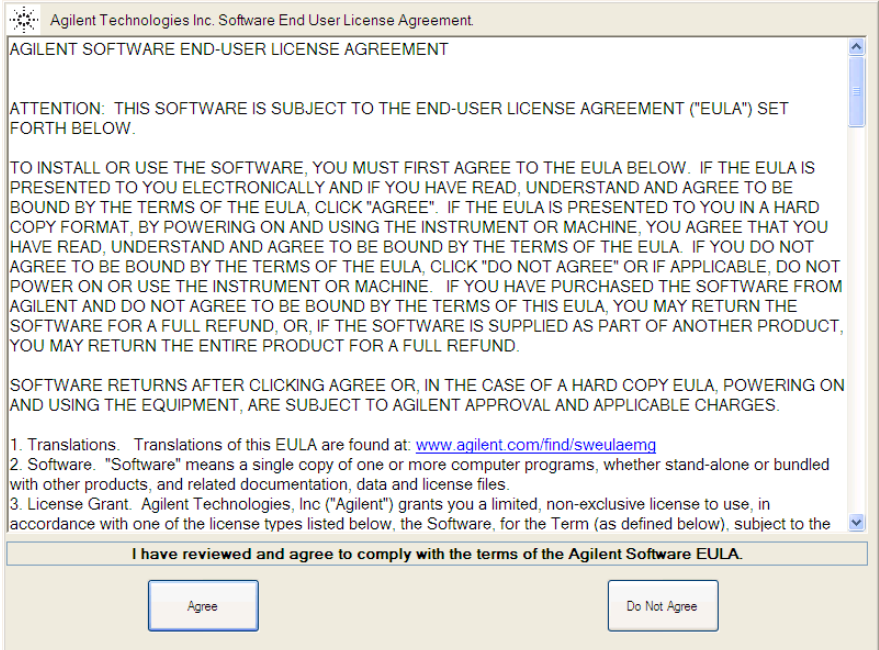

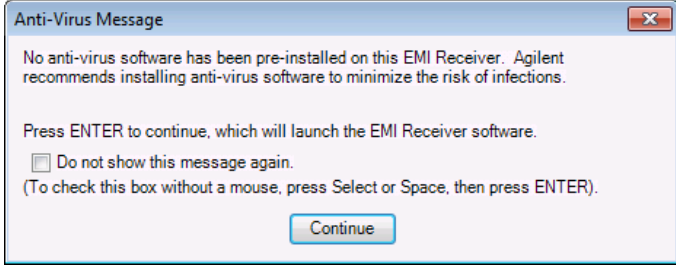
 
Steps	Actions	Notes
	<p>The instrument performs the following steps:</p> <ul style="list-style-type: none"> • Windows 7 Startup window • Black screen • Windows Please wait message window • Blue Keysight window • The following Welcome window appears giving you information about the End-User License Agreement. 	
	<p>At this time, it is safe to turn off the instrument before initializing the software.</p>	
<p>CAUTION</p>	<p>After launching the setup, do not turn off the instrument or remove power before the Setup Wizard completes and the system restarts. Turning off the instrument may corrupt the system and the application may not operate.</p>	
<p>4. Reboot and logon</p>	<ul style="list-style-type: none"> • Click Agree 	<p>When the instrument restarts, the following message window appears:</p> 

Table 1-1


Steps	Actions	Notes
		<p>This window appears and covers the LaunchXSA window.</p>
<p>NOTE</p>		<p>If you do not check the “Do not show this message again” check box, this message will be displayed each time the instrument is turned on. No application will start while this message is displayed. Before continuing, make sure that you carefully read the Anti-Virus message and determine what action is appropriate.</p>
<p>5. Disable the Anti-Virus message</p>	<ul style="list-style-type: none"> • Select the check box and click Continue. 	<p>Messages similar to the following continue to appear:</p>  <p>Several required processes continue. The XSA application initializes</p>
<p>6. Verify the installation</p>	<ol style="list-style-type: none"> a. On the instrument, press System, Show, System. b. Verify that the purchased application(s) appear in the list. 	<p>If you require further assistance, contact the Keysight support team. Online assistance: http://www.keysight.com/find/assist</p>
<p>3. View a signal</p>	<ol style="list-style-type: none"> a. Press Mode, Spectrum Analyzer. b. Press Input/Output, RF Calibrator, 50 MHz. c. Press FREQ Channel, Center Freq, 50, MHz. d. Press SPAN X Scale, 50, MHz. 	<p>This routes the internal 50 MHz signal to the instrument input.</p>

Quick-Start
Turning on the EMI Receiver the First Time

Table 1-1

Steps	Actions	Notes
-------	---------	-------

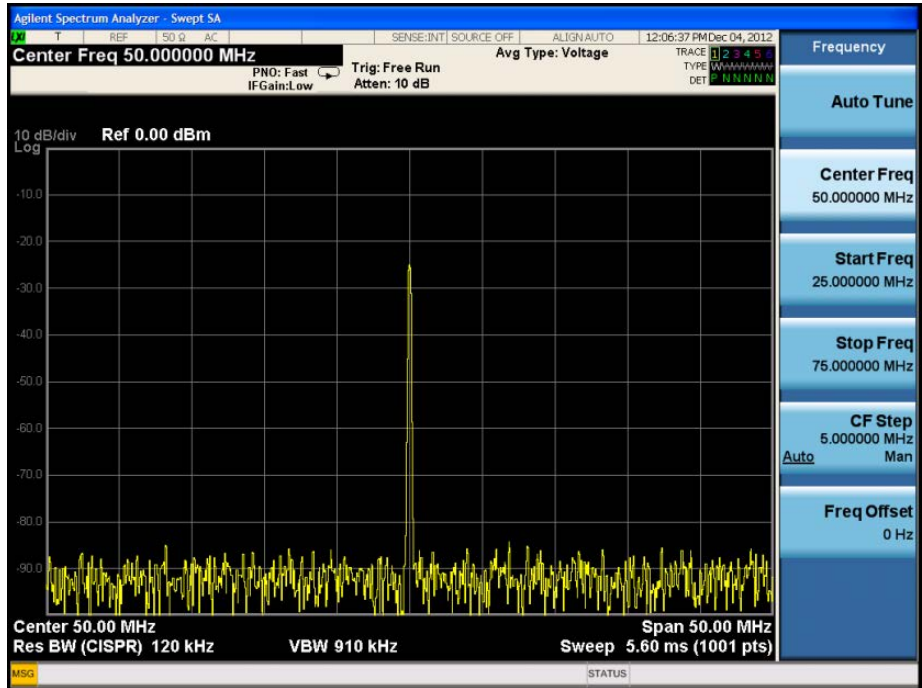The 50 MHz reference signal appears on the display.



Initializing the instrument using front-panel navigation

The following keys are used in the initialization process:

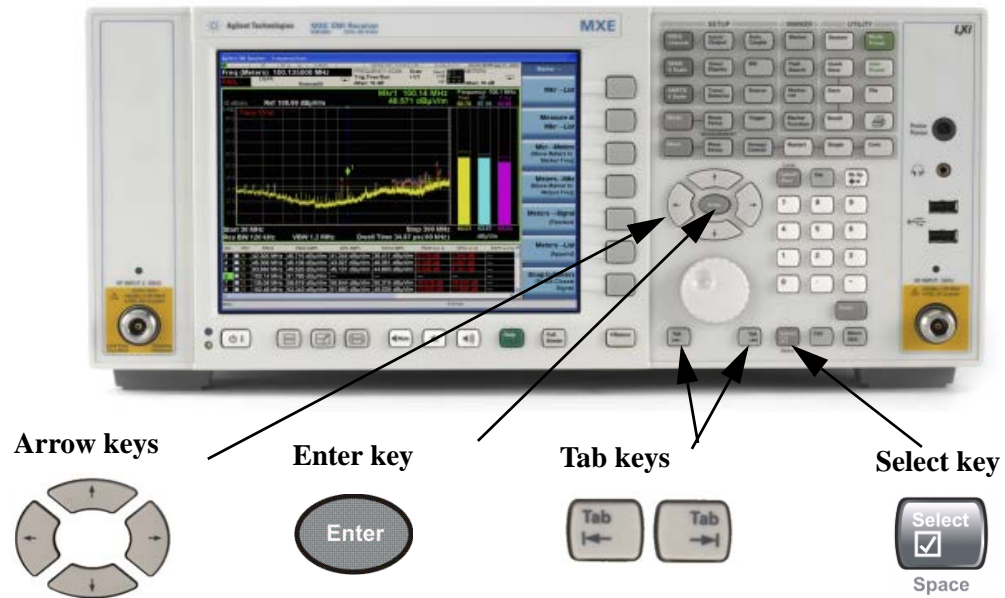
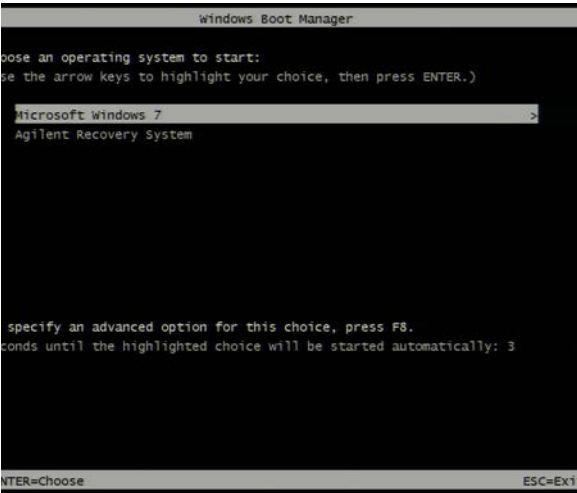


Table 1-2

Steps	Actions	Notes
1. Power on the instrument	<ol style="list-style-type: none"> Position the instrument so you have easy access to the power cord and plug it in. Press the power switch (located in the lower left corner of the instrument's front panel) to turn the instrument on. The Keysight Technologies screen appears followed by a screen that allows you to select the operating system. 	<p>See “Instrument Location and Rack Mounting Requirements and “Power requirements” on page 23 for more details.</p> <p>The instrument can require more than 5 minutes to power-on.</p> <div data-bbox="867 1367 1182 1602" data-label="Image"> </div>


Quick-Start
Turning on the EMI Receiver the First Time

Table 1-2

Steps	Actions	Notes
4. Launch Microsoft Setup	<ul style="list-style-type: none"> Highlight Microsoft Windows 7 and press Enter to start the pre-installed operating system. 	

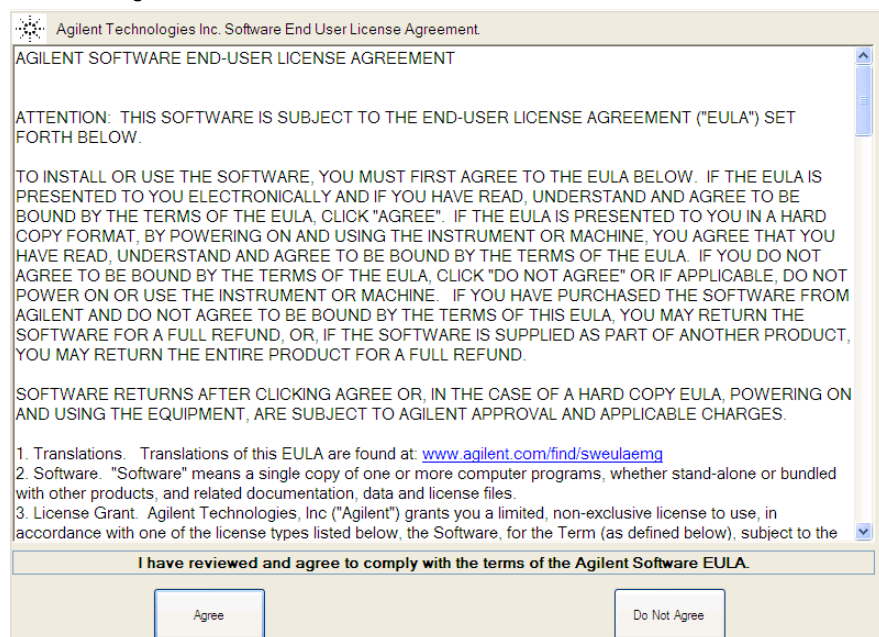
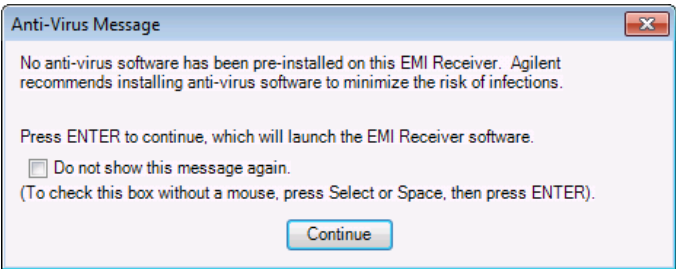
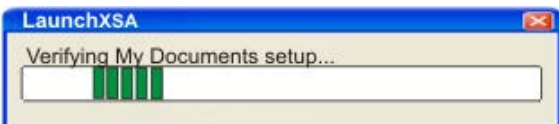
The analyzer performs the following steps:

- Windows 7 Startup window
- Black screen
- Windows Please wait message window
- Blue Agilent window
- The following window appears giving you information about the End-User License Agreement.



At this time, it is safe to turn off the instrument before initializing the software.

Table 1-2


Steps	Actions	Notes
CAUTION	After launching the setup, do not turn off the instrument or remove power before the Setup Wizard completes and the system restarts. Turning off the instrument may corrupt the system and the application may not operate.	
5. Reboot and logon	<ul style="list-style-type: none"> Press Enter 	When the instrument restarts, the following message window appears:
		
		
		This window appears and covers the LaunchXSA window.
NOTE	If you do not check the “Do not show this message again” check box, this message will be displayed each time the instrument is turned on. No application will start while this message is displayed. Before continuing, make sure that you carefully read the Anti-Virus message and determine what action is appropriate.	
6. Disable the Anti-Virus message	<ul style="list-style-type: none"> Press Select to select the check box and Enter to continue. 	Messages similar to the following continue to appear:
		
		Several required processes continue.
		The XSA application initializes
7. Verify the installation	<ol style="list-style-type: none"> Press System, Show, System. Verify that the purchased application(s) appear in the list. 	<p>If you require further assistance, contact the Keysight support team. Online assistance: http://www.keysight.com/find/assist</p>

Quick-Start
Turning on the EMI Receiver the First Time

Table 1-2

Steps	Actions	Notes
3. View a signal	<ul style="list-style-type: none"> a. Press Mode, Spectrum Analyzer. b. Press Input/Output, RF Calibrator, 50 MHz. c. Press FREQ Channel, Center Freq, 50, MHz. d. Press SPAN X Scale, 50, MHz. 	This routes the internal 50 MHz signal to the instrument input.

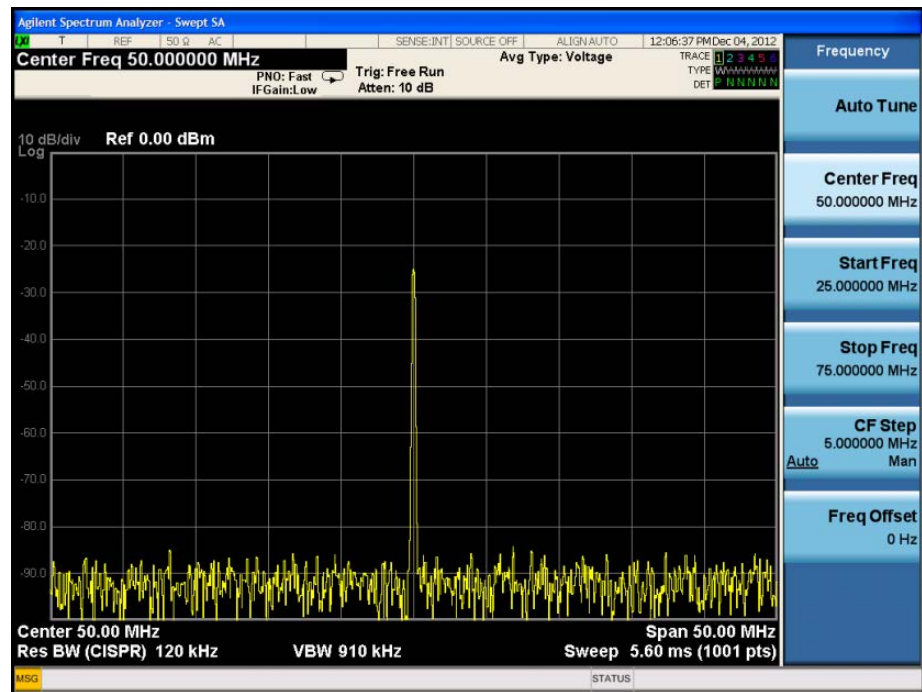The 50 MHz reference signal appears on the display.



Anti-Virus Software and Firewalls

No anti-virus software is shipped with the EMI Receiver. It is recommended that you install anti-virus software if your instrument is connected to the LAN. Check with your IT department to see what they recommend.

The EMI Receiver is shipped with the Windows firewall enabled. Do not modify the default network settings as this may cause problems with the operating system of the instrument.

Shortening the Instrument Power-On Time

The instrument desktop includes a shortcut to the ConfigureApplications.exe application that lets you control your instrument power-on configuration. You can set the configuration to pre-load only the applications that you typically run. This can significantly shorten the time it takes for your instrument to power-on. You can also access this functionality by pressing: **System, Power On, Configure Applications**.

If (after power-on) you want to access an application that you did not pre-load, it will take a little longer to bring it up once you press the application softkey. This longer time-frame is only for the first access after power-on. After the initial access, mode (application) switching will operate as quickly as if the application was pre-loaded.

Instrument Information

Power requirements

The only physical installation of your EMI Receiver is a connection to a power source. Line voltage does **not** need to be selected.

This instrument does **not** contain customer serviceable fuses.

WARNING

This is a Safety Class 1 Product (provided with a protective earthing ground incorporated in the power cord). The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. Any interruption of the protective conductor inside or outside of the product is likely to make the product dangerous. Intentional interruption is prohibited. (IEC 348 clauses 17.3.3c & 17.3.4)

Failure to ground the instrument properly can result in personal injury. Before turning on the instrument, you must connect its protective earth terminals to the protective conductor of the main power cable. Insert the main power cable plug into a socket outlet that has a protective earth contact only. DO NOT defeat the earth-grounding protection by using an extension cable, power cable, or autotransformer without a protective ground conductor.

CAUTION

This product is designed for use in Installation Category II and Pollution Degree 2 per IEC 61010 Second Edition and IEC 664 respectively.

This instrument has autoranging line voltage input. Be sure the supply voltage is within the specified range.

The Mains wiring and connectors shall be compatible with the connector used in the premise electrical system. Failure, to ensure adequate earth grounding by not using the correct components may cause product damage, and serious injury.

AC power cord

The EMI Receiver is equipped with a three-wire power cord, in accordance with international safety standards. This cable grounds the instrument cabinet when connected to an appropriate power line outlet. The cable appropriate to the original shipping location is included with the instrument. See:

<http://www.keysight.com/find/powercords>

CAUTION

Always use the three-prong AC power cord supplied with this product. Failure to ensure adequate earth grounding by not using this cord can cause product damage.

WARNING

If this product is not used as specified, the protection provided by the equipment could be impaired. This product must be used in a normal condition (in which all means for protection are intact) only.

Install the instrument so that the detachable power cord is readily identifiable and easily reached by the operator. The detachable power cord is the instrument disconnecting device. It disconnects the mains circuits from the mains supply before other parts of the instrument. The front panel switch is only a standby switch and is not a LINE switch. Alternatively, an externally installed switch or circuit breaker (which is readily identifiable and is easily reached by the operator) may be used as a disconnecting device.

Protecting Against Overpowering

The input circuitry of the EMI Receiver can be damaged by applying signals that exceed the maximum safe input level of +30 dBm average total power or +/- 0.2 Vdc (when DC coupled) or +/- 70 Vdc (when AC coupled). Refer to the instrument's specification guide for more details regarding the Maximum Safe Input Level. Repairing damage to the input circuitry can be expensive.

If the EMI Receiver will be used to analyze signals that might be near the maximum safe input level, use external attenuators and/or limiters to help protect the instrument input. The External Gain, amplitude Corrections, and/or Ref Lvl Offset features may be used to compensate for the gains and losses of external devices. External Gain and Corrections are under the Input/Output menu and Ref Lvl Offset is under the AMPTD Y-Scale menu.

Note that the RF Input 2 connector can withstand high pulse signal (2 kV pulses of 10 μ s duration) without damaging the circuitry.

Instrument Maintenance

Cleaning the instrument

WARNING

To prevent electrical shock, disconnect the instrument from mains before cleaning. Use a dry cloth or one slightly dampened with water to clean the external case parts. Do not attempt to clean internally.

Cleaning Connectors

Cleaning connectors with alcohol shall only be done with the instrument power cord removed, and in a well-ventilated area. Allow all residual alcohol moisture to evaporate, and the fumes to dissipate prior to energizing the instrument.

WARNING

Keep isopropyl alcohol away from heat, sparks, and flame. Store in a tightly closed container. It is extremely flammable. In case of fire, use alcohol foam, dry chemical, or carbon dioxide; water may be ineffective.

Use isopropyl alcohol with adequate ventilation and avoid contact with eyes, skin, and clothing. It causes skin irritation, may cause eye damage, and is harmful if swallowed or inhaled. It may be harmful if absorbed through the skin. Wash thoroughly after handling.

In case of spill, soak up with sand or earth. Flush spill area with water.

Dispose of isopropyl alcohol in accordance with all applicable federal, state, and local environmental regulations.

Battery Information

The EMI Receiver uses a lithium battery located on the CPU board. This is not an operator replaceable part. See [“Returning an EMI Receiver for Service” on page 115](#). Replaceable parts must be approved or supplied by Keysight Technologies.

You can order the service documentation for the instrument through your Keysight Sales and Service office.

WARNING

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended. Discard used batteries according to the manufacturer’s instructions.

Do not throw batteries away but collect as small chemical waste.



**DO NOT THROW BATTERIES AWAY BUT
COLLECT AS SMALL CHEMICAL WASTE.**

Protecting against electrostatic discharge

Electrostatic discharge (ESD) can damage or destroy electronic components (the possibility of unseen damage caused by ESD is present whenever components are transported, stored, or used).

Test equipment and ESD

To help reduce ESD damage that can occur while using test equipment:

WARNING

Do not use these first three techniques when working on circuitry with a voltage potential greater than 500 volts.

- Before connecting any coaxial cable to an EMI Receiver connector for the first time each day, momentarily short the center and outer conductors of the cable together.
- Personnel should be grounded with a 1 M Ω resistor-isolated wrist-strap before touching the center pin of any connector and before removing any assembly from the instrument.

- Be sure that all instruments are properly earth-grounded to prevent build-up of static charge.
- Perform work on all components or assemblies at a static-safe workstation.
- Keep static-generating materials at least one meter away from all components.
- Store or transport components in static-shielding containers.
- Always handle printed circuit board assemblies by the edges. This reduces the possibility of ESD damage to components and prevent contamination of exposed plating.

Additional information about ESD

For more information about ESD and how to prevent ESD damage, contact the Electrostatic Discharge Association (<http://www.esda.org>). The ESD standards developed by this agency are sanctioned by the American National Standards Institute (ANSI).

2 Front and Rear Panel Features

This section describes the following features:

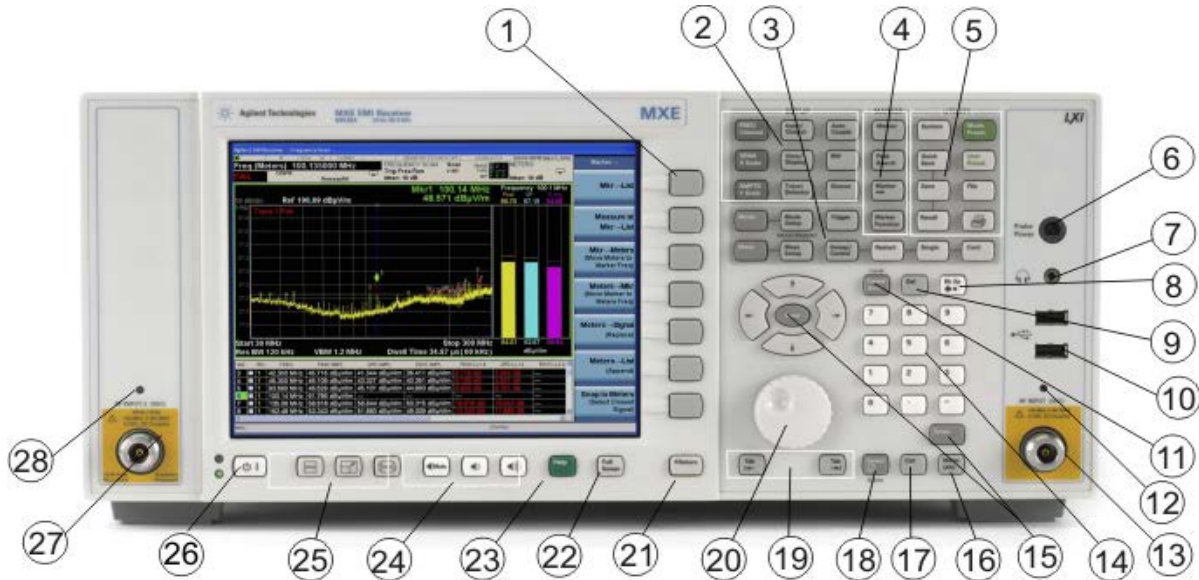
“Front-Panel Features” on page 30

“Display Annotations” on page 37

“Rear-Panel Features” on page 39

“Front and Rear Panel Symbols” on page 41

Front-Panel Features



Item		Description
#	Name	
1	Menu Keys	Key labels appear to the left of the menu keys to identify the current function of each key. The displayed functions are dependent on the currently selected Mode and Measurement, and are directly related to the most recent key press.
2	Instrument Setup Keys	These keys set the parameters used for making measurements in the current Mode and Measurement.
3	Measurement Keys	These keys select the Mode and the Measurement within the mode. They also control the initiation and rate of recurrence of measurements.
4	Marker Keys	Markers are often available for a measurement in order to measure a very specific point/segment of data within the range of the current measurement data.
5	Utility Keys	These keys control system-wide functionality such as: <ul style="list-style-type: none"> ▪ instrument configuration information and I/O setup, ▪ printer setup and printing, ▪ file management, save and recall, ▪ instrument presets.
6	Probe Power	Supplies power for external high frequency probes and accessories.
7	Headphones Output	Headphones can be used to hear any available audio output.

Item		Description
#	Name	
8	Back Space Key	Press this key to delete the previous character when entering alphanumeric information. It also works as the Back key in Help and Explorer windows.
9	Delete Key	Press this key to delete files or to perform other deletion tasks.
10	USB Connectors	Standard USB 2.0 ports, Type A. Connect to external peripherals such as a mouse, keyboard, DVD drive, or hard drive.
11	Local/Cancel/(Esc) Key	<p>If you are in remote operation, Local:</p> <ul style="list-style-type: none"> ▪ returns instrument control from remote back to local (the front panel). ▪ turns the display on (if it was turned off for remote operation). ▪ can be used to clear errors. (Press the key once to return to local control, and a second time to clear error message line.) <p>If you have not already pressed the units or Enter key, Cancel exits the currently selected function without changing its value.</p> <p>Esc works the same as it does on a PC keyboard. It:</p> <ul style="list-style-type: none"> ▪ exits Windows dialogs ▪ clears errors ▪ aborts printing ▪ cancels operations.
12	LED Indicator	A green light indicates RF Input is the active input port.
13	RF Input	Connector for inputting an external signal. Make sure that the total power of all signals at the instrument input does not exceed +30 dBm (1 watt).
14	Numeric Keypad	Enters a specific numeric value for the current function. Entries appear on the upper left of the display, in the measurement information area.
15	Enter and Arrow Keys	<p>The Enter key terminates data entry when either no unit of measure is needed, or you want to use the default unit.</p> <p>The arrow keys:</p> <ul style="list-style-type: none"> ▪ Increment and decrement the value of the current measurement selection. ▪ Navigate help topics. ▪ Navigate or make selections within Windows dialogs. ▪ Navigate within forms used for setting up measurements. ▪ Navigate within tables. <p>NOTE The arrow keys cannot be used to move a mouse pointer around on the display.</p>
16	Menu/ (Alt) Key	Alt works the same as a PC keyboard. Use it to change control focus in Windows pull-down menus.
17	Ctrl Key	Ctrl works the same as a PC keyboard. Use it to navigate in Windows applications or to select multiple items in lists.

Front and Rear Panel Features

Front-Panel Features

Item		Description
#	Name	
18	Select / Space Key	Select is also the Space key and it has typical PC functionality. For example, in Windows dialogs, it selects files, checks and unchecks check boxes, and picks radio button choices. It opens a highlighted Help topic.
19	Tab Keys	Use these keys to move between fields in Windows dialogs.
20	Knob	Increments and decrements the value of the current active function.
21	Return Key	Exits the current menu and returns to the previous menu. Has typical PC functionality.
22	Full Screen Key	Pressing this key turns off the softkeys to maximize the graticule display area. Press the key again to restore the normal display.
23	Help Key	Initiates a context-sensitive Help display for the current Mode. Once Help is accessed, pressing a front panel key brings up the help topic for that key function.
24	Speaker Control Keys	Enables you to increase or decrease the speaker volume, or mute it.
25	Window Control Keys	These keys select between single or multiple window displays. They zoom the current window to fill the data display, or change the currently selected window. They can be used to switch between the Help window navigation pane and the topic pane.
26	Power Standby/ On	Turns the EMI Receiver on. A green light indicates power on. A yellow light indicates standby mode. NOTE The front-panel switch is a standby switch, not a LINE switch (disconnecting device). The instrument continues to draw power even when the line switch is in standby. The main power cord can be used as the system disconnecting device. It disconnects the mains circuits from the mains supply.
27	RF Input 2	Connector for inputting an external signal. Make sure that the total power of all signals at the instrument input does not exceed +30 dBm (1 watt). This input can withstand 2 kV pulses of 10 μ s duration.
28	LED Indicator	A green light indicates RF Input 2 is the active input port.

Overview of key types

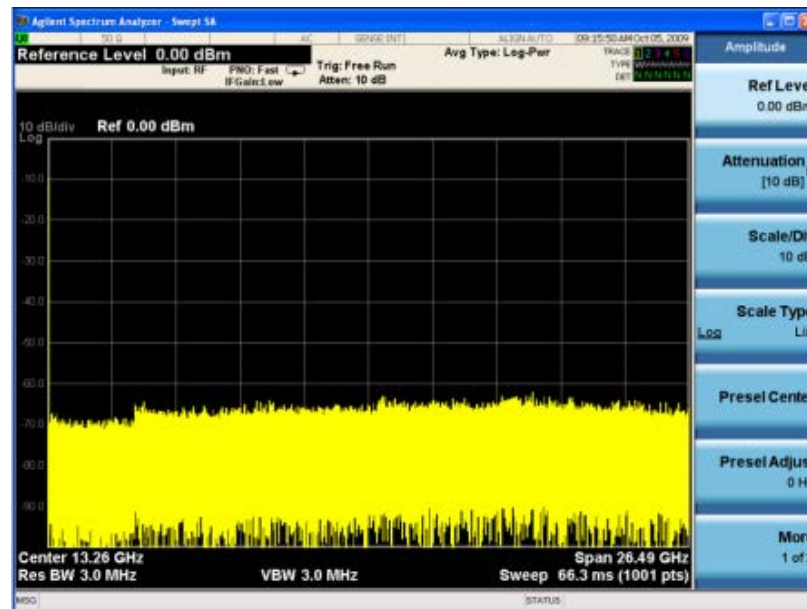
The keys labeled **FREQ Channel**, **System**, and **Marker Functions** are all examples of front-panel keys.



Most of the dark or light gray keys access menus of functions that are displayed along the right side of the display. These displayed key labels are next to a column of keys called menu keys.

Menu keys list functions based on which front-panel key was pressed last. These functions are also dependant on the current selection of measurement application (**Mode**) and measurement (**Meas**).

If the numeric value of a menu key function can be changed, it is called an active function. The function label of the active function is highlighted after that key has been selected. For example, press **AMPTD Y Scale**. This calls up the menu of related amplitude functions. The function labeled **Ref Level** (the default selected key in the Amplitude menu) is highlighted. **Ref Level** also appears in the upper left of the display in the measurement information area. The displayed value indicates that the function is selected and its value can now be changed using any of the data entry controls.




Some menu keys have multiple choices on their label, such as **On/Off**, **Auto/Man**, or **Log/Lin** (as shown above). The different choices are selected by pressing the key multiple times. For example, the Auto/Man type of key. To select the function, press the menu key and notice that Auto is underlined and the key becomes highlighted. To change the function to manual, press the key again so that Man is underlined. If there are more than two settings on the key, keep pressing it until the desired selection is underlined.

Front and Rear Panel Features

Front-Panel Features

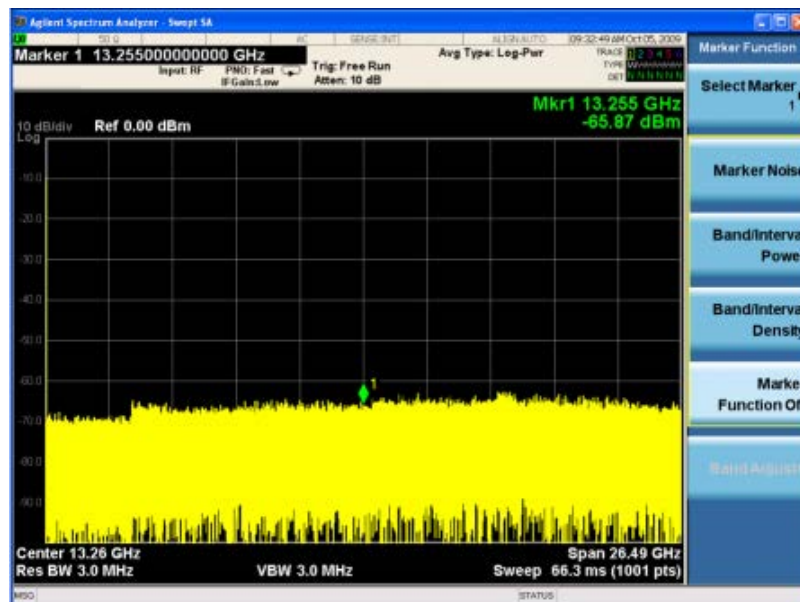
When a menu first appears, one key label is highlighted to show which key is the default selection. If you press **Marker Function**, the **Marker Function Off** key is the menu default key, and is highlighted.



Some of the menu keys are grouped together by a yellow bar running behind the keys near the left side or by a yellow border around the group of keys. When you press a key within the yellow region, such as **Marker Noise**, the highlight moves to that key to show it has been selected. The keys that are linked are related functions, and only one of them can be selected at any one time. For example, a marker can only have one marker function active on it. So if you select a different function it turns off the previous selection. If the current menu is two pages long, the yellow bar or border could include keys on the second page of keys.

In some key menus, a key label is highlighted to show which key has been selected from multiple available choices, and the menu is immediately exited when you press one of the other keys. For example, when you press the **Select Trace** key (in the



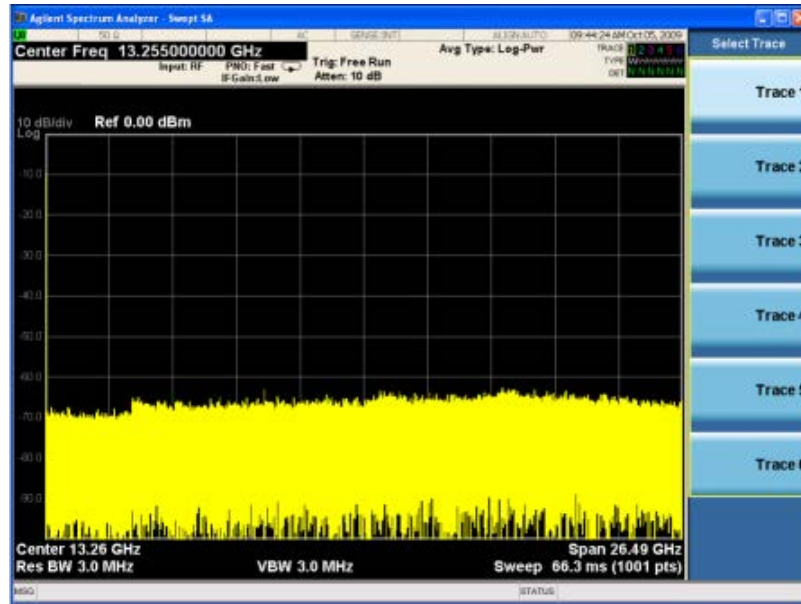
Trace/Detector menu), it brings up its own menu of keys. The **Trace 1** key is highlighted. When you press the **Trace 2** key, the highlight moves to that key and the screen returns to the **Trace/Detector** menu.



Front and Rear Panel Features

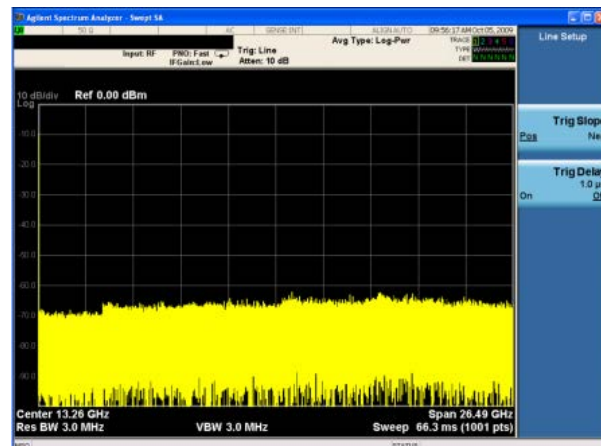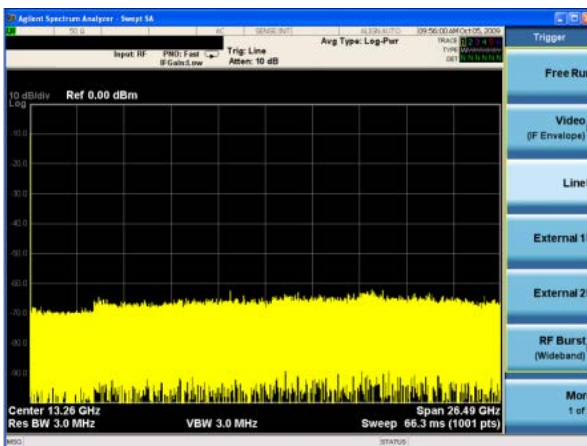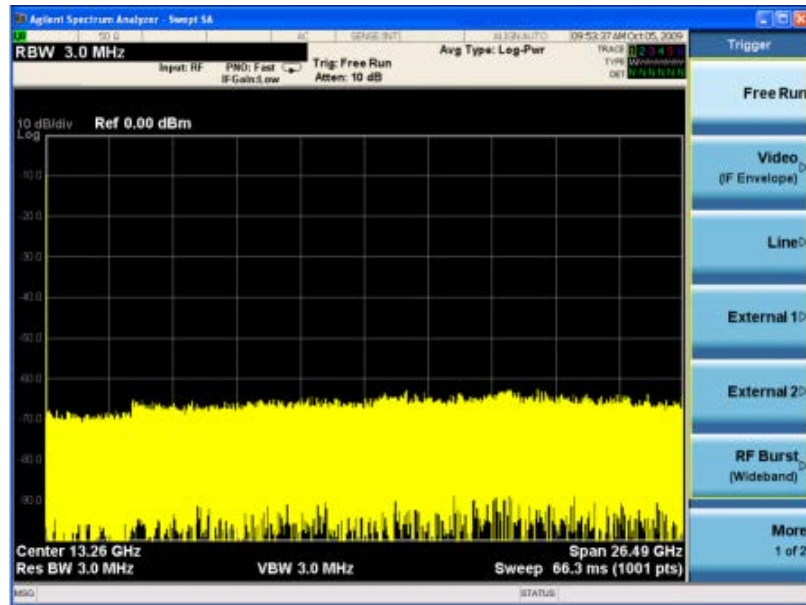Front-Panel Features



If a displayed key label shows a small solid-black arrow tip pointing to the right, it indicates that additional key menus are available. If the arrow tip is not filled in solid then pressing the key the first time selects that function. Now the arrow is solid and pressing it again brings up an additional menu of settings.



Display Annotations

This section describes the display annotation as it is on the EMI Receiver display. Other measurement application modes have some annotation differences.




Item	Description	Function Keys
1	Measurement bar - Shows general measurement settings and information.   Indicates single/continuous measurement. Some measurements include limits that the data is tested against. A Pass/Fail indication may be shown in the lower left of the measurement bar.	All the keys in the Setup part of the front panel.
2	Active Function (measurement bar) - when the current active function has a settable numeric value, it is shown here.	Currently selected front panel key.
3	Banner - shows the name of the selected application that is currently running.	Mode
4	Measurement title - shows title information for the current measurement, or a title that you created for the measurement.	Meas View/Display, Display, Title

Front and Rear Panel Features
 Display Annotations

Item	Description	Function Keys
5	Settings panel - displays system information that is not specific to any one application. <ul style="list-style-type: none"> ▪ Input/Output status - green LXI indicates the LAN is connected. RLTS indicate Remote, Listen, Talk, SRQ ▪ Input impedance and coupling ▪ Amplitude Correction Status ▪ Frequency reference selection ▪ Setting of automatic internal alignment routine 	Local and System, I/O Config Input/Output, Amplitude, System and others.
6	Active marker frequency, amplitude or function value	Marker
7	Settings panel - time and date display.	System, Control Panel
8	Key labels that change based on the most recent key press.	Softkeys
9	Displays information, warning and error messages. Message area - single events, Status area - conditions.	System, Show, Errors
10	Signal list	
11	Measurement settings for the data currently being displayed in the graticule area. In the example above: center frequency, resolution band width, video band width, frequency span, dwell time and units of sweep points.	Keys in the Setup part of the front panel.

Rear-Panel Features

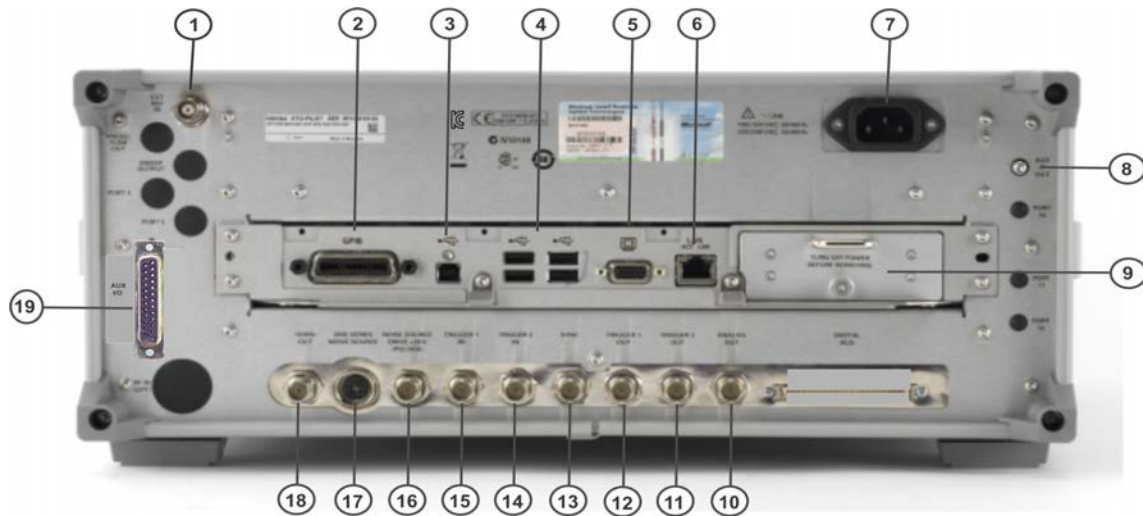EMI Receiver



Item		Description
#	Name	
1	EXT REF IN	Input for an external frequency reference signal: 1 to 50 MHz
2	GPIB	A General Purpose Interface Bus (GPIB, IEEE 488.1) connection that can be used for remote instrument operation.
3	USB Connector	USB 2.0 port, Type B. USB TMC (test and measurement class) connects to an external pc controller to control the instrument and for data transfers over a 480 Mbps link.
4	USB Connectors	Standard USB 2.0 ports, Type A. Connect to external peripherals such as a mouse, keyboard, printer, DVD drive, or hard drive.
5	MONITOR	Allows connection of an external VGA monitor. NOTE The external VGA monitor must be attached prior to power on to enable the external VGA port.
6	LAN	A TCP/IP Interface that is used for remote instrument operation.
7	Line power input	The AC power connection. See the product specifications for more details.
8	AUX IF OUT	For Option CR3 - 322.5 MHz IF output

Front and Rear Panel Features

Rear-Panel Features

Item		Description
#	Name	
9	Removable Disk Drive	Standard
10	Analog Out	Demod Audio For Option YAS: Screen Video
11	TRIGGER 2 OUT	A trigger output used to synchronize other test equipment with the instrument. Configurable from the Input/Output keys.
12	TRIGGER 1 OUT	A trigger output used to synchronize other test equipment with the instrument. Configurable from the Input/Output keys.
13	Sync	Reserved for future use.
14	TRIGGER 2 IN	Allows external triggering of measurements.
15	TRIGGER 1 IN	Allows external triggering of measurements.
16	Noise Source Drive +28 V (Pulsed)	For use with Keysight 346A, 346B, and 346C Noise Sources.
17	SNS Series Noise Source	For use with Keysight N4000A, N4001A, N4002A Smart Noise Sources (SNS).
18	10 MHz OUT	An output of the instrument internal 10 MHz frequency reference signal. It is used to lock the frequency reference of other test equipment to the instrument.
19	AUX/IO	External LISN control

Front and Rear Panel Symbols



This symbol is used to indicate power ON (green LED).



This symbol is used to indicate power STANDBY mode (yellow LED).



This symbol indicates the input power required is AC.



The instruction documentation symbol. The product is marked with this symbol when it is necessary for the user to refer to instructions in the documentation.



The CE mark is a registered trademark of the European Community.



The C-Tick mark is a registered trademark of the Australian Spectrum Management Agency.



This is a marking of a product in compliance with the Canadian Interference-Causing Equipment Standard (ICES-001).

This is also a symbol of an Industrial Scientific and Medical Group 1 Class A product (CISPR 11, Clause 4).



The CSA mark is a registered trademark of the Canadian Standards Association International.



This symbol indicates separate collection for electrical and electronic equipment mandated under EU law as of August 13, 2005. All electric and electronic equipment are required to be separated from normal waste for disposal (Reference WEEE Directive 2002/96/EC).



Indicates the time period during which no hazardous or toxic substance elements are expected to leak or deteriorate during normal use. Forty years is the expected useful life of the product.



This symbol on all primary and secondary packaging indicates compliance to China standard GB 18455-2001.



South Korean Class A EMC Declaration
A 급 기기 (업무용 방송통신기자재)

이 기기는 업무용 (A 급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라 며 , 가정외의 지역에서 사용하는 것을 목적으로 합니다 .

This equipment is Class A suitable for professional use and is for use in electromagnetic environments outside of the home.

To return unwanted products, contact your local Keysight office, or see <http://www.Keysight.com/environment/product/> for more information.

Front and Rear Panel Features
Front and Rear Panel Symbols

3 Using the EMC32 Software

The MXE is designed to be compatible with EMC32 software. The following section contains the details for configuring the instrument and software.

How to Set Up and Run the EMC32 Software

To be compatible with the EMC32 software, the MXE EMI Receiver must behave like the R&S ESU. The following procedure details the steps necessary to correctly configure the instrument to emulate the ESU.

Configuring the MXE

Table 3-1

Step	Action	Notes
1. MXE connection	<ul style="list-style-type: none"> ▪ Connect the GPIB cable between the PC and the MXE 	
2. Set the MXE GPIB address	<ul style="list-style-type: none"> a. Press System, I/O Config, GPIB b. Press GPIB Address, 20, Enter 	This is what ESU defaults to
3. Set the EMI Receiver Mode	<ul style="list-style-type: none"> ▪ Press Mode, EMI Receiver 	The EMI Receiver Mode has the ability to identify as an ESU, which is required by the EMC32 software. Most other modes in the MXE do not have this ability.
NOTE	The EMC32 software does an ID query when it starts up a test, so the MXE should always be set to the EMI Receiver Mode before setting up the EMC32 software.	
4. Set the EMI Receiver Mode to ID as an ESU	<ul style="list-style-type: none"> a. Press Mode Setup, Mode IDN Response b. Press R&S ESU 	
3. Set the MXE to preset to the EMC Standard	<p>For a CISPR test:</p> <ul style="list-style-type: none"> a. Press Mode Setup, EMC Std, CISPR b. Press Mode Setup, EMC Std, Preset To, and ensure that it is set to CISPR <p>Or</p> <p>For a MIL test:</p> <ul style="list-style-type: none"> a. Press Mode Setup, EMC Std, MIL b. Press Mode Setup, EMC Std, Preset To, MIL 	<p>The MXE uses the EMC Standard to choose which RBW's to make available, and how to couple them.</p> <p>Note that CISPR is the default at instrument startup, but if you have set MIL to be the preset and you press the Mode Preset key, the instrument will preset to MIL.</p>

4 Instrument Operating System

This chapter describes the Microsoft Windows 7 configuration and the settings used with the Keysight instrument software. It includes information about changing some of the system settings. And it describes the Windows operating system configuration and the software installations that are present on the Hard Disk Drive when the instrument leaves the factory.

The front panel of the EMI Receiver has been designed with the keys needed to navigate windows for: accessing menus, traversing in dialogs, selecting items, and depressing displayed buttons. It is possible to use the front panel for changing Windows operating system configuration items, but it is much easier to perform these tasks with a USB mouse and external keyboard. For specifics on navigating using the front panel, see [“Navigating Windows Without a Mouse” on page 74](#).

The following topics can be found in this chapter:

[“Keysight Software Installed” on page 47](#)

[“Customer Installation of Software” on page 48](#)

[“User Accounts” on page 49](#)

[“Keysight X-Series EMI Receiver Licensing” on page 51](#)

[“Licensing New Measurement Application Software - After Initial Purchase” on page 52](#)

[“Windows Configuration” on page 54](#)

[“Configuring Printers” on page 58](#)

[“Configuring LAN” on page 59](#)

[“Windows Security” on page 61](#)

[“System Maintenance” on page 63](#)

[“USB Connections” on page 64](#)

[“Disk Drive Partitioning and Use” on page 66](#)

[“Disk Drive Recovery Process” on page 68](#)

Microsoft Windows

Your instrument has Microsoft Windows installed at the factory. Keysight has already configured many of the settings in Microsoft Windows for optimal behavior in your instrument. This chapter contains details about many of these settings.


Windows Help and Support Center

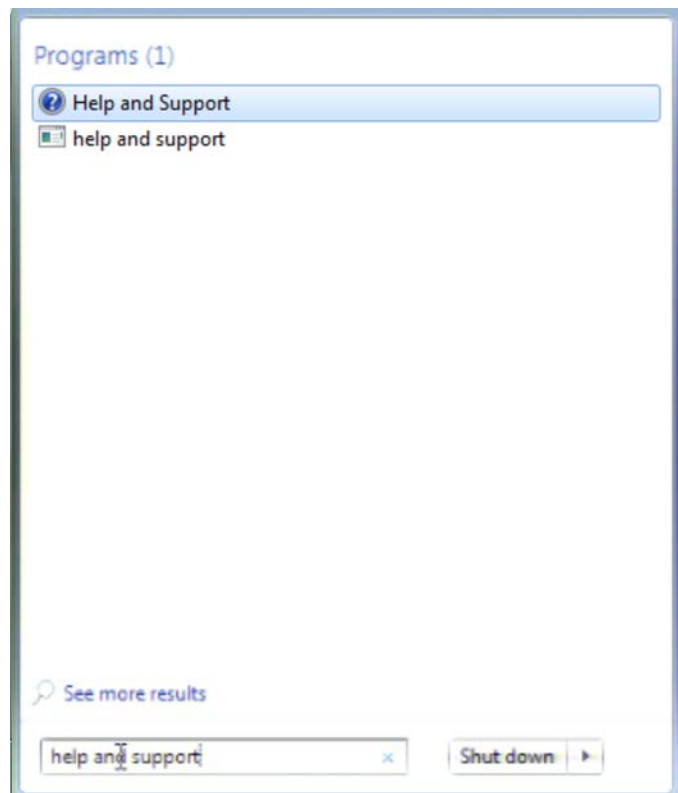
Throughout this chapter you will find references to the Windows Help and Support Center. To access the Windows Help and Support Center follow the instructions below, either on your PC or on the instrument itself.


NOTE You must have an Internet connection to access the Windows Help and Support Center.

Move the mouse cursor to the taskbar at the bottom of the display

If the Taskbar is in auto-hide mode (as it is by default on your instrument), wait until it pops up.

Click the Start icon  and type “help and support” into the Search window.



Click  Help and Support .

Keysight Software Installed

Keysight signal analyzer software

The N9060B Keysight Spectrum Analyzer Measurement Application software is installed in the instrument. Additional measurement applications are available. Each application requires a license to execute the software. All of these applications are installed by the factory at the time of manufacture, even if the licenses have not been purchased. You may purchase additional licenses at a later date.

Customer Installation of Software

3rd party software verified by Keysight

Keysight has verified that the following programs are compatible with the instrument applications:

- MathWorks MATLAB

Installation of other 3rd party software

The X-Series EMI Receiver platform is an open Windows environment, so you can install software on the instrument. However, installation of non-approved software may affect instrument performance. Keysight does not warrant the performance of the instruments with non-approved software installed.

NOTE

Before installing any additional programs on the instrument, you should exit the current application.

Also, you must not remove any applications or programs that were installed on the instrument when it was shipped from the factory.

If you install programs other than those that Keysight has tested, it could cause problems with the instrument's applications. If this happens, you should try uninstalling the program that has caused the problem, or try changing the program's configuration. If this does not correct the problem, you may have to use the Keysight Recovery system to reinstall the instrument's system software.

User Accounts

The instrument ships with a number of different accounts already set up. In addition you can create your own accounts if you desire. The privileges associated with each account determine what you can and cannot do from that account.

Administrator account

The “Administrator” account ships from the factory with the password “agilent4u”. Using the Administrator account you can perform the following operations:

- Install software
- Configure network and printer access
- Access all files on the instrument
- Add or change user accounts and passwords
- Change Firewall settings
- Change Windows settings (e.g., using Device Manager)
- Change the time and date
- Run any application

Instrument accounts

The default user account that ships from the factory is “Instrument” with the password “measure4u”. This user is a member of the standard Users group.¹ Using the Instrument account, you may perform the following operations:

- Configure network and printer access (although not local printer access)
- Access files on the instrument that are accessible to the Users group
- Run applications that are accessible to the Users group

Power Users accounts

You can assign Power User privileges to the Instrument account or to other accounts that you might create. To change privileges you must log on as the Administrator. Power Users can perform the following operations:

- Install software (with some limitations, for example, you cannot install drivers)
- Configure network and local printer access
- Access files on the instrument that are accessible to the Power Users group
- Change the time and date

1. In analyzers running the Windows XP operating system, the Instrument user account was a member of the Power Users group.

- Run applications that are accessible to the Power Users group

Keysight Only user account

The instrument contains a user account called “AgilentOnly” that can be used by Customer Support in the event that the customer has changed the Administrator password and has forgotten the password. You must not remove or modify the AgilentOnly account.

Keysight Service user accounts

There are user accounts defined in the instrument for servicing the instrument.

Customer creation of accounts

You can create additional user accounts and decide on the level of security granted to any new user accounts created. For example, the level of security can be assigned as administrator, power user, standard user, backup operators. User names are not case sensitive but passwords are case sensitive.

It is Keysight’s expectation that each user’s My Documents folder is mapped to the D: drive. This is to avoid overwriting the user’s data in the event the Keysight Recovery must be performed. Also, this facilitates convenient backup by copying the contents of the D: drive to external media. All user accounts created by the factory already have My Documents mapped to the D: drive. It is recommended to map all new users’ My Documents folders to the D: drive.

Keysight X-Series EMI Receiver Licensing

Fixed Perpetual

Fixed Perpetual licenses are the traditional license type (Fixed) with the same duration (Perpetual) that have been available for all features since the X-Series introductions. Fixed Perpetual licenses are identified by the “F” in the second character and “P” in the third character of the option designator:

Example: N9068A-2FP

A license key is instrument model and serial number dependent. You can only install the license key on the specific instrument for which it was created.

Trial licenses

Trial licenses are available so that you may try applications before you buy the full applications. These licenses are time limited for a 14 day period, and are restricted to one trial for an individual application per instrument. The restriction is enforced through the license redemption process of the Keysight Software Licensing (ASL) system.

Trial licenses are not installed in the factory and no entitlement certificates are created for distribution with new instrument shipments. Trial licenses are not available for order, but are available from the Keysight Web site after completing a brief registration:

http://www.keysight.com/find/xseries_trial

Trial Licenses are identified by the license designator “-TRL”.

Example: N9071A-TRL

If a product has multiple tiers (levels of functionality), the –TRL license enables all tiers for the duration of the license. If you have a base tier and want a trial license for a higher tier, you can install the –TRL license. When the duration expires the entitlement is reverted back to the base tier.

Licensing New Measurement Application Software - After Initial Purchase

Additional measurement application software can be ordered after your initial purchase of the EMI Receiver. Software upgrades are provided in a kit that includes an option based Entitlement Certificate and a license agreement. The licenses are downloaded from the license Web site onto a USB storage device so they can be loaded into the instrument.

For all software upgrades, we recommend that the latest version of the instrument software be installed. This ensures that the measurement application being licensed and activated is installed and is the most current version.

The latest revision of the software may be downloaded from:
http://www.keysight.com/find/mxe_software.

A license key is for one instrument model and serial number combination. The license key will only install itself on that instrument.

NOTE No calibration is required after a measurement application installation.

Installation procedure over USB

Table 4-1

Step	Action	Notes
1. Redeem the Option Upgrade Entitlement Certificate	<ul style="list-style-type: none"> Follow the instructions on the Certificate 	After redeeming your Option Upgrade Entitlement Certificate you will receive an e-mail with an attached License File.
2. Save the license file	<ul style="list-style-type: none"> Save the.lic file to the root directory of a USB storage device 	
3. Load the license file	<ul style="list-style-type: none"> Connect the USB storage device to one of the EMI Receiver USB ports. 	<p>Windows will detect the new hardware and may display the configuration menu.</p> <p>The instrument will automatically load the license file. (This may take a few minutes) Upon completion, the Keysight License Manager will display a "Successful License Installation" message.</p>

NOTE Alternatively the license file can be manually installed over USB or LAN by placing the license file in the following folder on the EMI Receiver.

C:\Program Files\Keysight\licensing

Table 4-1

Step	Action	Notes
4. Verify installation	a. Cycle the power on the instrument. b. Press System, Show, System . c. Verify that the new application appears in the list.	The application will not be available for use until after the power has been cycled. This displays the list of installed applications. If you require further assistance, please contact the Keysight support team. Online assistance: http://www.keysight.com/find/assist If you do not have access to the Internet, contact your local Keysight Technologies Sales and Service Office, or if in the United States, call 1-800-829-4444.

Windows Configuration

The Windows settings have been optimized for the best measurement performance. Any modifications to these settings may degrade instrument performance and measurement speed. In general, most Windows System settings (typically set through the Windows Control Panel) should not be modified. Those that can be safely modified are listed below.

CAUTION To recover from problems caused by changing Windows systems settings, you may have to reinstall the Windows system and instrument application using the Keysight Recovery process.

Settings that can be changed

You may change the following Windows settings or administrative tasks (available from the Windows Control Panel) to suit your own personal preferences. It is recommended that you document any changes to the instrument's configuration in case an Keysight Recovery is performed and the configuration is reset.

NOTE Some of these actions can only be performed with Administrator privileges

Table 4-2








You May Use This Feature:	To Do This...
 Windows Update	<p>Configure Microsoft Windows Automatic Updates.</p> <p>Microsoft recommends that you always get the latest critical Windows updates to ensure that the instrument's Windows operating system is protected. If the instrument has internet access, the instrument default is set to automatically check for critical Windows Updates and notify you.</p> <p>You can change the configuration of the Microsoft Automatic Updates. You can choose not to have automatic updates. However, if you do this then you should manually update Windows periodically, by accessing Internet Explorer and selecting Windows Update from the Tools menu.</p>
 Action Center	<p>Install and configure an Anti Virus program</p>

Table 4-2

You May Use This Feature:	To Do This...
 User Accounts	Setup new user accounts. CAUTION Do not delete or modify the "AgilentOnly" user account. Doing so may prevent Keysight from servicing the instrument.
 Network and Sharing Center	Add the Instrument to a network
 Devices and Printers	Install and configure a printer
 Date and Time	Set the time and date
 System	If you click on "Advanced System Settings" a dialog will open called "System Properties." On this dialog there is an "Advanced" tab, which opens up a dialog with a number of settings options. One of these is "Performance", and if you click on the "Settings" button under "Performance", you will see another dialog with a number of settings options. The default is "Let Windows choose what's best for my computer." You can also select "Adjust for best performance." You should leave the remaining selections unchanged.

Settings that must not be changed

Avoid changing the settings described below (available from the Windows Control Panel). Changes to these settings may degrade instrument performance, screen displays, and measurement speed.

Table 4-3







Do NOT Use This Feature:	To Do This...
 Power Options	Do not change Power Options.

Table 4-3

Do NOT Use This Feature:	To Do This...
 System	<p>If you click on “Advanced System Settings” a dialog will open called “System Properties.”</p> <p>On this dialog there is a tab called “Hardware.” You should not modify any settings under the “Hardware” tab.</p> <p>On this dialog there is also a tab called “Advanced.” You should not modify any settings under the “Advanced” tab except as described above under “Settings that can be changed”.</p>
 Fonts	Do not remove installed Fonts
 Display	<p>Do not change the following Display Settings:</p> <ul style="list-style-type: none">• Screen Saver settings (under “Personalization”)• Screen resolution, 1024 x 768 (under “Adjust Resolution”)• DPI setting (under “Set custom text size”)
 Region and Language	Do not change any settings under “Region and Language” or the instrument keyboard and display may not operate properly
 User Accounts	Do not delete or modify the “AgilentOnly” or “KeysightOnly” user account.

In addition, Do Not:

- Add, delete, or modify disk drive partitions.
- Delete or modify Keysight registry entries.
- Change the contents of any directories containing the name “Agilent” or “Keysight”.
- Stop the IIS server
- Tamper with any virtual directories (or their contents) that came configured with the instrument.
- Uninstall these libraries, interfaces, or programs:
 - The Keysight I/O Libraries
 - The .NET Framework or any Hotfixes or Service Packs for the .NET Framework
 - The “Microsoft Visual J# .NET Redistributable Package 1.1”

- Programs that begin with “Agilent” or “Keysight”
- The Adobe Acrobat reader.
- Modify:
 - The Keysight I/O Library “GPIB27”, “GPIB28” interfaces shown as configured Instrument I/O in the Keysight Connection Expert or I/O Config

Autoplay/Autorun

Since the introduction of Windows XP, the term Autoplay (sometimes also called Autorun) has come to be associated with the feature which assists users in selecting appropriate actions when new media and devices are detected. The Autoplay/Autorun feature is turned off in the instrument, by default, for heightened security, unless the Administrator account is running.

If you wish to re-enable Autoplay/Autorun, you may use the Auto Play function in the Control Panel. However, be aware that if you do this you may be more subject to virus attack from portable media such as USB flash drives.

Configuring Printers

Printers are configured using the Microsoft Windows Control Panel. It is easily accessed from the Windows Start menu or from under the front panel **System** key. This setup process is most easily done using a USB mouse and an external keyboard. If you do not have a mouse it can be done using front-panel keys. See [“Navigating Windows Without a Mouse” on page 74](#).

When setting up a new printer, you may need to load the printer driver (unless you are using a network printer that your IT department has set up to include the driver). The manufacturer of the printer supplies the driver software and process. That may require that you attach an external USB disk drive. An alternative is to connect the instrument to the LAN and download the driver from the printer manufacturer’s internet site.

Configuring LAN

Hostname

The Computer Name, or hostname, is pre-configured from the factory. It must be a unique name so that it does not conflict with other equipment on your LAN. The pre-configured Computer Name is A-N9038A-xxxxx, where xxxxx is the last 5 digits of the instrument's serial number.


To change the Computer Name consult the Microsoft Windows 7 Help and Support Center.

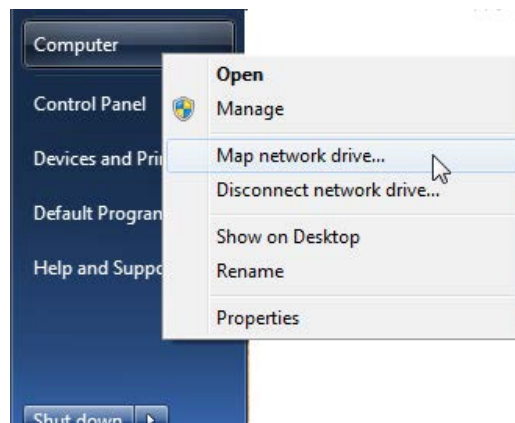
IP Address & Gateway

The instrument is pre-configured to obtain an IP Address using DHCP. The IP Address and Gateway can be changed. Consult the Microsoft Windows 7 Help and Support Center to configure the LAN.


Connecting to a Network Shared Folder

The instrument contains standard Windows networking. The time required to authenticate is dependent on your LAN infrastructure. You may have improved performance by mapping a network drive to the shared folder that you need to access.

To map a network drive, click the Start icon  and right-click **Computer**.



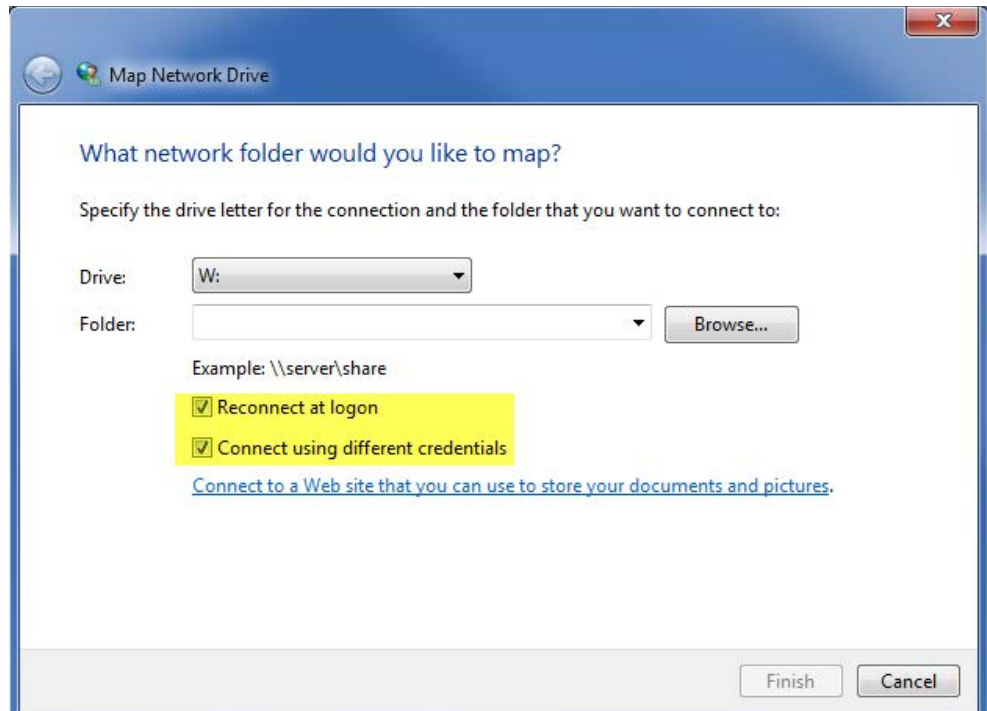When the Map Network Drive window appears, browse to the correct folder, select both check boxes and click **Finish**.



NOTE

In Windows 7 there is no visual indication that authentication is in progress.

Windows Security

Microsoft recommends the following to ensure the instrument's Windows operating system is protected:

- Use an internet firewall.
- Get the latest critical Windows updates.
- Use up-to-date antivirus software.

Windows Firewall



The instrument is shipped with the Windows Firewall enabled. You can verify the status of Windows Firewall by going to the Control Panel and clicking on System and Security, Windows Firewall.

Windows Firewall Exceptions for programs and ports have been added to allow proper operation of the instrument over a network. Modifying these settings may cause the instrument to not operate properly.

Automatic Updates

Microsoft recommends that you always get the latest critical Windows updates to ensure that the instrument's Windows operating system is protected. If the instrument has internet access, the instrument default is set to automatically check for critical Windows Updates and notify you.

You can change the configuration of the Microsoft Automatic Updates. You can choose not to have automatic updates. However, if you do this then you should manually update Windows periodically, by accessing Internet Explorer and selecting Windows Update from the Tools menu.

NOTE

Be aware that downloading and installing Windows Updates can be network and CPU usage intensive (impacting the instrument performance), and some Windows Updates automatically reboot the instrument. It is recommended that Windows Updates be performed when the instrument is not in normal use.

Virus Protection

No anti-virus software is shipped with the EMI Receiver. It is recommended that you install anti-virus software if your instrument is connected to the LAN. Check with your IT department to see what they recommend.

The EMI Receiver is shipped with the Windows firewall enabled. Do not modify the default network settings as this may cause problems with the operating system of the instrument.

NOTE

Having antivirus software installed may have a slight impact on the instrument performance.

Spyware Protection

There is no anti-spyware software installed on the instrument. This should not be a problem if you do not use the instrument for a lot of internet browsing. Having spyware in the instrument could have an impact on the instrument performance.

System Maintenance

Backup

It is recommended that you have a regular backup strategy. Your IT department may already have a backup strategy in place which is suitable for the instrument and its data. Using the Keysight Recovery system in conjunction with a regular backup strategy should allow full recovery of the instrument data.

Windows 7 has a Backup utility that you can use to archive files and folders in case of a hard disk drive failure. See the Microsoft Windows 7 Help and Support Center for more information on this utility. You can also use third party backup utilities. However, you must ensure that this third party software is compatible with the instrument's system software. See ["Customer Installation of Software" on page 48](#) for more information.

When performing backups, we recommend that you backup the data to an external storage device connected to the network or one of the instrument's USB connectors. Also, you should perform backups at times when the instrument is not being used for normal operations as it may impact the instrument's overall performance.

System restore

Windows contains the capability to restore the system to a previous point in time. System Restore is enabled with default settings as provided by Microsoft. However, System Restore is not 100% successful. Therefore, it is not recommended that you rely on System Restore to protect your instrument. System Restore has not been tested to verify successful restoring..

Disk defragmenting

Over time the instrument's hard disk becomes fragmented. Windows 7 has a Disk Defragmenter utility that you can use to defragment the hard disk. See the Microsoft Windows 7 Help and Support Center for more information on this utility.

NOTE

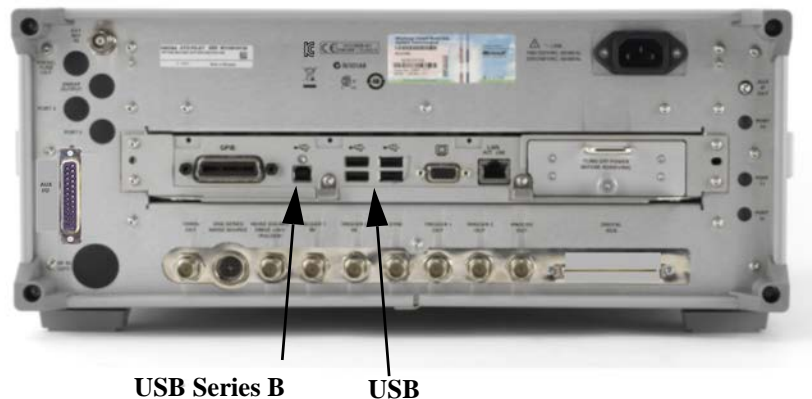
Running Disk Defragmenter should be performed when the measurement application is not running. Measurement throughput is significantly impacted while disk defragmentation is in process. Press **File, Exit** to stop the application. To restart the application, double-click the application icon on the desktop.

USB Connections

All of the USB ports are compatible with the USB 2.0 and 1.1 specification. The two USB ports on the front panel (see graphic below) and four of the USB ports on the rear panel are USB Series “A” ports. These are ports to which you can connect USB mass storage devices and printers. The instrument USB Host support includes the standard Microsoft Windows 7 USB class drivers for human interface, mass storage, printing, scanning, and imaging devices. A complete up-to-date list of the Windows 7 USB class driver support is available on the Microsoft website.



The square USB port (see graphic below) on the rear panel is a USB Series “B” port and is used for controlling the instrument over USB. Information to help you program your instrument is documented in the **X-Series Programmer’s Guide**. The instrument USB device driver included in the instrument software supports the test and measurement industry standard USBTMC-USB488 device class.



In addition, the Keysight IO Libraries CD that was included with your instrument contains USB Host drivers that allow control of other instruments connected to the USB ports.

Keysight Technologies does not support or warrant correct instrument operation if additional USB drivers from third parties are installed in the instrument. It is possible that additional drivers could break the normal USB operation. If USB operation is broken, recovery would require reinstalling the instrument application using the hard drive recovery process.

Disk Drive Partitioning and Use


The drive is partitioned into 3 sections: C:, D: and E:

- The **C: partition** contains the Windows 7 operating system and software installed by Keysight. This is an Open System which means you can install additional software, and these should be installed on the C: drive. However, only a limited set of software applications are tested for use with the Keysight measurement software. The installation and/or use of other software is not warranted and could interfere with the operation of the measurement software. If instrument repair is ever needed, the Keysight version of the C: drive is the only part of the instrument software that is restored by the Keysight Recovery process. You must reload any other software that you have added in the instrument.
- The **D: partition** is reserved for data storage. The User Accounts that are configured by Keysight have their My Documents folder mapped to the D: drive. This is for the convenience of backing-up the measurement data. You should always back-up the data on the D: drive to an external device. This allows you to restore the data if you ever need to replace the hard drive.
- The **E: partition** is reserved for Keysight's use. The primary use of the E: drive is for housing the Calibration and Alignment data. Do not change or overwrite the files on this drive. This could cause your instrument to not meet specifications, or even to stop functioning correctly. Do not use this drive for data storage. It is also recommended that you back up the contents of this drive by using the factory calibration data backup utility.

Backing-up the factory calibration data

To back-up the factory calibration data you will need a USB mouse and storage device and follow the step below.

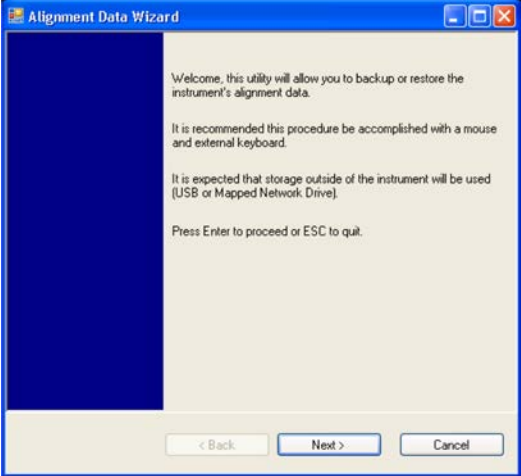Table 4-4

Step	Notes
1. Insert the mouse in one of the instrument USB ports	
2. Insert the USB memory device in one of the instrument USB ports.	
3. Press System, Alignments, Backup or Restore Align Data...	<p>The Alignment Data Wizard will appear:</p> 
4. Follow the on screen instructions to backup the calibration data to the USB drive and save the file.	

Disk Drive Recovery Process

The Keysight Recovery System can be used to repair errors on the instrument's C: drive partition or to restore the original factory configuration of the system software. The Keysight Recovery System is stored in a separate hidden hard disk drive partition.

Repairing errors on the hard disk drive may result in loss of data or files. If you need more information about the Windows "chkdsk" error repair process, see the chkdsk documentation in the Microsoft Windows 7 Help and Support Center.

Restoring the original factory system software does not restore any of the following items:

- Additional software that has been installed after the instrument was shipped from the factory. (Thus, following an Keysight Recovery any software installed after the instrument was shipped from the factory will need to be re-installed.)
- System configurations (for example user accounts, windows configurations) that have been made after the instrument was shipped from the factory. (Thus, following an Keysight Recovery configuration changes will have to be performed.)
- The Keysight Recovery overwrites the contents of the C: partition. It does not affect the D: or E: partitions.

It is recommended that the customer use a regular back up strategy. The customer's IT department may already have a backup strategy in place which is suitable for the instrument and its data. Using the Keysight Recovery System in conjunction with a regular back up strategy should allow the customer to fully recover the instrument's software and data.

Table 4-5 Recovery Process


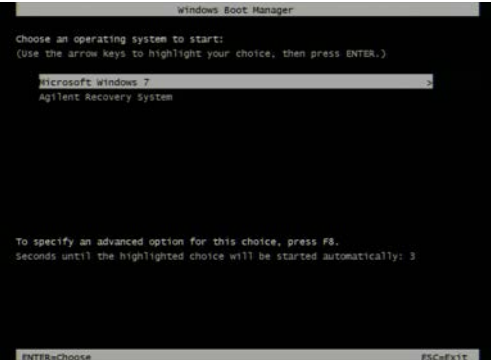
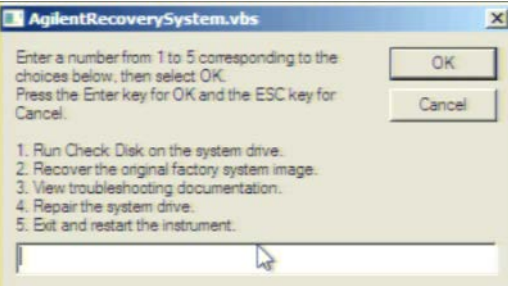
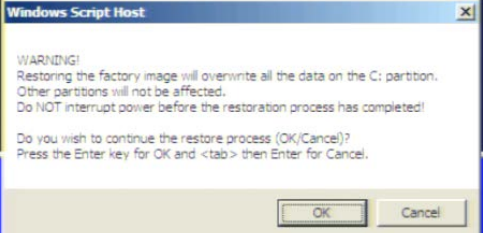
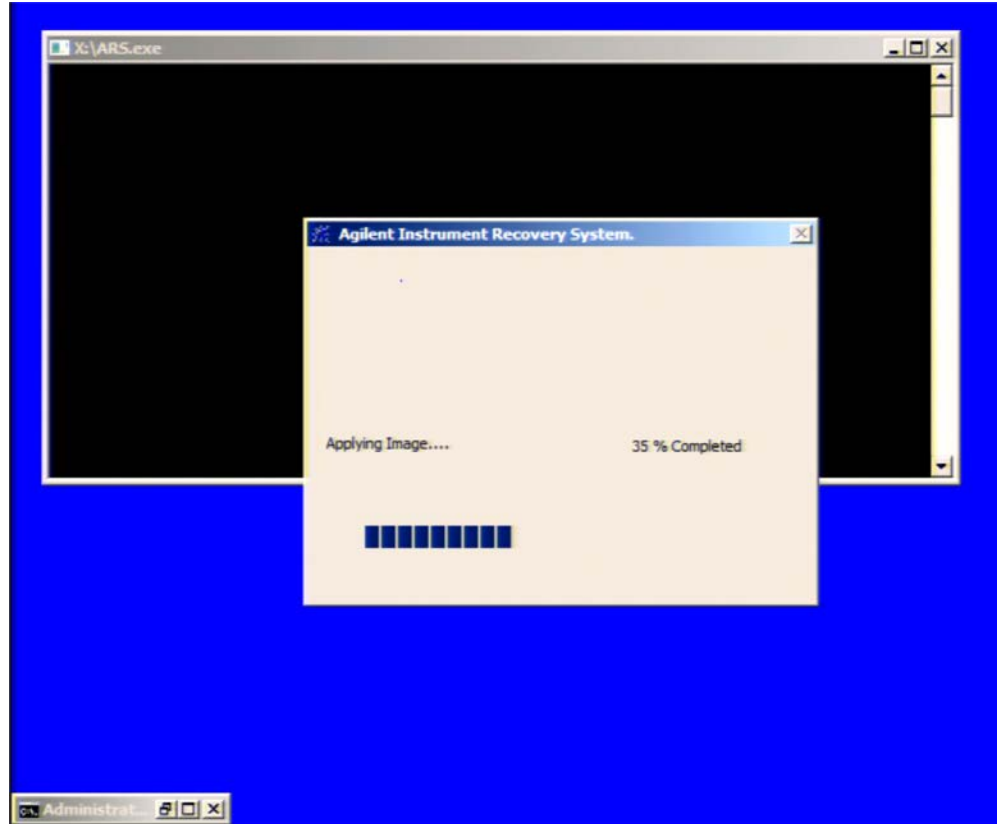
Step	Notes
<p>Make sure the instrument is turned off.</p>	
<p>Turn on the instrument.</p> <ul style="list-style-type: none"> ▪ Press the down arrow key to move the highlight to Agilent Recovery System, then press Enter. 	<p>After the Agilent Technologies screen is displayed,</p> 
	<p>This screen is displayed for five seconds.</p>
	
<p>When the Agilent Recovery System has booted, follow the on-screen instructions to recover the image of the C: drive.</p> <ul style="list-style-type: none"> ▪ Press 2, then press Enter to select the recovery. 	
<p>A warning message appears.</p>	
<ul style="list-style-type: none"> ▪ Press Enter to start the recovery, which may take up to 25 minutes to complete. 	

Table 4-5 Recovery Process

Step	Notes
------	-------



Press **Enter** to exit and reboot the instrument once this portion of the recovery has completed.

NOTE Additional recovery steps may be required to fully recover the system to a more current working state. This could involve restoring your own backups of the instrument information or re-installing applications, data and performing system customizations.

Updating the software

Choose one of these two processes:

- To install the latest software version, the software and installation instructions are available at:
http://www.keysight.com/find/mxe_software


- To re-install the software version you recovered to, follow the process below.

The following steps load a copy of the instrument software that forces the program code resident in the instrument's various programmable gate arrays to be in sync with the restored system software.

Table 4-6 Installing the software

Step	Notes
Log out of the default user (instrument):	
<ul style="list-style-type: none"> • Select Start, Log Off, Log Off 	
At the log in prompt enter:	
<ul style="list-style-type: none"> • User Name: administrator 	
<ul style="list-style-type: none"> • Password: agilent4u 	
Navigate to C Drive:	
<ul style="list-style-type: none"> • Click Start, My Computer, C: Drive and open the Temp folder. 	
Locate the software installer program: "XSA_Installer_A.XX.XX.exe".	
Double-click on the installer.exe.	It may take a minute or two for the installer to start.
A window appears showing the extraction process.	Following the extraction screen, there may be a short period where there is no activity on the screen. The desk top may be displayed for a short period.
Follow the on-screen prompts to continue the installation.	
WARNING	When you see the message <code>Programming FPGAs...</code> Do NOT turn off power to the instrument, be sure to do as it says and DO NOT turn off the instrument power at this time for ANY reason. If this process is interrupted the instrument most likely will need to be sent back to an Keysight Service Center for servicing before it will be usable again.

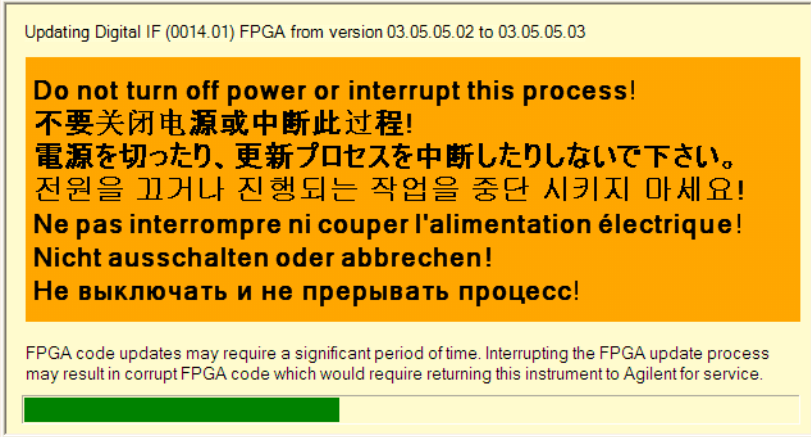Table 4-6 Installing the software

Step	Notes
	<p>NOTE The installation process can take up to 30 minutes. Do not turn the instrument power off or serious damage may occur. If any pop up windows appear, click OK or Ignore to proceed.</p>
<p>When the installation has finished, select Finish.</p>	<p>After the instrument restarts, the newly installed version of the X-Series instrument software will run.</p>

It is possible a newer version of the instrument software is available on the web at http://www.keysight.com/find/mxe_software

NOTE Additional recovery steps may be required to fully recover the system to a more current working state. This could involve restoring your own backups of the instrument configuration, including re-installing applications, data, and performing system customizations.

5 Using Windows Tools

NOTE

The capabilities described in this section are Microsoft Windows 7 features. The discussion provided here gives some guidelines for using the capabilities with the instrument. You need to refer to the Windows 7 help documentation for more information. Your version of Windows may not match these instructions exactly.

You need an external keyboard and mouse to fully use these features.

[“Navigating Windows Without a Mouse” on page 74](#)

[“Remote Desktop: Using the EMI Receiver Remotely” on page 79](#)

[“Embedded Web Server: Using the X-Series Instruments Remotely” on page 94](#)

[“Capturing/Printing Displays and Windows” on page 106](#)

[“Windows Shortcuts and Miscellaneous Tasks” on page 107](#)

Navigating Windows Without a Mouse

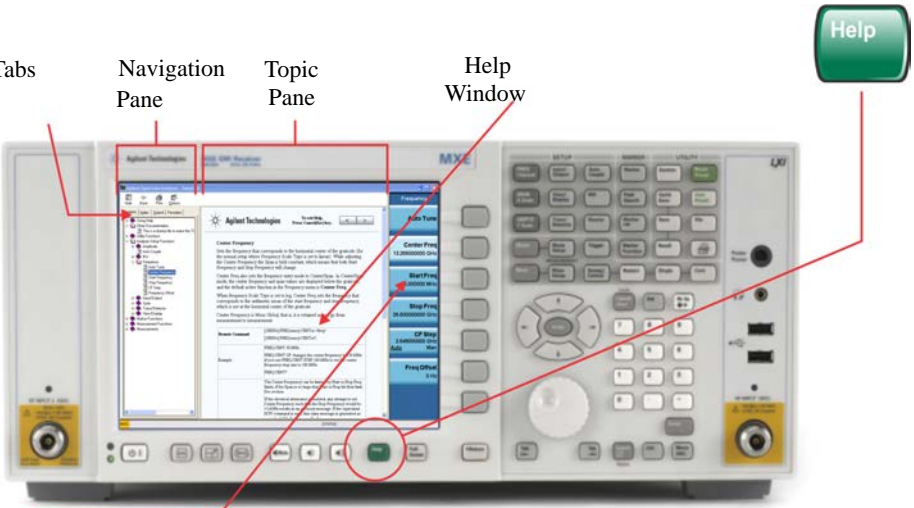

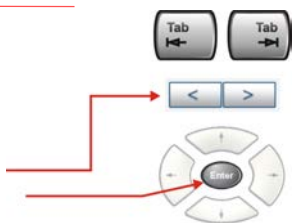
Table 5-1

Key Presses	Actions
Esc	Exits/closes a Windows dialog box (does not exit an Application window)
Enter	Does the current "default action". If a menu item or a button is currently highlighted, then the Enter key activates that menu item or button.
Alt	Moves focus/control to the pull down menus bar in the active Window
Right Arrow	In pull-down menu: opens the next menu to the right, or opens a submenu In a dialog box: selects an option button
Left Arrow	In pull-down menu: opens the next menu to the left, or opens a submenu In dialog box: selects an option button
Up Arrow	In pull-down menu: Moves to next selection up in the menu In dialog box: selects an option button
Down Arrow	In pull-down menu: Moves to next selection down in the menu In dialog box: selects an option button
Tab	In dialog box: moves to the next/previous field
Del	Deletes the currently selected item
Alt + Tab	Switches between the next/previous Application
Alt + Enter	Shows the Properties of the currently selected item
Alt + Esc	Cycles through items in the order that they had been opened
Backspace	In My Computer or Windows Explorer: move up one level In Internet Explorer: works like the BACK arrow key
Ctrl + Left arrow	Moves to the left one word at a time
Ctrl + Right arrow	Moves to the right one word at a time
Ctrl + Tab	In dialog box: moves to the next/previous Tab location
Alt + Space	Opens the window control menu for the currently active window, allowing you to minimize, maximize, move and restore (size) the window
Ctrl + Esc	Opens the Windows Start Menu

Table 5-1

Key Presses	Actions
Ctrl + Alt + Delete	Opens a window that enables you to select the Windows Task Manager

Table 5-2 Using the interactive Help system without a mouse

<p>To open the Help window for any menu</p>	<p>Choose the desired menu, then press the front panel green Help key.</p>
 <p>The diagram shows the front panel of an MXE device with a screen displaying a help window. Labels point to various parts: 'Navigation Tabs' at the top left of the screen, 'Navigation Pane' on the left side, 'Topic Pane' in the center, and 'Help Window' on the right side. A green 'Help' button is shown above the screen. A red circle highlights a softkey on the front panel, with a text box stating: 'Softkeys remain visible (press a softkey to get Help for that key)'. Red lines connect the labels to the corresponding parts of the device.</p>	
<p>To toggle focus between the Navigation and topic panes:</p>	<p>Press the Next Window key </p>
<p>In the navigation pane</p>	<p>In the topic pane</p>
<p>To scroll up or down the topic list: Press the Up or Down Arrow key.</p>	<p>To scroll up or down: Press the Up or Down Arrow key.</p>
<p>To expand or collapse the tree for the selected topic: Press the Right or Left Arrow key.</p>	<p>To go to the next _____ or previous page: Use the Tab keys to select the Right or Left pointer button (in the Topic Pane) Press Enter.</p>
<p>To display the selected topic: Press the Enter key.</p>	 <p>The diagram shows a set of navigation keys: two 'Tab' keys (left and right), two arrow keys (left and right), and an 'Enter' key. Red lines indicate the sequence of actions: pressing a Tab key to select an arrow key, then pressing the Enter key to execute the action.</p>

Using Windows Tools
 Navigating Windows Without a Mouse

Table 5-2 Using the interactive Help system without a mouse






<p>To open the Help window for any menu</p>	<p>Choose the desired menu, then press the front panel green Help key.</p>
 <p>Navigation Tabs Navigation Pane Topic Pane Help Window</p> <p>Softkeys remain visible (press a softkey to get Help for that key)</p>	
 <p>To scroll horizontally or vertically: Press Ctrl+Left, Right, Up, or Down Arrow keys.</p>	 <p>To go back or forward: Press the Alt+Left or Right Arrow key.</p>
 <p>To switch tabs: Press Ctrl+Tab keys.</p>	
	<p>To close the Help window: Press the Cancel (Esc) key.</p>

Table 5-3 Navigating Acrobat (PDF) without a mouse






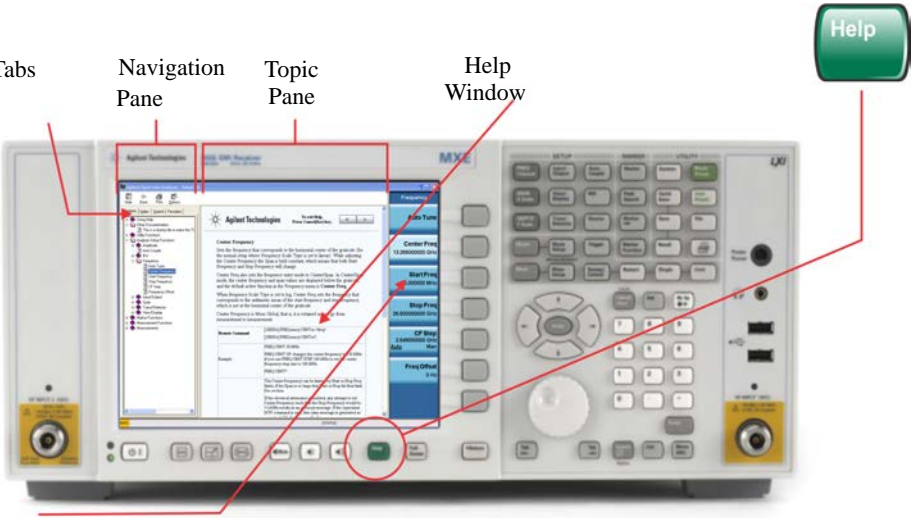  





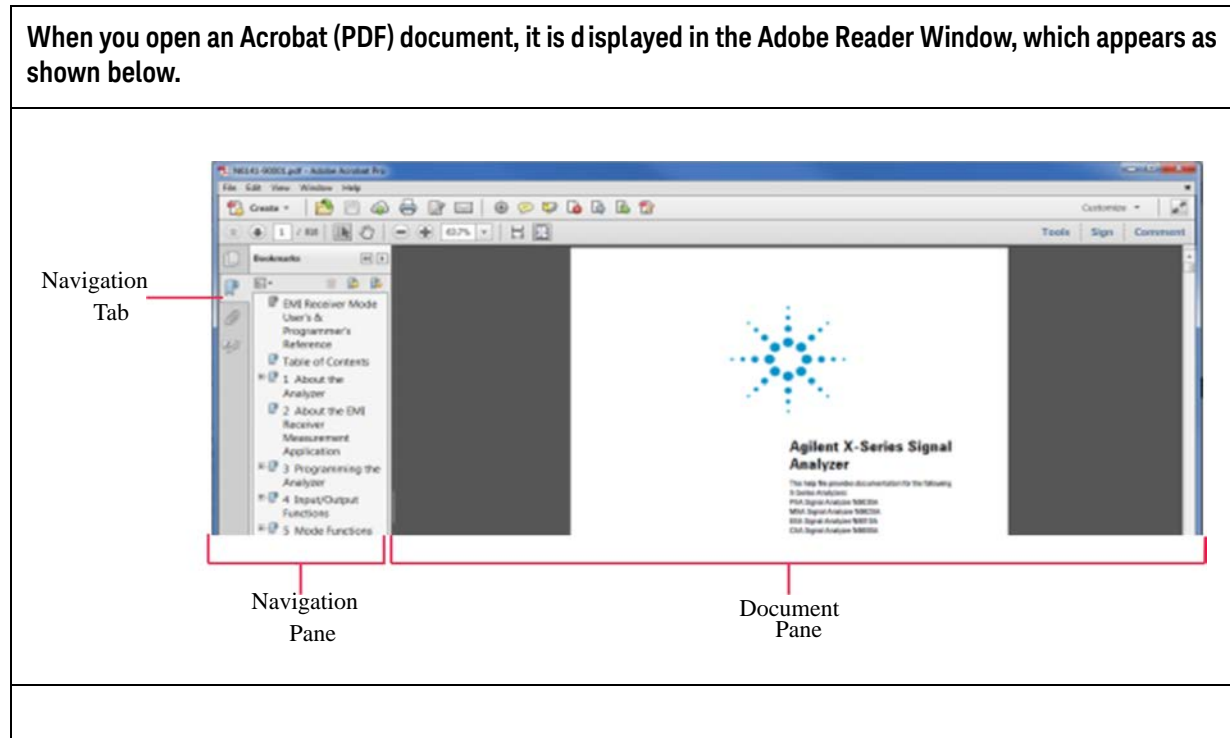


Table 5-4

In the navigation pane	In the document pane
To go to next or previous Bookmark: Press the Up or Down Arrow key. 	 To scroll up or down: Press the Up or Down Arrow key.
To expand or collapse the selected Bookmark: Press the Right or Left Arrow key. 	 To zoom in or out: Press the Alt+Left or Right Arrow key.
To display the content of the selected Bookmark: Press the Enter key. 	To Zoom to: a) Fit page in window: Press Ctrl + 0 keys b) Page actual size Press Ctrl + 1 keys c) Fit page to width Press Ctrl + 2 keys c) Fit visible object Press Ctrl + 3 keys 
To switch tabs: Press Ctrl+Tab keys. 	

Using Windows Tools
 Navigating Windows Without a Mouse

Table 5-4

In the navigation pane	In the document pane
 <p>To select Thumbnails, and Display pages (from Pages Tab): Press the Left/Right/Up/Down keys to navigate, then press Enter to display a selected Page.</p>	 <p>To go to a specific page: Press the Next Window key to open the Go to Page dialog, then enter the page number using the Numeric keypad, and press Enter.</p>
	<p>To print all or part of a document: Press the Print key to open the Adobe Reader Print Dialog, then use the Tab keys to set options, and select OK to print.</p>
	<p>To Exit Adobe Reader: Press Alt + Select keys to open the File menu. Use the Down Arrow key to select Exit, then press Enter.</p>

Remote Desktop: Using the EMI Receiver Remotely

Windows Remote Desktop is recommended for remote control of the instrument. It offers fully-interactive control, that is almost identical to direct face-to-face control of the instrument. You can also remotely control the instrument using the Embedded Web Server interface. The Embedded Web Server functionality provides a communications method that does not require login to the instrument. However, due to its slower response time, it is only recommended for setup and data exchanges that do not involve instrument control.

NOTE Remote Desktop and the Embedded Web Server cannot be run at the same time.

NOTE The Remote Desktop functionality is a Microsoft Windows 7 capability. The following discussion provides some guidelines for using this capability with the instrument. You need to refer to the Windows 7 help documentation for more information. As Windows evolves, these instructions may no longer be exact.

You need an external keyboard and mouse to fully use this functionality.

Overview of Remote Desktop operation

Using the Remote Desktop functionality of the instrument allows you to control and interact with the instrument from a remote computer as though you were sitting in front of the instrument.

When you have configured the instrument for remote connectivity, and configured a separate computer to act as a Remote Desktop Host, you can send commands to the instrument from the remote computer, and you can see the instrument display on the screen of the remote computer.


This section provides full details of how to set up the instrument for remote connectivity, and also how to set up a computer running any 32-bit version of Microsoft Windows as a Remote Desktop Host.

Setting up Remote Desktop operation

Setting up the instrument

Before the instrument can be controlled through a Remote Desktop Connection, it must be set up to allow connection from a remote computer.

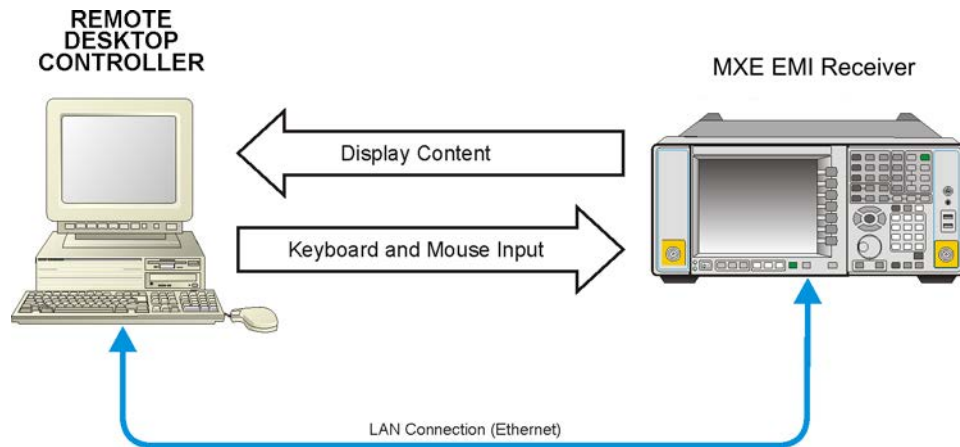Figure 5-1 Basic setup for remote desktop operation



NOTE To perform this operation successfully, you must have Administrator level access to the instrument.

Table 5-5 Setting up a remote desktop connection

Step	Action
1. On the instrument, open the Windows Control Panel	▪ From the instrument application, press System, Control Panel ,
2. Select System functions	▪ From the Adjust your computers settings menu, click System .
3. Access Remote setting	▪ In the Control Panel Home window, select Remote settings
4. Select the Remote option	▪ On the Remote tab, in the Remote Desktop section, click the appropriate checkbox.
5. To add users	▪ Click Select Users, Add .
6. Follow the on screen instructions.	

Setting up the remote computer

The procedure depends on whether the Remote Computer to be set up is running Windows 7, or another version of Microsoft Windows.

Remote computer running Windows 7

Windows 7 includes the Remote Desktop Connectivity Client software, so no additional setup is required.

Remote computer running another version of Windows

You can use any version of Windows to install and run the Client software for Remote Desktop Connectivity. However, you need to have available a Windows installation CD-ROM, because that contains the Client software.

NOTE The following instructions relate to software provided by Microsoft Corporation. Keysight offers no warranty regarding the operation of such software. The procedure described here may be changed by Microsoft at some future time.

Table 5-6 Installing the Client software

Step	Notes
1. When the Welcome Screen appears, click Perform additional tasks	
2. From the What do you want to do? screen, click Set up Remote Desktop Connection.	The Remote Desktop Connection InstallShield Wizard appears.
3. Click Next.	Follow the on screen instructions provided by the Wizard.
4. To access the installed software, click Start > All Programs > Accessories > Communications > Remote Desktop Connection.	

How to locate the computer name of the instrument

To connect a remote computer to the instrument, you need to know its Computer Name. The Computer Name can be displayed as follows:

Table 5-7 Locating the name from the Keysight application

Step	Notes
<ul style="list-style-type: none"> ▪ On the instrument front panel, press System, Show, System. 	A page listing various parameters appears. The instrument's computer name is shown in the list next to the title Computer Name.

Table 5-8 Locating the name from the Windows desktop (with a mouse):

Step	Notes
1. Click Start, Control Panel.	
2. Double-click System	The Computer name is listed in the Computer name, domain, and workgroup settings section.

Running a Remote Desktop session

Initializing a Remote Desktop session

NOTE

To initialize a Remote Desktop Session, you need to know the Computer Name of the instrument. This information can be shown on the instrument display by following the procedure in the section [“How to locate the computer name of the instrument” on page 81.](#)

After setting up both the instrument and the remote computer for Remote Desktop Connectivity, as described in [“Setting up Remote Desktop operation” on page 79,](#) you are ready to start a Remote Desktop session.

Table 5-9 Starting a session


Step	Notes
1. Click Start > All Programs > Accessories > Communications > Remote Desktop Connection.	A Remote Desktop Connection dialog appears:
	
2. Enter the computer name of the instrument.	
3. Click Connect.	A login dialog box appears.

Table 5-9 Starting a session

Step	Notes
4. Enter the login account name and password.	The default account name is Instrument and the default password is measure4u , but these parameters may be changed by instrument users.

NOTE Only the current User or an Administrator can remotely log into the instrument. To see who the current user of the instrument is, press **Ctrl+Esc** on the instrument until you can view the current user name on the Start menu. If no one is currently logged into the instrument, any valid instrument user can remotely log in.

The instrument display appears on the screen of the remote computer. Because the instrument front-panel keys are not available when using the instrument remotely, three alternative methods are available to perform the functions of the front-panel keys, as detailed in the following sections:

- [“Accessing menus for Remote Desktop operation” on page 87](#)
- [“Keycode commands for Remote Desktop operation” on page 88](#)
- [“The Virtual Front Panel” on page 92](#)

Table 5-10 Setting Remote Desktop options

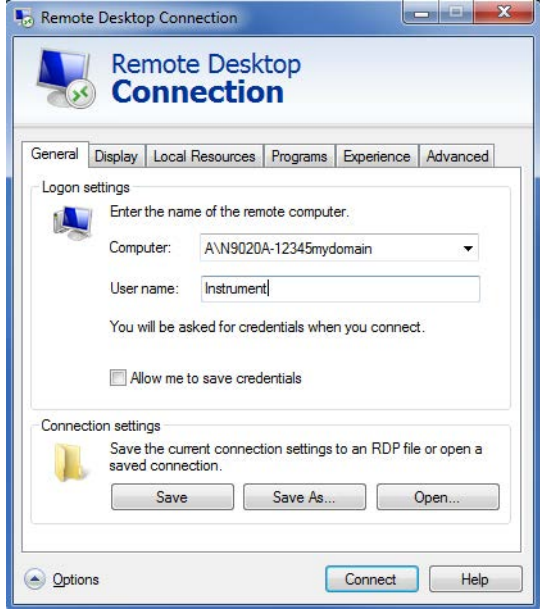
Step	Notes
1. On the Remote Desktop Connection menu, click Options .	 The screenshot shows the 'Remote Desktop Connection' dialog box with the 'Options' tab selected. The 'General' sub-tab is active. Under 'Logon settings', the 'Computer' dropdown is set to 'A\\N9020A-12345mydomain' and the 'User name' text box contains 'Instrument'. There is a checkbox for 'Allow me to save credentials' which is currently unchecked. Under 'Connection settings', there are three buttons: 'Save', 'Save As...', and 'Open...'. At the bottom of the dialog, there are 'Options', 'Connect', and 'Help' buttons.
2. Under the General tab, ensure that the Computer name, User name and Domain name are set correctly.	The Options dialog has several tabs. Generally, the default settings are correct. You may choose to enter the password and save it for future sessions, by checking the Save my password box.

Table 5-10 Setting Remote Desktop options

Step	Notes
3. Click the Display tab.	<ul style="list-style-type: none">Under Remote desktop size, you may select the size of the window in which the instrument display appears. Do not select any size smaller than 1024 x 768 pixels. Selecting a remote desktop size smaller than 1024 x 768 results in the instrument display not being fully visible. In such circumstances, scroll bars do not appear, so portions of the display are not accessible.Under Colors, set this to 16 bits. If you operate Remote Desktop with greater color depth (e.g., 32-bit) your windows may have a different appearance than they do on the instrument display because transparency becomes enabled.


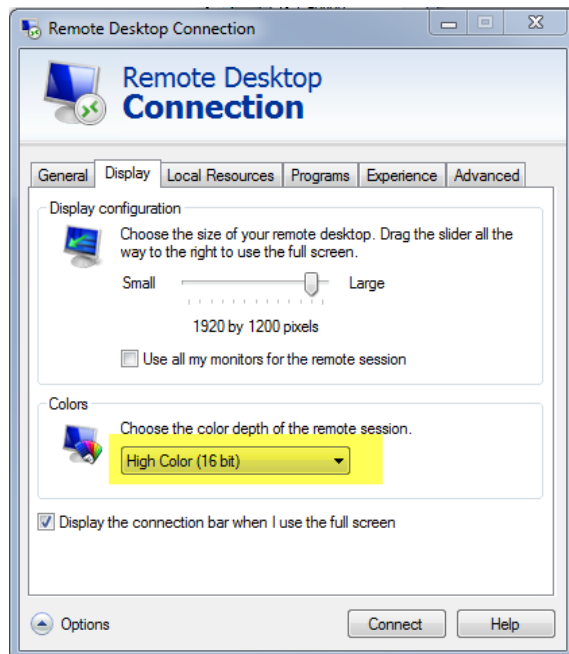
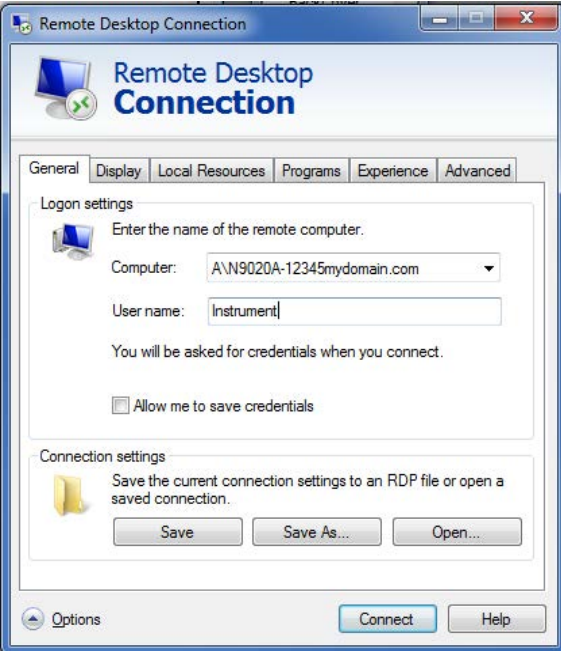
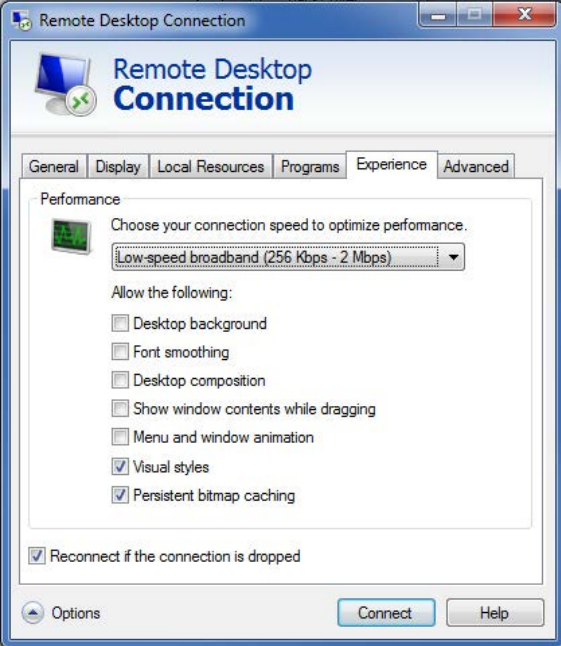


Table 5-10 Setting Remote Desktop options

Step	Notes
<p>4. Click the Local Resources tab.</p> <ul style="list-style-type: none"> ▪ Selecting the Disk Drives checkbox enables you to transfer data between the remote desktop and the local PC. ▪ To transfer data, click Start on the task bar of the remote computer, then click My Computer. Explorer opens on the remote computer and displays the drives of both the remote computer and the local computer. You can now copy and paste between the two disk drives. 	
<p>5. Click the Experience tab.</p>	<p>To Optimize the performance of the Remote Desktop session, choose the appropriate connection format from the drop-down list.</p>
	

Accessing menus for Remote Desktop operation

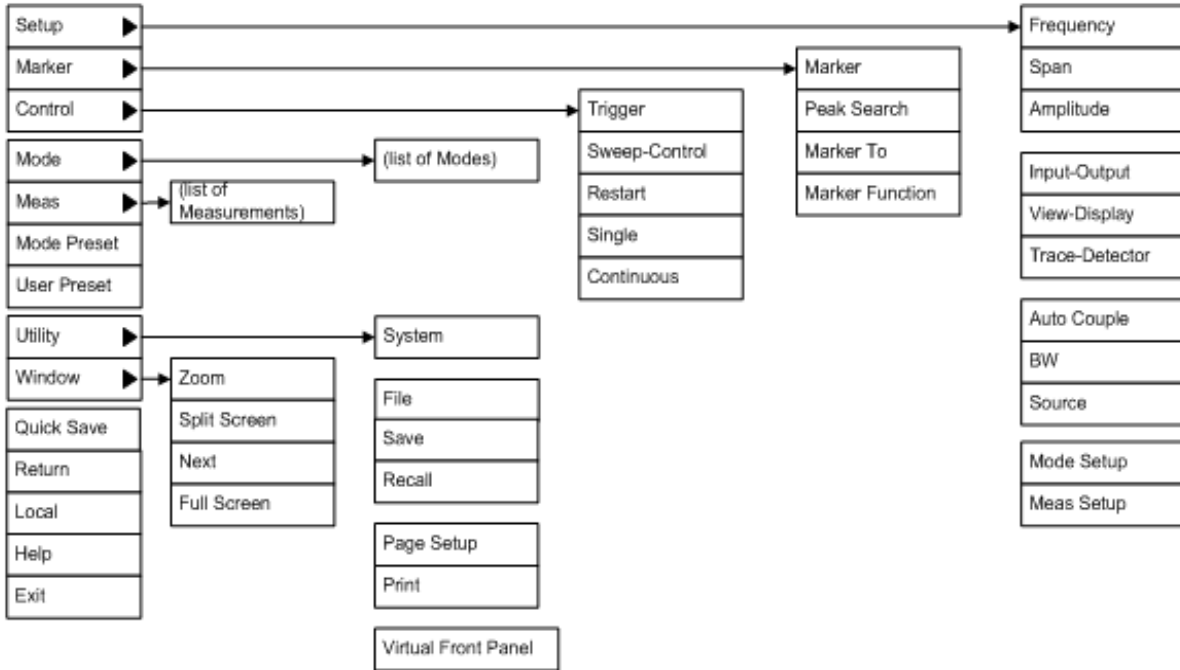Using the mouse, right-click the application display window to access the following remote desktop menus, which may be used as an alternative to the front-panel keys:.



The function of each selection in the menu is generally identical to that of the corresponding front-panel key. The following lists additional functionality:

Exit – Selecting this item closes the Application software.

Utility > Page Setup – Selecting this item opens a printer setup dialog.

Utility > Virtual Front Panel – Selecting this item opens the Virtual Front Panel window, as described in the Section [“The Virtual Front Panel” on page 92](#).

NOTE

The menus are also available when using the instrument directly, provided that a mouse or other pointing device is attached to it.

Keypcode commands for Remote Desktop operation

When using the instrument in remote desktop mode, the following combinations of remote keyboard keys can be used to perform the operation of the instrument front-panel keys.

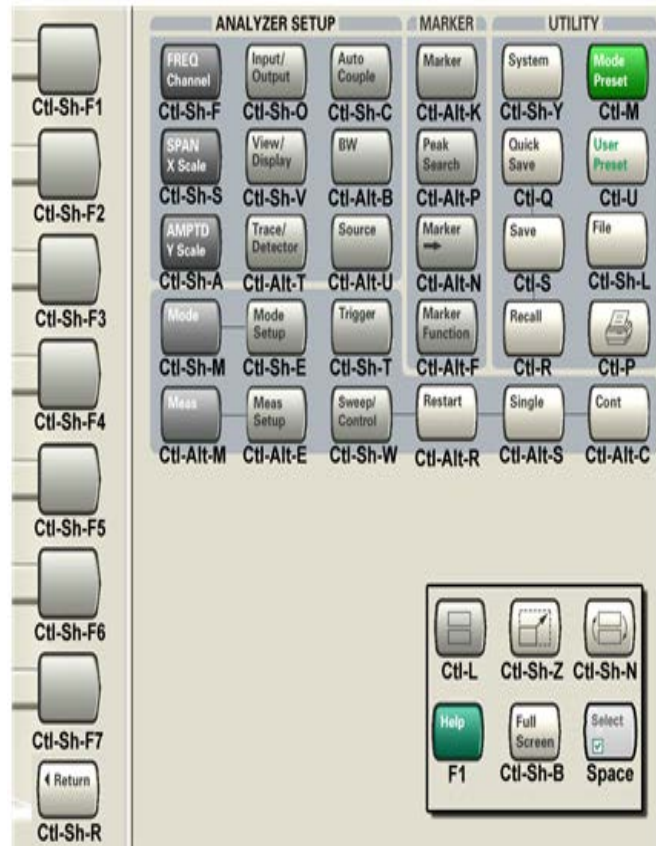


Table 5-11

Keypcode commands

To initiate the following front-panel key:	Press these keys on the remote computer keyboard:
AMPTD Y Scale	Ctrl+Shift+A
Auto Couple	Ctrl+Shift+C
Bk Sp	Backspace
BW	Ctrl+Alt+B
Cancel (Esc)	Esc
Cont	Ctrl+Alt+C
Ctrl	Ctrl

Table 5-11

Keycode commands

To initiate the following front-panel key:	Press these keys on the remote computer keyboard:
Decrease Audio Volume	the Volume Control slider
Del	Delete
Down Arrow	Down Arrow
Enter	Enter (Return)
File	Ctrl+Shift+L
FREQ Channel	Ctrl+Shift+F
Full Screen	Ctrl+Shift+B
Help	F1
Increase Audio Volume	the Volume Control slider
Input/Output	Ctrl+Shift+O
Left Arrow	Left Arrow
Marker	Ctrl+Alt+K
Marker ->	Ctrl+Alt+N
Marker Function	Ctrl+Alt+F
Meas	Ctrl+Alt+M
Meas Setup	Ctrl+Alt+E
Menu (Alt)	Alt
Mode	Ctrl+Shift+M
Mode Preset	Ctrl+M
Mode Setup	Ctrl+Shift+E
Mute	the Mute checkbox under the Volume Control
Next Window	Ctrl+Shift+N
Peak Search	Ctrl+Alt+P
Print	Ctrl+P
Quick Save	Ctrl+Q
Recall	Ctrl+R
Restart	Ctrl+Alt+R

Table 5-11 *Keypcode commands*

To initiate the following front-panel key:	Press these keys on the remote computer keyboard:
Return	Ctrl+Shift+R
Right Arrow	Right Arrow
Save	Ctrl+S
Select	Space Bar
Single	Ctrl+Alt+S
Softkey 1	Ctrl+Shift+F1
Softkey 2	Ctrl+Shift+F2
Softkey 3	Ctrl+Shift+F3
Softkey 4	Ctrl+Shift+F4
Softkey 5	Ctrl+Shift+F5
Softkey 6	Ctrl+Shift+F6
Softkey 7	Ctrl+Shift+F7
Source	Ctrl+Alt+U
SPAN X Scale	Ctrl+Shift+S
Split Screen	Ctrl+L
Sweep/Control	Ctrl+Shift+W
System	Ctrl+Shift+Y
Tab	Tab
Trace/Detector	Ctrl+Alt+T
Trigger	Ctrl+Shift+T
Up Arrow	Up Arrow
User Preset	Ctrl+U
View/Display	Ctrl+Shift+V
Zoom	Ctrl+Shift+Z
1	1^a
2	2^a
3	3^a

Table 5-11 *Keycode commands*

To initiate the following front-panel key:	Press these keys on the remote computer keyboard:
4	4 ^a
5	5 ^a
6	6 ^a
7	7 ^a
8	8 ^a
9	9 ^a
-	Use the – key to enter a negative value, as appropriate ^a
.(Decimal Point)	.(Period) ^a
0 (Zero)	0 (Zero) ^a

a. For remote keyboards that feature a numeric keypad, use either the appropriate numeric keypad key or the main keypad key.

NOTE The effect of pressing **Ctrl+Alt+Delete** on the keyboard of the remote computer **always** applies to the remote computer, and not to the Instrument. Generally, the effect of pressing this key combination is to display the Windows Task Manager. Therefore, pressing this key combination on the remote computer does **not** allow you to reboot the Instrument.

Ending a Remote Desktop session

There are two ways to disconnect the remote computer from the instrument, ending the session:

Table 5-12

Step	Notes
1. Click the X , then click OK .	For full-screen, the X appears at the top center of the window. For non full-screen, the X appears in a red box at the right of the window's title bar.

Table 5-12

Step	Notes
or	
2. When the remote desktop is full screen, move the cursor to the bottom left of the window:	
<ul style="list-style-type: none">• Click Start, Disconnect.• Click Disconnect.	You are asked to confirm that you want to disconnect.

The Virtual Front Panel

The Virtual Front Panel is a software equivalent of the front-panel key set, which provides another alternate method for instrument control. It may be displayed in a separate window on the instrument (or remote desktop) display.

NOTE

The Virtual Front Panel is also available when using the instrument directly, provided that a mouse or other pointing device is attached to it.

Using the mouse, right-click the application display window, then select **Utility > Virtual Front Panel**. The Virtual Front Panel appears, as shown below:



When you click a button in the Virtual Front Panel, it performs the operation of the corresponding instrument front-panel key. The buttons at the left of the panel, named SoftKey 1 through SoftKey 7, perform the operation of the respective softkeys.

Embedded Web Server: Using the X-Series Instruments Remotely

The instrument can be controlled using either the Embedded Web Server or Windows Remote Desktop. The Embedded Web Server is a good solution when you do not want to log into the instrument's user account. This allows you to view the display or control the instrument, without logging the current user off. Windows Remote Desktop must be used when the remote computer keyboard is needed as an input device (such as for editing filenames, or setting the title.) Also, Windows Remote Desktop generally has a faster response time.

NOTE The Embedded Web Server functionality is only for a single user.

Accessing the instrument through the Internet

It is possible to access and control the instrument through the Internet and World Wide Web, or a local internet, using the built-in Embedded Server functionality. This section provides details of how to use this functionality.

The instrument may also be accessed and controlled using the Windows Remote Desktop functionality (see the section [“Remote Desktop: Using the EMI Receiver Remotely”](#) on page 79, for details).

NOTE Remote Desktop and the Embedded Web Server cannot be run at the same time.

The instrument Embedded Server capabilities are fully compliant with the LXI (LAN eXtensions for Instrumentation) standard.

NOTE To gain access to the instrument from the LAN, you need to know its hostname (or IP Address). For details of how to locate this information using the instrument Display, see [“How to locate the computer name of the instrument”](#) on page 81.

Table 5-13 Accessing the instrument

Step	Notes
1. Enter a URL corresponding to the instrument hostname or IP Address.	NOTE This functionality is only fully supported when using Internet Explorer. In this example, the host name is “a-n9038a-10102”.

Table 5-13 Accessing the instrument

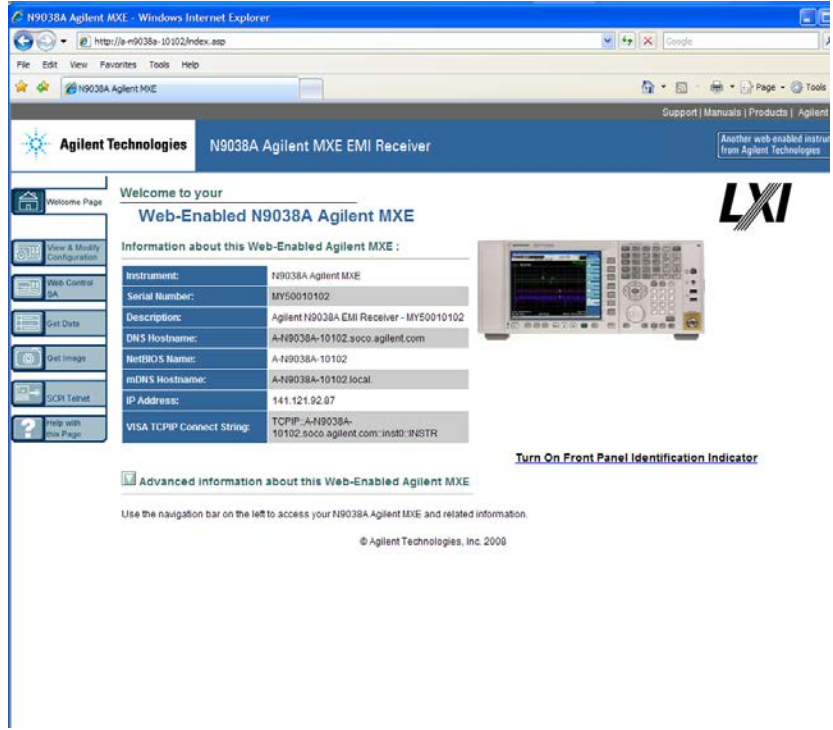
Step	Notes																		
 <p>The screenshot shows a web browser window titled "N9038A Agilent MXE - Windows Internet Explorer". The address bar shows "http://a-n9038a-10102/index.asp". The page content includes a navigation menu on the left with options like "Welcome Page", "View & Modify Configuration", "Web Control (BA)", "Get Data", "Get Image", "SCPI Testset", and "Help with this Page". The main content area is titled "Welcome to your Web-Enabled N9038A Agilent MXE" and features a table of instrument information:</p> <table border="1"><thead><tr><th colspan="2">Information about this Web-Enabled Agilent MXE :</th></tr></thead><tbody><tr><td>Instrument:</td><td>N9038A Agilent MXE</td></tr><tr><td>Serial Number:</td><td>MY50010102</td></tr><tr><td>Description:</td><td>Agilent N9038A EMI Receiver - MY50010102</td></tr><tr><td>DNS Hostname:</td><td>A-N9038A-10102.soco.agilent.com</td></tr><tr><td>NetBIOS Name:</td><td>A-N9038A-10102</td></tr><tr><td>mDNS Hostname:</td><td>A-N9038A-10102.local</td></tr><tr><td>IP Address:</td><td>141.121.92.87</td></tr><tr><td>VISA TCP/IP Connect String:</td><td>TCPIP::A-N9038A-10102.soco.agilent.com::inst0::INSTR</td></tr></tbody></table> <p>Below the table, there is a link for "Advanced information about this Web-Enabled Agilent MXE" and a note: "Use the navigation bar on the left to access your N9038A Agilent MXE and related information." The footer includes "© Agilent Technologies, Inc. 2008".</p>	Information about this Web-Enabled Agilent MXE :		Instrument:	N9038A Agilent MXE	Serial Number:	MY50010102	Description:	Agilent N9038A EMI Receiver - MY50010102	DNS Hostname:	A-N9038A-10102.soco.agilent.com	NetBIOS Name:	A-N9038A-10102	mDNS Hostname:	A-N9038A-10102.local	IP Address:	141.121.92.87	VISA TCP/IP Connect String:	TCPIP::A-N9038A-10102.soco.agilent.com::inst0::INSTR	<p>When the connection is made, the welcome page appears.</p>
Information about this Web-Enabled Agilent MXE :																			
Instrument:	N9038A Agilent MXE																		
Serial Number:	MY50010102																		
Description:	Agilent N9038A EMI Receiver - MY50010102																		
DNS Hostname:	A-N9038A-10102.soco.agilent.com																		
NetBIOS Name:	A-N9038A-10102																		
mDNS Hostname:	A-N9038A-10102.local																		
IP Address:	141.121.92.87																		
VISA TCP/IP Connect String:	TCPIP::A-N9038A-10102.soco.agilent.com::inst0::INSTR																		
<p>2. Click Advanced information about this Web-Enabled Keysight MXE</p>	<p>This displays further settings and configuration information.</p>																		

Table 5-13 Accessing the instrument

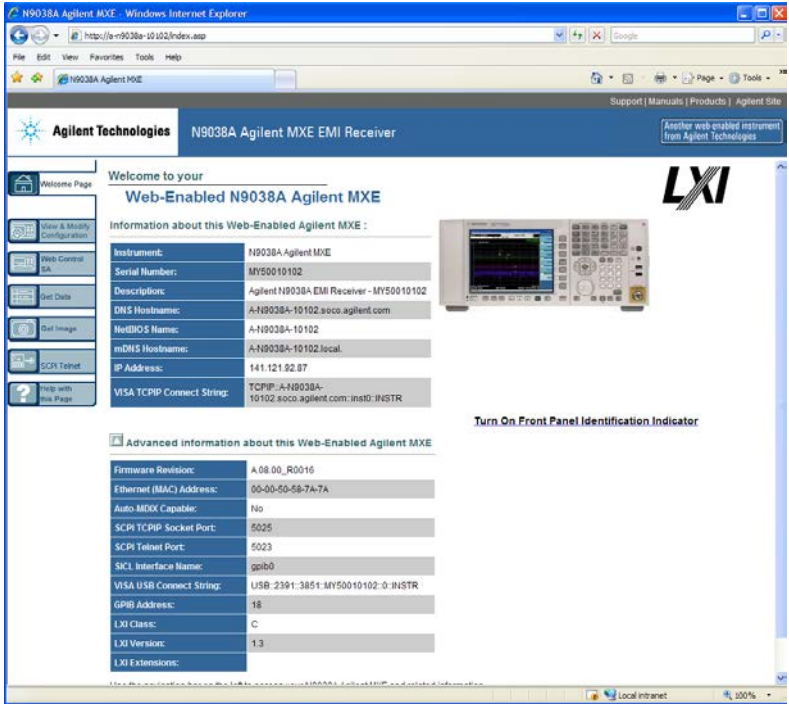
Step	Notes
	<p>At the left side of the page are a set of tabs that provide access to configuration information for the instrument, plus the ability to control it through the web interface.</p>
<p>1. Enter a URL corresponding to the instrument hostname or IP Address.</p>	<p>NOTE This functionality is only fully supported when using Internet Explorer.</p> <p>In this example, the host name is “a-n9038a-10102”.</p>

Table 5-14 Selecting the View & Modify Configuration tab

Step	Notes
<p>1. Click View & Modify Configuration</p>	<p>This displays a web page, which shows the instrument’s currently-assigned IP address and other TCP/IP parameters.</p>

Table 5-14 Selecting the View & Modify Configuration tab

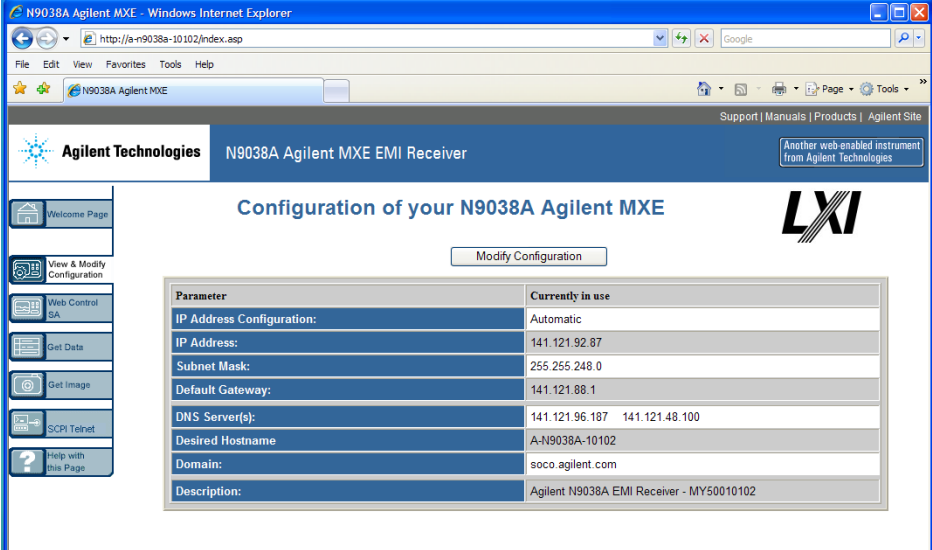
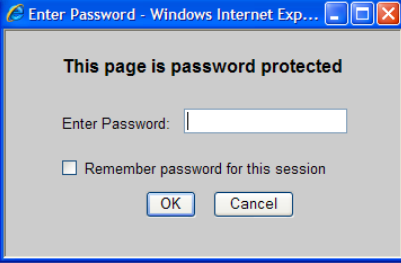
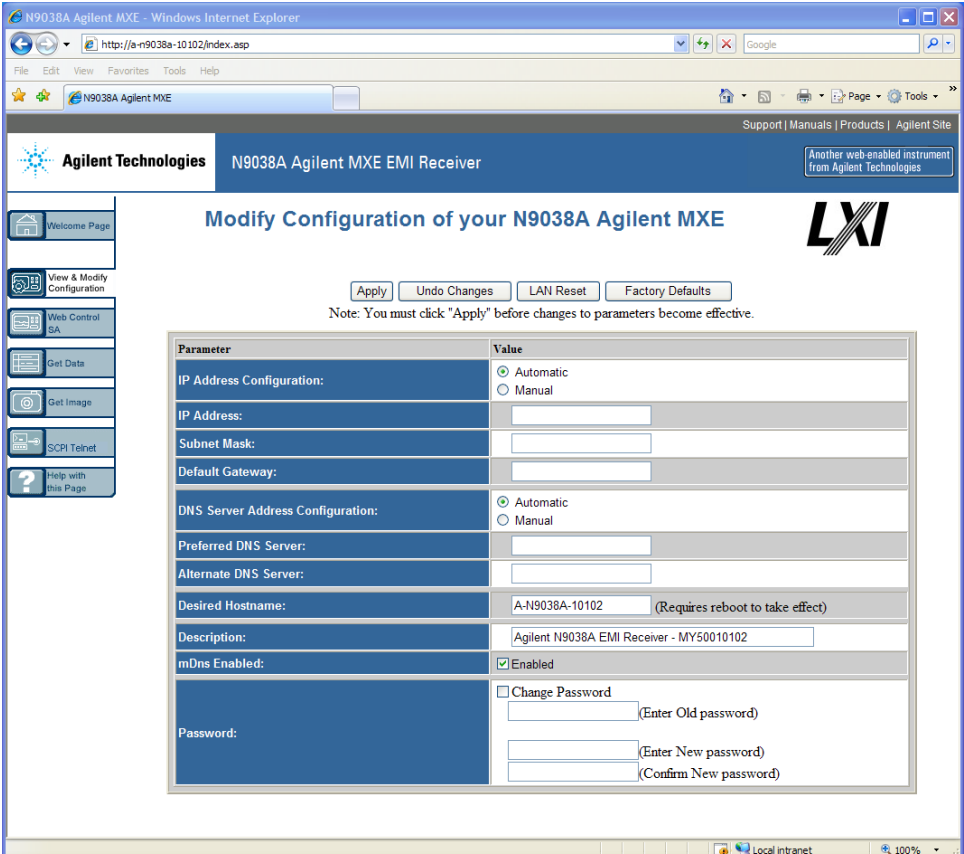
Step	Notes
	
<p>2. Click Modify Configuration</p>	<p>A password entry dialog appears.</p>
	<p>By default, this password is set at the factory as “agilent”. However, you may subsequently change the password. (Press System, I/O Config, Reset Web Password on the instrument front panel to change the password.)</p> <p>When the correct password has been entered, the Modify Configuration web page appears.</p>

Table 5-14 Selecting the View & Modify Configuration tab

Step	Notes
	

3. Enter new settings as required, then click **Apply** to cause the new settings to take effect.


Before clicking **Apply**, you may use the **Undo Changes** button to revert all settings to their previous values.

Accessing the Web Control SA tab

Selecting this tab lets you view, control and interact with the instrument through the web server.

Table 5-15


Step	Notes
1. Click Control	A password entry dialog appears.

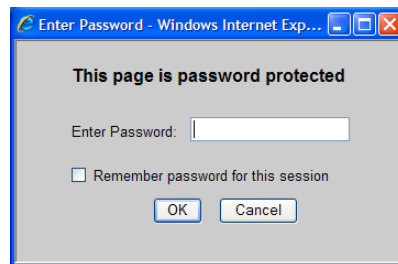

By default, this password is set at the factory as “agilent”. However, you may subsequently change the password. (Press **System, I/O Config, Reset Web Password** on the instrument front panel to change the password.)

When the correct password is entered, the instrument control web page appears.

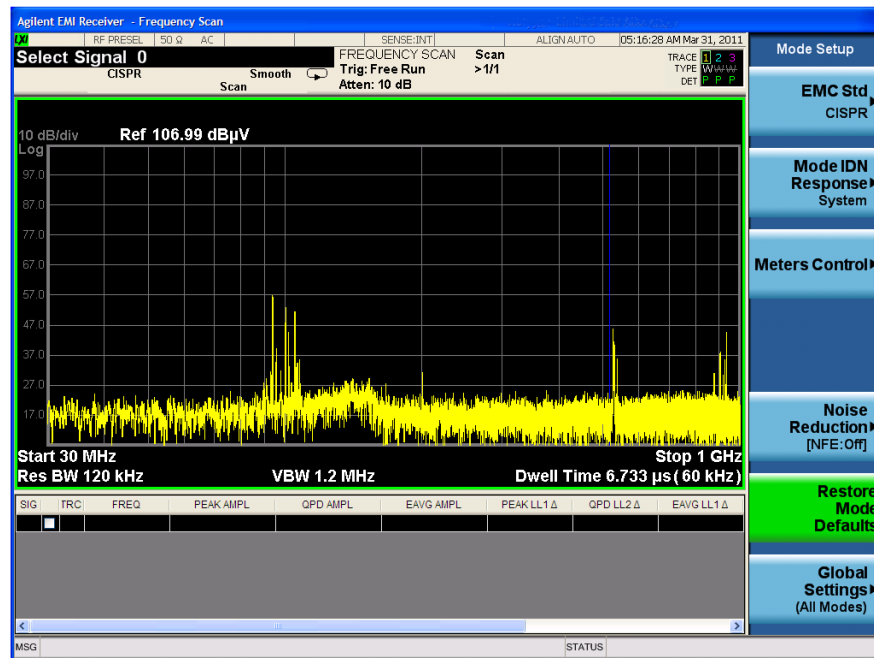NOTE To view the instrument display, the instrument application must be running.



2. Click Display Front Panel Keys	This brings up a virtual keyboard that can be used to control the instrument.
--	---

Table 5-15

Step	Notes

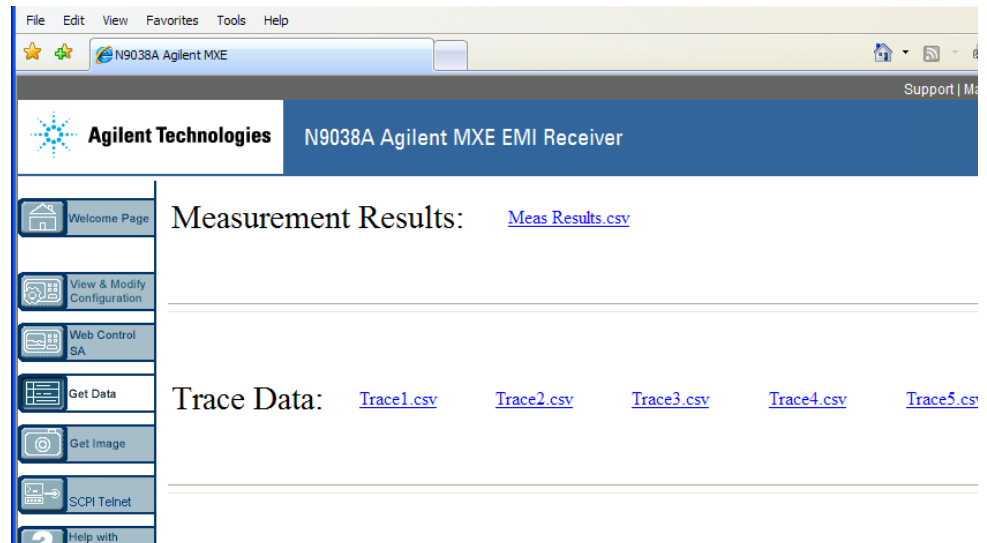
Selecting the Get Data tab

Selecting the Get Data tab allows you to capture results from the instrument's currently active measurement. Depending on the current measurement type, captured results consist of either Trace Data or Measurement Results.

NOTE To capture data using the web server, the instrument application must be running.

The captured data is formatted as a Comma Separated Value (CSV) file, which may be saved on the client computer's hard disk, or opened with a spreadsheet application such as Microsoft Excel, or imported into a database application such as Microsoft Access.

A typical Get Data web page display is shown below:



If the measurement currently running does not support the selected result type, the web page indicates this:




Selecting the Get Image tab

Selecting the Get Image tab captures a screen image from the Instrument display.

NOTE To capture a screen image using the web server, the Instrument Application must be running.

The image is captured as a Portable Network Graphics (PNG) file, to the default file name `Screen.png`. The image file can be saved to the client computer hard disk, or copied to the Windows clipboard.

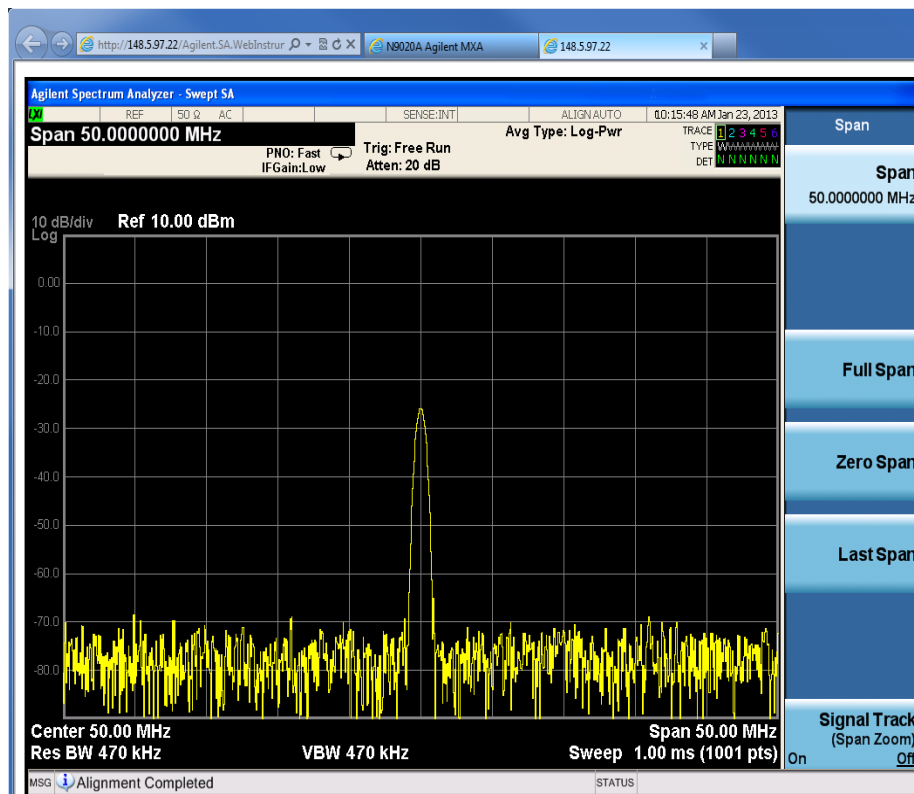A typical screen capture image appears as follows:



Selecting the SCPI Telnet tab

Selecting the SCPI Telnet tab opens a Telnet session between the instrument and the client computer. The instrument TCP/IP port used for SCPI access is 5023.

NOTE To run a SCPI Telnet session, the instrument application must be running.

Table 5-16


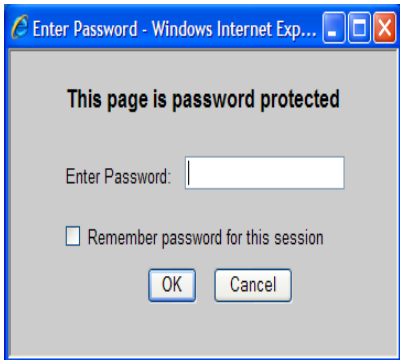
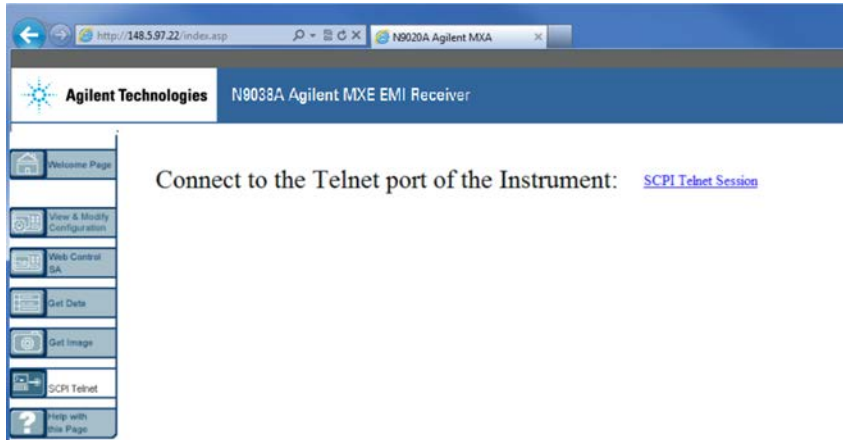
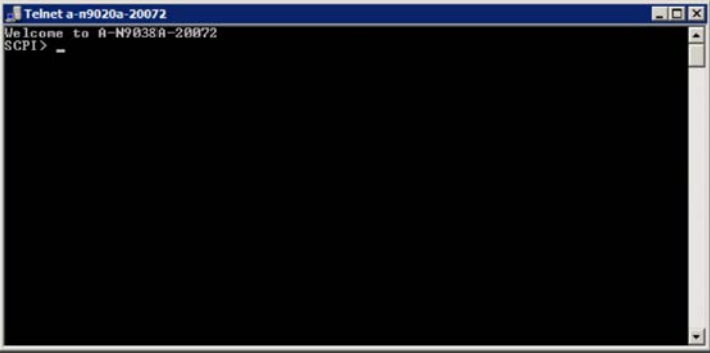
Step	Notes
1. Click SCPI Telnet	A password entry dialog appears. By default, this password is set at the factory as “agilent”. However, you may subsequently change the password. (Press System, I/O Config, Reset Web Password on the instrument front panel to change the password.) When the correct password is entered, the connection window appears.
	
	
2. Click SCPI Telnet Session	The telnet command line interface appears.

Table 5-16

Step	Notes
	SCPI commands and queries may be entered using the command line interface.
3. To exit the telnet session, press Ctrl+] on the client computer keyboard.	

Selecting the Help tab

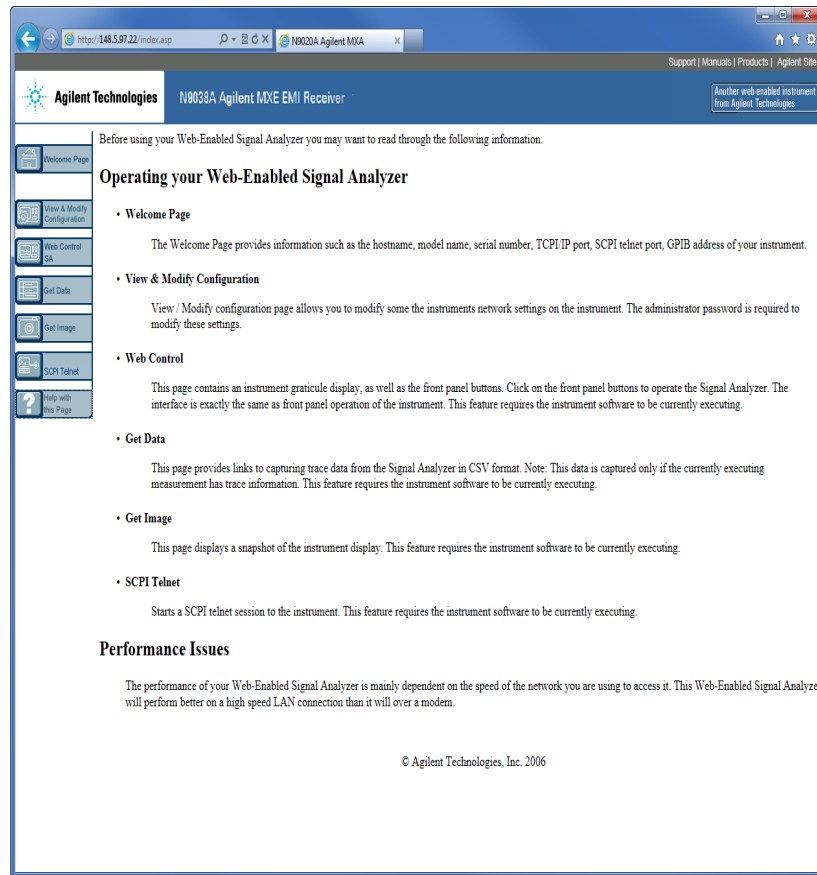Selecting the Help tab displays basic help information about each of the other tabs, plus performance tips, as shown:



Capturing/Printing Displays and Windows

You need an external keyboard and mouse to use this feature.

Save the desktop:

Table 5-17

Step	Notes
1. Press Print Screen on the external keyboard	This captures the desktop and saves it on the Windows clipboard.
2. Open a graphics software program like Microsoft Paint	
3. Paste the clipboard contents into the program	The keyboard shortcut Ctrl + v will paste the contents of the clipboard.
4. Save the image in a file	

Save the current active window:

Table 5-18

Step	Notes
1. Click on the window you want to capture	This activates the window.
2. Press Alt + Print Screen on the external keyboard	This captures the window and saves it on the Windows clipboard.
3. Open a graphics software program like Microsoft Paint	
4. Paste the clipboard contents into the program.	The keyboard shortcut Ctrl + v will paste the contents of the clipboard.
5. Save the image in a file.	

Windows Shortcuts and Miscellaneous Tasks

This section provides a list of windows shortcuts (key combinations) that are useful when you operate the instrument without an attached mouse and keyboard. (See also “[Navigating Windows Without a Mouse](#)” on page 74.) Although these shortcuts are available in any Windows 7 system, they are not commonly used when a mouse and keyboard are attached.

Windows shortcuts (key combinations)

You can use the following combinations of front panel keys to perform basic windows tasks when using the instrument without an attached mouse and keyboard.

Table 5-19


Windows shortcut key combinations

To do the following:	Press:
Display the Windows Start Menu	Ctrl+Esc
Cycle through all open applications	Alt+Tab
Select the first menu of a menu bar	Alt
Move through menu headings	Left Arrow, Right Arrow
Open (drop down) a menu	Down Arrow
Move through items in an expanded menu	Up Arrow, Down Arrow
Close the current menu selection	Esc
Cancel the current menu bar selection	Alt
Open an application’s control menu (usually the left-most menu on the menu bar, starting with <code>File</code>)	Alt+Select
In a dialog: move between tabs	Ctrl+Tab
In a dialog: move forward through dialog box items	Tab
In a dialog: move backward through dialog box items	Shift+Tab
In a dialog: open a list box	Alt+Down Arrow
In a dialog list box or check box: select or deselect items	Select
In a dialog list box or check box: select or deselect one item at a time	Shift+Up Arrow, Shift+Down Arrow
In <code>My Computer</code> , expand a selected folder	Enter
In <code>My Computer</code> , open a folder one level up from the current folder	Bk Sp

Navigating an application menu without a mouse or keyboard

This example uses Microsoft Excel, but you can use a similar sequence of operations to select and execute any menu item of any application.

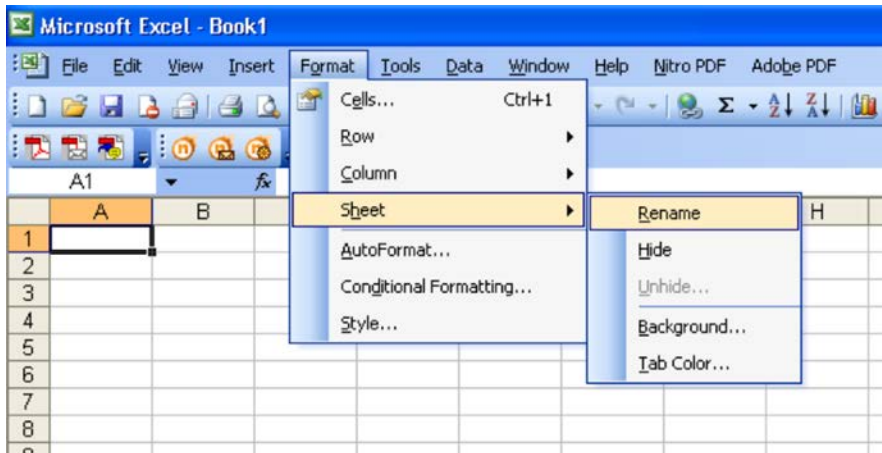To select and execute the item **Sheet > Rename** option from the **Format** menu in the menu bar shown below,



perform the following operations:

Table 5-20

Step	Notes
1. Press Alt to select the F ile menu in the menu bar.	The focus must be in the appropriate window.
2. Use the Right Arrow and Left Arrow keys to move horizontally to the Format menu.	
3. Press the Down Arrow to expand the Format menu.	
4. Use the Down Arrow and Up Arrow keys to move vertically to the Sheet menu item.	
5. Press the Right Arrow key to expand the Sheet sub-menu.	The Rename sub-menu item appears already selected. If another item in the same sub-menu is required, use the Down Arrow and Up Arrow keys to move vertically to that item.
6. Press Enter to execute the selected action.	

Windows taskbar auto-hide feature


The Windows taskbar should always be in the auto-hide mode when using the instrument application. If the taskbar is not set to auto-hide, the lower part of the instrument display is obscured by the taskbar.

If a mouse is attached to the instrument, and you move the mouse cursor to the bottom of the display (either deliberately or accidentally), the taskbar automatically appears. Provided that the taskbar is in auto-hide mode, you can make it disappear again by moving the mouse cursor away from the bottom of the screen.

If at any time the Windows taskbar is inadvertently set to the non-auto-hide mode, you can restore the auto-hide behavior by doing the following:

Table 5-21 Restoring taskbar auto-hide mode

Step	Notes
1. Click Start > Control Panel	If not using a mouse, press Ctrl+Esc .
2. Click Taskbar and Start Menu	If you are not using a mouse, use the shortcut key combinations specified in the Section “Windows shortcuts (key combinations)” on page 107 to make these selections.
3. Click the Taskbar tab	The Taskbar and Start Menu Properties dialog appears.
4. Select the Auto-hide the taskbar check box	If you are not using a mouse, press Tab repeatedly until the auto-hide option is selected, then press Select to toggle the check box state.

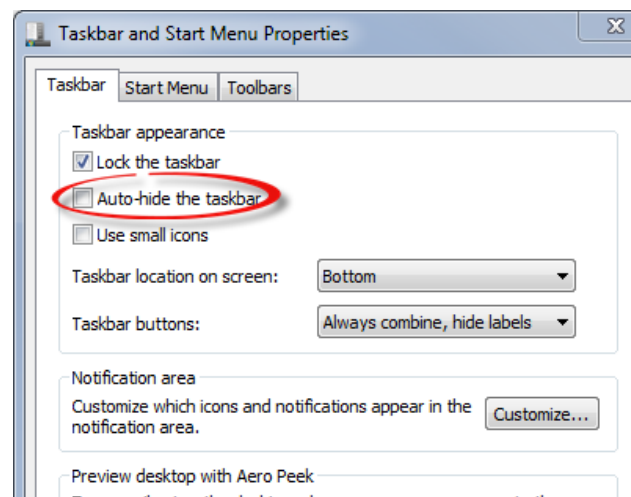

5. Click OK .	This applies the change and closes the dialog box.
----------------------	--

Using Windows Tools
Windows Shortcuts and Miscellaneous Tasks

6 Troubleshooting

[“Check the Basics” on page 112](#)

[“Problems with Microsoft Windows 7” on page 114](#)

[“Returning an EMI Receiver for Service” on page 115](#)

WARNING

No operator serviceable parts inside. Refer servicing to qualified personnel. To prevent electrical shock do not remove covers.

Check the Basics

- o Is there power at the receptacle?
- o Is the analyzer turned on? Check to see if the green LED beside the power switch is on. Also, listen for internal fan noise to determine if the analyzer cooling fans are running.
- o If other equipment, cables, and connectors are being used with your signal analyzer, make sure they are connected properly and operating correctly.

If the analyzer cannot completely load or run the operating system, or the instrument application is not successfully launched, the problem could be a corrupt disk drive. If the analyzer gets far enough along in the boot process to run the "Keysight Recovery System", perform the "[Disk Drive Recovery Process](#)" as described on page 60.
- o Is the Measurement Application running? If not, there is a software launch shortcut/icon on the desktop.
- o Does the instrument application have the focus? (That is, is the blue window banner highlighted?) If not, move focus to the application with Alt-Tab.
- o Review the measurement procedures being performed when the problem first appeared. Are all of the settings correct?
- o If the analyzer is not functioning as expected, return the analyzer to a known state by pressing **Mode Preset**.

NOTE

Some analyzer settings are not affected by a Preset. If you wish to reset the analyzer settings, press **System, Power On, Restore Power On Defaults**.

- o Is the measurement being performed, and the results that are expected, within the specifications and capabilities of the analyzer?

Refer to the specifications guide for your analyzer.

http://www.keysight.com/find/mxe_specifications

Technical manual pdf files are available on the documentation DVD provided with the instrument, and on the Keysight website:

http://www.keysight.com/find/mxe_manuals
- o If the analyzer is not communicating via the LAN connection, check for the presence of blinking yellow LEDs on the rear panel LAN connector. If the ACT LED is not blinking, check the LAN cable and LAN integrity.
- o To meet specifications, the analyzer must be aligned. Either the Auto Align (On) feature must be selected (press **System, Alignments, Auto Align, Normal**), or the analyzer must be manually aligned.
- o Perform an Alignment. Press **System, Alignments, Align Now, All**.

- o If the previously performed alignments did not resolve the problem, press **System, Alignments, Restore Align Defaults**. Then press **System, Alignments, Align Now, All**.
- o If the analyzer exhibits large amplitude errors (> 10 dB) especially at frequencies above 10 GHz, the RF preselector might not be properly centered. Press **Peak Search, AMPTD Y-Scale, Presel Center**. If the signal amplitude error is corrected, the preselector characterization should be performed. Press **System, Alignments, More 1 of 2, Advanced, Characterize Preselector**. The characterization will take several minutes and the analyzer must not be interrupted during this time. If the analyzer is interrupted during the characterization process, the characterization data will be destroyed and it will be necessary to perform the entire process again.
- o Is the analyzer displaying an error message? If so, refer to the Instrument Messages Guide.
- o Check if the external frequency reference is selected but not available. Verify that it is selected by pressing **Input/Output, Freq Ref In**. If **External** is selected, changing the setting to **Sense** allows the analyzer to sense the presence of an external reference and use it only if it is available. The frequency of the reference should be set correctly.
- o If you are using a Windows program other than the instrument application, you may notice it running slow. Place the instrument application in single sweep/measurement.

TIP

You can get automatic electronic notification of new firmware releases and other product updates/information by subscribing to the *Keysight Technologies Test & Measurement E-Mail Notification Service* for your signal analyzer at <http://keysight.com/find/notifyme>

Problems with Microsoft Windows 7

The Microsoft Windows 7 operating system settings have been optimized for the best performance. Modification of these settings may degrade instrument performance and measurement speed. Those that can be safely modified are described in [“Settings that can be changed” on page 54](#)

The MXE EMI Receivers operate in an open Windows environment, so you can install software on the instrument. However, installation of non-approved software may affect instrument performance. Keysight does not warrant the performance with non-approved software installed.

Returning an EMI Receiver for Service

Calling Keysight Technologies

Keysight Technologies has offices around the world to provide you with complete support for your instrument. To obtain servicing information or to order replacement parts, contact the nearest Keysight Technologies office listed below. In any correspondence or telephone conversations, refer to your instrument by its product number, full serial number, and software revision.

Press **System**, **Show**, **System**, and the product number, serial number, and software revision information will be displayed on your instrument screen. A serial number label is also attached to the rear panel of the instrument.

Locations for Keysight Technologies

Online assistance: <http://www.keysight.com/find/assist>

Americas

Canada
(877) 894 4414

Mexico
001 800 254 2440

United States
(800) 829 4444

Brazil
55 11 3351 7010

Asia Pacific

Australia
1 800 629 485

China
800 810 0189

Hong Kong
800 938 693

India
1 800 112 929

Japan
0 120 (421) 345

Korea
080 769 0800

Malaysia
1 800 888 848

Singapore
1 800 375 8100

Taiwan
0800 047 866

Other AP countries
(65) 6375 8100

Europe & Middle East

Austria
0800 001122

Belgium
0800 58580

Finland
0800 523252

France
0805 980333
*0.125 Euros/minute

Germany
0800 6270999

Ireland
1800 832700

Israel
1 809 343051

Italy
800 599100

Luxembourg
+32 800 58580

Netherlands
0800 0233200

Russia
8800 5009286

Spain
0800 000154

Sweden
0200-88 22 55

Switzerland
0800 80 53 53
Opt. 1 (DE)
Opt. 2 (FR)
Opt. 3 (IT)

United Kingdom
0800 0260637

Other European Countries: <http://www.keysight.com/find/contactus>

Read the Warranty

The warranty for your instrument is in the front of your Specifications Guide. Please read it and become familiar with its terms.

If your instrument is covered by a separate maintenance agreement, please be familiar with its terms.

Service Options

Keysight Technologies offers several optional maintenance plans to service your instrument after the warranty has expired. Call your Keysight Technologies office for full details.

If you want to service the instrument yourself after the warranty expires, you can download the service documentation that provides all necessary test and maintenance information.

http://www.keysight.com/find/mxe_manuals

Packaging the Instrument

Use original packaging or comparable. It is best to pack the unit in the original factory packaging materials if they are available.

CAUTION

Instrument damage can result from using packaging materials other than those specified. Never use styrene pellets in any shape as packaging materials. They do not adequately cushion the equipment or prevent it from shifting in the carton. They cause equipment damage by generating static electricity and by lodging in the instrument louvers, blocking airflow.

You can repack the instrument with commercially available materials, as follows:

Table 6-1

Step	Notes
1. Wrap the instrument in antistatic plastic to reduce the possibility of damage caused by electrostatic discharge	
2. Use a strong shipping container.	The carton must be both large enough and strong enough to accommodate the instrument. A double-walled, corrugated cardboard carton with 159 kg (350 lb) bursting strength is adequate. Allow at least 3 to 4 inches on all sides of the instrument for packing material.

Table 6-1

Step	Notes
3. Surround the equipment with three to four inches of packing material and prevent the equipment from moving in the carton.	If packing foam is not available, the best alternative is plastic bubble-pak. This material looks like a plastic sheet filled with 1-1/4 inch air bubbles. Use the pink-colored bubble which reduces static electricity. Wrapping the equipment several times in this material should both protect the equipment and prevent it from moving in the carton.
4. Seal the shipping container securely with strong nylon adhesive tape.	
5. Mark the shipping container “FRAGILE, HANDLE WITH CARE” to assure careful handling.	
6. Retain copies of all shipping papers.	

Index

A

active function, 33
anti-virus software, 48
Auto-hide Taskbar, 109

B

backing up your instrument, 63
battery replacement, 26

C

C drive usage, 66
changing
 Windows system settings, 54
Computer Name, 84
computer name
 how to locate it, 81
connectors, front panel, 30
contents of shipment, 10
Control Panel
 taskbar, 109
Control Panel access, 58
Control Panel settings that can be
 changed, 54
controlling Windows without a
 mouse, 74
cooling the instrument, 11

D

D drive data storage, 66
data storage, 66
defragmenting your disk, 63
desktop saving, 106
Device USB port, 64
disk defragmentation, 63
display capture, 101
display print, 106
display save, 106
Domain Name, 84
drive C use, 66
drive D use, 66
drive recovery, 68

E

electrostatic discharge (ESD)
 protecting against, 26
Embedded Web Server
 Get Data Page, 100
 Get Data Tab, 100
 Get Image Page, 101
 Get Image Tab, 101
 Help Page, 104
 Help Tab, 104
 SCPI Telnet Page, 103
 SCPI Telnet Tab, 103
 View & Modify Configuration
 Page, 97
 View & Modify Configuration Tab, 97
 Web Control SA Page, 99
 Web Control SA Tab, 99
embedded web server, 94

F

file backup, 63
fixing the hard disk, 69
front panel
 connectors and keys, 30
 keycode alternates, 88
 shortcut keys, 88
 symbols, 41
fuses, 23

G

gateway setting, 59

H

hard disk recovery process, 69
hard drive recovery, 68
Help
 Embedded Web Server, 104
 help navigation without a mouse, 74
Host USB ports, 64
hostname setting, 59

I

initialization with mouse, 12

initialization without mouse, 17
installing other software, 48
installing programs to drive C, 66
instrument drivers, USB, 64
instrument location, 11
instrument recovery, 69
instrument ventilation, 11
IP address setting, 59

K

key overview, 33
Keycode Commands
 Windows, 107
keycode commands, 88
keys, 30
 shortcut, 88
Keysight I/O Libraries, 64
Keysight Recovery System, 68, 69
Keysight Technologies, calling, 115

L

LAN configuration, 59
licenses for software, 47
line voltage, 23
loading a printer driver, 58
loading other software, 48
locating the instrument, 11

M

menu keys, 33
Microsoft Windows 7 system
 settings, 54
mouseless help system use, 74
mouseless Windows navigation, 74
My Documents location, 66

N

N9038A
 Computer Name, 84
 computer name, 81
 internet access, 94
 web access, 94
 windows system, 73
N9060B software, 47

Index

navigating
tables, 35
navigating without a mouse, 74

O

operating remotely, 79
overview, keys and key menus, 33

P

packaging, 117
power cords, 23
power source, 23
power-on time, 22
print screen, 106
printer driver loading, 58
printer setup, 58
printing a window, 106
printing the desktop, 106
problems with shipment, 10
program storage, 66

R

rack mounting, 11
rear panel
symbols, 41
rear panel features, 39
recovering the hard drive, 68
recovery process, 69
reduce power-on time, 22
Remote Desktop
keycodes, 88
running, 82
Remote Operation
Connection Speed, 84
remote operation, 79
embedded web server, 94
internet access, 94
replacing battery, 26
restoring your instrument, 63
running Windows without a mouse, 74

S

saving a window image, 106
saving data to internal drives, 66
saving programs on C drive, 66
saving the desktop image, 106
SCPI
Telnet Control, 103
Screen Capture, 101
screen capture, 106
service options, 117
setting
gateway, 59

hostname, 59
ip address, 59
LAN, 59
shipment contents, 10
Shortcut keys
Windows, 107
shortcut keys, 88
software installed by customers, 48
software licenses, 47
spectrum analyzer software, 47
storing data on D drive, 66
symbols, on front and rear panels, 41
system backup, 63
system recovery, 68
system restore, 63
system settings that can be
changed, 54

T

tab key, 35
table
navigation, 35
Taskbar
Windows, 109
third party software, 48
turn on
with a mouse, 12
without a mouse, 17

U

URL, sales and service, 116
USB drivers, 64
USB host ports, 64
USB Series A or B ports, 64
User Accounts location, 66
using help without a mouse, 74
using the instrument remotely, 79
using Windows without a mouse, 74

V

verifying contents, 10
virtual front panel, 92
virus protection, 48

W

warranty, 116
window saving, 106
Windows, 74
Control Panel, 109
operating system, 73
print screen, 106
Remote Desktop
Installing, 80

Setting up, 80
Screen Capture, 101
screen capture, 106
Shortcut keys, 107
taskbar
auto-hide, 109
Windows 7 settings, 54
Windows Remote Desktop, 79
keycodes, 88
options, 84
Options Dialog
Experience Tab, 84
General Tab, 84
running, 82
Setting up Remote Computer, 80
setting up the N9038A, 79
Setting up Windows Systems
7, 80
virtual front panel, 92

