Application Note



# GPSG-1000 Dual RF Channel Operation

Carrier       Services         C1       CLA, Pseudo P(1)         C1       CLA         C2       CLA
--

Some GPS receivers require 2 GPS channels to be present at the same time for proper GPS signal reception. For example; a dual channel GPS receiver designed for L1 and L2C operation.

This can be accomplished by using two GPSG-1000 units simultaneously in order that the outputs of the units, each

operating on a different RF channel, can be combined to provide a single synchronized RF output.

This Application Note defines the procedure to synchronize two GPSG-1000 units and combine the RF channel outputs.

Equipment required for combining and operating two GPSG-1000 signals simultaneously.

Nomenclature	QTY	Part Number (or type)
Aeroflex GPSG-10000 w/ RF Combiner Firmware ver 1.02 or later and Software ver 2.5.0 or later.	02	Aeroflex 87339
26 pin Sub D plug connector	02	Positronic WDD26P2 (example)
Combiner 3 way, GPSG	01	Aeroflex 90948
Cables and adapters to inter-connect the GPSG 1000 units and other required equipment	As req	Any, Coax cables should be 50 $\Omega$ impedance, matched in length (±3"), and short as possible (<10'). The 10 MHz reference cable should be < 3').
Pulse Generator capable of outputting a 3.3 V pulse with 100 uSec pulse width	01	Agilent 33220A (example)
Oscilloscope 500 MHz BW	01	Tektronix TDS3000C (example)


See Figure 1 for equipment interconnection. The interface cables for the AUX connectors on the GPSG-1000 units will be locally fabricated.

Note: The RF Combiner Firmware version may be checked in the following manner:

- 1. From the Launch Bar select System, then System Configuration.
- 2. On the System Configuration screen select the Hardware tab from the top edge of the display. This displays all hardware ID and Firmware versions. Find RF Combiner Firmware Version on the list.

Note: The GPSG-1000 Software version may be checked in the following manner:


- 1. From the Launch Bar select System, then System Update.
- 2. The GPSG-1000 software version is displayed at the bottom of the System Update screen.

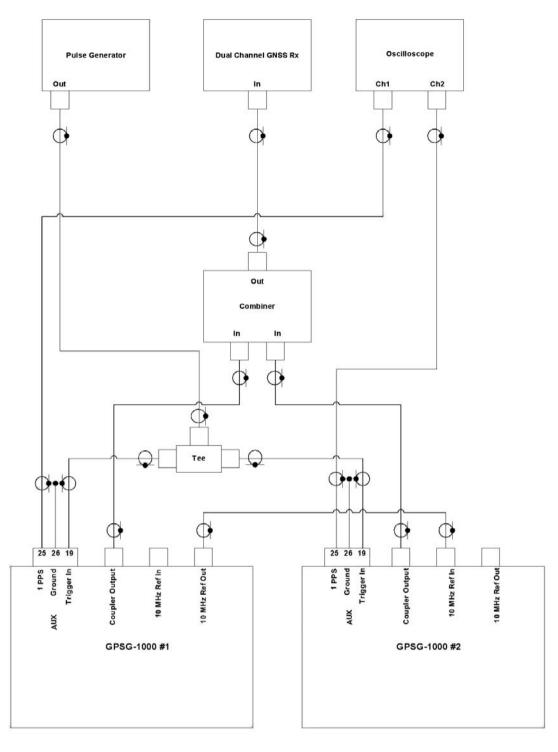



Simulation set up:

- 1. Both GPSG-1000 units must be using the same almanac data. Please ensure the almanacs are the same for both units before continuing.
- 2. Set up and connect equipment as per Figure 1. Ensuring that the cables used to connect the pulse generator to the GPSG-1000 units and the 1PPS output of the GPSG-1000 units to the Oscilloscope are equal length ( $\pm 3''$ ).
- 3. Set up the pulse generator to provide a manually triggered one time pulse. The pulse should be set up as per Figure 2.

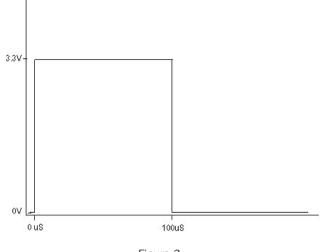



4. On GPSG-1000 #1 Menu Bar select Setup. On the Setup screen at the top row select the I/O tab. Set Ext Ref Out to ON, Reference Source to INT, and Trigger to External. See Figure 3.

Coupler Loss	Coupler Cable	Direct Cable	
0.0	dB)(5.5	dB)(5.5	d
Input/Output			
Ext Ref Out	Reference Sou		
ON	) ( INT	External	

Figure 3

Simulation Channels 1/0 Motion	)
Loss         Coupler Loss         Coupler Cable         Direct Cable           0.0         dB         5.5         dB         5.5         dB	
Input/Output Ext Ref Out Reference Source Trigger OFF EXT External	
Setup	

Figure 4

6. On both GPSG-1000 units Setup screen select he Simulation tab. Set the Simulated Start Time fields to the same values. Set the RF Output, RF Level to the same value. See Figure 5.

Simulation Channels 1/0 Motion GNSS GNSS Carrier SBAS Simulation GPS+Galileo L1/E1 Off Static Digital Noise Fading PRN Signal Position Source On None Fixed User
Simulation Start Time Clock Date Time User setting May 15, 2012 (14:04:00
RF Output     Units       RF Level     RF Port       (-95.0     dBm       Coupler     Unlimited
Setup



- 7. On the GPSG-1000 #1 Setup screen in the GNSS fields, set GNSS to GPS+Galileo and Carrier to L1/E1. See Figure 5.
- 8. On GPSG-1000 #2 Setup Screen in the GNSS fields, set GNSS and Carrier to the other required carrier type and frequency for your multi channel GPS LRU. See Figure 6.
- 5. On GPSG-1000 #2 Menu Bar select Setup. On the Setup screen at the top row select the I/O tab. Set Ext Ref Out to OFF, Reference Source to EXT, and Trigger to External. See Figure 4.

Simulation Channels 1/0 Motion	$\triangleright$
GNSS     Carrier     SBAS     Simulation       GPS+Galileo     L5/E5     Off     Static       Digital Noise     Fading     PRN Signal     Position Source       On     None     Fixed     User	
Simulation Start Time Clock Date Time User setting May 15, 2012 14:04:00	
RF Output     Units       RF Level     RF Port       (-95.0     dBm)       Coupler     Unimited	
Setup	

Figure 6

 On both GPSG-1000 units Menu Bar select Simulation. On the Simulation screen PVT fields set the Latitude, Longitude, and Altitude fields to the same values. See Figure 7.

GPS	Galileo SBAS			$\bigcirc$
SV PRN 17, 19, 20, 2	7, 29, 30		Visib 9	ble SVs
	ervices NAV			
PVT Current Sim Da	te Current Sim Time	Elapsed Time	Speed	
08/22/2010 Latitude	00:00:31 Longitude	00:00:31 Altitude	0.0 Altitud	Mph e Bate
41°53.0978N	deg 91°44.3614W	deg)(1440	ft 0	ft/min Heading
		0	ft	
	🔵 Ext Ref	Ready	n	
Simulation				

Figure 7

10. On both GPSG-1000 units Simulation screen press the Run switch. You should note that both GPSG-1000 units configure the simulation, but, the time and date data on the Simulation screen should not update. See Figure 8.

GPS Galileo SBAS	
SV PRN Vis	ible SVs
Carrier Services E5a F/NAV	J
PVT	
Current Sim Date Current Sim Time Elapsed Time Speed 08/22/2010 00:00:31 0.0	Mph
	de Rate
41°53.0978N         deg         91°44.3614W         deg         1440         ft         0           From         To         Distance To Go         Distance	ft/min Heading
Ext Ref Ocnfiguring Run	
Simulation	6

Figure 8

11. Using the Pulse Generator, send a single pulse to trigger the GPSG-1000 units. You should now note that the time and date data on the Simulation screen is updating and match on both units.

End of simulation set up.

# Simulation Troubleshooting

If the GPS receiver fails to identify its position after a suitable period for the receiver to acquire the signals, please perform the following troubleshooting steps.

- 1. Verify the GPSG-1000 units' connections and interface as per Figure 1.
- 2. Verify both GPSG-1000 units setup as per this Application Note.
- 3. Set the Oscilloscope, connected as per Figure 1, to measure the leading edges of the 1 PPS signal from both GPSG-1000 units. Note the difference between the points that both 1 PPS signals begin to rise from their 0 VDC states. The time difference should be less than 10 nSec.

Note: This step confirms that the GPSG-1000 units are operating in sync. If the time difference is not correct, then check the set up and try again.

### CHINA Beijing

Tel: [+86] (10) 6539 1166 Fax: [+86] (10) 6539 1778

CHINA Shanghai Tel: [+86] 21 2028 3588 Fax: [+86] 21 2028 3558

CHINA Shenzhen Tel: [+86] (755) 3301 9358 Fax: [+86] (755) 3301 9356

FINLAND Tel: [+358] (9) 2709 5541 Fax: [+358] (9) 804 2441

As we are always seeking to improve our products, the information in this document gives only a general indication of the product capacity, performance and suitability, none of which shall form part of any contract. We reserve the right to make design changes without notice. All trademarks are acknowledged. Parent company Aeroflex, Inc. ©Aeroflex 2011.

Tel: I+33l 1 60 79 96 00 Fax: I+33l 1 60 77 69 22 **GERMANY** Tel: I+49l 89 99641 0 Fax: I+49l 89 99641 0 **HONG KONG** Tel: I+852l 2832 7988 Fax: I+852l 2834 5364

FRANCE

INDIA Tel: [+91] 80 [4] 115 4501 Fax: [+91] 80 [4] 115 4502 JAPAN

Tel: [+81] (3) 3500 5591 Fax: [+81] (3) 3500 5592 KOREA Tel: [+82] (2) 3424 2719 Fax: [+82] (2) 3424 8620 SCANDINAVIA Tel: [+45] 9614 0045 Fax: [+45] 9614 0047 SINGAPORE

Tel: [+65] 6873 0991 Fax: [+65] 6873 0992

www.aeroflex.com

info-test@aeroflex.com

## TAIWAN

Tel: [+886] 2 2698 8058 Fax: [+886] 2 2698 8050 **UK Stevenage** Tel: [+44] (0) 1438 742200 Fax: [+44] (0) 1438 727601

Fax: [+44] (0) 1438 727601 Freephone: 0800 282388 USA

Tel: [+1] (316) 522 4981 Fax: [+1] (316) 522 1360 Toll Free: 800 835 2352





attributes represented by these three icons: solution-minded, performance-driven and customer-focused.

Part No. 46900/808, Issue 1, 07/12