

## **Safety Information**

## **OPERATOR SAFETY**

The AP034 Active Differential Probe is intended to be used only with instruments that are connected to earth ground through the input BNC connector. When you are using the probe with an ADPS Power Supply Adapter, make sure the adapter is connected to a BNC connector that is grounded by the test instrument before connecting the probe inputs to the test circuit.

Do not use the probe in wet or explosive atmospheres. Remove any contamination from the probe housing before connecting the probe inputs to any circuit. Make sure that the surface of the probe head is completely dry before connecting the inputs.

Use of the probe, and/or the instrument it is connected to, in a manner other than that specified may impair the protection mechanisms.

Do not use the probe if any part is damaged. All maintenance should be referred to qualified service personnel.

# # #

AP034-OM-E Rev D ISSUED: January 2000 **2–1** 



