

[Home](#)[About](#)[New Products](#)[Special Promotions](#)[Products](#)[Applications](#)[Accessories](#)[Bulbs](#)[Contact Us](#)
[Home](#) / [Customer Solution Center](#) / [Digital Still Camera Adapters for Microscopes](#)

## MEIJI TECHNO DIGITAL CAMERA ADAPTERS

Nearly every Meiji microscope series has a trinocular model designed for photo-microscopy. The adapters below will allow your consumer grade dig camera to attach to either a male "C" Type mount, a 23.2mm eyetube, a 30 or 30.5mm eyetube or any of our trinocular microscope models. Since we effectively test every adapter with every camera model available, your results may vary which can range from increased magnification to "vignetting" [HERE](#) for Digital Camera Adapter FAQ's.


Please note that our camera adapters may have one, two or three part numbers that comprise the whole camera adapter for your model camera.






 
Note: If you have a Meiji Techno br/and stereo or compound microscope with a trinocular tube, your adapter will be in the Gray column marked "All Meiji Trinocular Tube Models"














The NOTE sign next to some of the camera models indicates that these model microscope adapters have an included camera / filter mount or other transition components in the camera to be mounted onto the microscope and therefore their cost will be somewhat higher than other camera models however it does provide a complete solution plus use of filters on your camera.




### Meiji Techno Digital Camera Adapter Chart

Digital Camera Model	All Meiji Trinocular Tube Models (23.2mm ID, 25.2mm OD)	"C" Mount Thread (25.4mm) (attaches to a male C-mount aperture)	Eyetubes EM Series (30.5mm ID, 34.0mm OD Eyetubes)	Eyetubes RZ, MT, TC & IM Series (30.0mm ID, 34.0mm OD Eyetubes)
Agfa ePhoto 1280, 1680	<a href="#">MA151/30/70</a>	<a href="#">MA151/40/70</a>	<a href="#">MA151/45/70</a>	(46-52mm) <a href="#">DCA-J51</a> <a href="#">MD-M1A</a> <a href="#">MA151/50</a>
 Casio QV-2900UX QV-8000SX	(43mm) <a href="#">MA151/30/50</a> <a href="#">MA151/43</a>	(43mm) <a href="#">MA151/40/50</a> <a href="#">MA151/43</a>		
Casio QV-5700 QV-4000 QV-3500EX	(52mm) <a href="#">DCA-J19</a> <a href="#">MD-M1A</a> <a href="#">MA151/30</a>	(52mm) <a href="#">DCA-J19</a> <a href="#">MD-M1A</a> <a href="#">MA151/40</a>	(52mm) <a href="#">DCA-J19</a> <a href="#">MD-M1A</a> <a href="#">MA151/45</a>	(52mm) <a href="#">DCA-J19</a> <a href="#">MD-M1A</a> <a href="#">MA151/50</a>
Canon Powershot A10, A20	(46mm) <a href="#">DCA-J18</a> <a href="#">MD-M2</a> <a href="#">MA151/30</a>	(46mm) <a href="#">DCA-J18</a> <a href="#">MD-M2</a> <a href="#">MA151/40</a>		(46mm) <a href="#">DCA-J18</a> <a href="#">MD-M2</a> <a href="#">MA151/50</a>
Canon Powershot A30, A40	(52mm) <a href="#">DCA-AUB52</a> <a href="#">MD-M1A</a> <a href="#">MA151/30</a>	(52mm) <a href="#">DCA-AUB52</a> <a href="#">MD-M1A</a> <a href="#">MA151/40</a>		(52mm) <a href="#">DCA-AUB52</a> <a href="#">MD-M1A</a> <a href="#">MA151/50</a>
Canon Powershot A60, A70, A75, A85	(52mm) <a href="#">AD52A60</a> <a href="#">MD-M1A</a> <a href="#">MA151/30</a>	(52mm) <a href="#">AD52A60</a> <a href="#">MD-M1A</a> <a href="#">MA151/40</a>	(52mm) <a href="#">AD52A60</a> <a href="#">MD-M1A</a> <a href="#">MA151/45</a>	(52mm) <a href="#">AD52A60</a> <a href="#">MD-M1A</a> <a href="#">MA151/50</a>
Canon Powershot A80, A95	(52mm) <a href="#">DCA-J53</a> <a href="#">MD-M1A</a> <a href="#">MA151/30</a>	(52mm) <a href="#">DCA-J53</a> <a href="#">MD-M1A</a> <a href="#">MA151/40</a>	(52mm) <a href="#">DCA-J53 MD-M1A</a> <a href="#">MA151/45</a>	(52mm) <a href="#">DCA-J53</a> <a href="#">MD-M1A</a> <a href="#">MA151/50</a>
Canon Powershot A510, A520, A540	(52mm) <a href="#">A52B510C</a> <a href="#">MD-M1A</a> <a href="#">MA151/30</a>	(52mm) <a href="#">A52B510C</a> <a href="#">MD-M1A</a> <a href="#">MA151/40</a>	(52mm) <a href="#">A52B510C</a> <a href="#">MD-M1A</a> <a href="#">MA151/45</a>	(52mm) <a href="#">A52B510C</a> <a href="#">MD-M1A</a> <a href="#">MA151/50</a>

Canon Powershot A570 IS, A590 IS	(52mm) DCA-A52B570C MD-M1A MA151/30	(52mm) DCA-A52B570C MD-M1A MA151/40	(52mm) DCA-A52B570C MD-M1A MA151/45	(52mm) DCA-A52B570C MD-M1A MA151/50
Canon Powershot A610, A620 A630, A640	(52mm) <a href="#">A52B610C</a> MD-M1A <a href="#">MA151/30</a>	(52mm) <a href="#">A52B610C</a> MD-M1A <a href="#">MA151/40</a>	(52mm) <a href="#">A52B610C</a> MD-M1A <a href="#">MA151/45</a>	(52mm) <a href="#">A52B610C</a> MD-M1A <a href="#">MA151/50</a>
Canon Powershot A650 IS	(52mm) A52B650C MD-M1A MA151/30	(52mm) A52B650C MD-M1A MA151/40	(52mm) A52B650C MD-M1A MA151/45	(52mm) A52B650C MD-M1A MA151/50
Canon Powershot A700, A710IS, A720IS	(52mm) A52B700C MD-M1A MA151/30	(52mm) A52B700C MD-M1A MA151/40	(52mm) A52B700C MD-M1A MA151/45	(52mm) A52B700C MD-M1A MA151/50
Canon Powershot A480, A560, A2000 IS, A1100 IS, A2100 IS, E1, SD770 IS, SD780 IS, SD790 IS, SD800 IS, SD870 IS, SD880 IS, SD940 IS, SD960 IS, SD970 IS, SD980 IS, SD1000, SD1100 IS, SD1200 IS	(37mm) <a href="#">MA151/30/50</a> <a href="#">MA151/37</a> DCA-JCOM37	(37mm) <a href="#">MA151/40/50</a> <a href="#">MA151/37</a> DCA-JCOM37		
Canon Powershot G1, G2	<a href="#">MA151/30/43</a>	<a href="#">MA151/40/42</a>	<a href="#">MA151/45/42</a>	<a href="#">MA151/50/42</a>
Canon Powershot G3, G5	<a href="#">MA151/30/41</a>	<a href="#">MA151/40/40</a>	<a href="#">MA151/45/40</a>	<a href="#">MA151/50/40</a>
Canon Powershot G6	<a href="#">MA151/30/31</a>	<a href="#">MA151/40/30</a>	<a href="#">MA151/45/30</a>	(52mm) DCA-J55 MD-M1A <a href="#">MA151/50</a>
Canon Powershot G7, G9	(58mm) A52G7C MD-M5B MA151/30	(58mm) A52G7C MD-M5B MA151/40	(58mm) A52G7C MD-M5B MA151/45	(58mm) A52G7C MD-M5B MA151/50
Canon Powershot G10, G11, G12	(58mm) A52G10C MD-M5B MA151/30	(58mm) A52G10C MD-M5B MA151/40	(58mm) A52G10C MD-M5B MA151/45	(58mm) A52G10C MD-M5B MA151/50
Canon Powershot G15	(58mm) A58G15C MD-M5B MA151/30	(58mm) A58G15C MD-M5B MA151/40	(58mm) A58G15C MD-M5B MA151/45	(58mm) A58G15C MD-M5B MA151/50
 Canon Powershot S10, S20	(37mm) <a href="#">MA151/30/50</a> MA151/37 S10S20AD	(37mm) <a href="#">MA151/40/50</a> MA151/37 S10S20AD		
 Canon Powershot S60, S70	(37mm) <a href="#">MA151/30/50</a> MA151/37 S60S70AD	(37mm) <a href="#">MA151/40/50</a> MA151/37 S60S70AD		
 Canon Powershot S100, S110	<a href="#">MA151/30/50</a> S100S110AD	<a href="#">MA151/40/50</a> S100S110AD		
 Canon Powershot S200, S230	<a href="#">MA151/30/50</a> S200S230AD	<a href="#">MA151/40/50</a> S200S230AD		
 Canon Powershot S300, S330	(37mm) <a href="#">MA151/30/50</a> MA151/37 S300S330AD	(37mm) <a href="#">MA151/40/50</a> MA151/37 S300S330AD		
 Canon Powershot S400, S410, S500	(37mm) <a href="#">MA151/30/50</a> MA151/37 S400AD	(37mm) <a href="#">MA151/40/50</a> MA151/37 S400AD		
 Canon Powershot SD300, SD400, IXUS 40, IXUS 50	(28mm) <a href="#">MA151/30/50</a> SD300400AD	(28mm) <a href="#">MA151/40/50</a> SD300400AD		
 Canon Powershot SD500, SD550, IXUS 700	(28mm) <a href="#">MA151/30/50</a> SD500AD	(28mm) <a href="#">MA151/40/50</a> SD500AD		
Canon Powershot S1-IS	(52mm) AD52S1 MD-M1A MA151/30	(52mm) AD52S1 MD-M1A MA151/40	(52mm) AD52S1 MD-M1A MA151/45	(52mm) AD52S1 MD-M1A MA151/50
Canon Powershot S2-IS, S3-IS, S5-IS	(58mm) AUB58S2 MD-M5B MA151/30	(58mm) AUB58S2 MD-M5B MA151/40	(58mm) AUB58S2 MD-M5B MA151/45	(58mm) AUB58S2 MD-M5B MA151/50
Casio Exilim EX-FC100, EX-S10, EX-FS10, EX-S770, EX-S880, EX-V7, EX-V8, EX-Z33, EX-Z75, EX-Z77, EX-Z80, EX-Z85, EX-Z100, EX-Z150, EX-Z200, EX-Z250, EX-Z280, EX-Z300, EX-Z1050, EX-Z1080, EX-Z9	(37mm) <a href="#">MA151/30/50</a> <a href="#">MA151/37</a> DCA-JCOM37	(37mm) <a href="#">MA151/40/50</a> <a href="#">MA151/37</a> DCA-JCOM37		
Epson Photo PC 3000Z, 3100Z	(52mm) DCA-J13	(52mm) DCA-J13	(52mm) DCA-J13	(52mm) DCA-J13

	MD-M1A MA151/30	MD-M1A MA151/40	MD-M1A MA151/45	MD-M1A MA151/50
Fuji FinePix A100, A500, A600, A610, A700, A800, F20, F30, F31fd, F40fd, F50fd, F60fd, F70EXR, F100fd, F200EXR, F480, J10, J20, J50	(37mm) MA151/30/50 MA151/37 DCA-JCOM37	(37mm) MA151/40/50 MA151/37 DCA-JCOM37		
Fuji Finepix E550, E900	(52mm) A52F550 MD-M1A MA151/30	(52mm) A52F550 MD-M1A MA151/40	(52mm) A52F550 MD-M1A MA151/45	(52mm) A52F550 MD-M1A MA151/50
Fuji Finepix S602, 4900Z, 6900Z, S20Pro, S3000, S5000, S5200, S5600, S7000	(55mm) MA151/30/81	(55mm) MA151/40/80	(55mm) MA151/45/80	(55mm) MA151/50/80
 Fuji Finepix DS-260HD	(43mm) MA151/30/50 MA151/43	(43mm) MA151/40/50 MA151/43		
 HP Photo Smart 320	(37mm) MA151/30/50 MA151/37 HP320AD	(37mm) MA151/40/50 MA151/37 HP320AD		
 HP Photo Smart C500	(37mm) MA151/30/50 MA151/37	(37mm) MA151/40/50 MA151/37		
 HP Photo Smart 620	(37mm) MA151/30/50 MA151/37 HP620AD	(37mm) MA151/40/50 MA151/37 HP620AD		
 HP Photo Smart 715	(43mm) MA151/30/50 MA151/43 HP715AD	(43mm) MA151/40/50 MA151/43 HP715AD		
 HP Photo Smart 720	(37mm) MA151/30/50 MA151/37 HP720AD	(37mm) MA151/40/50 MA151/37 HP720AD		
 HP Photo Smart 735	(37mm) MA151/30/50 MA151/37 HP735AD	(37mm) MA151/40/50 MA151/37 HP735AD		
HP Photo Smart 850, 945	(52mm) AD5552F MD-M1A MA151/30	(52mm) AD5552F MD-M1A MA151/40	(52mm) AD5552F MD-M1A MA151/45	(52mm) AD5552F MD-M1A MA151/50
Kodak EasyShare M853, M863, M763, M753, M763, M873, M883, M893 IS, M1033, V570, V603, V610, V1073, V1233, V1253, V1273	(37mm) MA151/30/50 MA151/37 DCA-JCOM37	(37mm) MA151/40/50 MA151/37 DCA-JCOM37		
 Kodak DX4900	(37mm) MA151/30/50 MA151/37	(37mm) MA151/40/50 MA151/37		
 Kodak DC200, DC200+	(37mm) MA151/30/50 MA151/37	(37mm) MA151/40/50 MA151/37		
 Kodak DC5000	(37mm) MA151/30/50 MA151/37	(37mm) MA151/40/50 MA151/37		
Kodak DX6490, DX7590, Z7590	(52mm) A6490K MD-M1A MA151/30	(52mm) A6490K MD-M1A MA151/40	(52mm) A6490K MD-M1A MA151/45	(52mm) A6490K MD-M1A MA151/50
Kodak DX7440, Z730	(52mm) A7440K MD-M1A MA151/30	(52mm) A7440K MD-M1A MA151/40	(52mm) A7440K MD-M1A MA151/45	(52mm) A7440K MD-M1A MA151/50
 Kodak DX7630, Z760	(37mm) A7630K MA151/37 MA151/30/50	(37mm) A7630K MA151/37 MA151/40/50		
Kodak P850, P712	(52mm) A52850K MD-M1A MA151/30	(52mm) A52850K MD-M1A MA151/40	(52mm) A52850K MD-M1A MA151/45	(52mm) A52850K MD-M1A MA151/50
Kodak P880	(52mm) A52880K MD-M1A MA151/30	(52mm) A52880K MD-M1A MA151/40	(52mm) A52880K MD-M1A MA151/45	(52mm) A52880K MD-M1A MA151/50
Kodak Z612, Z712, Z812, Z1012	(52mm) AZ612K MD-M1A MA151/30	(52mm) AZ612K MD-M1A MA151/40	(52mm) AZ612K MD-M1A MA151/45	(52mm) AZ612K MD-M1A MA151/50
Kodak Z650, Z710, Z740, ZD710	(52mm) A52710K	(52mm) A52710K	(52mm) A52710K	(52mm) A52710K

Digital Still Camera Adapters for Microscopes

	MD-M1A MA151/30	MD-M1A MA151/40	MD-M1A MA151/45	MD-M1A MA151/50
Minolta Konica DiIMAGE A200, A2, A1, 7Hi, 7i, 7	(52mm) MD-M1A MA151/30 RA5249 (sold separately)	(52mm) MD-M1A MA151/40 RA5249 (sold separately)	(52mm) MD-M1A MA151/45 RA5249 (sold separately)	(52mm) MD-M1A MA151/50 R (sold separately)
Minolta Konica DiIMAGE Z1, Z2	(52mm) AU4552M MD-M1A MA151/30	(52mm) AU4552M MD-M1A MA151/40	(52mm) AU4552M MD-M1A MA151/45	(52mm) AU4552M MD-M1A MA151/50
Minolta Konica DiIMAGE Z3, Z5, Z6	(52mm) DCA-J29 MD-M1A MA151/30	(52mm) DCA-J29 MD-M1A MA151/40	(52mm) DCA-J29 MD-M1A MA151/45	(52mm) DCA-J29 MD-M1A MA151/50
Nikon Coolpix 4300, 885	MA151/30/57	MA151/40/56	MA151/45/56	MA151/50/56
Nikon Coolpix 800, 900, 950, 990, 995, 4500	(28mm) MA151/30/50	(28mm) MA151/40/50		
Nikon Coolpix 5000	MA151/30/70	MA151/40/70	MA151/45/70	(52mm) DCA-J51 MD-M1A MA151/50
Nikon Coolpix 5400	(52mm) AU5400N MD-M1A MA151/30	(52mm) AU5400N MD-M1A MA151/40	(52mm) AU5400N MD-M1A MA151/45	(52mm) AU5400N MD-M1A MA151/50
Nikon Coolpix 5700, 8700	(52mm) RT5253NT MD-M1A MA151/30	(52mm) RT5253NT MD-M1A MA151/40	(52mm) RT5253NT MD-M1A MA151/45	(52mm) RT5253NT MD-M1A MA151/50
Nikon Coolpix 8400	(52mm) AU8487N MD-M1A MA151/30	(52mm) AU8487N MD-M1A MA151/40	(52mm) AU8487N MD-M1A MA151/45	(52mm) AU8487N MD-M1A MA151/50
Nikon Coolpix 8800	(58mm) AD8800TW58 MD-M5B MA151/30	(58mm) AD8800TW58 MD-M5B MA151/40	(58mm) AD8800TW58 MD-M5B MA151/45	(58mm) AD8800TW58 MD-M5B MA151/50
Nikon Coolpix L4, L16, L18, L19, L20, S200, S210, S220, S230, S500, S510, S520, S550, S560, S570, S600, S610, S610c, S620, S630, S640, S700, S710	(37mm) MA151/30/50 MA151/37 DCA-JCOM37	(37mm) MA151/40/50 MA151/37 DCA-JCOM37		
Nikon Coolpix P5000, P5100	(28mm) DCA-URE20 MA151/30/50	(28mm) DCA-URE20 MA151/40/50		
Nikon Coolpix P6000	(52mm) A4652N6 MD-M1A MA151/30	(52mm) A4652N6 MD-M1A MA151/40	(52mm) A4652N6 MD-M1A MA151/45	(52mm) A4652N6 MD-M1A MA151/50
Nikon Coolpix P80	(52mm) DCA-AU3852N MD-M1A MA151/30	(52mm) DCA-AU3852N MD-M1A MA151/40	(52mm) DCA-AU3852N MD-M1A MA151/45	(52mm) DCA-AU3852N MD-M1A MA151/50
 Olympus Camedia C-60	(37mm) MA151/30/50 MA151/37 C60AD	(37mm) MA151/40/50 MA151/37 C60AD		
Olympus Camedia C-2000, C-2020 C-3000, C-3030 C-3040, C-3100 C-4040, C-4100 C-5050	MA151/30/61	MA151/40/60	MA151/45/60	(46mm) DCA-J64 MD-M2 MA151/50
Olympus Camedia C-700, C-720 C-730, C-740 C-750, C-755 C-760, C-765 C-770, SP-500UZ	MA151/30/63	MA151/40/62	MA151/45/62	MA151/50/62
 Olympus C-2500L D-620L D-600L, D-500L	(43mm) MA151/30/50 MA151/43	(43mm) MA151/40/50 MA151/43		
 Olympus Camedia SP-310 SP-350	(37mm) A31037O MA151/37 MA151/30/50	(37mm) A31037O MA151/37 MA151/40/50		
Olympus C-2100 Ultra Zoom, E-100 RS	(52mm) MD-M1A MA151/30 RA5249 (sold separately)	(52mm) MD-M1A MA151/40 RA5249 (sold separately)	(52mm) MD-M1A MA151/45 RA5249 (sold separately)	(52mm) MD-M1A MA151/50 R (sold separately)
Olympus Camedia C-5060 C-7070	MA151/30/65	MA151/40/64	MA151/45/64	(52mm) DCA-J31 MD-M1A MA151/50
Olympus Camedia C-8080	(52mm) DCA-J43 MD-M1A MA151/30	(52mm) DCA-J43 MD-M1A MA151/40	(52mm) DCA-J43 MD-M1A MA151/45	(52mm) DCA-J43 MD-M1A MA151/50
Olympus Camedia C-5000	(52mm) P06366 MD-M1A MA151/30	(52mm) P06366 MD-M1A MA151/40	(52mm) P06366 MD-M1A MA151/45	(52mm) P06366 MD-M1A MA151/50
Olympus FE-20, FE-360, FE-3000,	(37mm)	(37mm)		

FE-3010, FE-4000, FE-4010, FE-5000, FE-5010, E-5020, Stylus 840, 1000, 1010, 1200, 7000, 7010	<a href="#">MA151/30/50</a> <a href="#">MA151/37</a> <a href="#">DCA-JCOM37</a>	<a href="#">MA151/40/50</a> <a href="#">MA151/37</a> <a href="#">DCA-JCOM37</a>		
Olympus SP-550UZ, SP-560UZ, SP-565UZ, SP-570UZ	(52mm) AU4852O MD-M1A MA151/30	(52mm) AU4852O MD-M1A MA151/40	(52mm) AU4852O MD-M1A MA151/45	(52mm) AU4852O MD-M1A MA151/50
Olympus SP-590UZ	(58mm) AU57590 MD-M5B MA151/30	(58mm) AU57590 MD-M5B MA151/40	(58mm) AU57590 MD-M5B MA151/45	(58mm) AU57590 MD-M5B MA151/50
Panasonic DMC-FZ5, DMC-FZ7 DMC-FZ8	(52mm) AFZ7P MD-M1A MA151/30	(52mm) AFZ7P MD-M1A MA151/40	(52mm) AFZ7P MD-M1A MA151/45	(52mm) AFZ7P MD-M1A MA151/50
Panasonic DMC-FZ18, DMC-FZ28	(58mm) AFZ18P MD-M5B MA151/30	(58mm) AFZ18P MD-M5B MA151/40	(58mm) AFZ18P MD-M5B MA151/45	(58mm) AFZ18P MD-M5B MA151/50
Panasonic DMC-FZ10 DMC-FZ15 DMC-FZ20	(52mm) <a href="#">DCA-T103</a> <a href="#">MD-M1A</a> <a href="#">MA151/30</a>	(52mm) <a href="#">DCA-T103</a> <a href="#">MD-M1A</a> <a href="#">MA151/40</a>	(52mm) <a href="#">DCA-T103</a> <a href="#">MD-M1A</a> <a href="#">MA151/45</a>	(52mm) <a href="#">DCA-T103</a> <a href="#">MD-M1A</a> <a href="#">MA151/50</a>
Panasonic DMC-FZ30, DMC-FZ50	(55mm) MD-M4A <a href="#">MA151/30</a>	(55mm) MD-M4A <a href="#">MA151/40</a>		(55mm) MD-M4A <a href="#">MA151/50</a>
Panasonic Lumix DMC-FS3, FS6, FS7, FS12, FS15, FS25, FS42, FS62, FX33, FX35, FX37, FX48, FX55, FX65, FX100, FX580, LS85, ZR1	(37mm) <a href="#">MA151/30/50</a> <a href="#">MA151/37</a> <a href="#">DCA-JCOM37</a>	(37mm) <a href="#">MA151/40/50</a> <a href="#">MA151/37</a> <a href="#">DCA-JCOM37</a>		
Panasonic DMC-LX3	(52mm) A4552PA3 MD-M1A MA151/30	(52mm) A4552PA3 MD-M1A MA151/40	(52mm) A4552PA3 MD-M1A MA151/45	(52mm) A4552PA3 MD-M1A MA151/50
Pentax Optio A20, A30, E30, E40, E50, E60, E70, E85, M20, M30, M40, M50, P70, P80, S7, S10, S12, V10, T30, T20	(37mm) <a href="#">MA151/30/50</a> <a href="#">MA151/37</a> <a href="#">DCA-JCOM37</a>	(37mm) <a href="#">MA151/40/50</a> <a href="#">MA151/37</a> <a href="#">DCA-JCOM37</a>		
Samsung HZ10W, HZ15W, L100, L110, L201, L700, PL10, PL50, SL30, SL102, SL201, SL202, SL310, SL420, SL620, SL720, SL820, ST50, ST500, ST550, TL100, TL220, TL225, TL320	(37mm) <a href="#">MA151/30/50</a> <a href="#">MA151/37</a> <a href="#">DCA-JCOM37</a>	(37mm) <a href="#">MA151/40/50</a> <a href="#">MA151/37</a> <a href="#">DCA-JCOM37</a>		
Sony DSC-F717 DSC-F828	(58mm) <a href="#">MD-M5B</a> <a href="#">MA151/30</a>	(58mm) <a href="#">MD-M5B</a> <a href="#">MA151/40</a>	(58mm) <a href="#">MD-M5B</a> MA151/45	(58mm) <a href="#">MD-M5B</a> <a href="#">MA151/50</a>
Sony DSC-S70 DSC-S75 DSC-S85 MVC-CD300 MVC-CD400 MVC-CD500	<a href="#">MA151/30/91</a>	<a href="#">MA151/40/90</a>	<a href="#">MA151/45/90</a>	<a href="#">MA151/50/90</a>
 Sony DSC-P50 DSC-P30 DSC-S50 DSC-S30 DSC-F55V MVC-CD200 MVC-CD250 MVC-FD92 MVC-FD90 MVC-FD88 MVC-FD87 MVC-FD85 MVC-FD83 MVC-FD81 MVC-FD75 MVC-FD73 MVC-FD71	(37mm) MA151/37 MA151/30/50	(37mm) MA151/37 MA151/40/50		
Sony CyberShot DSC-S730, S750, S780, S850, S930, S950, S980, W80, W90, W120, W130, W180, W190, W220, W230, W290, W300, W350, WX1	(37mm) <a href="#">MA151/30/50</a> <a href="#">MA151/37</a> <a href="#">DCA-JCOM37</a>	(37mm) <a href="#">MA151/40/50</a> <a href="#">MA151/37</a> <a href="#">DCA-JCOM37</a>		
Sony DSC-W1 DSC-W5 DSC-W7	(52mm) P06366 MD-M1A <a href="#">MA151/30</a>	(52mm) P06366 MD-M1A <a href="#">MA151/40</a>	(52mm) P06366 MD-M1A <a href="#">MA151/45</a>	(52mm) P06366 MD-M1A <a href="#">MA151/50</a>
Sony DSC-V1	(52mm) RT5245VT MD-M1A <a href="#">MA151/30</a>	(52mm) RT5245VT MD-M1A <a href="#">MA151/40</a>	(52mm) RT5245VT MD-M1A <a href="#">MA151/45</a>	(52mm) RT5245VT MD-M1A <a href="#">MA151/50</a>
Sony DSC-V3	(52mm) RT5248V3 MD-M1A <a href="#">MA151/30</a>	(52mm) RT5248V3 MD-M1A <a href="#">MA151/40</a>	(52mm) RT5248V3 MD-M1A <a href="#">MA151/45</a>	(52mm) RT5248V3 MD-M1A <a href="#">MA151/50</a>
 Sony CyberShot DSC-W120 DSC-W130 DSC-W150	(46mm) MD-M2 <a href="#">MA151/30</a> (order separately: VAD-WE)	(46mm) MD-M2 <a href="#">MA151/40</a> (order separately: VAD-WE)	(46mm) MD-M2 <a href="#">MA151/45</a> (order separately: VAD-WE)	(46mm) MD-M2 <a href="#">MA151/50</a> (order separately: VAD-WE)
Toshiba	(37mm)	(37mm)		

 PDR-M60	MA151/30/50 MA151/37 TOSHM60AD	MA151/40/50 MA151/37 TOSHM60AD		
 Toshiba PDR-M70	(43mm) MA151/30/50 MA151/43 TOSHM70AD	(43mm) MA151/40/50 MA151/43 TOSHM70AD		
 Toshiba PDR-M61 PDR-M65	(43mm) MA151/30/50 MA151/43 TOSHM65AD	(43mm) MA151/40/50 MA151/43 TOSHM65AD		
 Toshiba PDR-M71 PDR-M81	(37mm) MA151/30/50 MA151/37 TOSHM81AD	(37mm) MA151/40/50 MA151/37 TOSHM81AD		
 Toshiba PDR-2300	(43mm) MA151/30/50 MA151/43 TOSH2300AD	(43mm) MA151/40/50 MA151/43 TOSH2300AD		
 Toshiba PDR-3300 PDR-3330	(43mm) MA151/30/50 MA151/43 TOSH3300AD	(43mm) MA151/40/50 MA151/43 TOSH3300AD		
 Toshiba PDR-4300	(43mm) MA151/30/50 MA151/43 TOSH4300AD	(43mm) MA151/40/50 MA151/43 TOSH4300AD		

New digital cameras come into the market almost daily. Check here for a list of models that are currently not supported. If you do not see your camera listed, please contact us at 1-800-832-0060 and we'll be glad to help you find an adapter to fit your model camera.

**NOTE:** If your digital camera has the same form factor as the 35mm SLR type film cameras, (dSLR) our T2 SLR type adapters will work on the digital SLR bodies made by Canon, Nikon and others. Click [HERE](#) to view series camera adapters.

All other brands and product names are trademarked or registered trademarks of their respective companies. Prices and configurations included on this site are subject to change without notice or obligation. Prices include shipping, handling processing or applicable sales tax. All prices on the site are listed in U.S. dollars. Some products and services may not be available for purchase in some international locations.

[HOME](#) [ABOUT](#) [NEW PRODUCTS](#) [SPECIAL PROMOTIONS](#) [PRODUCTS](#) [APPLICATIONS](#) [ACCESSORIES](#) [BULBS](#) [CONTACT US](#) [WARRANTY](#)  
[REPAIRS/SERVICES](#)



Subscribe to Our Quarterly Newsletter

Subscribe

© 1964-2018 Meiji Techno. All Rights Reserved.