
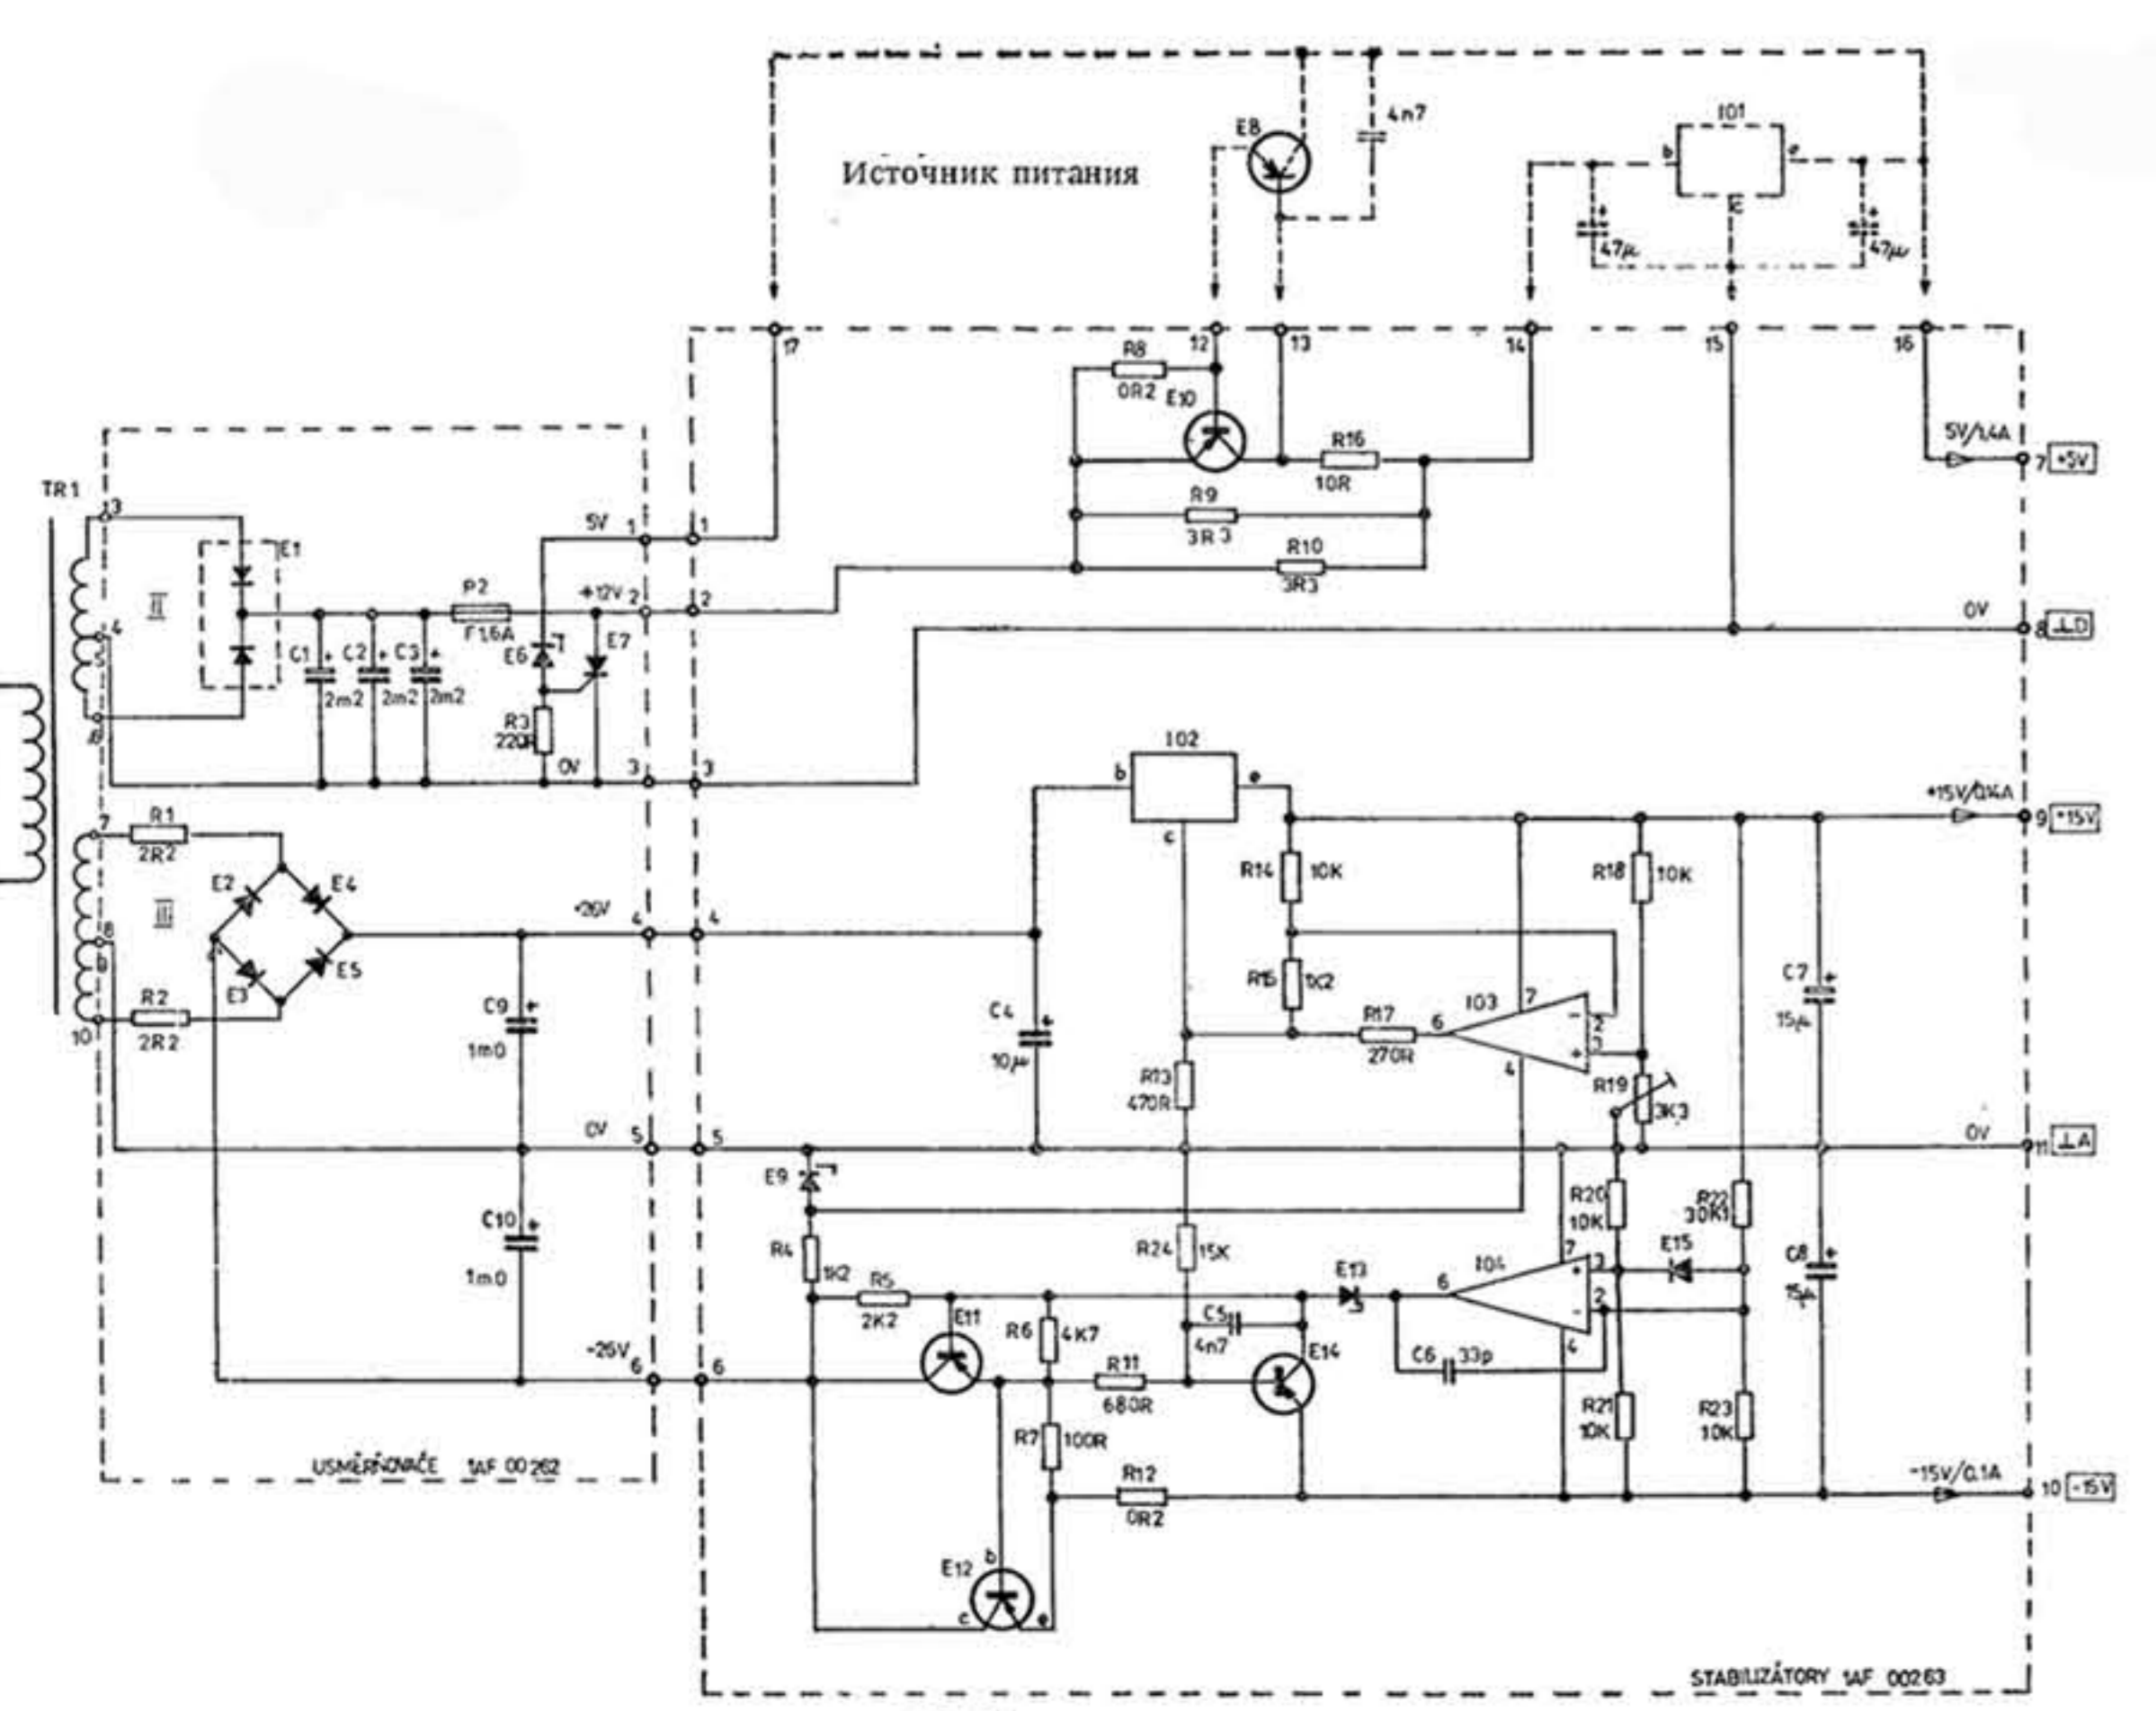


Цифровая часть

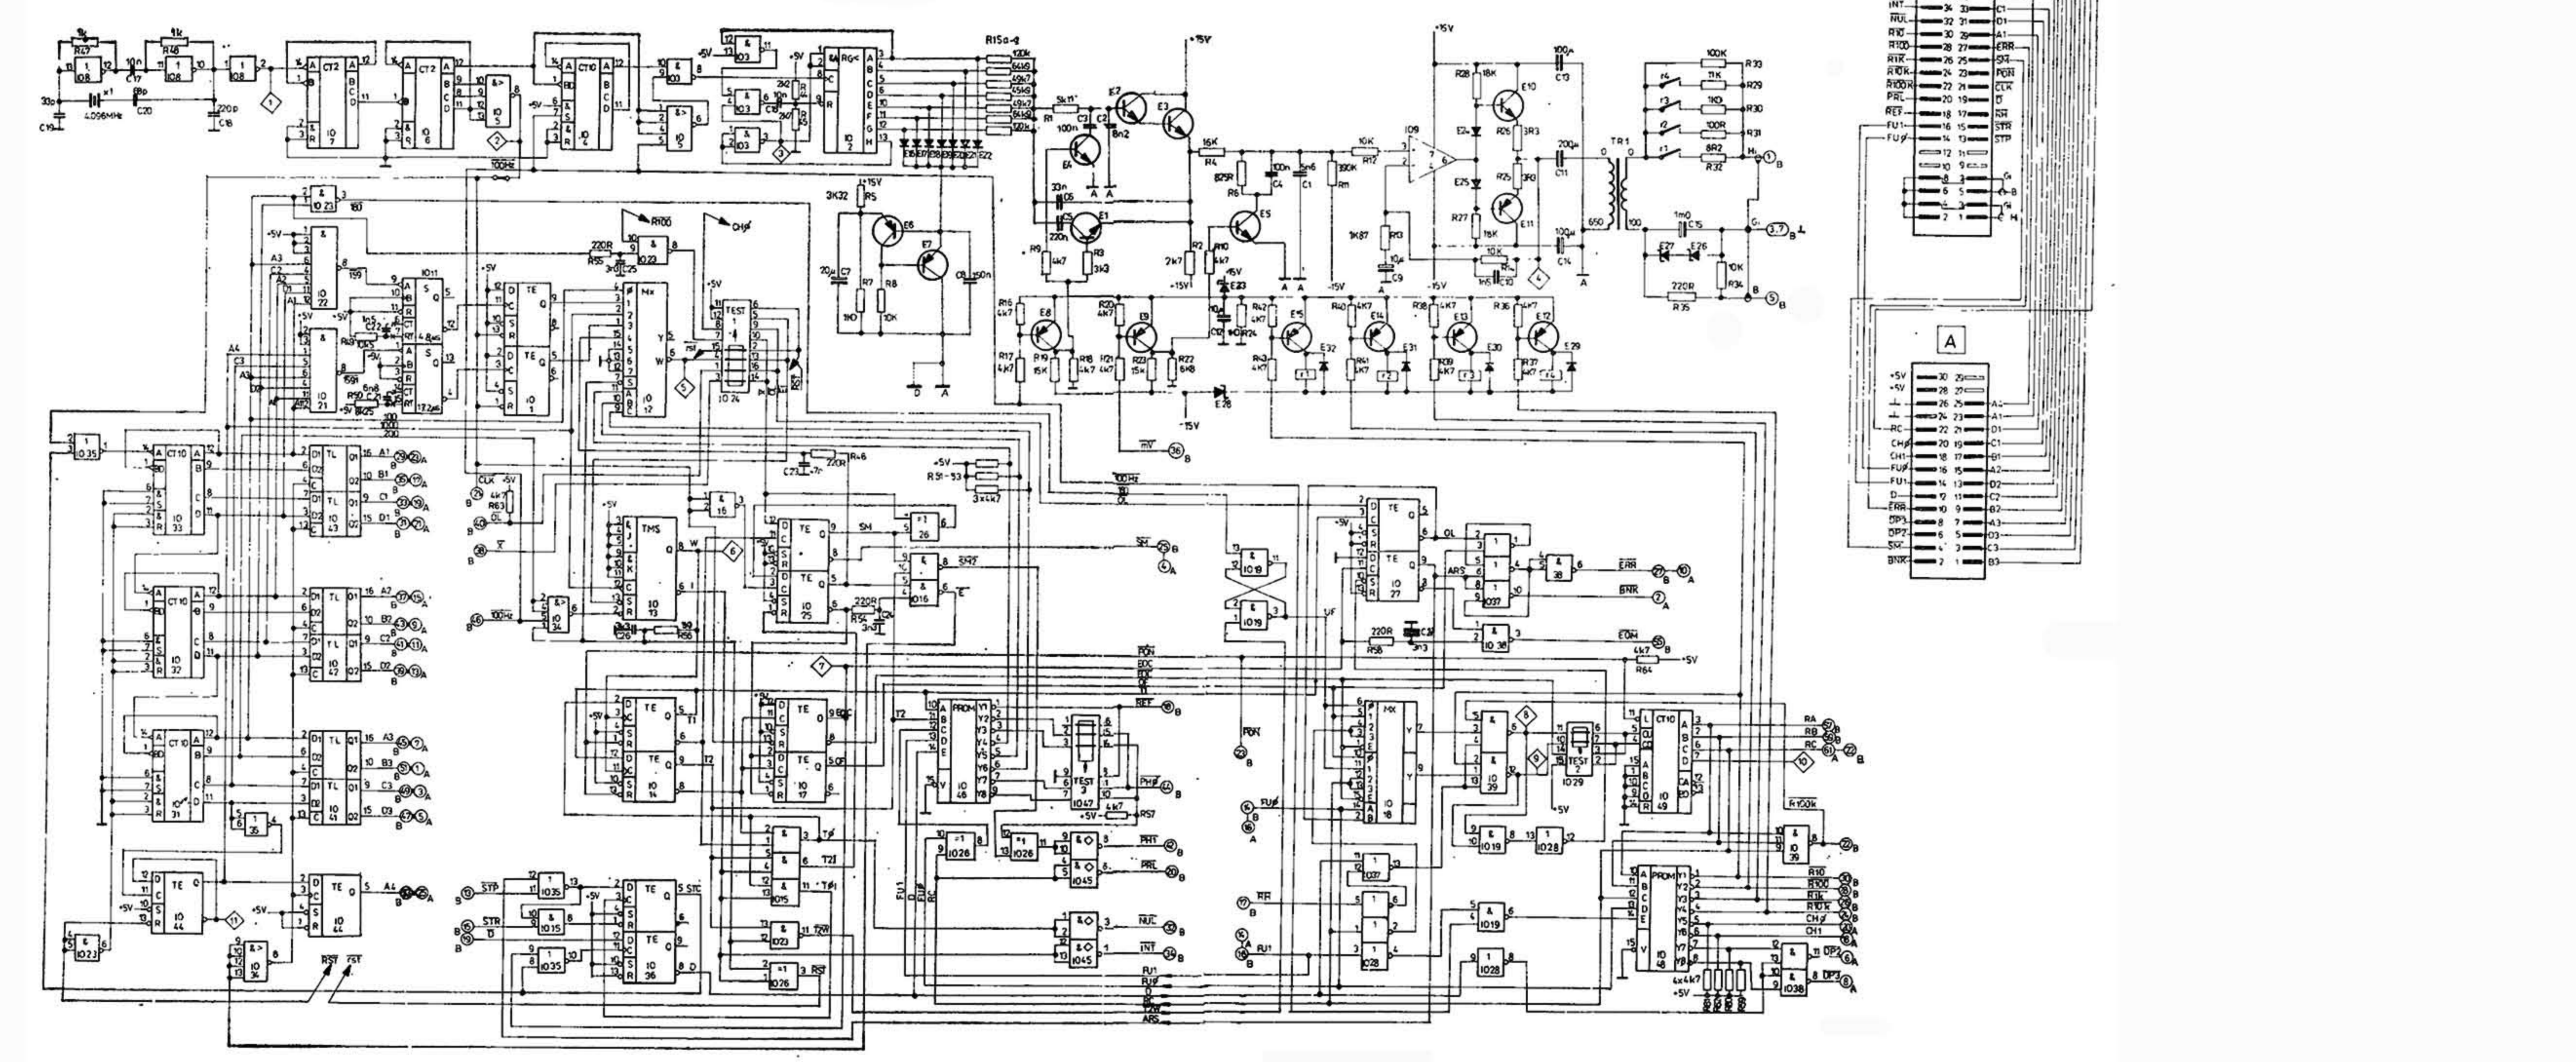

- 103, 104 - MAA 741
- E10, E14 - KEY 16
- E11 - KEY 18
- E13 - KZ 272
- E15 - KA 281

- E1, E6 - 1N5401
- E2 - E4 - KY 130/150
- E12 - KD 615
- 101 - MA 7805
- 102 - MA 7815
- E7 - KT 206/200