



**Agilent U2761A
USB Modular
Function/Arbitrary
Waveform Generator**

Service Guide



Agilent Technologies

Notices

© Agilent Technologies, Inc., 2008–2013

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

Manual Part Number

U2761-90010

Edition

Seventh Edition, August 2, 2013

Agilent Technologies, Inc.
5301 Stevens Creek Blvd.
Santa Clara, CA 95052 USA

Trademark Acknowledgements

Pentium is a U.S. registered trademark of Intel Corporation.

Microsoft, Visual Studio, Windows, and MS Windows are trademarks of Microsoft Corporation in the United States and/or other countries.

Warranty

The material contained in this document is provided “as is,” and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

U.S. Government Restricted Rights. Software and technical data rights granted to the federal government include only those rights customarily provided to end user customers. Agilent provides this customary commercial license in Software and technical data pursuant to FAR 12.211 (Technical Data) and 12.212 (Computer Software) and, for the Department of Defense, DFARS 252.227-7015 (Technical Data - Commercial Items) and DFARS 227.7202-3 (Rights in Commercial Computer Software or Computer Software Documentation).

Safety Notices

CAUTION

















A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a **WARNING** notice until the indicated conditions are fully understood and met.

Safety Symbols

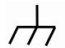The following symbols on the instrument and in the documentation indicate precautions which must be taken to maintain safe operation of the instrument.

| | | | |
|---|-------------------------------------|---|--|
|  | Direct current (DC) |  | Equipment protected throughout by double insulation or reinforced insulation |
|  | Alternating current (AC) |  | Off (supply) |
|  | Both direct and alternating current |  | On (supply) |
|  | Three-phase alternating current |  | Caution, risk of electric shock |
|  | Earth (ground) terminal |  | Caution, risk of danger (refer to this manual for specific Warning or Caution information) |
|  | Protective conductor terminal |  | Caution, hot surface |
|  | Frame or chassis terminal |  | Out position of a bi-stable push control |
|  | Equipotentiality |  | In position of a bi-stable push control |

General Safety Information

The following general safety precautions must be observed during all phases of operation of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture and intended use of the instrument. Agilent Technologies Inc. assumes no liability for the customer's failure to comply with these requirements.

WARNING

- **Do not operate the product in an explosive atmosphere or in the presence of flammable gases or fumes.**
 - **Do not use the equipment if it does not operate properly. Have the equipment inspected by qualified service personnel.**
-

CAUTION

- Observe all markings on the instrument before connecting any wiring to the instrument.
 - Use the device with the cables provided.
 - Repair or service that is not covered in this manual should only be performed by qualified personnels.
-

Environment Conditions

This instrument is designed for indoor use and in the area with low condensation. The table below shows the general environmental requirements for this instrument.





| Environment conditions | Requirements |
|------------------------|----------------------------|
| Operating temperature | 0 °C to 50 °C |
| Operating humidity | 20 to 85% RH noncondensing |
| Storage temperature | -20 °C to 70 °C |
| Storage humidity | 5 to 90% RH noncondensing |

CAUTION

The U2761A USB modular function/arbitrary waveform generator complies with the following safety and EMC requirements.

- IEC 61010-1:2001/EN61010-1:2001 (2nd Edition)
- Canada: CAN/CSA-C22.2 No. 61010-1-04
- IEC 61326-2002/EN 61326:1997+A1:1998+A2:2001+A3:2003
- Canada: ICES-001:2004
- Australia/New Zealand: AS/NZS CISPR11:2004
- USA: ANSI/UL 61010-1:2004

Regulatory Markings

| | | | |
|--|---|---|---|
|  | <p>The CE mark is a registered trademark of the European Community. This CE mark shows that the product complies with all the relevant European Legal Directives.</p> |  | <p>The C-tick mark is a registered trademark of the Spectrum Management Agency of Australia. This signifies compliance with the Australia EMC Framework regulations under the terms of the Radio Communication Act of 1992.</p> |
| <p>ICES/NMB-001</p> | <p>ICES/NMB-001 indicates that this ISM device complies with Canadian ICES-001. Cet appareil ISM est conforme à la norme NMB-001 du Canada.</p> |  | <p>This instrument complies with the WEEE Directive (2002/96/EC) marking requirement. This affixed product label indicates that you must not discard this electrical/electronic product in domestic household waste.</p> |
|  | <p>The CSA mark is a registered trademark of the Canadian Standards Association.</p> | | |


Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC

This instrument complies with the WEEE Directive (2002/96/EC) marking requirement. This affixed product label indicates that you must not discard this electrical/electronic product in domestic household waste.

Product Category:

With reference to the equipment types in the WEEE directive Annex 1, this instrument is classified as a “Monitoring and Control Instrument” product.

The affixed product label is shown as below:

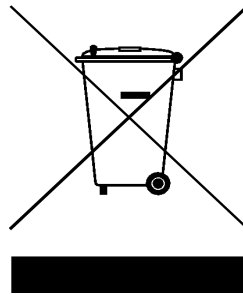

Do not dispose in domestic household waste

To return this unwanted instrument, contact your nearest Agilent office, or visit:

www.agilent.com/environment/product

for more information.

In This Guide...

1 Characteristics and Specifications

The characteristics and specifications of the U2761A are listed in this chapter.

2 Getting Started

In this chapter, you will learn about the the self-test procedure for the U2761A. The information for returning the U2761A for calibration or servicing is also provided.

3 Calibration

This chapter describes the performance verification and calibration procedures for the U2761A.

4 Disassembly

The disassembly procedure for the U2761A is discussed in this chapter.

5 Troubleshooting

This chapter provides the general troubleshooting tips for the U2761A.

Declaration of Conformity (DoC)

The Declaration of Conformity (DoC) for this instrument is available on the Web site. You can search the DoC by its product model or description.

<http://regulations.corporate.agilent.com/DoC/search.htm>

NOTE

If you are unable to search for the respective DoC, please contact your local Agilent representative.

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

Contents

| | | |
|----------|--|-----------|
| 1 | Characteristics and Specifications | 1 |
| | Product Characteristics | 2 |
| | Product Specifications and Characteristics | 4 |
| 2 | Getting Started | 9 |
| | Introduction | 10 |
| | Self-Test | 10 |
| | Agilent Technologies Calibration Services | 12 |
| | Calibration Interval | 12 |
| | Types of Service Available | 12 |
| | Extended Service Contracts | 12 |
| | Obtaining Repair Service (Worldwide) | 13 |
| | Repackaging for Shipment | 14 |
| | Cleaning | 14 |
| 3 | Calibration | 15 |
| | Introduction | 16 |
| | Recommended Test Equipment | 16 |
| | Test Consideration | 17 |
| | Performance Verification Procedures | 18 |
| | Internal Timebase Verification | 18 |
| | Output Impedance Verification | 19 |
| | AC Amplitude (High Impedance) Verification | 21 |
| | Amplitude Flatness (–20 dB Range) Verification | 23 |
| | Amplitude Flatness (0 dB Range) Verification | 26 |
| | Amplitude Flatness (+20 dB Range) Verification | 28 |


| | | |
|---|--|----|
| | Calibration Procedure | 30 |
| | Internal Timebase Adjustment | 31 |
| | Output Impedance Adjustment | 32 |
| | DC Offset (High Impedance) Adjustment | 33 |
| | AC Amplitude (High Impedance) Adjustment | 34 |
| | Amplitude Flatness (–20 dB Range) Adjustment | 37 |
| | Amplitude Flatness (0 dB Range) Adjustment | 39 |
| | Amplitude Flatness (+20 dB Range) Adjustment | 41 |
| 4 | Disassembly | 43 |
| | General Disassembly | 44 |
| | Disassembly Instructions | 44 |
| | Reassembly Instructions | 46 |
| | Replacement Parts | 46 |
| 5 | Troubleshooting | 49 |
| | Troubleshooting | 50 |
| | Index | 51 |

List of Figures

- Figure 3-1 U2761A to frequency counter connection 18
- Figure 3-3 U2761A to DMM connection 20
- Figure 3-4 U2761A to power meter connection 23
- Figure 3-5 U2761A to DMM four-wire connection 32

List of Tables

| | | |
|------------|---|----|
| Table 3-1 | Recommended test equipment | 16 |
| Table 3-2 | Configuration for timebase verification | 19 |
| Table 3-4 | Configuration for DC offset verification | 21 |
| Table 3-5 | Configuration for AC amplitude verification | 22 |
| Table 3-6 | AC amplitude verification worksheet | 23 |
| Table 3-7 | Configuration for AC amplitude flatness (–20 dB range) verification | 25 |
| Table 3-8 | Configuration for AC amplitude flatness (0 dB range) verification | 27 |
| Table 3-9 | Configuration for AC amplitude flatness (+20 dB range) verification | 29 |
| Table 3-10 | Timebase adjustment configuration | 31 |
| Table 3-11 | Output impedance adjustment configuration | 32 |
| Table 3-12 | DC offset (High Impedance) adjustment configuration | 33 |
| Table 3-13 | Configuration for Sine wave AC amplitude adjustment | 34 |
| Table 3-14 | Sine wave flatness worksheet | 35 |
| Table 3-15 | Configuration for 50% ramp AC amplitude adjustment | 35 |
| Table 3-16 | Configuration for 50% pulse AC amplitude adjustment | 36 |
| Table 3-17 | Configuration for AC amplitude flatness (–20 dB range) adjustment | 38 |
| Table 3-18 | Configuration for AC amplitude flatness (0 dB range) adjustment | 40 |
| Table 3-19 | Configuration for AC amplitude flatness (+20 dB range) adjustment | 42 |

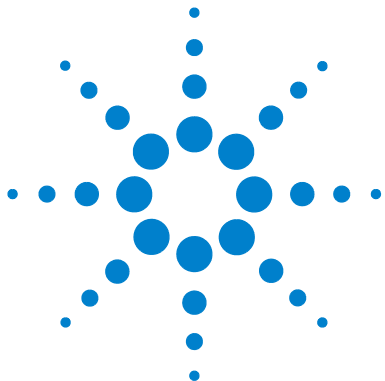

1 Characteristics and Specifications

Product Characteristics 2

Product Specifications and Characteristics 4

This chapter specifies the characteristics, environmental conditions, and specifications of the U2761A.



Product Characteristics

REMOTE INTERFACE

- Hi-Speed USB 2.0
- USBTMC 488.2 Class device ^[1]

POWER CONSUMPTION

- +12 VDC, 1.2 A
- Isolated ELV power source

OPERATING ENVIRONMENT

- Operating temperature from 0 °C to 50 °C
- Operating humidity at 20% to 85% RH (noncondensing)
- Altitude up to 2000 meters
- Pollution Degree 2
- For indoor use only

STORAGE COMPLIANCE

- Storage temperature from –20 °C to 70 °C
- Storage humidity at 5% to 90% RH (noncondensing)

SAFETY COMPLIANCE

Certified with:

- IEC 61010-1:2001/EN61010-1:2001 (2nd Edition)
- Canada: CAN/CSA-C22.2 No. 61010-1-04
- USA: ANSI/UL 61010-1:2004

EMC COMPLIANCE

- IEC 61326-2002/EN 61326:1997+A1:1998+A2:2001+A3:2003
- Canada: ICES-001:2004
- Australia/New Zealand: AS/NZS CISPR11:2004

SHOCK & VIBRATION

Tested to IEC/EN 60068-2

IO CONNECTOR

BNC connector

DIMENSION (W×D×H)

- 117.00 mm × 180.00 mm × 41.00 mm (with bumpers)
- 105.00 mm × 175.00 mm × 25.00 mm (without bumpers)

WEIGHT

- 528 g (with bumpers)
- 476 g (without bumpers)

WARRANTY

3 years

[1] Requires a direct USB connection to the PC so the appropriate driver can be installed in the USB modular instrument or USB DAQ module.

Product Specifications and Characteristics

| WAVEFORMS | |
|--------------------|---|
| Standard | Sine, Square, Ramp, Triangle, Pulse, DC |
| Built-in arbitrary | Exponential Rise, Exponential Fall, Negative Ramp |

| WAVEFORM CHARACTERISTICS | | | |
|--|--|-----------------------|--------------|
| Sine | | | |
| Frequency range | 1 μ Hz to 20 MHz (1 μ Hz resolution) | | |
| Amplitude flatness ¹ (relative to 1 kHz) | \leq 100 kHz | 0.2 dB | |
| | 100 kHz to 1 MHz | 0.35 dB | |
| | 1 MHz to 20 MHz | 0.7 dB | |
| Harmonic distortion ² | Frequency range | $<$ 1 Vpp | \geq 1 Vpp |
| | DC to 20 kHz | -70 dBc | -60 dBc |
| | 20 kHz to 100 kHz | -65 dBc | -60 dBc |
| | 100 kHz to 1 MHz | -50 dBc | -45 dBc |
| | 1 MHz to 20 MHz | -40 dBc | -35 dBc |
| Total harmonic distortion ² | DC to 20 kHz | 0.10% | |
| Spurious (Nonharmonic) output ³ | DC to 1 MHz | -65 dBc | |
| | 1 MHz to 20 MHz | -65 dBc + 6 dB/octave | |
| Phase noise (10 kHz offset) | -115 dBc/Hz (Typical) | | |
| Square | | | |
| Frequency range | 1 μ Hz to 20 MHz (1 μ Hz resolution) | | |
| Rise/fall time | $<$ 18 ns, 10 to 90% terminated load (50 Ω) | | |
| Overshoot | $<$ 2% | | |
| Variable duty cycle | 20% to 80% (up to 10 MHz) 40% to 60% (up to 20 MHz) | | |
| Asymmetry (@ 50% duty) | 1% of period + 5 ns | | |
| Jitter (RMS) | $>$ 50 kHz = 1 ns + 100 ppm of period \leq 50 kHz = 10 ns + 100 ppm of period | | |

| Ramp, Triangle | |
|----------------------------------|--|
| Frequency range | 1 μ Hz to 200 kHz (1 μ Hz resolution) |
| Linearity | < 0.2% of peak output |
| Programmable symmetry | 0% to 100% |
| Pulse | |
| Frequency range | 500 μ Hz to 5 MHz (1 μ Hz resolution) |
| Pulse width (period \leq 10 s) | 40 ns minimum, 10 ns resolution |
| Overshoot | < 3% |
| Jitter (RMS) | 300 ps + 0.1 ppm of period |
| Arbitrary | |
| Frequency range | 1 μ Hz to 200 kHz (1 μ Hz resolution) 1 μ Hz to 2 MHz (1 μ Hz resolution) - Option U2010A |
| Memory depth | 64 kSa |
| Amplitude resolution | 14 bits/sample (including sign) |
| Sampling rate | 50 MSa/s |
| Minimum rise/fall time | 36 ns, typical |
| Linearity | < 0.2% of peak output |
| Settling time | < 250 ns to 0.5% of final value |
| Jitter (RMS) | 10 ns + 30 ppm |

1 Characteristics and Specifications

| COMMON CHARACTERISTICS | |
|--|---|
| Amplitude | |
| Range | 40 mVpp to 5 Vpp (Into 50 Ω load) 80 mVpp to 10 Vpp (Into open circuit) |
| Accuracy ¹ (across 50 Ω load at 1 kHz) | $\pm 1\%$ of setting ± 5 mV (± 10 mV @ Hi-Z) |
| Units | Vpp, Vrms, dBm |
| Resolution | 4 digits |
| DC offset | |
| Range (peak AC + DC) | ± 2.5 V (Into 50 Ω load) ± 5 V (Into open circuit) |
| Accuracy ¹ (across 50 Ω load) | $\pm 2\%$ of offset setting $\pm 1\%$ of amplitude setting ± 5 mV (± 10 mV @ Hi-Z) |
| Amplitude limit | Amplitude + Offset limit to within ± 2.5 V range across 50 Ω load or ± 5 V across open circuit |
| Main output | |
| Impedance | 50 $\Omega \pm 0.5 \Omega$ load |
| Isolation | At least 42 Vpk to earth |
| Protection | Short-circuit protected, overload automatically disables main output |
| Internal frequency reference | |
| Accuracy ⁴ | ± 8 ppm in 1 year |
| External frequency reference | |
| Input lock range | 10 MHz ± 170 Hz |
| Input amplitude level | 500 mVpp to 5 Vpp |
| Impedance | 50 Ω AC coupled |
| Lock time | < 2 s |
| Output frequency | 10 MHz |
| Output amplitude level | 632 mVpp, typical |
| Impedance | Return loss 10 dB typical at 10 MHz |
| Phase offset | |
| Range | +360 $^\circ$ to -360 $^\circ$ |
| Resolution | 0.01 $^\circ$ |
| Accuracy | 20 ns |


| MODULATION | |
|---------------------|---|
| AM | |
| Carrier waveforms | Sine, Square, Ramp, Arbitrary |
| Source | Internal |
| Internal modulation | Sine, Square, Ramp, Arbitrary (2 mHz to 20 kHz) |
| Depth | 0.0% to 100.0% |
| FM | |
| Carrier waveforms | Sine, Square, Ramp, Arbitrary |
| Source | Internal |
| Internal modulation | Sine, Square, Ramp, Arbitrary (2 mHz to 20 kHz) |
| Deviation | 1 Hz to 500 kHz |
| PM | |
| Carrier waveforms | Sine, Square, Ramp, Arbitrary |
| Source | Internal |
| Internal modulation | Sine, Square, Ramp, Arbitrary (2 mHz to 20 kHz) |
| Deviation | 0.0 to 360.0 ° |
| FSK | |
| Carrier waveforms | Sine, Square, Ramp, Arbitrary |
| Source | Internal |
| Internal modulation | 50% duty cycle square (2 mHz to 100 kHz) |
| PSK | |
| Carrier waveforms | Sine, Square, Ramp, Arbitrary |
| Source | Internal |
| Internal modulation | 50% duty cycle square (2 mHz to 100 kHz) |
| Deviation | 0.0 to 360.0 ° |
| ASK | |
| Carrier waveforms | Sine, Square, Ramp, Arbitrary |
| Source | Internal |
| Internal modulation | 50% duty cycle square (2 mHz to 100 kHz) |

1 Characteristics and Specifications

| SWEEP CHARACTERISTICS | |
|-----------------------|-------------------------------|
| Waveforms | Sine, Square, Ramp, Arbitrary |
| Type | Linear or Logarithmic |
| Direction | Up or Down |
| Sweep time | 1 ms to 500 s |
| Trigger | Single, External, or Internal |

| TRIGGER CHARACTERISTICS | |
|-------------------------|---|
| Trigger input | |
| Input level | TTL compatible |
| Slope | Rising or Falling, Selectable |
| Pulse width | > 100 ns |
| Input impedance | > 10 k Ω , DC coupled |
| Latency | < 500 ns |
| Jitter (RMS) | 6 ns (3.5 ns for Pulse) |
| Trigger output | |
| Input level | TTL compatible into ≥ 1 k Ω |
| Pulse width | > 400 ns |
| Output impedance | 50 Ω , typical |
| Fanout | 4 TTL |
| Rise time | ≤ 20 ns |

- 1 Add 1/10th of output amplitude and offset specification per $^{\circ}\text{C}$ for operation outside the range of 18 $^{\circ}\text{C}$ to 28 $^{\circ}\text{C}$.
- 2 DC offset set to 0 V.
- 3 Spurious output at low amplitude is -70 dBm, typical.
- 4 Add 1 ppm/ $^{\circ}\text{C}$ (average) for operation outside the range of 18 $^{\circ}\text{C}$ to 28 $^{\circ}\text{C}$.

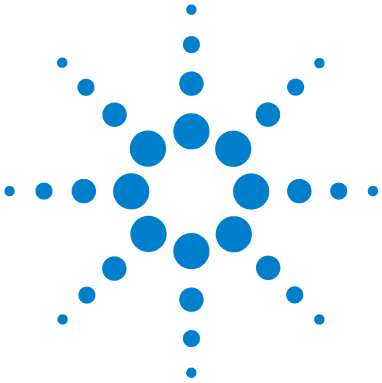

2 Getting Started

| | |
|---|----|
| Introduction | 10 |
| Self-Test | 10 |
| Agilent Technologies Calibration Services | 12 |
| Calibration Interval | 12 |
| Types of Service Available | 12 |
| Extended Service Contracts | 12 |
| Obtaining Repair Service (Worldwide) | 13 |
| Repackaging for Shipment | 14 |
| Cleaning | 14 |

This chapter provides the self-test procedure for the U2761A USB modular function generator. It also provides the information for returning your U2761A to Agilent for calibration or servicing.

If you have a defective module, you can return it to Agilent for repair or replacement.



Introduction

Self-Test

A brief power-on self-test occurs automatically whenever the U2761A is turned on. This limited test assures that the instrument is capable of operation. To perform a complete self-test, send the following SCPI command to the U2761A.

*TST?


The U2761A will automatically perform the complete self-test procedure when the SCPI command is sent. The self-test will be completed in a few seconds.

- If the self-test is successful, a zero (0) is returned.
- If the self-test fails, an error number is returned.


Agilent Measurement Manager

To start the self-test procedure using the Agilent Measurement Manager, perform the following test.


- 1 Click **Tools > Self-Test**.

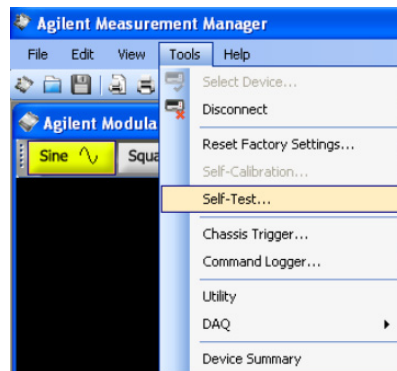

2 Click **Start** on the Self-Test form.

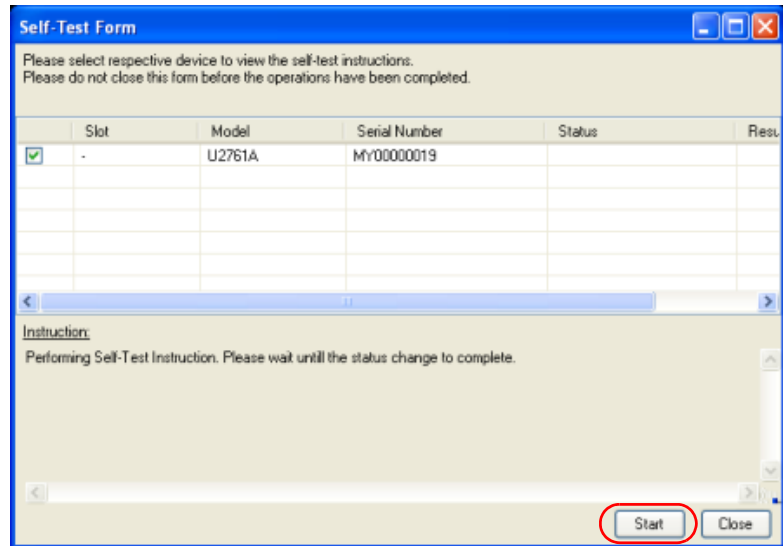

3 Click **OK** to continue when the message box appears.

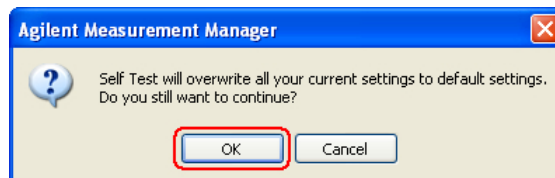

4 Wait for a few minutes for the self-test to complete.

5 The result is displayed on the form once the self-test has completed.

Agilent Technologies Calibration Services

When your U2761A is due for calibration, contact your local Agilent Service Center for a low-cost recalibration. The U2761A is supported on automated calibration systems, which allows Agilent to provide this service at a competitive price.

Calibration Interval

The U2761A should be verified and calibrated on a regular interval based on the measurement accuracy requirements of your application. A one-year interval is adequate for most applications. Accuracy specifications are warranted only if adjustments are made at regular verification and calibration intervals.

Types of Service Available

If your U2761A fails during the warranty period, Agilent will repair or replace it under the terms of your warranty. After your warranty expires, Agilent offers repair services at competitive prices.

Extended Service Contracts

Most Agilent products are provided with optional service contracts that extend the coverage period after the standard warranty expires. If you have this service contract and your U2761A happens to fail during the coverage period, Agilent will repair or replace it according to the contract.

Obtaining Repair Service (Worldwide)

To obtain service for your U2761A (in-warranty, under service contract, or post-warranty), contact your nearest Agilent Service Center. They will arrange to have your unit repaired or replaced, and are able to provide warranty or repair cost information where applicable.

To obtain warranty, service, or technical support information you can contact Agilent at one of the following telephone numbers.

In the United States: 800 829 4444

In Europe: 31 20 547 2111

In Japan: (81) 426 56 7832

You can also use our Web link for the information on contacting Agilent worldwide:

www.agilent.com/find/assist

Or contact your Agilent representative.

Before shipping your U2761A, ensure that you acquire shipping instructions, including the components to be shipped, from the Agilent Service Center. Agilent recommends that you retain the original shipping carton for use in such shipments.

Repackaging for Shipment

If the U2761A is to be shipped to Agilent for service or repair, make sure that you do the following.

- Attach a tag to the U2761A identifying the owner and indicating the required service or repair. Include the model number and full serial number.
- Place the U2761A in its original container with appropriate packaging material for shipping.
- Secure the container with strong tape or metal bands.
- If the original shipping container is not available, place your U2761A in a container with at least four inches of compressible packaging material around all sides of the U2761A. Use static-free packaging materials to avoid additional damage to your U2761A.

NOTE

Agilent suggests that you always insure your shipments.

Cleaning

Clean the outer area of the U2761A with a soft, lint-free, and slightly dampened cloth. Do not use detergent. Disassembly is not required for cleaning.



3 Calibration

| | |
|--|----|
| Introduction | 16 |
| Recommended Test Equipment | 16 |
| Test Consideration | 17 |
| Performance Verification Procedures | 18 |
| Internal Timebase Verification | 18 |
| Output Impedance Verification | 19 |
| DC Offset (High Impedance) Verification | 20 |
| AC Amplitude (High Impedance) Verification | 21 |
| Amplitude Flatness (–20 dB Range) Verification | 23 |
| Amplitude Flatness (0 dB Range) Verification | 26 |
| Amplitude Flatness (+20 dB Range) Verification | 28 |
| Calibration Procedure | 30 |
| Internal Timebase Adjustment | 31 |
| Output Impedance Adjustment | 32 |
| DC Offset (High Impedance) Adjustment | 33 |
| AC Amplitude (High Impedance) Adjustment | 34 |
| Amplitude Flatness (–20 dB Range) Adjustment | 37 |
| Amplitude Flatness (0 dB Range) Adjustment | 39 |
| Amplitude Flatness (+20 dB Range) Adjustment | 41 |

The verification and calibration procedures described in this chapter verify that the U2761A is operating normally and is within its warranted specifications.



Introduction

If the U2761A fails any of the tests or if any abnormal test results are obtained, return the unit to the Agilent Service Center for readjustment.

Recommended Test Equipment

The recommended test equipment for the verification and calibration procedures are listed in the table below.

Table 3-1 Recommended test equipment

| Instrument | Minimum requirement | Recommended model | Purpose |
|--------------------------|---|------------------------|---|
| Digital multimeter (DMM) | <ul style="list-style-type: none"> AC volts <ul style="list-style-type: none"> • True rms • AC coupled • Accuracy: $\pm 0.02\%$ to 1 MHz DC volts <ul style="list-style-type: none"> • Accuracy: 50 ppm • Resolution: 100 μV Resistance <ul style="list-style-type: none"> • 4-wire measurement • Offset compensated • Accuracy: $\pm 0.1 \Omega$ | Agilent 3458A | Measures voltage. Used in multiple procedures |
| Power meter | <ul style="list-style-type: none"> • 100 kHz to 100 MHz • 1 μW to 100 mW (-30 dBm to $+20$ dBm) • Accuracy: 0.02 dB • Resolution: 0.01 dB | Agilent E4418B | Measures voltage. Used in multiple procedures |
| Power sensor | <ul style="list-style-type: none"> • 100 kHz to 100 MHz • 1 μW to 100 mW (-30 dBm to $+20$ dBm) | Agilent 8482A | Measure voltages. Used in multiple procedures |
| Frequency counter | <ul style="list-style-type: none"> • Accuracy: 0.1 ppm | Agilent 53131A Opt 010 | Checks timebase parameter |
| Oscilloscope | <ul style="list-style-type: none"> • 500 MHz • 2 GSa/s • 50 Ω input termination | Agilent DS08064A | Checks output signal |
| Spectrum analyzer | <ul style="list-style-type: none"> • 10 kHz to 1 GHz • Average Continuous Power: $+25$ dBm • Amplitude Accuracy: ± 0.5 dB • Input Impedance: 50 Ω | Agilent E4443A | Checks output signal |
| Cable and adaptor | <ul style="list-style-type: none"> • 50 Ω BNC (male to male) cable • BNC (female) to dual banana • BNC (female) to N type (male) • BNC (female) to N type (female) | — | Signal interconnected |

Test Consideration

For optimum performance, all procedures should comply with the following recommendations.

- Ensure that the calibration ambient temperature is stable and between $23\text{ }^{\circ}\text{C} \pm 3\text{ }^{\circ}\text{C}$.
- The ambient relative humidity must be less than 80%.
- Allow a one-hour warm-up period before verification or adjustment.
- Keep the measurement cables as short as possible and consistent with the impedance requirement.
- Use RG-58 or equivalent $50\ \Omega$ cable.

Performance Verification Procedures

It is recommended to carry out performance verification tests when you first receive the U2761A. The performance verification test results should be compared to the specifications of the U2761A. You should repeat the performance verification tests at every calibration interval.

If the U2761A fails the performance verification tests, adjustment or repair is required. Some of the specifications are adjustable, or otherwise replacement of parts may be required.

Internal Timebase Verification

This test verifies the accuracy of the output frequency of the U2761A. All output frequencies are derived from a single generated frequency.

- 1 Connect the U2761A to a frequency counter as shown in the following figure. The input termination of the frequency counter must be $50\ \Omega$.



Figure 3-1 U2761A to frequency counter connection

- Set the U2761A to the output shown in the table below and measure the output frequency. Make sure that the U2761A output is enabled.

Table 3-2 Configuration for timebase verification

| U2761A | | | Measurement | |
|----------|-----------|-------------|-------------|--------------------|
| Function | Amplitude | Frequency | Nominal | Error ¹ |
| Sine | 1.00 Vpp | 10.0000 MHz | 10.0000 MHz | ±80 Hz |

¹ Based upon ±8 ppm for one year.

- Compare the measured frequency with the test limit shown in [Table 3-2](#).

Output Impedance Verification

The U2761A stores the calibration constant for the output impedance. The output impedance measurement is necessary to calculate the correct output amplitude when the load impedance is not at High-Z termination. The output impedance is measured at three different output paths.

- Set the DMM to measure offset-compensated, four-wire ohms. Set the DMM to use 100 NPLC integration. Connect the DMM to the U2761A as shown in the figure below.



Figure 3-2 U2761A to DMM four-wire connection

3 Calibration

- 2 Use the DMM to make the resistance measurement at the output terminal for each setup shown in the table below. The expected measured value is approximately $50\ \Omega$.
- 3 This procedure will require you to unsecure the instrument for calibration. See “[Calibration Procedure](#)” on page 30 for more information on how to unsecure the instrument for calibration. The calibration constant is not stored to the U2761A after completing the setup.

Table 3-3 Output impedance verification configuration

| U2761A | | DMM | | |
|--------|-------------|----------------|-------------|----------------|
| CalSet | Output path | Lower margin | Measurement | Upper margin |
| 5 | -20 dB | $49.5\ \Omega$ | Ω | $50.5\ \Omega$ |
| 6 | 0 dB | $49.5\ \Omega$ | Ω | $50.5\ \Omega$ |
| 7 | +20 dB | $49.5\ \Omega$ | Ω | $50.5\ \Omega$ |

- 4 Exit the Calibration Mode.

DC Offset (High Impedance) Verification

This procedure verifies the accuracy of the DC offset with high impedance load (DMM input impedance of $10\ \text{M}\Omega$).

- 1 Set the DMM to measure DC voltage. Connect the DMM to the U2761A as shown in the following figure. The DMM input impedance must be set to $10\ \text{M}\Omega$.



Figure 3-3 U2761A to DMM connection

- 2 Set the U2761A based on the following.
 - Load impedance: High-Z
 - Function: DC
- 3 Set the U2761A to each output listed in the table below.

Table 3-4 Configuration for DC offset verification

| U2761A DC offset | Measurement | |
|---------------------|-------------|--------------------|
| | Nominal | Error ¹ |
| -5.000 VDC | -5.000 VDC | ±0.11 VDC |
| -2.500 VDC | -2.500 VDC | ±0.06 VDC |
| 0.000 VDC | 0.000 VDC | ±0.01 VDC |
| +2.500 VDC | +2.500 VDC | ±0.06 VDC |
| +5.000 VDC | +5.000 VDC | ±0.11 VDC |

¹ Based upon ±2% of offset setting ±10 mV (High-Z).

- 4 Compare the measured voltages with the test limits shown in [Table 3-4](#).

AC Amplitude (High Impedance) Verification

This procedure verifies the accuracy of the AC output amplitude at frequencies of 1 kHz and 100 kHz, and establishes reference measurement for the higher frequency flatness verification procedures.

- 1 Set the DMM to measure AC voltage. Connect the DMM to the U2761A as shown in [Figure 3-3](#).
- 2 Set the U2761A based on the following.
 - Load impedance: High-Z
 - Offset: 0 V

3 Set the U2761A to each output listed in the table below.

Table 3-5 Configuration for AC amplitude verification

| U2761A | | | Measurement | |
|------------|-------------|------------|-------------|--------------------|
| Function | Frequency | Amplitude | Nominal | Error ¹ |
| Sine | 1.00000 kHz | 70 mVrms | 70 mVrms | ±4.236 mVrms |
| Sine | 100.000 kHz | 70 mVrms | 70 mVrms | ±5.146 mVrms |
| Sine | 1.00000 kHz | 700 mVrms | 700 mVrms | ±10.54 mVrms |
| Sine | 100.000 kHz | 700 mVrms | 700 mVrms | ±19.64 mVrms |
| Sine | 1.00000 kHz | 3.500 Vrms | 3.500 Vrms | ±38.54 mVrms |
| Sine | 100.000 kHz | 3.500 Vrms | 3.500 Vrms | ±84.04 mVrms |
| 50% Ramp | 1.00000 kHz | 50 mVrms | 50 mVrms | ±3.387 Vrms |
| 50% Ramp | 1.00000 kHz | 500 mVrms | 500 mVrms | ±7.887 mVrms |
| 50% Ramp | 1.00000 kHz | 2.500 Vrms | 2.500 Vrms | ±27.89 mVrms |
| 50% Square | 1.00000 kHz | 90 mVrms | 90 mVrms | ±5.900 mVrms |
| 50% Square | 1.00000 kHz | 900 mVrms | 900 mVrms | ±14.00 mVrms |
| 50% Square | 1.00000 kHz | 4.500 VRms | 4.500 Vrms | ±50.00 mVrms |

1 1 kHz: Based upon ±1% of setting ±5 mVpp (50 Ω) converted to Vrms for High-Z.

100 kHz: Based upon ±0.2 dB (2.3%) of setting ±5 mVpp (50 Ω) converted to Vrms for High-Z.

4 Compare the measured voltage with the test limits shown in above table, and fill in [Table 3-6](#) using the following equation.

$$Offset = 20 \times \log \left(\frac{V_{rms_{100kHz}}}{V_{rms_{1kHz}}} \right)$$

Table 3-6 AC amplitude verification worksheet

| U2761A | | | DMM | Calculation |
|----------|-------------|------------|-------------|--------------------------|
| Function | Frequency | Amplitude | Measurement | Offset |
| Sine | 1.00000 kHz | 70 mVrms | Vrms | Offset -20 dB = ___ dB |
| Sine | 100.000 kHz | 70 mVrms | Vrms | |
| Sine | 1.00000 kHz | 700 mVrms | Vrms | Offset 0 dB = ___ dB |
| Sine | 100.000 kHz | 700 mVrms | Vrms | |
| Sine | 1.00000 kHz | 3.500 Vrms | Vrms | Offset $+20$ dB = ___ dB |
| Sine | 100.000 kHz | 3.500 Vrms | Vrms | |

Amplitude Flatness (-20 dB Range) Verification

This procedure verifies the high frequency AC amplitude flatness above 100 kHz on the -20 dB attenuator range relative to 1 kHz.

- 1 Connect the power meter to measure the output amplitude of the U2761A as shown in the figure below.



Figure 3-4 U2761A to power meter connection

- 2 Set the U2761A based on the following.
 - Load impedance: 50 Ω
 - Function: Sine wave
 - Frequency: 100 kHz
 - Amplitude: 35 mVrms (-16.108 dBm)
- 3 Set the power meter **Filter Mode** to **Manual** and set **Average Length** to **500** to improve measurement stability. Allow a minimum of 30 s between the time of setting the U2761A and collecting the measurement reading.
- 4 On the power meter, use the **Relative Power** function to set the current reading as the reference value. This allows you to compare future measurement result in dB.
- 5 Set the power meter **Offset** to the **Offset_{20dB}** value previously calculated in [Table 3-6](#). The power meter will directly read the flatness error specification to 1 kHz.
- 6 Set the U2761A to each output listed in [Table 3-7](#). Measure the output amplitude using the power meter (the relative measurement in dB).
- 7 Compare the measured output with the test limits shown in [Table 3-7](#).

Table 3-7 Configuration for AC amplitude flatness (–20 dB range) verification

| U2761A | | | Measurement | |
|----------|-----------|-------------|-------------|----------|
| Function | Amplitude | Frequency | Nominal | Error |
| Sine | 35 mVrms | 100.000 kHz | 0.000 dB | ±0.2 dB |
| Sine | 35 mVrms | 160.000 kHz | 0.000 dB | ±0.35 dB |
| Sine | 35 mVrms | 250.000 kHz | 0.000 dB | ±0.35 dB |
| Sine | 35 mVrms | 400.000 kHz | 0.000 dB | ±0.35 dB |
| Sine | 35 mVrms | 630.000 kHz | 0.000 dB | ±0.35 dB |
| Sine | 35 mVrms | 1.00000 MHz | 0.000 dB | ±0.35 dB |
| Sine | 35 mVrms | 1.60000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 35 mVrms | 2.50000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 35 mVrms | 4.00000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 35 mVrms | 6.30000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 35 mVrms | 10.0000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 35 mVrms | 11.5000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 35 mVrms | 13.2000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 35 mVrms | 15.2000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 35 mVrms | 17.4000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 35 mVrms | 20.0000 MHz | 0.000 dB | ±0.7 dB |

Amplitude Flatness (0 dB Range) Verification

This procedure verifies the high frequency AC amplitude flatness above 100 kHz on the 0 dB range relative to 1 kHz.

- 1 Connect the power meter to measure the output amplitude of the U2761A as shown in [Figure 3-4](#).
- 2 Set the U2761A based on the following.
 - Load impedance: 50 Ω
 - Function: Sine wave
 - Frequency: 100 kHz
 - Amplitude: 350 mVrms (+3.892 dBm)
- 3 Set the power meter **Filter Mode** to **Auto** if you have previously set it to **Manual**.
- 4 On the power meter, use the **Relative Power** function to set the current reading as the reference value. This will allow you to compare future measurement result in dB.
- 5 Set the power meter **Offset** to **Offset_{0dB}** value previously calculated in [Table 3-6](#). The power meter will directly read the flatness error specification relative to 1 kHz.
- 6 Set the U2761A to each output listed in the [Table 3-8](#). Measure the output amplitude using the power meter (the relative measurement in dB).
- 7 Compare the measured output with the test limits shown in the [Table 3-8](#).

Table 3-8 Configuration for AC amplitude flatness (0 dB range) verification

| U2761A | | | Measurement | |
|----------|-----------|-------------|-------------|----------|
| Function | Amplitude | Frequency | Nominal | Error |
| Sine | 350 mVrms | 100.000 kHz | 0.000 dB | ±0.2 dB |
| Sine | 350 mVrms | 160.000 kHz | 0.000 dB | ±0.35 dB |
| Sine | 350 mVrms | 250.000 kHz | 0.000 dB | ±0.35 dB |
| Sine | 350 mVrms | 400.000 kHz | 0.000 dB | ±0.35 dB |
| Sine | 350 mVrms | 630.000 kHz | 0.000 dB | ±0.35 dB |
| Sine | 350 mVrms | 1.00000 MHz | 0.000 dB | ±0.35 dB |
| Sine | 350 mVrms | 1.60000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 350 mVrms | 2.50000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 350 mVrms | 4.00000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 350 mVrms | 6.30000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 350 mVrms | 10.0000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 350 mVrms | 11.5000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 350 mVrms | 13.2000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 350 mVrms | 15.2000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 350 mVrms | 17.4000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 350 mVrms | 20.0000 MHz | 0.000 dB | ±0.7 dB |

Amplitude Flatness (+20 dB Range) Verification

This procedure verifies the high frequency AC amplitude flatness above 100 kHz on the +20 dB amplifier range relative to 1 kHz.

- 1 Connect the power meter and power sensor together to measure the output amplitude of the U2761A as shown in [Figure 3-4](#).
- 2 Set the U2761A based on the following.
 - Load impedance: 50 Ω
 - Function: Sine wave
 - Frequency: 100 kHz
 - Amplitude: 1.750 V_{rms} (+17.871 dBm)
- 3 Set the power meter **Filter Mode** to **Auto** if you have previously set it to **Manual**.
- 4 On the power meter, use the **Relative Power** function to set the current reading as the reference value. This will allow you to compare future measurement result in dB.
- 5 Set the power meter **Offset** to **Offset_{+20dB}** value previously calculated in [Table 3-6](#). The power meter will directly read the flatness error specification relative to 1 kHz.
- 6 Set the U2761A to each output listed in the [Table 3-9](#). Measure the output amplitude using the power meter (the relative measurement in dB).
- 7 Compare the measured output with the test limits shown in the [Table 3-9](#).

Table 3-9 Configuration for AC amplitude flatness (+20 dB range) verification

| U2761A | | | Measurement | |
|----------|------------|-------------|-------------|----------|
| Function | Amplitude | Frequency | Nominal | Error |
| Sine | 1.750 Vrms | 100.000 kHz | 0.000 dB | ±0.2 dB |
| Sine | 1.750 Vrms | 160.000 kHz | 0.000 dB | ±0.35 dB |
| Sine | 1.750 Vrms | 250.000 kHz | 0.000 dB | ±0.35 dB |
| Sine | 1.750 Vrms | 400.000 kHz | 0.000 dB | ±0.35 dB |
| Sine | 1.750 Vrms | 630.000 kHz | 0.000 dB | ±0.35 dB |
| Sine | 1.750 Vrms | 1.00000 MHz | 0.000 dB | ±0.35 dB |
| Sine | 1.750 Vrms | 1.60000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 1.750 Vrms | 2.50000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 1.750 Vrms | 4.00000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 1.750 Vrms | 6.30000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 1.750 Vrms | 10.0000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 1.750 Vrms | 11.5000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 1.750 Vrms | 13.2000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 1.750 Vrms | 15.2000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 1.750 Vrms | 17.4000 MHz | 0.000 dB | ±0.7 dB |
| Sine | 1.750 Vrms | 20.0000 MHz | 0.000 dB | ±0.7 dB |

Calibration Procedure

Calibration is necessary when the one-year calibration interval has expired, or whenever the U2761A fails any verification test. To enter the calibration mode, send the following SCPI command to the U2761A.

```
CALibration:SECure:STATe OFF,U2761A
```

Once the calibration state is unsecured, the U2761A is now in the calibration mode and setup is 0 by default. All the calibration setup is predetermined and transparent to the user. The user is free to perform a full calibration setup from 1 to 115, or may choose to perform only a particular group. To perform a particular calibration setup, send the following SCPI command to U2761A.

```
CALibration:SETup<1|2|3|...|115>
```

The current calibration setup can be queried using the following SCPI command when necessary.

```
CALibration:SETup?
```

The U2761A will output a predefined waveform at the output terminal according to the setup number entered. Perform the measurements as described in [“Internal Timebase Adjustment”](#) on page 31 until [“Amplitude Flatness \(+20 dB Range\) Adjustment”](#) on page 41, and enter the measured values to the U2761A using the SCPI commands as follows.

```
CALibration:VALue <value>
```

The calibration value must be entered at the magnitude of the units shown in the configuration tables accordingly. If the user accidentally enters a wrong value, simply reenter a correct value under the same calibration setup. Proceed to the next calibration setup by entering a new setup number once the calibration value is entered.

Please note that the calibration constant will only be stored after the user completes the subsequent calibration setup in each group within a single calibration mode login. To exit the calibration mode, send the following SCPI command to the U2761A.

```
CALibration:SECure:STATe ON,U2761A
```

Internal Timebase Adjustment

The U2761A relies on a VCTCXO to generate the precision clock to drive the DDS architecture. This procedure determines the suitable control voltage for the VCTCXO to output the correct frequency. This procedure implements a three-time approach to obtain the best possible control voltage.

- 1 Set the frequency counter to measure frequency. The frequency counter resolution must be higher than 0.1 ppm (eight digits or more).
- 2 Set the frequency counter input termination to 50 Ω . If your frequency counter does not have a 50 Ω input termination, you must provide an external termination.
- 3 Connect the frequency counter as shown in [Figure 3-1](#). Use the frequency counter to measure the output frequency for each setup shown in the table below.
- 4 Enter the measured value to the U2761A as described in “[Calibration Procedure](#)” on page 30.

Table 3-10 Timebase adjustment configuration

| U2761A | | | Frequency counter | | |
|----------------|------------------|-----------|-------------------|-------------|---------------|
| Setup | Frequency | Amplitude | Lower margin | Measurement | Upper margin |
| 1 | < 10 MHz | 1 Vpp | 9.999000 MHz | MHz | 9.999800 MHz |
| 2 | > 10 MHz | 1 Vpp | 10.000200 MHz | MHz | 10.001000 MHz |
| 3 | \approx 10 MHz | 1 Vpp | 9.999900 MHz | MHz | 10.000100 MHz |
| 4 ¹ | = 10 MHz | 1 Vpp | 9.999990 MHz | MHz | 10.000010 MHz |

1 Calibration constant is stored after completing this setup.

- 5 Proceed to output impedance adjustment or exit the calibration mode when necessary.

Output Impedance Adjustment

The U2761A stores the calibration constant for output impedance. The output impedance measurement is necessary to calculate the correct output amplitude when the load impedance is not at High-Z termination. The output impedance is measured at three different output paths.

- 1 Set the DMM to measure offset-compensated, four-wire ohms. Set the DMM to use 100 NPLC integration. Connect the DMM to the U2761A as shown in the figure below.



Figure 3-5 U2761A to DMM four-wire connection

- 2 Use the DMM to make the resistance measurement at the output terminal for each setup shown in the table below. The expected measured value is approximately 50 Ω .
- 3 Make sure the Offset Compensation setting in the DMM is switched on.
- 4 Enter the measured value to the U2761A as described in “[Calibration Procedure](#)” on page 30.

Table 3-11 Output impedance adjustment configuration

| U2761A | | DMM | | |
|----------------|-------------|---------------|-------------|---------------|
| Setup | Output path | Lower margin | Measurement | Upper margin |
| 5 | -20 dB | 49.5 Ω | Ω | 50.5 Ω |
| 6 | 0 dB | 49.5 Ω | Ω | 50.5 Ω |
| 7 ¹ | +20 dB | 49.5 Ω | Ω | 50.5 Ω |

- 1 Calibration constant is stored after completing this setup.
- 5 Proceed to DC offset adjustment or exit the calibration mode when necessary.

DC Offset (High Impedance) Adjustment

The U2761A stores the calibration constant related to gain and offset of the internal system DAC to control the offset setting. This setting is used for both offset and DC outputs.

- 1 Set the DMM to measure DC voltage. Connect the DMM to the U2761A as shown in [Figure 3-3](#). The DMM input impedance should be set to 10 M Ω .
- 2 Use the DMM to perform the DC voltage measurement at the output terminal for each setup shown in the table below.
- 3 Enter the measured value to the U2761A as described in “[Calibration Procedure](#)” on page 30.

Table 3-12 DC offset (High Impedance) adjustment configuration

| U2761A | | | DMM | | |
|-----------------|-----------|------------|--------------|-------------|--------------|
| Setup | Amplifier | DC offset | Lower margin | Measurement | Upper margin |
| 8 | Off | +4.800 VDC | +4.608 VDC | VDC | +4.992 VDC |
| 9 | Off | -4.800 VDC | -4.992 VDC | VDC | -4.608 VDC |
| 10 | On | +2.600 VDC | +2.496 VDC | VDC | +2.704 VDC |
| 11 | On | +4.800 VDC | +4.608 VDC | VDC | +4.992 VDC |
| 12 | On | -2.600 VDC | -2.704 VDC | VDC | -2.496 VDC |
| 13 ¹ | On | -4.800 VDC | -4.992 VDC | VDC | -4.608 VDC |

- 1 Calibration constant is stored after completing this setup.

- 4 Proceed to AC amplitude (High Impedance) adjustment or exit the calibration mode when necessary.

AC Amplitude (High Impedance) Adjustment

This procedure calculates the AC amplitude calibration factor of three output paths for Sine wave, Ramp wave, and Square wave individually.

- 1 Set the DMM to measure AC voltage. Connect the DMM to the U2761A as shown in [Figure 3-3](#).
- 2 Use the DMM to perform AC voltage measurement at the output terminal for each setup shown in the table below.
- 3 Enter the measured value to the U2761A as described in “[Calibration Procedure](#)” on page 30.

Table 3-13 Configuration for Sine wave AC amplitude adjustment

| U2761A | | | | DMM | | |
|--------|----------|-------------|------------|--------------|-------------|--------------|
| Setup | Function | Frequency | Amplitude | Lower margin | Measurement | Upper margin |
| 14 | Sine | 1.00000 kHz | 32 mVrms | 30.4 mVrms | Vrms | 33.6 mVrms |
| 15 | Sine | 1.00000 kHz | 60 mVrms | 57.0 mVrms | Vrms | 63.0 mVrms |
| 16 | Sine | 100.000 kHz | 60 mVrms | 57.0 mVrms | Vrms | 63.0 mVrms |
| 17 | Sine | 1.00000 kHz | 80 mVrms | 74.4 mVrms | Vrms | 85.6 mVrms |
| 18 | Sine | 1.00000 kHz | 600 mVrms | 558 mVrms | Vrms | 642 mVrms |
| 19 | Sine | 100.000 kHz | 600 mVrms | 558 mVrms | Vrms | 642 mVrms |
| 20 | Sine | 1.00000 kHz | 800 mVrms | 744 mVrms | Vrms | 856 mVrms |
| 21 | Sine | 1.00000 kHz | 3.000 Vrms | 2.79 Vrms | Vrms | 3.21 Vrms |
| 22 | Sine | 100.000 kHz | 800 mVrms | 744 mVrms | Vrms | 856 mVrms |

4 Fill in the table below using the measurement results in Table 3-13.

Table 3-14 Sine wave flatness worksheet

| Parameter | Calculation | Offset |
|-------------------------|---|--------|
| Offset _{-20dB} | $Offset = 20 \times \log \frac{V_{value(16)}}{V_{value(15)}}$ | dB |
| Offset _{0dB} | $Offset = 20 \times \log \frac{V_{value(19)}}{V_{value(18)}}$ | dB |
| Offset _{+20dB} | $Offset = 20 \times \log \frac{V_{value(22)}}{V_{value(20)}}$ | dB |

- 5 Use the DMM to perform the AC voltage measurement at the output terminal for each setup shown in the table below.
- 6 Enter the measured value to the U2761A as described in “Calibration Procedure” on page 30.

Table 3-15 Configuration for 50% ramp AC amplitude adjustment

| U2761A | | | | DMM | | |
|--------|----------|-------------|------------|--------------|-------------|--------------|
| Setup | Function | Frequency | Amplitude | Lower margin | Measurement | Upper margin |
| 23 | 50% Ramp | 1.00000 kHz | 28 mVrms | 26.6 mVrms | Vrms | 29.4 mVrms |
| 24 | 50% Ramp | 1.00000 kHz | 50 mVrms | 47.5 mVrms | Vrms | 52.5 mVrms |
| 25 | 50% Ramp | 1.00000 kHz | 70 mVrms | 65.1 mVrms | Vrms | 74.9 mVrms |
| 26 | 50% Ramp | 1.00000 kHz | 500 mVrms | 465 mVrms | Vrms | 535 mVrms |
| 27 | 50% Ramp | 1.00000 kHz | 700 mVrms | 651 mVrms | Vrms | 749 mVrms |
| 28 | 50% Ramp | 1.00000 kHz | 2.500 Vrms | 2.325 Vrms | Vrms | 2.675 Vrms |

3 Calibration

- 7 Use the DMM to perform the AC voltage measurement at the output terminal for each setup shown in the table below.
- 8 Enter the measured value to the U2761A as described in “[Calibration Procedure](#)” on page 30.

Table 3-16 Configuration for 50% pulse AC amplitude adjustment

| U2761A | | | | DMM | | |
|-----------------|-----------|------------|------------|--------------|-------------|--------------|
| Setup | Function | Period | Amplitude | Lower margin | Measurement | Upper margin |
| 29 | 50% Pulse | 1.00000 ms | 44 mVrms | 41.8 mVrms | Vrms | 46.2 mVrms |
| 30 | 50% Pulse | 1.00000 ms | 90 mVrms | 85.5 mVrms | Vrms | 94.5 mVrms |
| 31 | 50% Pulse | 1.00000 ms | 110 mVrms | 102.3 mVrms | Vrms | 117.7 mVrms |
| 32 | 50% Pulse | 1.00000 ms | 900 mVrms | 837 mVrms | Vrms | 963 mVrms |
| 33 | 50% Pulse | 1.00000 ms | 1.100 Vrms | 1.023 Vrms | Vrms | 1.177 Vrms |
| 34 ¹ | 50% Pulse | 1.00000 ms | 4.500 Vrms | 4.185 Vrms | Vrms | 4.815 Vrms |

1 Calibration constant is stored after completing this setup.

- 9 Proceed to AC amplitude flatness (–20 dB range) adjustment or exit the calibration mode when necessary.

Amplitude Flatness (-20 dB Range) Adjustment

This procedure calibrates the AC amplitude flatness for high frequency using -20 dB attenuator. This calibration is performed using Sine wave at nominal amplitude of 30 mVrms across 50 Ω load.

- 1 Connect the power meter to measure the output amplitude of the U2761A as shown in [Figure 3-4](#).
- 2 Set the power meter **Filter Mode** to **Manual** and **Averaging Length** to **500**, to improve the measurement stability. Allow a minimum of 30 s between setting time and collecting the measurement reading.
- 3 Use the power meter to perform a 100 kHz AC power measurement at the output terminal for setup 35 shown in [Table 3-17](#). Setup 35 establishes the power reference for all the remaining setups in [Table 3-17](#). You must always perform setup 35 before any of the following setups.
- 4 On the power meter, use the **Relative Power** function to set the current reading as the reference value. This will allow you to make future measurement result in dB.
- 5 Set the power meter **Offset** to **Offset_{20dB}** value previously calculated in [Table 3-14](#). The power meter will directly read the flatness error specification relative to 1 kHz.
- 6 Enter the measured value to the U2761A as described in “[Calibration Procedure](#)” on page 30.
- 7 Proceed to AC amplitude flatness (0 dB range) adjustment or exit the calibration mode when necessary.

3 Calibration

Table 3-17 Configuration for AC amplitude flatness (–20 dB range) adjustment

| U2761A | | | Power meter | | |
|-----------------|----------|-------------|--------------|----------------------------------|--------------|
| Setup | Function | Frequency | Lower margin | Measurement | Upper margin |
| 35 | Sine | 100.000 kHz | –0.2 dB | (Offset _{–20dB}) dB | +0.2 dB |
| 36 | Sine | 780.000 kHz | –1.4 dB | dB | +1.4 dB |
| 37 | Sine | 1.56000 MHz | –1.4 dB | dB | +1.4 dB |
| 38 | Sine | 2.34000 MHz | –1.4 dB | dB | +1.4 dB |
| 39 | Sine | 3.13000 MHz | –1.4 dB | dB | +1.4 dB |
| 40 | Sine | 3.91000 MHz | –1.4 dB | dB | +1.4 dB |
| 41 | Sine | 4.69000 MHz | –1.4 dB | dB | +1.4 dB |
| 42 | Sine | 5.47000 MHz | –1.4 dB | dB | +1.4 dB |
| 43 | Sine | 6.25000 MHz | –1.4 dB | dB | +1.4 dB |
| 44 | Sine | 7.03000 MHz | –1.4 dB | dB | +1.4 dB |
| 45 | Sine | 7.81000 MHz | –1.4 dB | dB | +1.4 dB |
| 46 | Sine | 8.59000 MHz | –1.4 dB | dB | +1.4 dB |
| 47 | Sine | 9.38000 MHz | –1.4 dB | dB | +1.4 dB |
| 48 | Sine | 10.1600 MHz | –1.4 dB | dB | +1.4 dB |
| 49 | Sine | 10.9400 MHz | –1.4 dB | dB | +1.4 dB |
| 50 | Sine | 11.7200 MHz | –1.4 dB | dB | +1.4 dB |
| 51 | Sine | 12.5000 MHz | –1.4 dB | dB | +1.4 dB |
| 52 | Sine | 13.2800 MHz | –1.4 dB | dB | +1.4 dB |
| 53 | Sine | 14.0600 MHz | –1.4 dB | dB | +1.4 dB |
| 54 | Sine | 14.8400 MHz | –1.4 dB | dB | +1.4 dB |
| 55 | Sine | 15.6300 MHz | –1.4 dB | dB | +1.4 dB |
| 56 | Sine | 16.4100 MHz | –1.4 dB | dB | +1.4 dB |
| 57 | Sine | 17.1900 MHz | –1.4 dB | dB | +1.4 dB |
| 58 | Sine | 17.9700 MHz | –1.4 dB | dB | +1.4 dB |
| 59 | Sine | 18.7500 MHz | –1.4 dB | dB | +1.4 dB |
| 60 | Sine | 19.5300 MHz | –1.4 dB | dB | +1.4 dB |
| 61 ¹ | Sine | 20.0000 MHz | –1.4 dB | dB | +1.4 dB |

1 Calibration constant is stored after completing this setup.

Amplitude Flatness (0 dB Range) Adjustment

This procedure calibrates the AC amplitude flatness for high frequency using 0 dB direct path. This calibration is performed using Sine wave at nominal amplitude of 300 mVrms across 50 Ω load.

- 1 Connect the power meter to measure the output amplitude of the U2761A as shown in [Figure 3-4](#).
- 2 Set the power meter **Filter Mode** to **Auto** if you have previously set it to **Manual**.
- 3 Use the power meter to perform a 100 kHz AC power measurement at the output terminal for setup 62 shown in [Table 3-18](#). Setup 62 establishes the power reference for all remaining setups in [Table 3-18](#). You must always perform setup 62 before any of the following setups.
- 4 On the power meter, use the **Relative Power** function to set the current reading as the reference value. This will allow you to make future measurement result in dB.
- 5 Set the power meter **Offset** to **Offset_{0dB}** value previously calculated in [Table 3-14](#). The power meter will directly read the flatness error specification relative to 1 kHz.
- 6 Enter the measured value to the U2761A as described in “[Calibration Procedure](#)” on page 30.
- 7 Proceed to AC amplitude flatness (+20 dB range) adjustment or exit the calibration mode when necessary.

3 Calibration

Table 3-18 Configuration for AC amplitude flatness (0 dB range) adjustment

| U2761A | | | Power meter | | |
|-----------------|----------|--------------|--------------|--------------------------------|--------------|
| Setup | Function | Frequency | Lower margin | Measurement | Upper margin |
| 62 | Sine | 100.000 kHz | -0.2 dB | (Offset _{0dB}) dB | +0.2 dB |
| 63 | Sine | 780.000 kHz | -1.4 dB | dB | +1.4 dB |
| 64 | Sine | 1.56000 MHz | -1.4 dB | dB | +1.4 dB |
| 65 | Sine | 2.34000 MHz | -1.4 dB | dB | +1.4 dB |
| 66 | Sine | 3.13000 MHz | -1.4 dB | dB | +1.4 dB |
| 67 | Sine | 3.91000 MHz | -1.4 dB | dB | +1.4 dB |
| 68 | Sine | 4.69000 MHz | -1.4 dB | dB | +1.4 dB |
| 69 | Sine | 5.47000 MHz | -1.4 dB | dB | +1.4 dB |
| 70 | Sine | 6.25000 MHz | -1.4 dB | dB | +1.4 dB |
| 71 | Sine | 7.03000 MHz | -1.4 dB | dB | +1.4 dB |
| 72 | Sine | 7.81000 MHz | -1.4 dB | dB | +1.4 dB |
| 73 | Sine | 8.59000 MHz | -1.4 dB | dB | +1.4 dB |
| 74 | Sine | 9.38000 MHz | -1.4 dB | dB | +1.4 dB |
| 75 | Sine | 10.16000 MHz | -1.4 dB | dB | +1.4 dB |
| 76 | Sine | 10.94000 MHz | -1.4 dB | dB | +1.4 dB |
| 77 | Sine | 11.72000 MHz | -1.4 dB | dB | +1.4 dB |
| 78 | Sine | 12.50000 MHz | -1.4 dB | dB | +1.4 dB |
| 79 | Sine | 13.28000 MHz | -1.4 dB | dB | +1.4 dB |
| 80 | Sine | 14.06000 MHz | -1.4 dB | dB | +1.4 dB |
| 81 | Sine | 14.84000 MHz | -1.4 dB | dB | +1.4 dB |
| 82 | Sine | 15.63000 MHz | -1.4 dB | dB | +1.4 dB |
| 83 | Sine | 16.41000 MHz | -1.4 dB | dB | +1.4 dB |
| 84 | Sine | 17.19000 MHz | -1.4 dB | dB | +1.4 dB |
| 85 | Sine | 17.97000 MHz | -1.4 dB | dB | +1.4 dB |
| 86 | Sine | 18.75000 MHz | -1.4 dB | dB | +1.4 dB |
| 87 | Sine | 19.53000 MHz | -1.4 dB | dB | +1.4 dB |
| 88 ¹ | Sine | 20.00000 MHz | -1.4 dB | dB | +1.4 dB |

1 Calibration constant is stored after completing this setup.

Amplitude Flatness (+20 dB Range) Adjustment

This procedure calibrates the AC amplitude flatness for high frequency using +20 dB amplifier. This calibration is performed using Sine wave at nominal amplitude of 400 mVrms across 50 Ω load.

- 1 Connect the power meter to measure the output amplitude of the U2761A as shown in [Figure 3-4](#).
- 2 Set the power meter **Filter Mode** to **Auto** if you have previously set it to **Manual**.
- 3 Use the power meter to perform a 100 kHz AC power measurement at the output terminal for setup 89 in [Table 3-19](#). Setup 89 establishes the power reference for all the remaining setups in [Table 3-19](#). You must always perform setup 89 before any of the following setups.
- 4 On the power meter, use the **Relative Power** function to set the current reading as the reference value. This will allow you to make future measurement result in dB.
- 5 Set the power meter **Offset** to **Offset_{+20dB}** value previously calculated in [Table 3-14](#). The power meter will directly read the flatness error specification relative to 1 kHz.
- 6 Enter the measured value to the U2761A as described in “[Calibration Procedure](#)” on page 30.

NOTE

This is the final adjustment procedure for the U2761A.

3 Calibration

Table 3-19 Configuration for AC amplitude flatness (+20 dB range) adjustment

| U2761A | | | Power meter | | |
|------------------|----------|-------------|--------------|----------------------------------|--------------|
| Setup | Function | Frequency | Lower margin | Measurement | Upper margin |
| 89 | Sine | 100.000 kHz | -0.2 dB | (Offset _{+20dB}) dB | +0.2 dB |
| 90 | Sine | 780.000 kHz | -1.4 dB | dB | +1.4 dB |
| 91 | Sine | 1.56000 MHz | -1.4 dB | dB | +1.4 dB |
| 92 | Sine | 2.34000 MHz | -1.4 dB | dB | +1.4 dB |
| 93 | Sine | 3.13000 MHz | -1.4 dB | dB | +1.4 dB |
| 94 | Sine | 3.91000 MHz | -1.4 dB | dB | +1.4 dB |
| 95 | Sine | 4.69000 MHz | -1.4 dB | dB | +1.4 dB |
| 96 | Sine | 5.47000 MHz | -1.4 dB | dB | +1.4 dB |
| 97 | Sine | 6.25000 MHz | -1.4 dB | dB | +1.4 dB |
| 98 | Sine | 7.03000 MHz | -1.4 dB | dB | +1.4 dB |
| 99 | Sine | 7.81000 MHz | -1.4 dB | dB | +1.4 dB |
| 100 | Sine | 8.59000 MHz | -1.4 dB | dB | +1.4 dB |
| 101 | Sine | 9.38000 MHz | -1.4 dB | dB | +1.4 dB |
| 102 | Sine | 10.1600 MHz | -1.4 dB | dB | +1.4 dB |
| 103 | Sine | 10.9400 MHz | -1.4 dB | dB | +1.4 dB |
| 104 | Sine | 11.7200 MHz | -1.4 dB | dB | +1.4 dB |
| 105 | Sine | 12.5000 MHz | -1.4 dB | dB | +1.4 dB |
| 106 | Sine | 13.2800 MHz | -1.4 dB | dB | +1.4 dB |
| 107 | Sine | 14.0600 MHz | -1.4 dB | dB | +1.4 dB |
| 108 | Sine | 14.8400 MHz | -1.4 dB | dB | +1.4 dB |
| 109 | Sine | 15.6300 MHz | -1.4 dB | dB | +1.4 dB |
| 110 | Sine | 16.4100 MHz | -1.4 dB | dB | +1.4 dB |
| 111 | Sine | 17.1900 MHz | -1.4 dB | dB | +1.4 dB |
| 112 | Sine | 17.9700 MHz | -1.4 dB | dB | +1.4 dB |
| 113 | Sine | 18.7500 MHz | -1.4 dB | dB | +1.4 dB |
| 114 | Sine | 19.5300 MHz | -1.4 dB | dB | +1.4 dB |
| 115 ¹ | Sine | 20.0000 MHz | -1.4 dB | dB | +1.4 dB |

1 Calibration constant is stored after completing this setup.



4 Disassembly

| | |
|--------------------------|----|
| General Disassembly | 44 |
| Disassembly Instructions | 44 |
| Reassembly Instructions | 46 |
| Replacement Parts | 46 |

This chapter describes the procedure to disassemble the U2761A. The information on the replacement parts is also provided.

General Disassembly

This chapter provides the step-by-step guide to dismantle the module. To reassemble the module, follow the instructions in reverse order.

The removable assemblies include the following.


- Front and back bumpers
- Metal casing
- Rear metal casing
- Front metal casing, which is attached to the carrier board and measurement board

Disassembly Instructions


NOTE

The parts shown in the following figures are representative and may look different with what you have in your module.


Follow the instructions in this section to disassemble the U2761A.

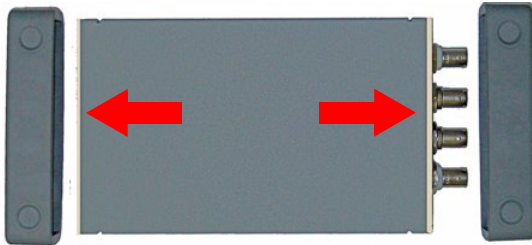


Remove the two bumpers from the metal casing.

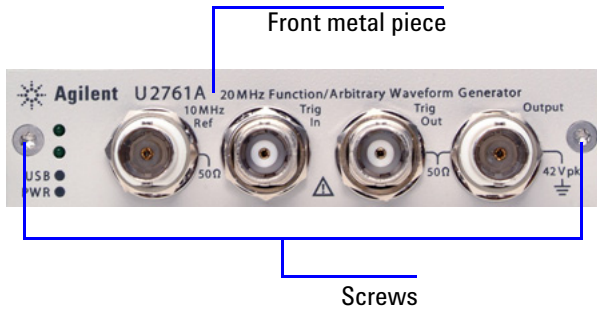

Remove the two indicated screws from the front metal piece.

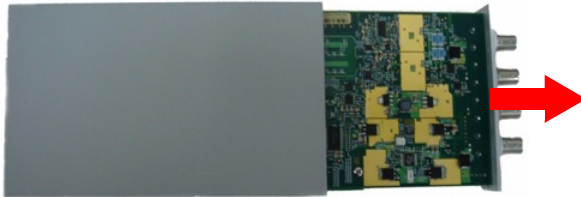

Gently pull the front metal piece out, which is attached to the carrier and measurement boards.

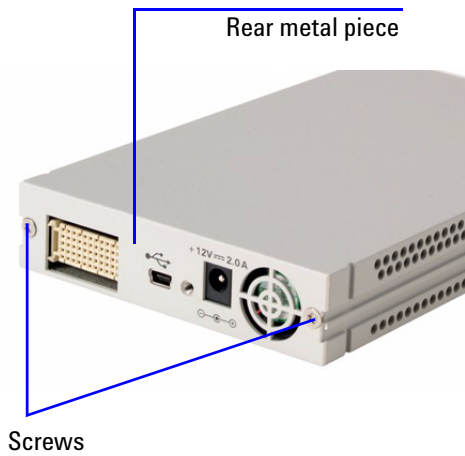

Remove the two indicated screws and proceed to remove the rear metal piece


Reassembly Instructions

The reassembly process is simply the reverse of disassembly.


Replacement Parts

This section provides the information of orderable replacement parts for the U2761A. You can order the replacement parts through Agilent website or you can contact the nearest Agilent Sales Office or Service Centre. To search for the replacement part number online, follow the steps below.

- 1 Launch your Internet Explorer to access Agilent website (www.agilent.com).
- 2 On the technical support panel, select **Test & Measurement** under the **Parts Information** selection as shown below.

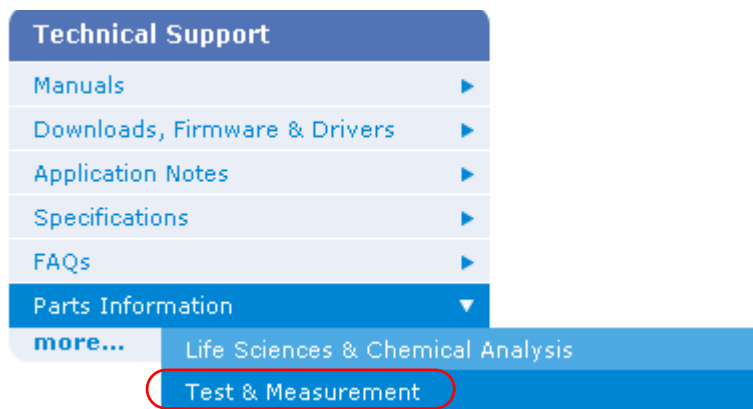

- 3 You can search for the replacement parts by entering a specific replacement part number or by instruments.
- To search by part number, type the replacement part number in the text box as shown below.

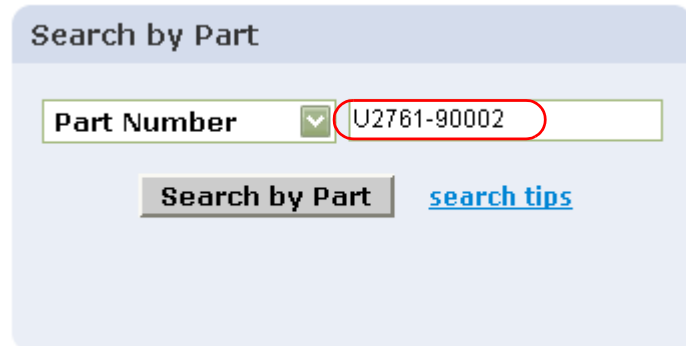


Search by Part

Part Number

[search tips](#)

- To search by instrument, type the model number in the text box and click **View Parts** to select a particular replacement part.

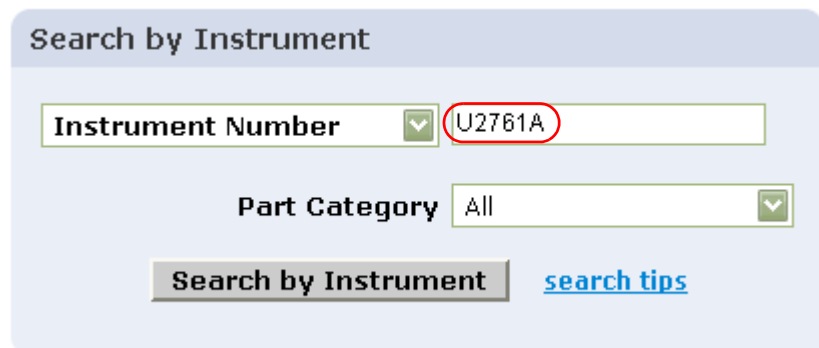

Search by Instrument

Instrument Number

Part Category

[search tips](#)

- 4 The result of your search will appear and click **View Parts** for the selected instrument.

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.



5 Troubleshooting

Troubleshooting 50

This chapter provides the general information to troubleshoot the U2761A.



Troubleshooting

This section offers suggestions for solving general problems that you may encounter with the U2761A. It guides you on what to check in the following situations.

- **Power indicator LED is not lit.**

Verify that the AC power cord is connected to the power inlet of the U2761A.

- **Power indicator LED is lit but the USB indicator LED is not lit.**

Verify that the USB cable is properly connected to the PC and USB inlet of the U2761A.

NOTE

If there is no response from the instrument, contact the nearest Agilent Service Center to obtain further assistance.

Index

A

- accuracy, 5, 12, 16, 18, 19, 20
- adjustment
 - +20 dB range flatness, 40
 - 0 dB range flatness, 38
 - 20 dB range AC flatness, 36
 - AC amplitude, 33
 - DC offset, 32
 - output impedance, 31
 - timebase, 30
- Agilent
 - calibration services, 12
 - measurement manager, 10
 - recommended models, 16
- AM
 - carrier waveform, 6
 - depth, 6
- ambient
 - relative humidity, 17
 - temperature, 17
- arbitrary, 3, 4
- ASK
 - carrier waveform, 6
- Asymmetry, 3

C

- calibration
 - constant, 31, 32, 35, 37, 39, 41
 - interval, 12
 - procedure, 29
 - recommended test equipment, 16
- carrier
 - waveform, 6

- characteristics
 - common, 5
 - product, 2
 - specifications/measurement, 3
 - sweep, 7
 - trigger, 7
 - waveform, 3
- compliance
 - EMC, 2
 - safety, 2
 - storage, 2
- connector, 2

D

- DC, 5, 16, 19, 20, 32
- DC offset, 5, 7
- depth, 4, 6
- deviation
 - frequency, 6
 - phase, 6
 - PSK, 6
- dimensions, 2
- disassembly, 14, 46
- DMM, 16, 19, 20, 31, 32, 33
- duty cycle, 3, 6

E

- External frequency reference, 5

F

- FM
 - carrier waveform, 6
 - deviation, 6
 - frequency deviation, 6
- frequency counter, 16, 18, 30

FSK 6

- carrier waveform, 6
- carrier waveform, 6

H

- Harmonic distortion, 3
- humidity
 - ambient relative, 17
 - operating, 2
 - storage, 2

I

- internal timebase verification, 18
- Isolation, 5

J

- jitter, 3, 4

L

- LED, 50
- linearity, 4

M

- main output, 5

O

- Operating environment, 2
- oscilloscope, 16
- output
 - amplitude, 5
 - frequency, 5
 - output impedance, 7, 31

Index

P

- phase noise, 3
- PM 6
 - carrier waveform, 6
 - phase deviation, 6
- power consumption, 2
- power meter, 16, 22, 23, 25, 27, 36, 38, 40
- power sensor, 16
- product
 - dimensions, 2
 - specifications, 3
- Programmable symmetry, 4
- protection, 5
- PSK
 - carrier waveform, 6
 - deviation, 6
- pulse, 4, 7, 35

R

- Ramp, 4
- reassembly, 46
- recommended test equipment, 16
- remote interface, 2
- repackaging, 14
- repair service, 13
- resolution, 5
- rise/fall time, 3, 4
- RMS, 3, 4, 7

S

- sampling rate, 4
- self-test, 10
- service, 12, 13, 14
- settling time, 4
- shock, 2
- spectrum analyzer, 16
- spurious, 3, 7
- standard waveforms, 3
- storage humidity, 2
- storage temperature, 2
- sweep time, 7

- symmetry, 4

T

- test consideration, 17
- trigger
 - input, 7
 - output, 7
- triggering
 - input signal, 7
 - output signal, 7
- troubleshooting, 50

U

- USB, 2, 50

V

- verification,
 - +20 dB range AC flatness, 27
 - 0 dB range AC flatness, 25
 - 20 dB range AC flatness, 22
 - AC amplitude, 20
 - DC offset, 19
 - internal timebase, 18

W

- warm-up, 17
- warranty, 2, 12, 13
- weight, 2

www.agilent.com

Contact us

To obtain service, warranty or technical support assistance, contact us at the following phone numbers:

United States:

(tel) 800 829 4444 (fax) 800 829 4433

Canada:

(tel) 877 894 4414 (fax) 800 746 4866

China:

(tel) 800 810 0189 (fax) 800 820 2816

Europe:

(tel) 31 20 547 2111

Japan:

(tel) (81) 426 56 7832 (fax) (81) 426 56

7840

Korea:

(tel) (080) 769 0800 (fax) (080) 769 0900

Latin America:

(tel) (305) 269 7500

Taiwan:

(tel) 0800 047 866 (fax) 0800 286 331

Other Asia Pacific Countries:

(tel) (65) 6375 8100 (fax) (65) 6755 0042

Or visit Agilent worldwide web at:

www.agilent.com/find/assist

Product specifications and descriptions in this document subject to change without notice. Always refer to the Agilent Web site for the latest revision.

© Agilent Technologies, Inc. 2008–2013

Seventh Edition, August 2, 2013

U2761-90010



Agilent Technologies