
Quick Guide

Vaisala HUMICAP® Humidity Module HMM100

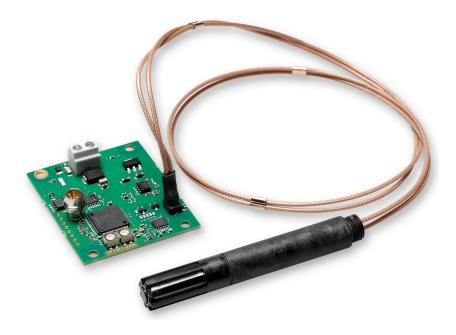

General

The HMM100 series humidity measurement modules are open frame modules intended for integration into environmental chambers. The modules provide a single analog output channel for relative humidity (RH) or dewpoint (T_d). See Technical Data (page 3) for more information.



All HMM100 series modules include automatic temperature compensation across the operating temperature range. No external temperature compensation should be applied to the output.

The measurement probe with cable is attached to the component board at Vaisala. Do not disconnect and reconnect the cable.

Installation

When selecting the mounting location for the probe, note the following:

- The probe should be entirely in the measurement environment, with sufficient distance to the outer walls of the chamber or duct. Air should flow freely around the probe.
- The probe location should represent well the environmental or process conditions, and it should be as clean as possible.
- 1. Attach the module securely using the mounting holes on the corners of the component board. Use the optional mounting bracket if needed. Be sure to provide an earth connection from the plated mounting hole. See Figure 1 (page 2). Refer to the *HMM100 User Guide* (M211024EN) for Vaisala order codes of accessories.



PUBLISHED BY Vaisala Oyj Vanha Nurmijärventie 21 FI-01670 Vantaa, Finland © Vaisala Oyj 2019 All rights reserved. Any logos and/or product names are trademarks of Vaisala or its individual partners. Any reproduction, transfer, distribution or storage of information contained in this document is strictly prohibited. All specifications — technical included — are subject to change without notice.



- 2. Install the probe in the location. Use the optional probe mounting flange ¹⁾ or mounting clamp ²⁾ if needed. Insert enough cable to the same space with the probe to prevent heat conduction, and to allow the probe to be moved when calibrating.
- 3. Connect the wires to the screw terminals:
 - 2-wire output: see Figure 2 (page 2). Provide a 24 VDC supply voltage.
 - 3-wire output: see Figure 3 (page 2). Provide the required supply voltage according to the output type:
 - 10 ... 35 VDC or 24 VAC ±20 % for 0 ... 20 mA, 0 ... 1 V/5 V, and 1 ... 5 V
 - 15 ... 35 VDC or 24 VAC ±20 % for 0 ... 10 V
- 4. Verify the installation: power up the module and check the output reading.

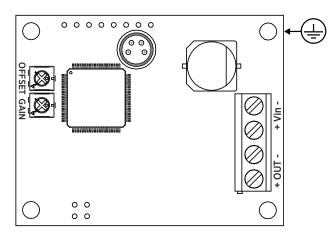


Figure 1 Component Board (3-wire Version)

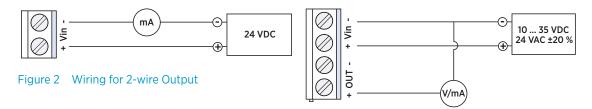


Figure 3 Wiring for 3-wire Output

When using the 3-wire output module, you may also connect a fourth wire to the **Out** - terminal. It is internally connected to the **Vin** - terminal. This will help reduce electrical interference, especially when using the $0 \dots 1 V$ output.

Adjustment Using Trimmers

HMM100 series modules have two trimmers mounted on the component board. These trimmers allow for easy adjustment of the **offset** and **gain** of the humidity measurement. The modules are shipped with the trimmers centered.

Turning the trimmer counter-clockwise will decrease the offset or gain, and turning clockwise will increase it. The adjustment range is ± 5 % for both offset and gain.

Offset correction requires a < 50 %RH reference. Offset and gain correction requires additionally a > 50 %RH reference, with over 30 %RH difference between the two points.

¹⁾ Installation using mounting flange is recommended for the 400-mm-long probe option only. With the shorter, standard-length probe, this installation method increases the risk of heat conduction.

²⁾ Use 2 mounting clamps for stability when installing the 400-mm-long probe.

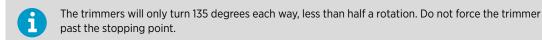




Figure 4 Trimmers for Offset and Gain


The procedure below provides an example adjustment of offset and gain using the saturated salt calibrator HMK15. It is assumed that the module is powered and you can measure the output reading.

- > 1. Note the current position of the trimmers.
 - 2. Insert the probe in the LiCl salt chamber of the humidity calibrator (11 %RH), and wait for 20 40 minutes for the reading to stabilize.
 - 3. If necessary, adjust the **offset trimmer** using a small Phillips-head screwdriver to achieve the output reading that corresponds to 11 %RH.
 - For 4 ... 20 mA output, the reading should be 5.76 mA
 - For 0 ... 5 V output, the reading should be 0.55 V
 - 4. Insert the probe in the NaCl salt chamber (75 %RH) and wait for the reading to stabilize.
 - 5. If necessary, adjust the gain trimmer to achieve the output reading that corresponds to 75 %RH.
 - For 4 ... 20 mA output, the reading should be 16 mA
 - For 0 ... 5 V output, the reading should be 3.75 V
 - 6. Optional: repeat step 2 step 4 to check the adjustment result. If you want to undo the adjustment, return the trimmers to their original position.

Technical Data

Property	Description/Value	
Measured Parameters and Measurement Range		
Relative humidity Dew point	0 100 %RH -20 +100 °C (-4 +212 °F) T _d	
Accuracy (Including Non-Linearity, Hysteresis, and Repeatability)		
at −20 +40 °C (−4 +104 °F)	±2 %RH (0 90 %RH) ±3 %RH (90 100 %RH)	
at -4020 °C, +40 +180 °C (-404 °F, +104 +356 °F)	±2.5 %RH (0 90 %RH) ±3.5 %RH (90 100 %RH)	
Humidity Sensor Types	HUMICAP® 180R HUMICAP® 180	
Analog Output Types (1 Output Selectable)		
2-wire model 3-wire model	4 20 mA (loop-powered) 0 20 mA, 0 1/5/10 V, 1 5 V	

Property	Description/Value
Supply Voltage	
2-wire model	24 VDC
3-wire model (0 20 mA, 0 1 V/5 V, and 1 5 V)	10 35 VDC or 24 VAC ±20 %
3-wire model (0 10 V)	15 35 VDC or 24 VAC ±20 %
Input Current	6 mA
Connections	
Screw terminals	0.5 1.5 mm ²
Service cable connector	M8 4-pin male
Probe Types and Cable Lengths	·
Stainless steel probe	0.6/1.55/2.9 m (2/5.1/9.5 ft)
Plastic probe (standard body)	0.6/1.55/2.9 m (2/5.1/9.5 ft)
Plastic probe (extended 400-mm (16-in) body)	1.55 m (5.1 ft)
Operating Temperature	
Component board	-5 +55 °C (+23 +131 °F)
Stainless steel probe and plastic probe (standard body)	-70 +180 °C (-94 +356 °F)
Plastic probe (extended 400-mm (16-in) body)	-70 +120 °C (-94 +248 °F)
Plastic grid filter and membrane filter	-20 +80 °C (-4 +176 °F)
Porous PTFE filter, stainless steel sintered filter, and PPS plastic grid with stainless steel net filter	−70 +180 °C (−94 +356 °F)

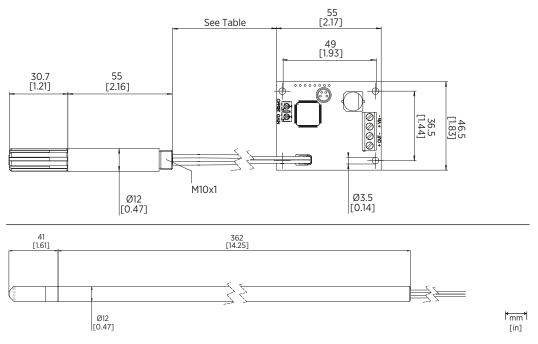



Download the complete HMM100 User Guide from www.vaisala.com/hmm100