

Features

General Description

The MAX1567 evaluation kit (EV kit) is a fully assembled and tested printed-circuit board (PCB) that accepts 2.8V to 4.2V input voltages and provides all the output voltages required for a typical digital still camera. The outputs consist of the main step-down output (3.3V), a stepdown output (1.8V), a general-purpose 5V output, outputs for driving white LED backlighting, and outputs for charge-coupled device (CCD) and LCD bias. The EV kit comes with the MAX1567 installed, but can also be used to evaluate the MAX1566. For applications with a lower battery voltage, such as 2-AA battery applications, another version of the EV kit is available with the main output configured as a step-up converter (MAX1567SUMEVKIT).

- Up to 95% Efficient
- ♦ 2.8V to 4.2V Input-Voltage Range
- Main Step-Down Output, 3.3V
- Step-Down Output, 1.8V
- 5V General-Purpose Output
- CCD and LCD Bias Outputs (+15V/-7.5V)
- Current-Regulated Output with Overvoltage Protection for White LED Backlighting
- 1µA Shutdown Mode
- Fully Assembled and Tested

Ordering Information

| MAX1567EVKIT+ 0°C to +70°C* 40 Thin QFN (6mm x 6mm) | PART | TEMP RANGE | IC PACKAGE |
|--|---------------|---------------|------------|
| | MAX1567EVKIT+ | 0°C to +70°C* | |

+Denotes a lead-tree and RoHS-compliant EV Kit. *This limited temperature range applies to the EV kit PCB only. The MAX1567 IC temperature range is -40°C to +85°C.

Component List

| DESCRIPTION | | DESIGNATION | QTY | DESCRIPTION |
|--|--|---------------|-----|---|
| 1μF ±10%, 25V X7R ceramic capacitors (1206) TDK C3216X7R1E105K Taiyo Yuden TMK316BJ105KL or equivalent | | C6, C9 | 2 | 0.01µF ±10%, 25V X7R ceramic capacitors (0402) TDK C1005X7R1E103K Taiyo Yuden TMK105BJ103KV or equivalent |
| 0.1µF ±10%, 16V X7R ceramic capacitor (0603) TDK C1608X7R1C104K Taiyo Yuden EMK107BJ104KA or equivalent | | C8 | 1 | 2200pF ±10%, 50V X7R ceramic capacitor (0402) TDK C1005X7R1H222K Taiyo Yuden UMK105BJ222KV or equivalent |
| 100pF ±5%, 50V C0G ceramic capacitor (0603) TDK C1608C0G1H101J or equivalent | | C10 | 1 | 47µF ±20%, 6.3V X5R ceramic capacitor (1812) Taiyo Yuden JMK432BJ476MM or equivalent |
| 6800pF ±10%, 25V X7R ceramic capacitor (0402) TDK C1005X7R1E682K Taiyo Yuden TMK105BJ682KV or equivalent | | C11 | 0 | Not installed, capacitor (0805) |
| | | C12, C14 | 2 | 22µF ±20%, 6.3V X5R ceramic capacitors (1210) Taiyo Yuden JMK325BJ226MM |
| 3300pF ±10%, 50V X7R ceramic capacitors (0402) | | | | TDK C3225X5R0J226M |
| TDK C1005X7R1H332K Taiyo Yuden UMK105BJ332KV or equivalent | | C13, C15, C16 | 3 | 10μF ±20%, 6.3V X5R ceramic capacitors (0805) Taiyo Yuden JMK212BJ106MG TDK C2012X5R0J106M or equivalent |

| ///XI// | |
|---------|--|
| | Taiyo Yuden UMK105BJ332h equivalent |

DESIGNATION QTY

2

1

1

1

2

C1, C18

C2

C3

C4

C5. C7

Maxim Integrated Products 1

For pricing, delivery, and ordering information, please contact Maxim/Dallas Direct! at 1-888-629-4642, or visit Maxim's website at www.maxim-ic.com.

| DESIGNATION | QTY | DESCRIPTION |
|-------------------------------|-----|---|
| C17 | 1 | 4.7μF ±20%, 10V X5R ceramic capacitor (0805) TDK C2012X5R1A475M or equivalent |
| C19 | 0 | Not installed, ceramic capacitor |
| C20 | 0 | Not installed, ceramic capacitor |
| D1, D6, D7, D10 | 4 | Schottky diodes, 20V, 500mA (SOD-123) Central CMHSH5-2L |
| D2-D5 | 4 | White LEDs Nichia NSCW215 |
| D8, D9 | 0 | Not installed, diodes (SOD-123) |
| D11 | 1 | Schottky diode, 2A, 30V (SMA) Nihon EC21QS03L |
| JU1–JU6 | 6 | 3-pin headers |
| JU7, JU9, JU10, JU13, JU15 | 0 | Not installed, jumpers cut here—short |
| JU8, JU11, JU12, JU14 | 0 | Not installed, jumpers cut here—open |
| L1, L2 | 2 | 4.7µH inductors Sumida CDRH2D18-4R7NC |
| L3 | 1 | 22µH inductor TOKO #A921CY-220M (D63LCB family) |
| L4 | 1 | 10µH inductor Sumida CDRH8D28NP-100NC |
| L5 | 1 | 10µH inductor Sumida CDRH5D28NP-100NC |
| L6 | 1 | 22µH inductor Sumida CDRH5D28NP-220NC |
| L7 | 0 | Not installed, inductor |

Component List (continued)

| DESIGNATION | QTY | DESCRIPTION |
|--------------------------------|-----|--|
| N1, N2 | 2 | n-channel MOSFETs (SOT23) Fairchild FDN361AN_NL |
| N3 | 0 | Not installed, n-channel MOSFET (SOT23) |
| P1 | 1 | p-channel MOSFET (SOT23) Fairchild FDN360P_NL |
| R1 | 1 | $1.1M\Omega \pm 5\%$ resistor (0603) |
| R2, R12, R14, R16, R18, R20 | 6 | 90.9k Ω ±1% resistors (0603) |
| R3 | 1 | $10\Omega \pm 5\%$ resistor (0603) |
| R4, R5 | 2 | 51k Ω ±5% resistors (0603) |
| R6 | 1 | 33 k Ω \pm 5% resistor (0603) |
| R7 | 1 | 22k Ω ±5% resistor (0603) |
| R8 | 1 | 60.4k Ω ±1% resistor (0603) |
| R9, R22, R23 | 3 | 100k Ω ±5% resistors (0603) |
| R10 | 1 | 16.2k Ω ±5% resistor (0603) |
| R11, R21 | 2 | $1M\Omega \pm 1\%$ resistors (0603) |
| R13 | 1 | 549k Ω ±1% resistor (0603) |
| R15 | 1 | 274k Ω ±1% resistor (0603) |
| R17 | 1 | 150k Ω ±1% resistor (0603) |
| R19 | 1 | 40.2k Ω ±1% resistor (0603) |
| R24-R29 | 0 | Not installed, resistors (1206) |
| R30, R31 | 0 | Not installed, resistors (0603) |
| T1 | 0 | Not installed, transformer |
| U1 | 1 | MAX1567ETL+ (40-pin thin QFN 6mm x 6mm) |
| _ | 6 | Shunts, 2 position |
| | 1 | PCB: MAX1567 Evaluation Kit+ |

Component Suppliers

| SUPPLIER | PHONE | WEBSITE |
|---------------------|--------------|-----------------------|
| Panasonic Corp. | 800-344-2112 | www.panasonic.com |
| Sumida Corp. | 847-545-6700 | www.sumida.com |
| Taiyo Yuden | 800-348-2496 | www.t-yuden.com |
| TDK Corp. | 847-803-6100 | www.component.tdk.com |
| ТОКО | 847-297-0070 | www.toko.com |
| Vishay 402-564-3131 | | www.vishay.com |

Note: Indicate that you are using the MAX1567 when contacting these component suppliers.

| Central Semiconductor | 631-435-1110 | www.centralsemi.com |
|----------------------------|--------------|-----------------------|
| Fairchild Semiconductor | 888-522-5372 | www.fairchildsemi.com |
| International Rectifier | 310-322-3331 | www.irf.com |
| Kamaya, Inc. | 260-489-1533 | www.kamaya.com |
| Murata Mfg. Co., Ltd. | 770-436-1300 | www.murata.com |

WEBSITE

PHONE



SUPPLIER

Evaluates: MAX1566/MAX1567

MAX1567 Evaluation Kit

_Quick Start

Recommended Equipment

- Power supply capable of supplying 2.8V to 4.2V at 2A
- Voltmeter
- Load resistors or electronic loads

Procedure

The MAX1567 EV Kit is fully assembled and tested. Follow the steps below to verify board operation. **Caution: Do not turn on the power supply until all connections are completed.**

- 1) Preset the power supply to between 2.8V and 4.2V.
- 2) Turn off the power supply.
- Connect the power-supply positive lead to the pad on the EV kit board labeled BATT.
- 4) Connect the power-supply ground lead to the pad on the EV kit board labeled GND.
- 5) Connect loads from the outputs VM, VSD, OUT1A, and OUT2 to GND. See Table 1 for maximum load currents.
- 6) Short pins 2-3 of JU1 to enable VSU.
- 7) Short pins 1-2 of JU2–JU6 to disable all other outputs.
- 8) Turn on the power supply.
- 9) Verify the VSU voltage (5V) using a voltmeter.
- 10) If desired, connect a load from VSU to GND.
- 11) To verify other outputs, move jumpers JU2–JU6 to short pins 2-3 to enable corresponding outputs, and verify the output voltage with a voltmeter (Table 1).

Detailed Description

Step-Up Output (VSU)

The main step-up output (VSU) powers the internal circuitry of the MAX1567 and must reach its regulation voltage (5V) before any other output can turn on. To enable VSU, short pins 2-3 of jumper JU1. When jumper JU1 is on pins 1-2, all outputs shut down and the IC is in low-current shutdown mode.

Short-Circuit Flag (SCF)

SCF is an open-drain output that is high impedance when overload protection occurs. Under normal operation SCF pulls low. In the default configuration, there is a 100k Ω pullup resistor (R23) from SCF to the input of the main converter.

Table 1. Output Voltages and Maximum Currents

| Ουτρυτ | VOLTAGE (V) | MAXIMUM CURRENT (mA) |
|-----------------------|--------------------|----------------------|
| VSU | 5 | 500 (Note 1) |
| VM | 3.3 | 600 |
| VSD | 1.8 | 350 |
| OUT1A | 15 | 40 |
| OUT2 | -7.5 | -80 |
| LEDOUT+ to LEDOUT- | 16 max (Note 2) | 20 |

Note 1: If VSU and VM are operating, subtract about 70% of the VM load current from the maximum load capability of VSU. **Note 2:** The LED outputs are current regulated to 20mA with overvoltage protection set to 16V.

Main Step-Down Output (VM)

The main step-down output is set to 3.3V. To enable VM, short pins 2-3 of jumper JU2. To shut down VM, short pins 1-2 of JU2.

Step-Down Output (VSD)

The step-down output (VSD) is set to 1.8V. To enable VSD, short pins 2-3 of jumper JU3. To shut down OUTSD, short pins 1-2 of JU3.

Step-Down OK (SDOK)

The step-down OK output (SDOK) is an open-drain output that is pulled low when the step-down converter has completed soft-start. For more details on SDOK, refer to the MAX1566/MAX1567 IC data sheet.

Auxiliary Output 1 OK (AUX1OK)

AUX10K is an open-drain output that goes low when OUT1 has successfully completed soft-start. AUX10K goes high impedance in shutdown, overload, and thermal limit.

CCD/LCD Bias Outputs (OUT1A, OUT1B)

The output OUT1A provides a regulated +15V output. To enable OUT1A, short pins 2-3 of JU5. To turn off OUT1A, short pins 1-2 of JU5. In the standard configuration, OUT1A and OUT2 provide the +15V and -7.5V bias voltages for CCD and LCD. OUT1B is not used in the standard configuration of the EV kit.

Outputs OUT1A and OUT1B can be configured to use a flyback transformer to provide both the +15V (OUT1A) and -7.5V (OUT1B) necessary for CCD and LCD bias. This is useful when using the MAX1566 where OUT2 is configured as a boost converter. See the *Flyback Transformer Configuration for OUT1A/OUT1B* section.



Inverter Output (OUT2)

OUT2 is a regulated -7.5V output. To enable OUT2, connect pins 2-3 of jumper JU6. To shut down OUT2, connect pins 1-2 of JU6.

OUT2 can also be configured as a boost output when evaluating the MAX1566. See the *Evaluating the MAX1566* section.

LED Outputs (OUT3+, OUT3-)

Outputs OUT3+ and OUT3- are for driving a series of white LEDs for backlighting. The EV kit comes with four surface-mount white LEDs installed and is configured to drive the LEDs at a regulated 20mA. To protect against an open LED string, the overvoltage protection sets the maximum output voltage to 16V.

To evaluate with fewer than four LEDs, short the pads of the unused LEDs. To use LEDs other than the ones mounted on the board, break the string by removing one of the LEDs on the board, then connect a series array consisting of two to six white LEDs in series to the OUT3+ and OUT3- outputs. The anode side of the array connects to OUT3+ and the cathode side connects to OUT3-. To enable the LED outputs, short pins 2-3 of JU4. To turn the LED outputs off, short pins 1-2 of JU4. To adjust the LED brightness or overvoltage protection, see the *Adjusting the LED Brightness* section.

Customizing the MAX1567 Evaluation Kit

Adjusting the Step-Up Output (VSU)

The step-up output (VSU) is adjustable from 2.7V to 5.5V using the following procedure:

- 1) Select a value for R16 between $10k\Omega$ and $100k\Omega$.
- 2) Solve for R15 using:

| JUMPER | SHORT PINS 1-2 | SHORT PINS 2-3 |
|--------|---------------------------|----------------|
| JU1 | All outputs are shut down | VSU enabled |
| JU2 | VM shut down | VM enabled |
| 11.13 | VSD shut down | VSD onabled |

Table 2. Jumper Functions

| | JU1 | All outputs are shut down | VSU enabled |
|---|-----|---------------------------------|-------------------------------|
| | JU2 | VM shut down | VM enabled |
| | JU3 | VSD shut down | VSD enabled |
| | JU4 | LEDs (OUT3+/OUT3-) shut down | LEDs (OUT3+/OUT3-) enabled |
| ſ | JU5 | OUT1 shut down | OUT1 enabled |
| | JU6 | OUT2 shut down | OUT2 enabled |
| | | | |

$$R15 = R16 \times \left(\frac{V_{VSU}}{1.25V} - 1\right)$$

3) Install resistors R15 and R16.

Note that if the input voltage is greater than what VSU is set to, then VSU will rise above its regulation voltage.

Configuring the Main Step-Down Output (VM)

The input to the main step-down converter is connected to VSU by default. To change this connection to BATT, cut the trace shorting JU15 and short JU14.

The main step-down output (VM) is adjustable from 1.25V to VSU using the following procedure:

- 1) Select a value for R18 between $10k\Omega$ and $100k\Omega$.
- 2) Solve for R17 using:

$$R17 = R18 \times \left(\frac{V_{VM}}{1.25V} - 1\right)$$

3) Install resistors R17 and R18.

| JUMPER | DEFAULT | FUNCTION | |
|--------|---------|---|--|
| JU7 | SHORT | Selects the input power for the OUT2 converter. Short only one of these jumpers. Short JU7 | |
| JU8 | OPEN | to connect the OUT2 input power to BATT, or short JU8 to connect to VSU. | |
| JU9 | SHORT | Connects the ground planes together. This must remain shorted for proper circuit operation. | |
| JU10 | SHORT | Selects the input power for the step-down converter. Short only one of these jumpers. Short | |
| JU11 | OPEN | JU10 to connect the step-down input power to BATT, short JU11 for VSU, or short JU12 | |
| JU12 | OPEN | for VM. | |
| JU13 | SHORT | Selects topology for OUT1A/OUT1B. Short for OUT1A step-up, or open for OUT1A/OUT1B transformer flyback. | |
| JU14 | OPEN | Selects the input power for the main step-down converter. Short only one of these jumpers. | |
| JU15 | SHORT | Short JU14 to connect the input of VM to BATT, or short JU15 for VSU. | |

Table 3. PCB Jumper Functions



Configuring the Step-Down Output (VSD)

The input to the step-down converter (PVSD) on the EV kit comes connected to BATT, but the connection can be changed to either VM or VSU. To use VM as the input to the step-down converter, cut the trace shorting JU10 and short the pads of JU12. To use VSU as the input to the step-down converter, cut the trace shorting JU10, and short the pads of JU11. Make sure one and only one of JU10, JU11, and JU12 is shorted.

The step-down output voltage (VSD) is adjustable from 1.25V to V_{BATT} using the following procedure:

- 1) Select a value for R20 between $10k\Omega$ and $100k\Omega$.
- 2) Solve for R19 using:

$$R19 = R20 \times \left(\frac{V_{VSD}}{1.25V} - 1\right)$$

3) Install resistors R19 and R20.

Adjusting the OUT1A Voltage

OUT1A can be set to a voltage above 1.25V. The upper limit depends on the ratings of the external components. Note that if the input voltage is greater than what OUT1A is set to, then OUT1A will rise above its regulation voltage. Use the following procedure to set V_{OUT1A}:

- 1) Select a value for R12 between $10k\Omega$ and $100k\Omega$.
- 2) Solve for R11 using:

$$R11 = R12 \times \left(\frac{V_{OUT1A}}{1.25V} - 1\right)$$

3) Install resistors R11 and R12.

Configuring the Inverting Output (OUT2)

The input to the inverter is normally connected to BATT. To change this connection to VSU, cut the trace shorting JU7 and short the pads of JU8. Note that the lower limit of inverter operation, when powered from BATT, depends on the external p-channel MOSFET threshold voltage.

To adjust the OUT2 voltage, use the following procedure:

- 1) Select a value for R13 between $10k\Omega$ and $100k\Omega$.
- 2) Solve for R14 using:

$$R13 = R14 \times \left(-\frac{V_{OUT2}}{1.25V}\right)$$

3) Install resistors R13 and R14.

Adjusting the LED Brightness

Resistor R3 sets the regulation current of the LEDs as follows:

$$R3 = \frac{0.2V}{I_{LED}}$$

The overvoltage-protection threshold for the LEDs is also adjustable. To ensure the LEDs are current regulated, this threshold (V_{OVP}) must be set higher than the maximum forward-voltage drop of the LED string. V_{OVP} should be set lower than the maximum voltage ratings of the capacitor, diode, and MOSFET (C1, D1, and N1) used in the LED driver circuit. Use the following procedure to set the overvoltage protection:

- 1) Select a value for R1 between $10k\Omega$ and $100k\Omega$.
- 2) Solve for R2 using:

$$R1 = R2 \times \left(\frac{V_{OVP}}{1.25V} - 1\right)$$

3) Install resistors R1 and R2.

Changing the Switching Frequency The switching frequency of the MAX1567 is adjustable.

Typically, frequencies from 400kHz to 500kHz provide a good compromise between efficiency and component size. To change the frequency, replace C3 and R4. Refer to the MAX1566/MAX1567 IC data sheet for information on selecting values for these components.

Evaluating the MAX1566

To evaluate the MAX1566, first carefully remove U1 and replace it with the MAX1566. Free samples of the MAX1566 can be obtained from Maxim. The MAX1566 requires that OUT2 be configured as a boost converter.

Configuring OUT2 as a Boost Converter

To configure OUT2 as a boost converter, remove components C17, R13, R14, D7, and P1. Then add components C19, R30, R31, D8, L7, and N3. Refer to the MAX1566/MAX1567 IC data sheet for information on component selection. Table 4 shows typical components for generating +15V at up to 20mA.

Flyback Transformer Configuration for OUT1A/OUT1B

OUT1 can be configured to provide two outputs using a transformer. This is usually done to generate CCD/LCD bias when using the MAX1566. To use a transformer, remove L2 and cut the trace shorting JU13. Install the transformer on the footprint (T1) that overlaps L2 and JU13. Refer to the MAX1566/MAX1567 IC data sheet for details on component selection. Table 5 shows typical components for generating +15V and -7.5V.

Table 4. Typical Components for OUT2Boost Circuit

| DESIGNATION | QTY | DESCRIPTION | | |
|-------------|-----|---|--|--|
| C19 | 1 | 1μF ±10%, 25V X7R ceramic capacitor (0805) TDK C2012X7R1E105K | | |
| R30 | 1 | $1M\Omega \pm 1\%$ resistor (0603) | | |
| R31 | 1 | 90.9k Ω ±1% resistor (0603) | | |
| L7 | 1 | 1.5µH inductor Sumida CDRH3D16-1R5 | | |
| D8 | 1 | Schottky diode, 40V, 500mA (SOD-123) Central CMHSH5-4 | | |
| N3 | 1 | n-channel MOSFET (SOT23) Fairchild FDN337N | | |
| | | | | |

Table 5. Typical Components forOUT1A/OUT1B Transformer Circuit

| DESIGNATION | QTY | DESCRIPTION |
|-------------|-----|--|
| C18, C20 | 2 | 1µF ±10%, 25V X7R ceramic capacitors (1206) TDK C3216X7R1E105K |
| R11 | 1 | $1M\Omega \pm 1\%$ resistor (0603) |
| R12 | 1 | 90.9k Ω ±1% resistor (0603) |
| T1 | 1 | Transformer TDK LDT565630T-MX1 |
| D6 | 1 | Schottky diode, 40V, 500mA (SOD-123) Central CMHSH5-4 |
| D9 | 1 | Schottky diode, 20V, 500mA (SOD-123) Central CMHSH5-2L |
| N2 | 1 | n-channel MOSFET (SOT23) Fairchild FDN337N |

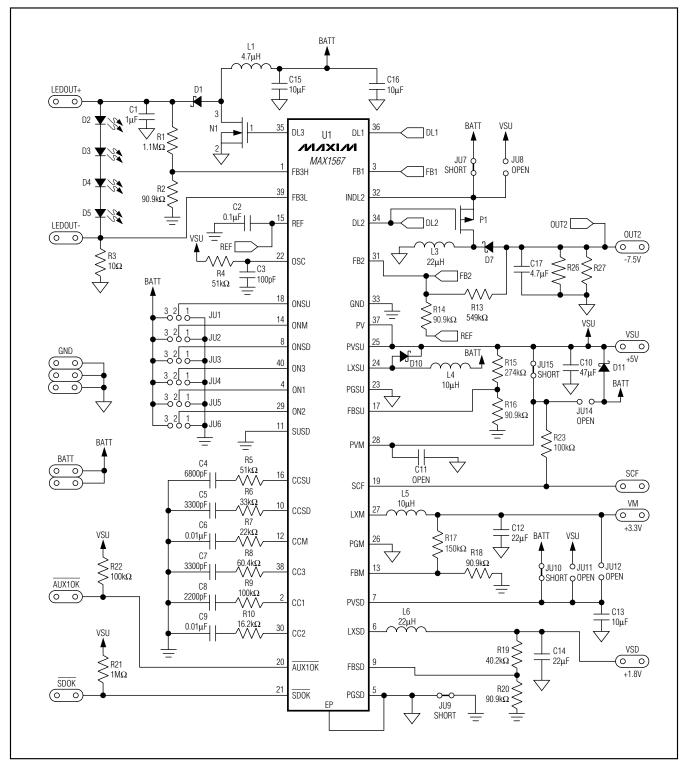


Figure 1a. MAX1567 EV Kit Schematic (Sheet 1 of 2)

M/XI/M

Evaluates: MAX1566/MAX1567

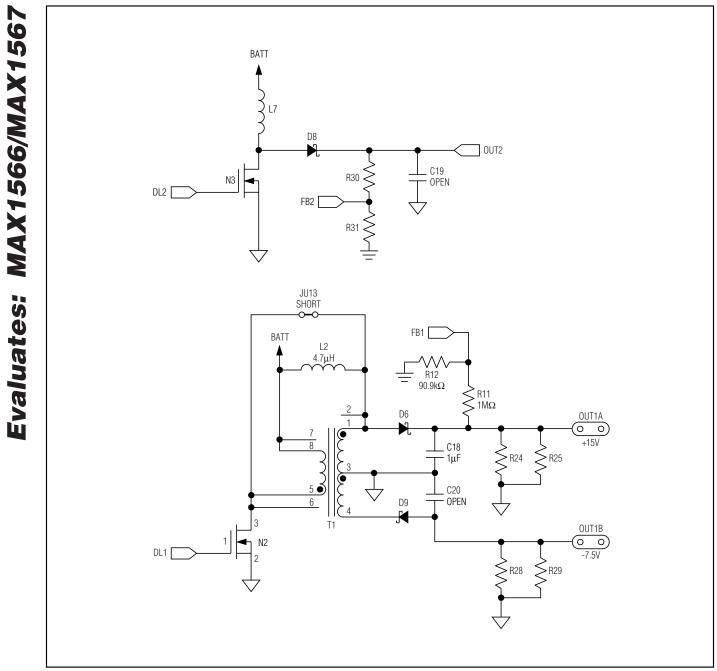


Figure 1b. MAX1567 EV Kit Schematic (Sheet 2 of 2)

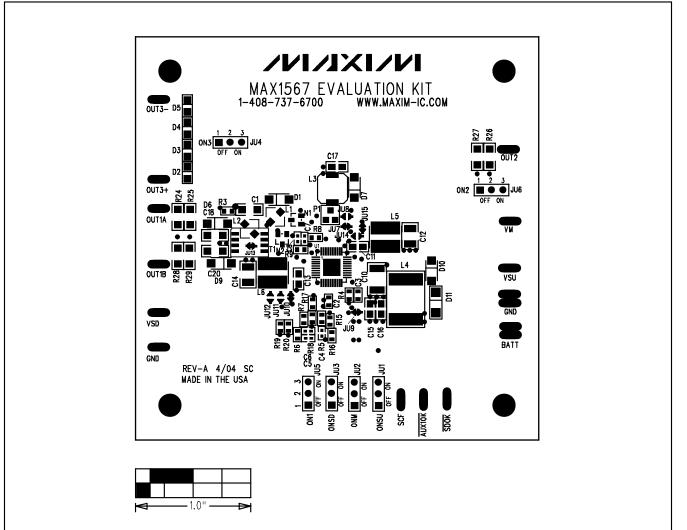


Figure 2. MAX1567 EV Kit Component Placement—Component Side

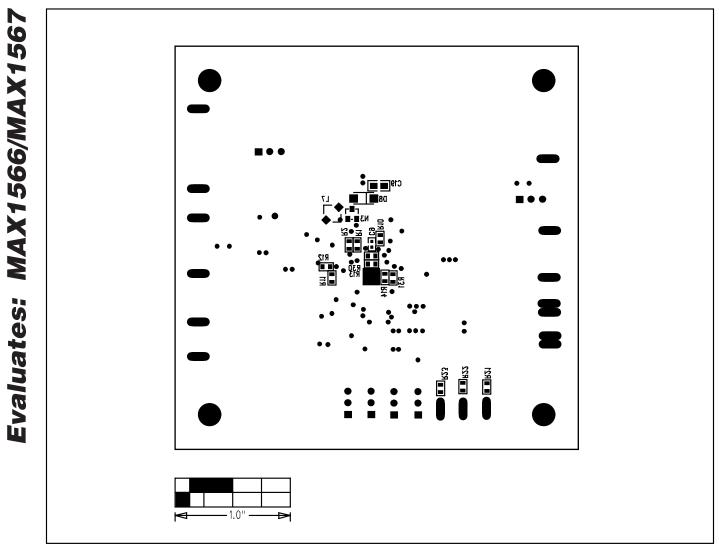


Figure 3. MAX1567 EV Kit Component Placement—Solder Side

10

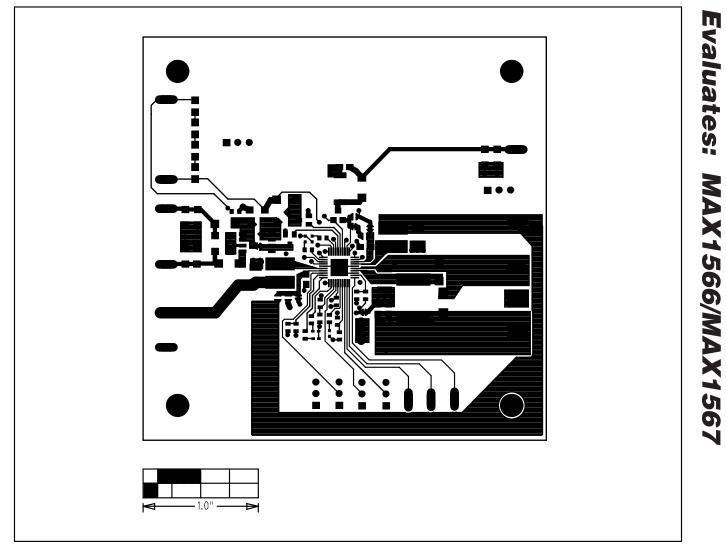


Figure 4. MAX1567 EV Kit PCB Layout—Component Side

11

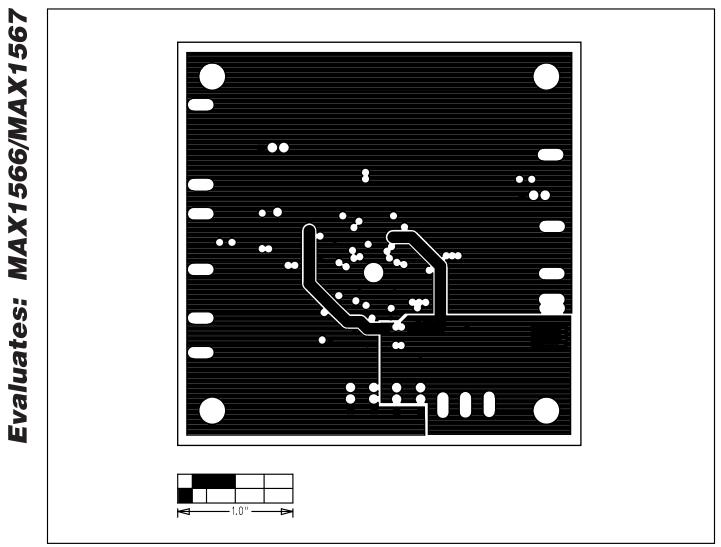


Figure 5. MAX1567 EV Kit PCB Layout—Inner Layer 2

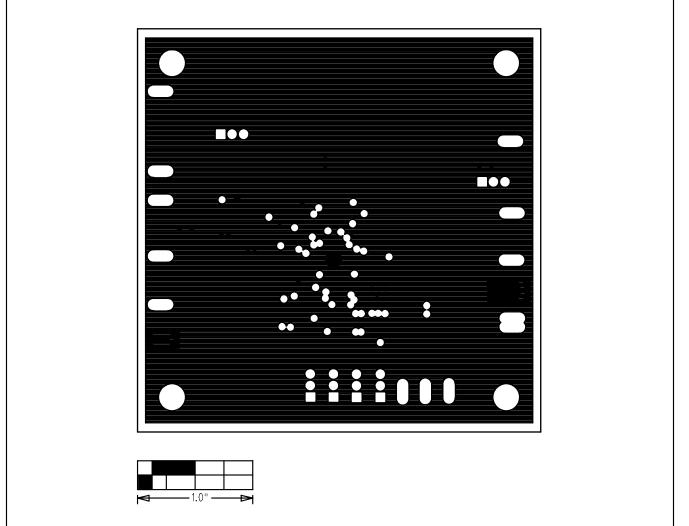


Figure 6. MAX1567 EV Kit PCB Layout—Inner Layer 3

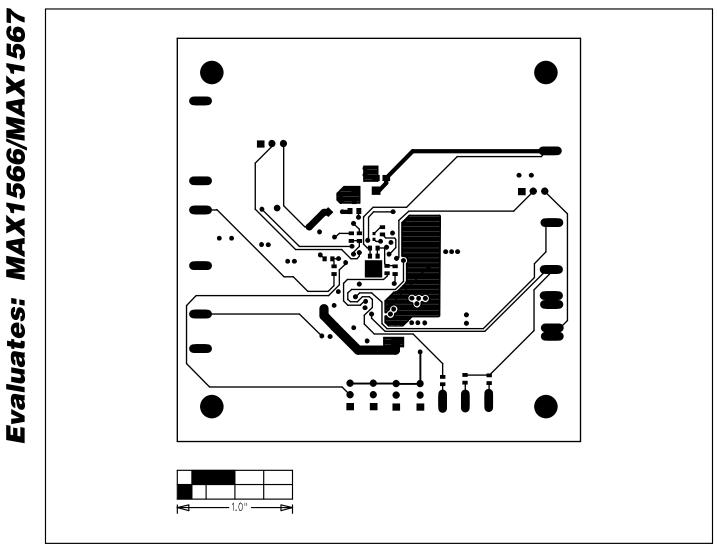


Figure 7. MAX1567 EV Kit PCB Layout—Solder Side

Pages changed at Rev 1: 1–14

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 408-737-7600

14

© 2007 Maxim Integrated Products

is a registered trademark of Maxim Integrated Products, Inc.

Revision History