Keysight Technologies E6966B IMS-SIP Network Emulator

Technical Overview

Conference	Call Participant Info				
	URI		Contact Address	Call-ID	Call-State
<sip:clienta@test< th=""><th>.3gpp.com></th><th><sip:clienta@192.168< th=""><th>.26.1:5080,transport=tcp></th><th>WBDQVQbxXv-QmT2JVftAXw</th><th>Active</th></sip:clienta@192.168<></th></sip:clienta@test<>	.3gpp.com>	<sip:clienta@192.168< th=""><th>.26.1:5080,transport=tcp></th><th>WBDQVQbxXv-QmT2JVftAXw</th><th>Active</th></sip:clienta@192.168<>	.26.1:5080,transport=tcp>	WBDQVQbxXv-QmT2JVftAXw	Active
<sip:clientb@test.3< th=""><th>gpp.com></th><th><sip:clientb@192.168< th=""><th>.26.1:5081;transport=tcp></th><th>ZyUgiiJ0ELBd8kGaN5QgJg</th><th>Active</th></sip:clientb@192.168<></th></sip:clientb@test.3<>	gpp.com>	<sip:clientb@192.168< th=""><th>.26.1:5081;transport=tcp></th><th>ZyUgiiJ0ELBd8kGaN5QgJg</th><th>Active</th></sip:clientb@192.168<>	.26.1:5081;transport=tcp>	ZyUgiiJ0ELBd8kGaN5QgJg	Active
🔀 😿 🛛	Source		Destination	Method	
_	Source sip:ClientA@test.3gpp		Destination IMS-SIP Conference Server	Method INVITE	
Time 0.000 0.001	Source sip:ClientA@test.3gpp IMS-SIP Conference	Server	IMS-SIP Conference Server sip:ClientA@test.3gpp.com	INVITE 100 Trying	9 [INVITE]
Time 0.000 0.001 0.032	Source sip:ClientA@test.3gpp IMS-SIP Conference IMS-SIP Conference	Server Server	IMS-SIP Conference Server sip:ClientA@test.3gpp.com sip:ClientA@test.3gpp.com	INVITE 100 Trying 180 Ringi	ng [INVITE]
Time 0.000 0.001 0.032 0.112	Source sip:ClientA@test.3gpp IMS-SIP Conference IMS-SIP Conference IMS-SIP Conference	Server Server Server	IMS-SIP Conference Server sip:ClientA@test.3gpp.com sip:ClientA@test.3gpp.com sip:ClientA@test.3gpp.com	INVITE 100 Trying 180 Ringi 200 OK	ng [INVITE]
Time 0.000 0.001 0.032 0.112 0.144	Source sip.ClentA@test.3gpp IMS-SIP Conference IMS-SIP Conference IMS-SIP Conference sip.ClentA@test.3gpp	Server Server Server 9.com	IMS-SIP Conference Server sip ClientA@test.3gpp.com sip ClientA@test.3gpp.com sip ClientA@test.3gpp.com IMS-SIP Conference Server	INVITE 100 Trying 180 Ringi 200 OK ACK	ng [INVITE]
Time 0.000 0.001 0.032 0.112 0.144 1.684	Source sp. Client A@test 3gpp IMS-SIP Conference IMS-SIP Conference IMS-SIP Conference sp. Client A@test 3gpp sp. Client B@test 3gpp	Server Server Server 0.com	MS-SIP Conference Server sp:ClertA@test.3gpp.com sp:ClertA@test.3gpp.com sp:ClertA@test.3gpp.com MS-SIP Conference Server MS-SIP Conference Server	INVITE 100 Trying 180 Ringi 200 OK ACK INVITE	ng (INVITE) [INVITE]
Time 0.000 0.001 0.032 0.112 0.144 1.684 1.685	Source sp Client A@test 3ppp IMS SIP Conference IMS SIP Conference sp Client A@test 3pp sp Client A@test 3pp IMS SIP Conference	Server Server 5.com 5.com Server	MS-SIP Conference: Server sp:ClertA@test.3gpp.com sp:ClertA@test.3gpp.com sp:ClertA@test.3gpp.com IMS-SIP Conference Server IMS-SIP Conference Server sp:ClertB@test.3gpp.com	INVITE 100 Trying 180 Ringi 200 OK ACK INVITE 100 Trying	ng (INVITE) (INVITE) g (INVITE)
Time 0.000 0.001 0.032 0.112 0.144 1.684 1.685 1.717	Source sp. Clerit A@test 3gpc IMS-SIP Conference IMS-SIP Conference sp. Clerit A@test 3gpc sp. Clerit B@test 3gpc IMS-SIP Conference IMS-SIP Conference	Server Server 5.com 5.com Server Server	MS-SIP Conference: Server sip Client A@test: 3gpp.com sip Client A@test: 3gpp.com sip Client A@test: 3gpp.com MS-SIP Conference Server MS-SIP Conference Server sip Client B@test: 3gpp.com sip Client B@test: 3gpp.com	INVITE 100 Trying 180 Ringi 200 OK ACK INVITE 100 Trying 180 Ringi	ng (INVITE) (INVITE) g (INVITE) ng (INVITE)
Time 0.000 0.001	Source sp Client A@test 3ppp IMS SIP Conference IMS SIP Conference sp Client A@test 3pp sp Client A@test 3pp IMS SIP Conference	Server Server So.com Server Server Server	MS-SIP Conference: Server sp:ClertA@test.3gpp.com sp:ClertA@test.3gpp.com ip:ClertA@test.3gpp.com IMS-SIP Conference Server IMS-SIP Conference Server sp:ClertB@test.3gpp.com	INVITE 100 Trying 180 Ringi 200 OK ACK INVITE 100 Trying	ng (INVITE) (INVITE) g (INVITE) ng (INVITE)



Accelerate performance testing of cellular user equipment in an all-IP IMS-SIP environment

Verify cellular UE services over all-IP networks

- UE registration and authentication with IMS-SIP server
- Bi-directional VoIP voice, video, and SMS communication
- Detailed application logging
- Test manually or automate using an API
- Supplementary service support
- IPsec support

Testing the functionality and performance of cellular user equipment (UE) is essential to achieving a good enduser experience. An IP multi-media subsystem (IMS) allows LTE networks to support voice. Session initiated protocol (SIP) provides the call set-up protocol for IMS-based VoLTE. The move to all-IP networks and new protocols necessitates additional requirements for UE designers and demands testing solutions to address the expanded capabilities of the newest generation of UE.

The Keysight Technologies, Inc. E6966B IMS-SIP client and server applications provide a controlled test environment and easy-to-use interfaces to verify performance of UE running multiple applications such as voice, video, and SMS on an IP-based network.

With Keysight's IMS-SIP implementation, you do not have to worry about coding a third party IMS-SIP server into your test plan—Keysight includes a verified and reliable PC-based server and client featuring manual or automated user control.

Meet increasing UE performance demands

Network operators are motivated to ensure that performance of UE on their network results in a positive end-user experience. While signaling conformance test addresses certain aspects of functionality, operators typically want to conduct more representative performance testing under different network conditions. Examples include verifying the UE behaves as expected after a base station signal is lost or when moving between different base stations, and in maintaining an active data connection through InterRAT handovers such as LTE to 3G.

These real-world use scenarios supplement traditional conformance test and are commonly formalized into operator-specific test plans, requiring UE be subjected to demanding compliance testing before being approved for use on an operator's network.

Reduce design and compliance test cycles

Keysight offers a number of test solutions based on demands for functional test. Our measurement knowledge and testing experience is built into a range of test tools, so you can focus on verification testing of your UE rather than having to develop in-house test tools. You can run tests manually or automate them for unattended testing; obtaining reliable, repeatable verification with logged results, and allowing you to progress rapidly to deployment.

Voice traffic on IP networks

Having a VoIP and an IMS-based core network is the goal for the majority of the industry, and migration to this solution is currently underway. As a result of this conversion a number of operators are placing new requirements on the network infrastructure and the UE.

For networks which do not support IMS, alternative technologies are being considered, namely: circuit switched fall back (CSFB)/single radio approach, and simultaneous voice and data LTE (SV-LTE)/dual radio approach.

While these technologies are expedient, they represent an interim step in the migration to VoIP and IMS.

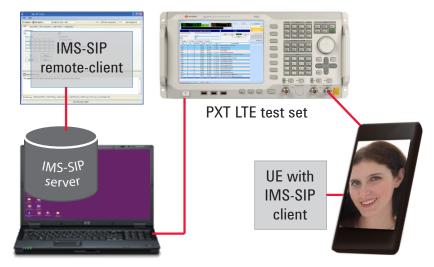


Figure 1. Typical configuration for LTE UE test

Voice, video and SMS over IMS

The E6966B is designed specifically to test UE voice, video, and SMS services operating over an IMS core. It provides full client and server implementation, allowing you to perform end-to-end functional test.

While IMS-SIP is independent of any specific radio access technology, the E6966B IMS-SIP network emulator is intended for use with the Keysight E6621A PXT and E5515C/E 8960 Series 10 wireless communications test sets acting as base station emulators. These test sets provide overthe-air network connection between the UE and the IMS-SIP infrastructure and have the flexibility to emulate a range of different network conditions, enabling UE performance to be verified in a controlled laboratory environment.

Already established in the world of 2G, 3G, and 4G performance and conformance test, these leading PXT and 8960 test sets now support IPv4 and IPv6 addressing and the required security configuration to implement functional test. The PXT includes an emulation of the evolved packet core (EPC)—an all-IP mobile core network required by 3GPP in the standards for LTE.

Keysight IMS-SIP server emulator

The IMS-SIP server responds to requests received from the UE and initiates SIP operations including: re-registration, de-registration, and SIP message transmission. Registration may be with or without authentication.

The server can also be configured for alternative response testing. That is, it can respond in a specific manner that is atypical to a given SMS message received from the UE.

Key server features

- Establishes client-to-client connection
- 3GPP IMS extensions
- IMS AKA, AKAv2, and MD5 authentication
- IPv4 and IPv6 support
- IPsec support
- Supplementary service support
- Multi-party call support
- API for test automation

			Registered Users	
Send a message		Address of Record	Contact Address	Expires (s)
		sip.conferencefactory@test.3gpp.com	sip:conferencefactory@192.168.2	6.1:6000 2147476057
Type: Text/Plain		sip:ClientA@test.3gpp.com	sip:ClientA@192.168.26.1:5080	3560
From binary file	file	sip:ClientB@test.3gpp.com	sip:ClientB@192.168.26.1:5081	3570
Hello World!				
			Subscribers	
		Subscribed To	ibscriber Contact Address	Event Expires (s
Send as hex				
	Send Message			
Send Default 3gpp.s	sms Send Default 3gpp2.sms			
🗙 🕱 🔛				
Time	Source	Destination		Method
0.000	sip:ClientA@test.3gpp.com	IMS-SIP Server		REGISTER
0.001	IMS-SIP Server	sip:ClientA@test.3gpp.co	m	200 OK [REGISTER]
2.890	sip:ClientB@test.3gpp.com	IMS-SIP Server		REGISTER
2.890	IMS-SIP Server	sip:ClientB@test.3gpp.co	m	200 OK [REGISTER]
1.762	sip:ClientA@test.3gpp.com	IMS-SIP Server		INVITE
	IMS-SIP Server	sip:ClientA@test.3gpp.co	m	100 Trying [INVITE]
1.763		sip:clientB@test.3gpp.com	m	INVITE
1.763 1.766	IMS-SIP Server	sp.ciei.co@vesc.3gpp.co		
	IMS-SIP Server sip:clientB@test.3gpp.com	IMS-SIP Server		180 Ringing [INVITE]
1.766				180 Ringing [INVITE] 180 Ringing [INVITE]
1.766 1.797	sip:clientB@test.3gpp.com	IMS-SIP Server		
1.766 1.797 1.797	eip client B/@test.3gpp.com IMS-SIP Server	IMS-SIP Server sip:ClientA@test.3gpp.co	m	180 Ringing [INVITE]
1.766 1.797 1.797 1.975	alp client B@test.3gpp.com IMS-SIP Server elp.client B@test.3gpp.com	IMS-SIP Server sip:ClientA@test.3gpp.co IMS-SIP Server	m	180 Ringing [INVITE] 200 OK [INVITE]
1.766 1.797 1.797 1.975 1.975	ap client B@test 3gpp.com IMS-SIP Server ap client B@test 3gpp.com IMS-SIP Server	IMS-SIP Server sip.ClertA@test.3gpp.co IMS-SIP Server sip.ClertA@test.3gpp.co	m	180 Ringing [INVITE] 200 OK [INVITE] 200 OK [INVITE]
1.766 1.797 1.797 1.975 1.975 5.007	spicilent Biltest 3gap com IMS-SIP Server spicilent Biltest 3gap com IMS-SIP Server spicilent Alltest 3gap com	IMS-SIP Server sp. ClertAffest 3gp co IMS-SIP Server sp. ClertAffest 3gp co IMS-SIP Server	m	180 Ringing (INVITE) 200 OK (INVITE) 200 OK (INVITE) ACK

Figure 2. Keysight IMS-SIP server showing high level messaging

Register	🕄 Unregister	Conference Factory URI:	sip:conferencefactory@t	test.3app.com		C×	1	
		,	, , , , , , , , , , , , , , , , , , , ,	211		••		
Confer	rence Call Pa	rticipant Info						
	UR	1	Contact /	Address	Call-ID		Call-Sta	ate
* <sip:clier< td=""><td>ntA@test.3gpp.con</td><td>۱></td><td><sip:clienta@192.168.26.1:5080,tra< td=""><td>ansport=tcp></td><td>WBDQVQbxXv-QmT2J</td><td>VftAXw</td><td>Active</td><td></td></sip:clienta@192.168.26.1:5080,tra<></td></sip:clier<>	ntA@test.3gpp.con	۱>	<sip:clienta@192.168.26.1:5080,tra< td=""><td>ansport=tcp></td><td>WBDQVQbxXv-QmT2J</td><td>VftAXw</td><td>Active</td><td></td></sip:clienta@192.168.26.1:5080,tra<>	ansport=tcp>	WBDQVQbxXv-QmT2J	VftAXw	Active	
<sip:clienti< td=""><td>B@test.3gpp.com</td><td>></td><td><sip:clientb@192.168.26.1:5081.tra< td=""><td>ansport=tcp></td><td>ZyUgiJ0ELBd8kGaN5</td><td>QgJg</td><td>Active</td><td></td></sip:clientb@192.168.26.1:5081.tra<></td></sip:clienti<>	B@test.3gpp.com	>	<sip:clientb@192.168.26.1:5081.tra< td=""><td>ansport=tcp></td><td>ZyUgiJ0ELBd8kGaN5</td><td>QgJg</td><td>Active</td><td></td></sip:clientb@192.168.26.1:5081.tra<>	ansport=tcp>	ZyUgiJ0ELBd8kGaN5	QgJg	Active	
								_
		•						
				Destruction		Maked		
Time	1 1 00	Source		Destination		Method		
Time 0.000		Source sip:ClientA@test.3gpp.com	1	IMS-SIP Conference Server		INVITE		
Time 0.000 0.001	1 - 00	Source sip:ClientA@test.3gpp.com IMS-SIP Conference Server		IMS-SIP Conference Server sip:ClientA@test.3gpp.com		INVITE 100 Trying [
Time 0.000 0.001 0.032		Source sip:ClientA@test.3gpp.com IMS-SIP Conference Server IMS-SIP Conference Server	2 2 2	IMS-SIP Conference Server		INVITE 100 Trying [180 Ringing	[INVITE	
Time 0.000 0.001 0.032		Source sip:ClientA@test.3gpp.com IMS-SIP Conference Server	ا د د	IMS-SIP Conference Server sip:ClientA@test.3gpp.com		INVITE 100 Trying [[INVITE	
Time 0.000 0.001 0.032 0.112		Source sip:ClientA@test.3gpp.com IMS-SIP Conference Server IMS-SIP Conference Server		IMS-SIP Conference Server sip:ClientA@test.3gpp.com sip:ClientA@test.3gpp.com		INVITE 100 Trying [180 Ringing	[INVITE	
Time 0.000 0.001 0.032 0.112 0.144		Source sp.ClientA@test.3gpp.com IMS-SIP Conference Server IMS-SIP Conference Server IMS-SIP Conference Server	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	IMS-SIP Conference Server sip:ClientA@test.3gpp.com sip:ClientA@test.3gpp.com sip:ClientA@test.3gpp.com		INVITE 100 Trying [180 Ringing 200 OK [INV	[INVITE	
Time 0.000 0.001 0.032 0.112 0.144 1.684		Source sip:ClientA@test.3gpp.com IMS-SIP Conference Server IMS-SIP Conference Server IMS-SIP Conference Server sip:ClientA@test.3gpp.com	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	IMS-SIP Conference Server sip:ClientA@test.3gpp.com sip:ClientA@test.3gpp.com sip:ClientA@test.3gpp.com IMS-SIP Conference Server		INVITE 100 Trying [180 Ringing 200 OK [INV ACK	(INVITE /ITE)]
_		Source sp.ClentA@test.3gpp.com IMS-SIP Conference Server IMS-SIP Conference Server IMS-SIP Conference Server sp.ClentA@test.3gpp.com sp.ClentB@test.3gpp.com		IMS-SIP Conference Server sip:ClientA@test.3gpp.com sip:ClientA@test.3gpp.com sip:ClientA@test.3gpp.com IMS-SIP Conference Server IMS-SIP Conference Server		INVITE 100 Trying [180 Ringing 200 OK [INV ACK INVITE	(INVITE)	=]
Time 0.000 0.001 0.032 0.112 0.144 1.684 1.685		Source sp. Client A @test. 3gpp.com IMS-SIP Conference Server IMS-SIP Conference Server in/S-SIP Conference Server is; Client A @test. 3gpp.com sip. Client B @test. 3gpp.com IMS-SIP Conference Server		IMS-SIP Conference Server sip ClientA@test.3gpp.com sip ClientA@test.3gpp.com sip ClientA@test.3gpp.com IMS-SIP Conference Server IMS-SIP Conference Server sip ClientB@test.3gpp.com		INVITE 100 Trying [180 Ringing 200 OK [INV ACK INVITE 100 Trying [(INVITE)	=]
Time 0.000 0.001 0.032 0.112 0.144 1.684 1.685 1.717 1.922		Source sp.ClartA@test.3gpp.com IMS:SIP Conference Server IMS:SIP Conference Server IMS:SIP Conference Server sp.ClartA@test.3gpp.com sp.ClartA@test.3gpp.com IMS:SIP Conference Server IMS:SIP Conference Server IMS:SIP Conference Server		IMS-SIP Conference Server sip:ClientA@test.3gpp.com sip:ClientA@test.3gpp.com IMS-SIP Conference Server IMS-SIP Conference Server sip:ClientB@test.3gpp.com sip:ClientB@test.3gpp.com		INVITE 100 Trying [180 Ringing 200 OK [INV ACK INVITE 100 Trying [180 Ringing 200 OK [INV	(INVITE)	=]
Time 0.000 0.001 0.032 0.112 0.144 1.684 1.685 1.717		Source sp. Client A@test. 3gpp.com IMS-SIP Conference Server IMS-SIP Conference Server ap. Client A@test. 3gpp.com sp. Client A@test. 3gpp.com IMS-SIP Conference Server IMS-SIP Conference Server		IMS-SIP Conference Server sip ClientA@test.3gpp.com sip ClientA@test.3gpp.com sip ClientA@test.3gpp.com IMS-SIP Conference Server IMS-SIP Conference Server sip ClientB@test.3gpp.com		INVITE 100 Trying [180 Ringing 200 OK [INV ACK INVITE 100 Trying [180 Ringing	(INVITE)]
Time 0.000 0.001 0.032 0.112 0.144 1.684 1.685 1.717 1.922		Source sp.ClartA@test.3gpp.com IMS:SIP Conference Server IMS:SIP Conference Server IMS:SIP Conference Server sp.ClartA@test.3gpp.com sp.ClartA@test.3gpp.com IMS:SIP Conference Server IMS:SIP Conference Server IMS:SIP Conference Server		IMS-SIP Conference Server sip:ClientA@test.3gpp.com sip:ClientA@test.3gpp.com IMS-SIP Conference Server IMS-SIP Conference Server sip:ClientB@test.3gpp.com sip:ClientB@test.3gpp.com		INVITE 100 Trying [180 Ringing 200 OK [INV ACK INVITE 100 Trying [180 Ringing 200 OK [INV	(INVITE)	=]
Time 0.000 0.001 0.032 0.112 0.144 1.684 1.685 1.717 1.922		Source sp.ClartA@test.3gpp.com IMS:SIP Conference Server IMS:SIP Conference Server IMS:SIP Conference Server sp.ClartA@test.3gpp.com sp.ClartA@test.3gpp.com IMS:SIP Conference Server IMS:SIP Conference Server IMS:SIP Conference Server		IMS-SIP Conference Server sip:ClientA@test.3gpp.com sip:ClientA@test.3gpp.com IMS-SIP Conference Server IMS-SIP Conference Server sip:ClientB@test.3gpp.com sip:ClientB@test.3gpp.com		INVITE 100 Trying [180 Ringing 200 OK [INV ACK INVITE 100 Trying [180 Ringing 200 OK [INV	(INVITE)	=]
Time 0.000 0.001 0.032 0.112 0.144 1.684 1.685 1.717 1.922		Source sp.ClartA@test.3gpp.com IMS:SIP Conference Server IMS:SIP Conference Server IMS:SIP Conference Server sp.ClartA@test.3gpp.com sp.ClartA@test.3gpp.com IMS:SIP Conference Server IMS:SIP Conference Server IMS:SIP Conference Server		IMS-SIP Conference Server sip:ClientA@test.3gpp.com sip:ClientA@test.3gpp.com IMS-SIP Conference Server IMS-SIP Conference Server sip:ClientB@test.3gpp.com sip:ClientB@test.3gpp.com		INVITE 100 Trying [180 Ringing 200 OK [INV ACK INVITE 100 Trying [180 Ringing 200 OK [INV	(INVITE)	5
Time 0.000 0.001 0.032 0.112 0.144 1.684 1.685 1.717 1.922		Source sp.ClartA@test.3gpp.com IMS:SIP Conference Server IMS:SIP Conference Server IMS:SIP Conference Server sp.ClartA@test.3gpp.com ap.ClartA@test.3gpp.com IMS:SIP Conference Server IMS:SIP Conference Server IMS:SIP Conference Server		IMS-SIP Conference Server sip:ClientA@test.3gpp.com sip:ClientA@test.3gpp.com IMS-SIP Conference Server IMS-SIP Conference Server sip:ClientB@test.3gpp.com sip:ClientB@test.3gpp.com		INVITE 100 Trying [180 Ringing 200 OK [INV ACK INVITE 100 Trying [180 Ringing 200 OK [INV	(INVITE)	=]

Figure 3. Keysight E6966B IMS-SIP conference server emulator

Keysight IMS-SIP client emulator

The SIP software may be used in two separate applications:

- 1. As a remote client to communicate with the UE via the server
- 2. As a PC-based client for the UE (where the UE functionality allows)

Run multiple clients on any appropriately-licensed PC.

Key client features

- Send, receive: Voice, video, and SMS
- IPv4 and IPv6 support
- Plain, 3GPP, and 3GPP2 encoded SMS messages and pre-coded binary format SMS
- Multiple audio codecs including: AMR and AMR-WB
- Settable AMR/AMR-WB rates
- Octet aligned and bandwidth efficient modes
- Audio level calibration features
- Multiple video codecs including: H.263, H.263-1998, and H.264 QoS for voice and video
- API for test automation

E69668 IMS-SIP Client Emulator				
File Help				
🛱 Register 🔞 Unregister ClientA@test.3gpp.com	Line-2 •			
VoIP Send SMS Audio / Video Configuration				
Call location: Line Selection I 2 3 C 4 5 Call control I 2 3 C 4 5 I 2 3 C 4 5 0 I 2 3 C 4 5 0 I 2 3 C 4 5 0 I 2 3 C 4 5 0 I 2 3 C 4 5 0 I 2 3 C 4 5 0 I 2 3 C 4 5 0 I 2 3 C 4 5 0 I 2 3 C 4 5 0	Codec Config Audo Video			
Clear Results Log				
[03/05/2014 11:28:17] [Core]: Caling				
[03/05/2014 11:28:17] [Core]: Call is trying				
[03/05/2014 11:28:17] [Core]: Ringing				
[03/05/2014 11-28:17] [Core]: Call established				
	<u></u>			
Results Log Received SMS View Video Audio Analyzer 🗸 Sig Protocol 📰 Detail Log Error Log Incoming Ca	al			
Registered WCF API Port: 8250 VoIP Lines: #1 #2 #3 #4 #5				

Figure 4. Keysight IMS-SIP client

Configuration information

For full functionality, a test configuration requires

- UE client
- IMS-SIP server
- Remote client
- Keysight PXT or 8960 Series 10 wireless communications test set

The UE requires a client in order to connect to the server. The UE native client requires a compatible ISIM application (on UICC). A remote client is additionally required to allow endto-end functional testing. Keysight's PC client software may be used as client and remote client. Alternatively, a third-party client application can be used, if preferred. E6966B-1FP IMS-SIP server emulator (fixed, perpetual license) E6966B-1TP IMS-SIP server emulator (transportable, perpetual license)

Enables the use of a server and remote client(s) on a single PC.

E6966B-2FP IMS-SIP client emulator (fixed, perpetual license) E6966B-2TP IMS-SIP client emulator (transportable, perpetual license)

Client software for a standalone PC. Alternatively a third-party client application may be used in conjunction with the Keysight server.

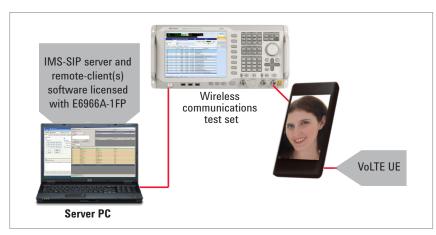


Figure 5. Example test configuration for UE with native client, connecting with an Keysight IMS-SIP server and remote-client software on server PC

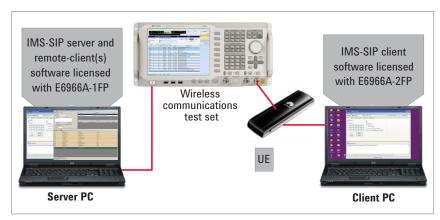


Figure 6. Example test configuration for UE without a native client (requires the addition of a client PC running Keysight IMS-SIP client software)

E6966B-3FP IMS-SIP conference server emulator (fixed, perpetual license) E6966B-3TP IMS-SIP conference server emulator (transportable, perpetual license)

Enables multiparty call server on a PC.

PC requirements for running IFT server and client

Hardware/Operating system

- 1.8 GHz Pentium dual core processor or better
- Windows 7 Professional or Windows 7 Enterprise or Windows XP SP3 (32 bit version)
- 2 GB RAM
- 2 GB of available hard disk space
- LAN port
- Audio interface (optional)
- Webcam (optional)

Wireless communications test set

- E6621A PXT
- E5515C/E 8960 Series 10

Miscellaneous

- Gigabit LAN router supporting IPv6 stateless auto-configuration
- LAN cables
- RF cables

The API supplied for test automation requires communication via the Windows Communication Foundation (WCF), Microsoft's unified programming model for building service-oriented application.

myKeysight

myKeysight

www.keysight.com/find/mykeysight

A personalized view into the information most relevant to you.



www.keysight.com/quality Keysight Technologies, Inc. DEKRA Certified ISO 9001:2008 Quality Management System

www.keysight.com/find/e6966b

For more information on Keysight Technologies' products, applications or services, please contact your local Keysight office. The complete list is available at: www.keysight.com/find/contactus

Americas

Canada	(877) 894 4414
Brazil	55 11 3351 7010
Mexico	001 800 254 2440
United States	(800) 829 4444

Asia Pacific

Australia	1 800 629 485
China	800 810 0189
Hong Kong	800 938 693
India	1 800 112 929
Japan	0120 (421) 345
Korea	080 769 0800
Malaysia	1 800 888 848
Singapore	1 800 375 8100
Taiwan	0800 047 866
Other AP Countries	(65) 6375 8100

Europe & Middle East

Europe & Middle East	
Austria	0800 001122
Belgium	0800 58580
Finland	0800 523252
France	0805 980333
Germany	0800 6270999
Ireland	1800 832700
Israel	1 809 343051
Italy	800 599100
Luxembourg	+32 800 58580
Netherlands	0800 0233200
Russia	8800 5009286
Spain	0800 000154
Sweden	0200 882255
Switzerland	0800 805353
	Opt. 1 (DE)
	Opt. 2 (FR)
	Opt. 3 (IT)
United Kingdom	0800 0260637

For other unlisted countries: www.keysight.com/find/contactus (BP-07-10-14)



This information is subject to change without notice. $\ensuremath{\mathbb{O}}$ Keysight Technologies 2012 – 2014 Published in USA, August 2, 2014 5990-9880EN www.keysight.com