# Evaluates: MAXM15464 5V Output-Voltage Application

### **General Description**

The MAXM15464 5V output evaluation kit (EV kit) provides a proven design to evaluate the MAXM15464 highvoltage, high-efficiency, synchronous step-down DC-DC module. The EV kit is programmed to deliver 5V output for loads up to 300mA. The EV kit features an adjustable input undervoltage lockout, selectable mode, and open-drain RESET signal. The MAXM15464 data sheet provides a complete description of the module that should be read in conjunction with this EV kit data sheet prior to modifying the demo circuit. For full module features, benefits and parameters, refer to the MAXM15464 data sheet.

#### **Features**

- Highly Integrated Solution
- Wide 12V to 42V Input Range
- Fixed 5V Output, Delivers Up To 300mA Output Current
- High 84.7% Efficiency (V<sub>IN</sub> = 24V, V<sub>OUT</sub> = 5V at 150mA)
- 500kHz Switching Frequency
- ENABLE/UVLO Input, Resistor-Programmable UVLO Threshold
- PFM Feature for Better Light-Load Efficiency
- Fixed Internal 4.1ms Soft-Start Time
- RESET Output, with Pullup Resistor to V<sub>CC</sub>
- Overcurrent and Overtemperature Protection (OCP and OTP)
- Low-Profile, Surface-Mount Components
- Proven PCB Layout
- Fully Assembled and Tested
- Complies with CISPR22 (EN55022) Class B Conducted and Radiated Emissions

## **Quick Start**

#### **Recommended Equipment**

- One 4.5V to 42V DC, 300mA power supply
- 1.5W resistive load with 300mA sink capacity
- Four digital multimeters (DMM)
- MAXM15464EVKIT#

#### **Equipment Setup and Test Procedure**

The EV kit is fully assembled and tested. Follow the steps below to verify the board operation.

# Caution: Do not turn on power supply until all connections are completed.

- 1) Set the power supply at a voltage between 4.5V and 42V. Then, disable the power supply.
- 2) Connect the positive terminal of the power supply to the VIN PCB pad and the negative terminal to the nearest GND PCB pad. Connect the positive terminal of the 300mA load to the VOUT PCB pad and the negative terminal to the nearest GND PCB pad.
- Connect the DVM (DMM in voltage-measurement mode) across the VOUT PCB pad and the nearest GND PCB pad.
- 4) Verify that shunt is not installed on jumper J1 (see Table 1 for details).
- 5) Turn on the DC power supply.
- 6) Enable the load.
- 7) Verify that the DVM displays 5V.

Ordering Information appears at end of data sheet.



#### **Detailed Description**

The MAXM15464 EV kit is designed to demonstrate salient features of MAXM15464 power module. The EV kit includes an EN/UVLO PCB pad, and jumper J1, to enable the output at a desired input voltage. Jumper J2 allows selection of either PWM or PFM mode of operation based on light-load performance requirements. An additional RESET pad is available for monitoring if the converter output voltage is in regulation.

#### **Output Capacitor Selection**

X7R ceramic output capacitors are preferred due to their stability over temperature in industrial applications. The required output capacitor (C5) for 5V output is selected from Table 1 of the <u>MAXM15464</u> data sheet as  $10\mu$ F/6.3V.

#### **Fixed Output Voltage**

The MAXM15464 is a fixed 5V output module. Connect FB of MAXM15464 directly to  $V_{OUT}$  for feedback control.

# Enable/Undervoltage-Lockout (EN/UVLO) Programming

The MAXM15464 offers an adjustable input undervoltagelockout feature. In this EV kit, for normal operation, leave jumper J1 open. When J1 is left open, the MAXM15464 is enabled when the input voltage rises above 12V. To disable MAXM15464, install a jumper across pins 2-3 on J1. See <u>Table 1</u> for J1 settings. A potential divider formed by R1 and R2 sets the input voltage (V<sub>INU</sub>) at which the module is enabled. The value of resistor R1 is chosen to be 2.2M $\Omega$ , and R2 is calculated using the following equation:

$$R_2 = \frac{R_1 \times 1.215}{(V_{INU} - 1.215)}$$

where R1 and R2 are in  $k\Omega$ ,

For MAXM15464 to turn on at 12V input, the Resistor R2 is calculated to be  $249k\Omega$ .

#### **Input Capacitor Selection**

The input capacitor serves to reduce the current peaks drawn from the input power supply and reduces switching frequency ripple at the input. The input capacitance must be greater than or equal to the value given in <u>Table 1</u> of <u>MAXM15464</u> data sheet. Input capacitor C3 is chosen to be  $1\mu$ F/50V.

#### **Electromagnetic Interference (EMI)**

Compliance to conducted emissions (CE) standards requires an EMI filter at the input of a switching power converter. The EMI filter attenuates high-frequency cur-

## Evaluates: MAXM15464 5V Output-Voltage Application

rents drawn by the switching power converter, and limits the noise injected back into the input power source.

Use of EMI filter components as shown in Figure 1 in conjunction with the schematic results in lower conducted emissions below CISPR22 Class B limits. The <u>MAXM15464 5V EV Kit PCB Layout Diagrams</u> is also designed to limit radiated emissions from switching nodes of the power converter, resulting in radiated emissions below CISPR22 Class B limits.

#### Hot-Plug-In and Long Input Cables

The MAXM15464 EV kit PCB provides an optional electrolytic capacitor (C2,  $4.7\mu$ F/50V) to dampen input voltage peaks and oscillations that can arise during hotplug-in and/or due to long input cables. This capacitor limits the peak voltage at the input of the MAXM15464 power module, when the EV kit is powered directly from a precharged capacitive source or an industrial backplane PCB. Long input cables, between input power source and the EV kit circuit can cause input-voltage oscillations due to the inductance of the cables. The equivalent series resistance (ESR) of the electrolytic capacitor helps damp out the oscillations caused by long input cables. Further, capacitor C1 ( $0.1\mu$ F/50V), placed near the input of the board, helps in attenuating high frequency noise.

#### **Mode of Operation**

The MAXM15464 features PFM mode of operation to increase the efficiency at light-load condition. If the MODE pin is left unconnected during powerup, the module operates in PFM mode at light loads. If the MODE pin is connected to GND during power-up, the part operates in constant-frequency PWM mode at all loads. See <u>Table 2</u> for J2 settings.

#### Internal LDO

An internal regulator provides a 5V nominal supply to power the internal functions of the module. The output of the linear regulator (V<sub>CC</sub>) should be bypassed with a 1 $\mu$ F capacitor C4 to GND.

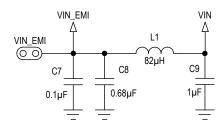


Figure 1. EMI Filter Components

## Table 1. UVLO Enable/Disable Configuration (J1)

POSITION	EN/UVLO PIN	MAXM15464_OUTPUT
Not Installed*	Connected to the center node of resistor-divider R1 and R2.	Programmed to startup at desired input-voltage level.
1-2	Connected to V <sub>IN</sub>	Enabled if V <sub>IN</sub> is greater than V <sub>IN(MIN).</sub>
2-3	Connected to GND	Disabled


\*Default position


## Table 2. Mode of Operation (J2)


POSITION	MODE PIN
1-2	Operates in PWM mode.
Not Installed*	Operates in PFM mode at light-load conditions.


\*Default position


## **EV Kit Performance Report**

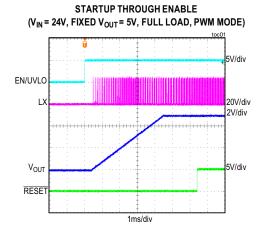

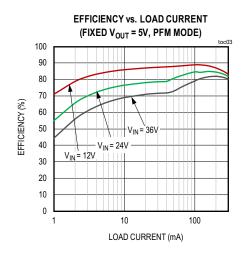


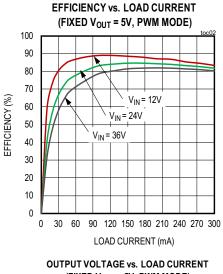




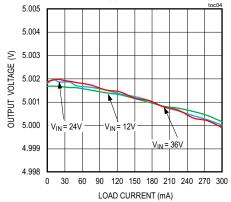



## **EV Kit Performance Report (continued)**

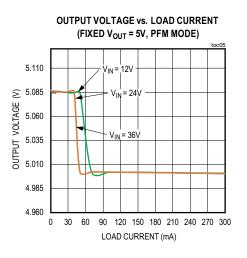


 $\label{eq:output} \begin{array}{l} \text{OUTPUT VOLTAGE RIPPLE} \\ \text{(V}_{\text{IN}} = 24\text{V}, \ \text{FIXED V}_{\text{OUT}} = 5\text{V}, \ \text{FULL LOAD, PWM MODE)} \end{array}$ 

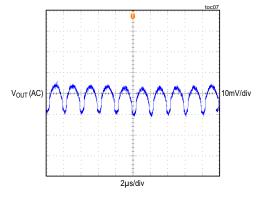


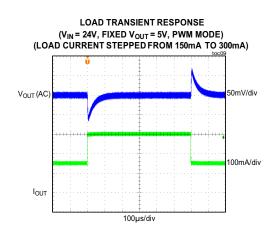

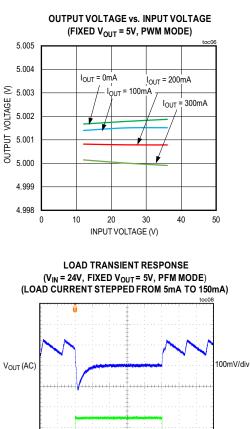





I<sub>OUT</sub>

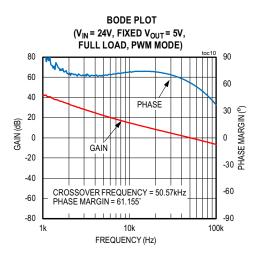

## **EV Kit Performance Report (continued)**

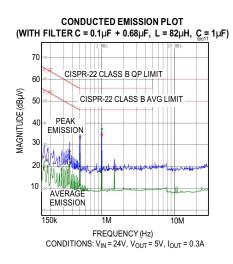

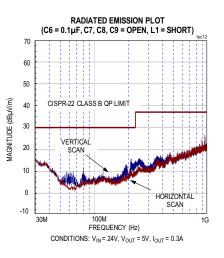

## **Ordering Information**

PART	TYPE	
MAXM15464EVKIT#	EV Kit	

#Denotes RoHS compliant.

## **Component Suppliers**


SUPPLIER	WEBSITE
Murata Americas	www.murata.com
NEC TOKIN America, Inc.	www.nec-tokinamerica.com
Panasonic Corp.	www.panasonic.com
SANYO Electric Co., Ltd.	www.sanyodevice.com
TDK Corp.	www.component.tdk.com
TOKO America, Inc.	www.tokoam.com

**Note:** Indicate that you are using the MAXM15464 when contacting these component suppliers.


## MAXM15464 5V EV Kit Bill of Materials

ITEM	QT	DESIGNATIO	Description	Manufacturer Partnumber-1	Manufacturer Partnumber-2
1	1	C1	0.1µF±10%,50V, X7R ceramic capacitor (0603)	TDK C1608X7R1H104K080AA	
2	1	C2	4.7μF±20%,50V, Aluminimum Capacitor	NICHICON UUD1H4R7MCL	
3	1	C3	1µF±10%,50V, X7R ceramic capacitor (1206)	MURATA GRM21BR71H105KA12	TDK C2012X7R1H105K085AC
4	1	C4	1µF±10%,16V, X7R ceramic capacitor (0603)	MURATA GRM188R71C105KA12	TDK C1608X7R1C105K
5	1	C5	10μF±10%,6.3V, X7R ceramic capacitor (1206)	MURATA GRM31CR70J106K	
6	1	C6	OPEN (OPTIONAL : 0.1µF±10%,50V, X7R ceramic capacitor (0603))	Murata GRM188R71H104KA93	
7	1	R1	2.2MΩ ±1% resistor (0402)	VISHAY DALE CRCW04022M20FK	
8	1	R2	249kΩ ±1% resistor (0402)	VISHAY DALE CRCW0402249KFK	
9	1	R3	100kΩ ±1% resistor (0402)	VISHAY DALE CRCW0402100KFK	YAGEO PHICOMP RC0402FR-07100KL
10	1	U1	MAXM15464, 10-pin micro-SLIC Power Module	MAXIM MAXM15464AMB+T	
11	1	L1	OPTIONAL : 82µH Shielded Wirewound Inductor(2016)	Murata LQH2MPN820MGRL	
12	1	C7	OPTIONAL : 0.1µF±10%,50V, X7R ceramic capacitor (0603)	Murata GRM188R71H104KA93	
13	1	C8	OPTIONAL : 0.68µF±10%,50V, X7R ceramic capacitor (0805)	Murata GRM21BR71H684KAC4L	
14	1	C9	OPTIONAL : 1µF±10%,50V, X7R ceramic capacitor (0805)	Murata GRM21BR71H105KA12	


## MAXM15464 5V EV Kit Schematic

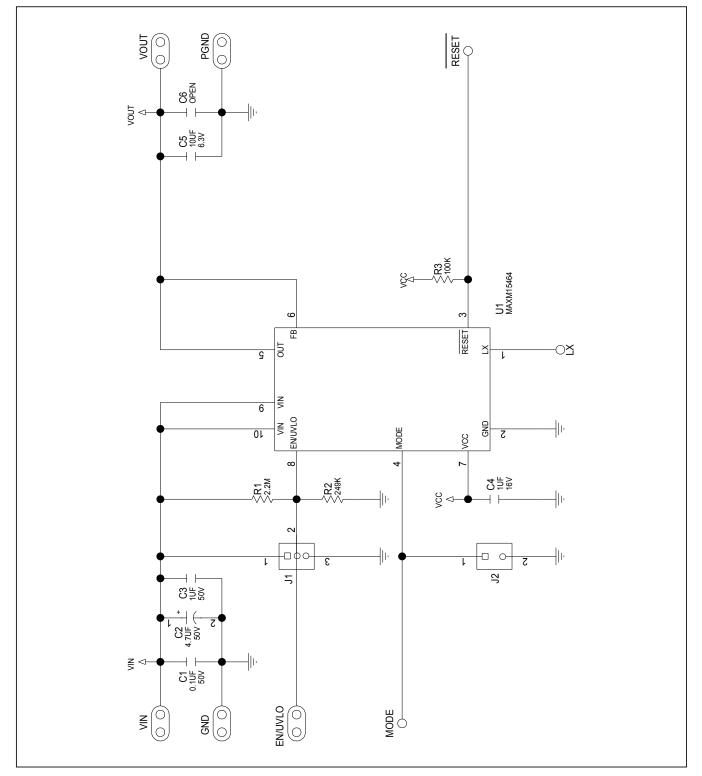

# Evaluates: MAXM15464 5V **Output-Voltage Application**

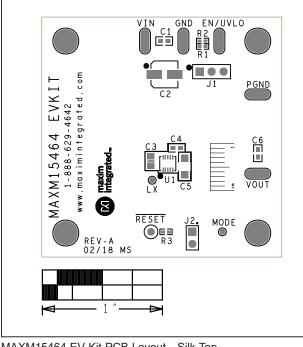


# MAXM15464 5V EV Kit PCB Layout Diagrams

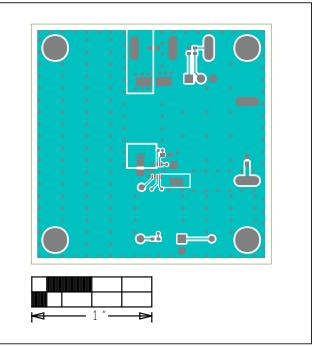


MAXM15464 EV Kit PCB Layout-Silk Top

MAXM15464 EV Kit PCB Layout—Top Layer

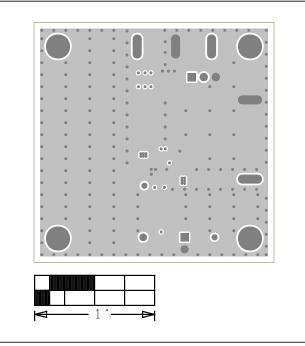


MAXM15464 EV Kit PCB Layout—Layer 2 Ground

# Evaluates: MAXM15464 5V Output-Voltage Application

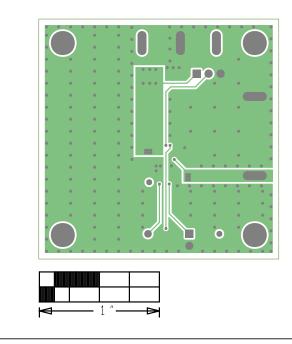

## MAXM15464 5V EV Kit PCB Layout Diagrams (continued)

MAXM15464 EV Kit PCB Layout—Layer 3 Power

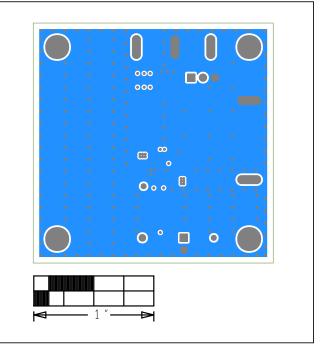

MAXM15464 EV Kit PCB Layout—Bottom Layer

# Evaluates: MAXM15464 5V Output-Voltage Application

## **Revision History**

REVISION	REVISION	DESCRIPTION	PAGES
NUMBER	DATE		CHANGED
0	1/19	Initial release	—

For pricing, delivery, and ordering information, please visit Maxim Integrated's online storefront at https://www.maximintegrated.com/en/storefront/storefront.html.

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time.