Keysight Technologies Serial Data Equalization Software for Infiniium Series Oscilloscopes



Data Sheet



Significantly reduce receiver errors by opening even tightly shut eyes through equalization emulation

Keysight Technologies, Inc. serial data equalization software for Infiniium Series oscilloscopes provides fast and accurate equalization simulating decision feedback equalization (DFE), feed-forward equalization (FFE), and continuous time linear equalization (CTLE) modeling in real time. Serial data equalization software allows users to input their own self-designated tap values or will find the optimal tap values for the designer for FFE and DFE. CTLE allows DC gain and up to three pole modeling.

Used in conjunction with the Infiniium Series unique Infiniium data accelerator (IDA) chip, serial data equalization software provides fast update rates and rapid analysis of real-time eyes that have been partially or fully closed by the serial data link. The serial data equalization software package includes a wizard that provides an easy-to-follow step-by-step process to set up and emulate full equalization.

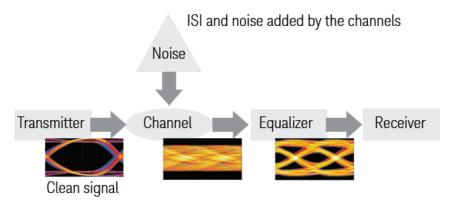


Figure 1: Complete link

Equalization FAQ

1. Why do I need equalization?

As data rates go up, the signal deteriorates from the transmitter to the receiver due to ISI, noise, etc. The more loss that occurs, the more difficult it is for a receiver comparator to distinguish a "1" from a "0". A high data rate coupled with a lossy channel will cause an open eye at a transmitter to be closed at the receiver. Receivers need to be able to evaluate 1's and 0's; As eyes get more and more closed, the receiver has a more difficult time interpreting the correct value as a 1 or a 0. This difficulty ultimately leads to significant data corruption and errors. Equalization uses advanced filtering techniques to correct the voltage level of the current bit. By removing much of the intersymbol interference through filtering, equalization can improve closed eyes into open eyes and significantly reduce the data corruption. The equalization software provides insight into designers' equalization.

2. What is the difference between decision feedback equalization (DFE) and feed-forward equalization (FFE)?

FFE typically looks only at the bits preceding the current bit to open the eye while DFE dynamically will change based on the current bit in addition to any previous bits. FFE uses the same filter for each receiver and every bit. DFE is adaptive and can vary by device. DFE can be used in addition to FFE; however FFE cannot be used in addition to DFE.

3. Why is it important to use an oscilloscope with low noise when using equalization software?

If an oscilloscope has the lowest noise, the equalization technique will open the eye wider. Keep in mind that equalization will amplify any noise not caused by ISI, which by definition includes oscilloscope noise. Infiniium oscilloscopes have the industry's lowest noise floor, so there is much less noise to be amplified. This results in greater equalization accuracy.

4. Why does the equalization software require serial data analysis software?

Equalization requires the oscilloscope to know where the clock transitions. Clock data recovery allows the scope to know where the transition occurs, making equalization possible. Full clock data recovery can only be found in the serial data analysis software package.

Easy Equalization Setup

The serial data equalization software extends the ease-of-use advantages of Keysight's Infiniium oscilloscopes to complete analysis of the receiver. The equalization wizard walks you quickly through the steps required to setup and perform equalization. Intuitive displays and clear labeling of information make it easy to perform complex equalization emulation. The serial data equalization wizard walks you through seven different equalization scenarios.

Equalization wizard options

- 1. FFE or CTLE are emulated, but the real time eye is not displayed. You will see only the waveform. This option lets you use the equalized waveform to perform further analysis on it such as jitter decompensation.
- 2. No equalization applied. Option 2 is to see the eye with no equalization applied. The option works great for comparing the impact of different equalization techniques.
- 3. FFE or CTLE are applied only to recover the clock, but the referenced eye is unequalized. As real time eyes get closer to being fully closed, it can be difficult for the software to recover a clock because it can be difficult to distinguish between a 1 and 0 and provide the correct data rate. This option makes it possible to easily recover the clock, even on closed eyes.
- 4. FFE or CTLE emulation.
- 5. Standard DFE emulation. One caveat for this option is that if your real time eye is closed, the DFE will not work correctly. You will need to use the next option to use FFE or CTLE to open the eye a little bit and then DFE.
- 6. Standard DFE emulation for a closed eye. Note that FFE or CTLE is used to recover the clock, but is not displayed in the real time eye.
- 7. FFE is applied and then DFE is applied to the real time eye. Both are displayed in the resulting real time eye.

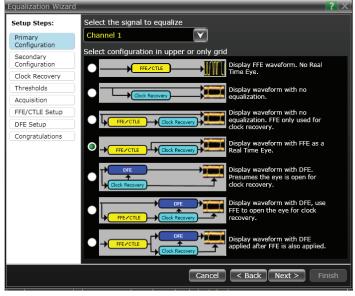


Figure 2: Equalization options from the wizard

CTLE, FFE and DFE Emulation

The serial data equalization software will provide full emulation of decision feedback, feed-forward or continuous time linear equalization. The software provides the flexibility to compare real time eyes of a non-equalized waveform versus an equalized waveform or to compare a DFE waveform versus an FFE or CTLE waveform.

In addition to allowing you to compare DFE versus FFE or CTLE equalization techniques, the serial data equalization software allows you to quickly compare different tap values. Tap values are dimensionless correction factors applied to the bit voltage levels in serial data patterns during equalization. Tap values can be viewed as the ratio of the voltage the receiver should have seen versus what the receiver actually did see. Accurate tap values are essential for modeling an ideal real time eye at the receiver. Serial data equalization software will save you time by modeling up to forty tap values for you. In addition to this, you can use the serial data equalization software package to find what combination of tap values will maximize eye height. SDE software provides pre cursor tap functionality for FFE emulation.

Serial data equalization provides multiple inputs including an "Eye Width" option that optimizes the tap values based on whether the designer wants a wider or higher eye. Unlike some equalization emulation packages, serial data equalization will work on any pattern and the software doesn't need to know the pattern the designer is using.

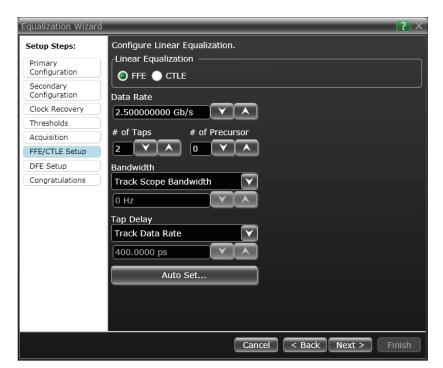


Figure 3. Equalization menu in the equalization wizard

| Equalization Auto Tap Setup | ? X | | |
|---|------------|--|--|
| Eye Width | | | |
| 333 mUI | | | |
| Run Auto Set | | | |
| Auto Tap Status Configure the setup and press "Run Auto Set" | | | |

Figure 4. Automatically find the tap values

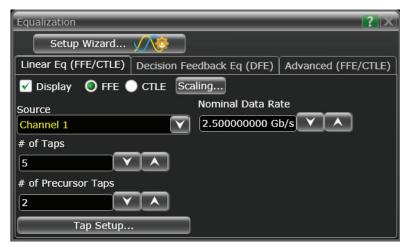


Figure 5. Equalization allows you to choose between FFE, CTLE, and DFE

Continuous Time Linear Equalization (CTLE)

CTLE

Many of today's standards require CTLE as part of compliance testing. The SDE software makes verifying emulation easy. Simply enter your DC gain value, zero frequency, and pole1 and pole2 frequency values to verify your design.

Serial data equalization also supports USB 3.5's specific CTLE.

| Equalization ?X | | | | |
|---|--|--|--|--|
| Setup Wizard 🅢 🍅 | | | | |
| Linear Eq (FFE/CTLE) Decision Feedback Eq (DFE) Advanced (FFE/CTLE) | | | | |
| 🔲 Display 🛛 FFE 🔘 CTLE 🛛 Scaling | | | | |
| Source Nominal Data Rate | | | | |
| Channel 1 2.50000000 Gb/s | | | | |
| $A_{dc} \omega_{p1} \omega_{p2} \omega_{p3}$ s + ω_z | | | | |
| $ \begin{array}{c c} & 2 & \bigcirc & 3 \end{array} \begin{array}{c} H(s) = & u \leftarrow p \perp p \leftarrow p$ | | | | |
| DC Gain | | | | |
| 667 m | | | | |
| Zero Frequency | | | | |
| 650 MHz | | | | |
| Pole 1 Frequency | | | | |
| 1.950 GHz | | | | |
| Pole 2 Frequency | | | | |
| 5.000 GHz | | | | |
| Pole 3 Frequency | | | | |
| 16.000 GHz | | | | |

Figure 6. Serial data equalization supports both 2- and 3-pole CTLE

Flexible Clock Recovery

You can choose constant-frequency, first-order phase-locked loop (PLL), second-order PLL clock recovery, explicit clock, explicit first order PLL, explicit second order PLL or FibreChannel clock recovery methods. You can adjust the center frequency and bandwidth, and in the case of second-order PLL, the damping factor.

New to the equalization software is the equalized first and second order PLL, which allows you to recover the clock on a closed eye. This is accomplished by first applying FFE or CTLE to the waveform and then recovering the clock, making clock recovery possible even on closed eyes.

Oscilloscope compatibility

The N5461A Infiniium serial data equalization software is compatible with Infiniium 9000, 90000A, 90000 X- and 90000 Q-Series oscilloscopes with operating software revision 1.40 or higher (Windows XP Pro). For oscilloscopes with earlier software revisions, free upgrade software is available at: http://www.keysight.com/find/infiniium_sw_download.

The software is also now available as part of Infiniium Offline, meaning you can do all your equalization emulation at your PC and not be tied to the oscilloscope.

Ordering information

To purchase the N5461A Infiniium serial data equalization software for your new or existing 9000, 90000A, 90000 X- or 90000 Q-Series oscilloscope, order the following:

For Infiniium Series oscilloscopes

Clock Recovery Setup Dialog ? Clock recovery applies to serial protocol, serial Advanced... data analysis, RJ/DJ, and TIE jitter meas. Clock Recovery Method Preset \mathbf{v} ¥ Custom Constant Frequency **Constant Frequency** First Order PLL Nominal Data Rate Second Order PLL 2.500000000 Gb/s Explicit Clock Explicit First Order PLL Explicit Second Order PLL If Fully Automatic is selected, th Equalized First Order PLL automatically be determined. If nominal data rate will be determ Equalized Second Order PLL rate. If Manual is selected, the n Fibre Channel used. FlexRay large quantities of high frequenc, MIPI M-PHY PWM Fully automatic is generally pref


Figure 7. Clock recovery set up

| License type | | Infiniium Z-Series | Infiniium S-Series | Infiniium 90000A, X-, or Q-Series | Infiniium 9000 Series |
|--------------|-------------------|--------------------|--------------------|--------------------------------------|-----------------------|
| Fixed | Factory-installed | N5461B-1FP | N5461B-1FP | Option 012 | Option 012 |
| | User-installed | | | N5461A-1NL | N5461B-1NL |
| Floating | Transportable | N5461A-1TP | N5461A-1TP | N5461A-1TP | N5461A-1TP |
| | Server-based | N5435A-025 | N5435A-025 | N5435A-025 | N5435A-025 |

08 | Keysight | Serial Data Equalization Software for Infiniium Series Oscilloscopes - Data Sheet

Related literature

| Publication title | Publication type | Publication number |
|---|------------------|--------------------|
| Keysight E2688A, N5384A High-Speed Serial Data Analysis and Clock Recovery Software for Infiniium Oscilloscopes | Data sheet | 5989-0108EN |
| Infiniium 9000 Series Oscilloscopes | Data sheet | 5990-3746EN |
| Infiniium 90000 Series Oscilloscopes | Data sheet | 5989-7819EN |
| Infiniium 90000 X-Series Oscilloscopes | Data sheet | 5990-5271EN |
| Infiniium S-Series Oscilloscopes | Data sheet | 5991-3904EN |
| Infiniium Z-Series Oscilloscopes | Data sheet | 5991-3868EN |

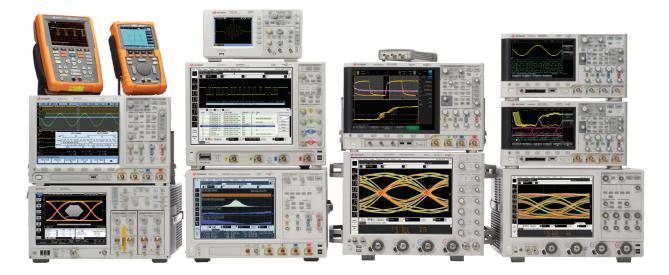

Keysight Oscilloscopes

Multiple form factors from 20 MHz to >90 GHz | Industry leading specs | Powerful applications

myKeysight

myKeysight

www.keysight.com/find/mykeysight

A personalized view into the information most relevant to you.

www.axiestandard.org

AdvancedTCA® Extensions for Instrumentation and Test (AXIe) is an open standard that extends the AdvancedTCA for general purpose and semiconductor test. Keysight is a founding member of the AXIe consortium. ATCA®, AdvancedTCA®, and the ATCA logo are registered US trademarks of the PCI Industrial Computer Manufacturers Group.

www.lxistandard.org

LAN eXtensions for Instruments puts the power of Ethernet and the Web inside your test systems. Keysight is a founding member of the LXI consortium.



www.pxisa.org

PCI eXtensions for Instrumentation (PXI) modular instrumentation delivers a rugged, PC-based high-performance measurement and automation system.



Three-Year Warranty

www.keysight.com/find/ThreeYearWarranty

Keysight's commitment to superior product quality and lower total cost of ownership. The only test and measurement company with three-year warranty standard on all instruments, worldwide.



Keysight Assurance Plans

www.keysight.com/find/AssurancePlans

Up to five years of protection and no budgetary surprises to ensure your instruments are operating to specification so you can rely on accurate measurements.



www.keysight.com/go/quality

Keysight Technologies, Inc. DEKRA Certified ISO 9001:2008 Quality Management System

Keysight Channel Partners

www.keysight.com/find/channelpartners

Get the best of both worlds: Keysight's measurement expertise and product breadth, combined with channel partner convenience.

www.keysight.com/find/sde

For more information on Keysight Technologies' products, applications or services, please contact your local Keysight office. The complete list is available at: www.keysight.com/find/contactus

Americas

| Canada | (877) 894 4414 |
|---------------|------------------|
| Brazil | 55 11 3351 7010 |
| Mexico | 001 800 254 2440 |
| United States | (800) 829 4444 |
| | |

Asia Pacific

| 1 800 629 485 |
|----------------|
| 800 810 0189 |
| 800 938 693 |
| 1 800 112 929 |
| 0120 (421) 345 |
| 080 769 0800 |
| 1 800 888 848 |
| 1 800 375 8100 |
| 0800 047 866 |
| (65) 6375 8100 |
| |

Europe & Middle East

United Kingdom

For other unlisted countries: www.keysight.com/find/contactus (BP-09-04-14)



This information is subject to change without notice. © Keysight Technologies, 2010 - 2014 Published in USA, August 4, 2014 5990-3330EN www.keysight.com