

Agilent U2722A/U2723A USB Modular Source Measure Units

Service Guide



Notices

® Agilent Technologies, Inc., 2009–2013

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

Manual Part Number

U2722-90021

Edition

Fifth Edition, August 2, 2013

Agilent Technologies, Inc. 3501 Stevens Creek Blvd. Santa Clara, CA 95052 USA

Trademark Acknowledgements

Windows and MS Windows are U.S. registered trademarks of Microsoft Corporation.

Warranty

The material contained in this document is provided "as is," and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

U.S. Government Restricted Rights. Software and technical data rights granted to the federal government include only those rights customarily provided to end user customers. Agilent provides this customary commercial license in Software and technical data pursuant to FAR 12.211 (Technical Data) and 12.212 (Computer Software) and, for the Department of Defense, DFARS 252.227-7015 (Technical Data - Commercial Items) and DFARS 227.7202-3 (Rights in Commercial Computer Software or Computer Software Documentation).

Safety Notices

CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

Safety Symbols

The following symbols on the instrument and in the documentation indicate precautions which must be taken to maintain safe operation of the instrument.

	Direct current (DC)		Equipment protected throughout by double insulation or reinforced insulation
\sim	Alternating current (AC)	0	Off (supply)
\sim	Both direct and alternating current	I	On (supply)
3~	Three-phase alternating current	Â	Caution, risk of electric shock
놑	Earth (ground) terminal	\bigwedge	Caution, risk of danger (refer to this manual for specific Warning or Caution information)
Ē	Protective conductor terminal		Caution, hot surface
<i></i>	Frame or chassis terminal		Out position of a bi-stable push control
♦	Equipotentiality		In position of a bi-stable push control

General Safety Information

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Agilent Technologies assumes no liability for the customer's failure to comply with these requirements.

WARNING

- Do not use this product in any manner not specified by the manufacturer. The protective features of this product may be impaired if it is used in a manner not specified in the operation instructions.
- Do not operate the product in an explosive atmosphere or in the presence of flammable gases or fumes.
- Only qualified, service-trained personnel who are aware of the hazards involved should remove the instrument casing. Always disconnect the power cable and any external circuits before removing the instrument casing.
- Do not use the equipment if it does not operate properly. Ensure that the equipment is inspected by qualified service personnel.
- Do not install substitute parts or perform any unauthorized modification to the product. Return the product to an Agilent Sales and Service Office for service and repair to ensure that the safety features are maintained.

CAUTION

- · Make all connections to the unit before applying power.
- Take note of the instrument's external markings described under Safety Symbols.
- Use the device with the provided cables.
- Repair or service that is not covered in this manual should only be performed by qualified personnel.
- Instruments that appear damaged or defective should be made inoperative and secured against unintended operation until they can be repaired by qualified service personnel.

Environmental Conditions

This instrument is designed for indoor use and in an area with low condensation. The table below shows the general environmental requirements for this instrument.

Environmental conditions	Requirements
Operating temperature	0 °C to 50 °C
Operating humidity	20% to 85% RH non-condensing
Storage temperature	–20 °C to 70 °C
Storage humidity	5% to 90% RH non-condensing

CAUTION

The U2722A/U2723A USB Modular Source Measure Units complies with the following safety and EMC requirements.

- IEC 61326-1:2005/EN61326-1:2006
- Canada: ICES-001:2004
- Australia/New Zealand: AS/NZS CISPR11:2004
- IEC 61010-1:2001/EN 61010-1:2001 (2nd Edition)
- Canada: CAN/CSA-C22.2 No. 61010-1-04
- USA: ANSI/UL 61010-1:2004

Regulatory Markings

CE ISM 1-A	The CE mark is a registered trademark of the European Community. This CE mark shows that the product complies with all the relevant European Legal Directives.	C N10149	The C-tick mark is a registered trade- mark of the Spectrum Management Agency of Australia. This signifies compliance with the Australia EMC Framework regulations under the terms of the Radio Communication Act of 1992.
ICES/NMB-001	ICES/NMB-001 indicates that this ISM device complies with the Cana- dian ICES-001. Cet appareil ISM est confomre a la norme NMB-001 du Canada.		This instrument complies with the WEEE Directive (2002/96/EC) mark- ing requirement. This affixed product label indicates that you must not dis- card this electrical/electronic product in domestic household waste.
	The CSA mark is a registered trademark of the Canadian Standards Association.		

Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC

This instrument complies with the WEEE Directive (2002/96/EC) marking requirement. This affixed product label indicates that you must not discard this electrical or electronic product in domestic household waste.

Product Category:

With reference to the equipment types in the WEEE directive Annex 1, this instrument is classified as a "Monitoring and Control Instrument".

The affixed product label is shown as below.



Do not dispose in domestic household waste

To return this unwanted instrument, contact your nearest Agilent Technologies, or visit:

www.agilent.com/environment/product

for more information.

In This Guide...

1 Specifications

This chapter covers the characteristics and specifications of the U2722A/U2723A USB Modular Source Measure Units.

2 Getting Started

This chapter provides an overview of the service procedure for the U2722A/U2723A which includes the service types offered by Agilent, and instructions for obtaining services and sending the U2722A/U2723A for service.

3 Performance Verification and Adjustment

This chapter describes the calibration procedures for the U2722A/U2723A to ensure that the instrument is operating normally within the warranted specifications.

Contents

	List of Figures XI
	List of Tables XII
1	Specifications 1
	Product Characteristics 2
	Product Specifications 4
2	Getting Started 9
	Introduction 10
	Self-Test 10
	Self-Calibration 12
	Agilent Technologies Calibration Services 14
	Calibration Interval 14
	Types of Service Available 14
	Extended Service Contracts 14
	Obtaining Repair Service (Worldwide) 15
	Repackaging for Shipment 16
	Cleaning 16
3	Performance Verification and Adjustment 17
	Performance Verification and Adjustment 18
	Recommended Test Equipment 18
	Test Consideration 18
	Performance Verification 19
	Voltage Tests 19
	Current Tests 21
	Test Record Forms 24
	Source Voltage Mode Programming and Readback
	Accuracy 24

Contents

Source Current Mode Programming and Readback Accuracy 25


Adjustment 26

List of Figures

- Figure 3-1 Voltage test setup (no load condition) 20
- Figure 3-2 Current test setup (no load condition) 22

List of Tables

- Table 3-1Recommended test equipment18
- Table 3-2
 Test settings for source voltage mode programming and readback accuracy
 19
- Table 3-3
 Test settings for source current mode programming and readback accuracy
 21
- Table 3-4
 Source voltage mode programming and readback accuracy
 24
- Table 3-5
 Source current mode programming and readback accuracy
 25

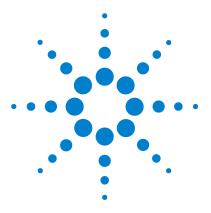

U2722A/U2723A USB Modular Source Measure Units Service Guide

Specifications

1

Product Characteristics 2 Product Specifications 4

This chapter specifies the characteristics, environmental conditions, and specifications of the U2722A/U2723A.



Product Characteristics

REMOTE INTERFACE

- Hi-Speed USB 2.0
- USBTMC 488.2 Class device ^{[1] [2]}

POWER CONSUMPTION

- +12 VDC, 3 A maximum
- · Isolated ELV power source

OPERATING ENVIRONMENT

- Operating temperature from 0 °C to +50 °C
- Relative humidity at 20% to 85% RH (non-condensing)
- · Altitude up to 2000 meters
- · Pollution degree 2
- For indoor use only

STORAGE COMPLIANCE

- -20 °C to 70 °C
- Relative humidity at 5% to 90% RH (non-condensing)

SAFETY COMPLIANCE

Certified with:

- IEC 61010-1:2001/EN61010-1:2001 (2nd Edition)
- Canada: CAN/CSA-C22.2 No. 61010-1-04
- USA: ANSI/UL 61010-1:2004

EMC COMPLIANCE

- IEC 61326-2002/EN61326:1997+A1:1998+A2:2001+A3:2003
- Canada: ICES-001:2004
- Australia/New Zealand: AS/NZS CISPR11:2004

SHOCK AND VIBRATION

Tested to IEC/EN 60068-2

I/O CONNECTOR

Output connectors

DIMENSIONS ($W \times D \times H$)

- 120.00 × 183.00 × 66.00 mm (with bumpers)
- * $105.00 \times 175.00 \times 50.00$ mm (without bumpers)

WEIGHT

- 700 g (with bumpers)
- 650 g (without bumpers)

WARRANTY

- Please refer to http://www.agilent.com/go/warranty_terms
 - Three years for the product
 - Three months for the product's standard accessories, unless otherwise specified
- · Please take note that for the product, the warranty does not cover;
 - Damage from contamination
 - · Normal wear and tear of mechanical components
 - Manuals
- [1] Compatible with Microsoft Windows operating systems only
- [2] Requires a direct USB connection to the PC so the appropriate driver can be installed in the USB modular instrument or USB DAQ module

Product Specifications

General

	U2722A/U2723A	
Number of outputs	3	
Output ratings (at 0 °C to 50 °C)		
Voltage	–20 V to 20 V	
Current	–120 mA to 120 mA	

U2722A USB Modular Source Measure Unit performance specifications

	Range	Accuracy ^[1]	Resolution
Voltage programming	± 2 V	0.075% + 1.5 mV	0.1 mV
12 months (at 25 °C \pm 3 °C), \pm (% of output + offset)	\pm 20 V	0.05% + 10 mV	1 mV
Current programming	±1μΑ	0.085% + 0.85 nA	100 pA
12 months (at 25 °C \pm 3 °C), \pm (% of output + offset)	±10 μA	0.085% + 8.5 nA	1 nA
	± 100 μA	0.075% + 75 nA	10 nA
	$\pm 1 \text{ mA}$	0.075% + 750 nA	100 nA
	± 10 mA	0.075% + 7.5 μA	1 μA
	± 120 mA	0.1% + 100 μA	20 µA
Voltage readback	± 2 V	0.075% + 1.5 mV	0.1 mV
12 months (over USB with respect to the actual	± 20 V	0.05% + 10 mV	1 mV
output at 25 °C \pm 3 °C), \pm (% of output + offset)			
Current readback	±1μA	0.085% + 0.85 nA	100 pA
12 months (over USB with respect to the actual	±10 μA	0.085% + 8.5 nA	1 nA
output at 25 °C \pm 3 °C), \pm (% of output + offset)	± 100 μA	0.075% + 75 nA	10 nA
	$\pm 1 \text{ mA}$	0.075% + 750 nA	100 nA
	\pm 10 mA	0.075% + 7.5 μA	1 µA
	± 120 mA	0.1% + 100 μA	20 µA

[1] Accuracy measurements are based on NPLC 10.

	Range	Accuracy ^[1]	Resolution
Voltage programming	± 2 V	0.075% + 1.5 mV	0.1 mV
12 months (at 23 $^{\circ}\text{C}\pm5^{\circ}\text{C}$), \pm (% of output + offset)	± 20 V	0.05% + 10 mV	1 mV
Current programming	±1μA	0.085% + 0.85 nA	100 pA
12 months (at 23 °C \pm 5°C), \pm (% of output + offset)	±10 μA	0.085% + 8.5 nA	1 nA
	± 100 μA	0.075% + 75 nA	10 nA
	± 1 mA	0.075% + 750 nA	100 nA
	± 10 mA	0.075% + 7.5 μA	1 μA
	± 120 mA	0.1% + 100 μA	20 µA
Voltage readback	± 2 V	0.075% + 1.5 mV	0.1 mV
12 months (over USB with respect to the actual	± 20 V	0.05% + 10 mV	1 mV
output at 23 °C \pm 5°C), \pm (% of output + offset)			
Current readback	±1μA	0.085% + 0.85 nA	100 pA
12 months (over USB with respect to the actual	±10 μA	0.085% + 8.5 nA	1 nA
output at 23 $^{\circ}\text{C}\pm5^{\circ}\text{C}$), \pm (% of output + offset)	±100 μA	0.075% + 75 nA	10 nA
	± 1 mA	0.075% + 750 nA	100 nA
	± 10 mA	0.075% + 7.5 μA	1 μA
	± 120 mA	0.1% + 100 μA	20 µA

U2723A USB Modular Source Measure Unit performance specifications

[1] Accuracy measurements are based on NPLC 10.

Rise/fall time (ms) ^[1]				
	±1μA	15.0		
	± 10 μA	5.0		
U2723A USB Modular Source Measure Unit	± 100 μA	1.0		
For resistive measurement ^[2]	± 1 mA	1.0		
For resistive measurement ^(*)	± 10 mA	1.0		
	± 1 μA ± 10 μA ± 100 μA ± 1 mA	1.0		
	±1μA	170.0		
	± 10 μA	18.0		
U2722A USB Modular Source Measure Unit	± 100 μA	6.0		
For resistive measurement ^[2]	± 1 mA	1.0		
	± 10 mA	1.0		
	± 120 mA	1.0		

Performance characteristics

[1] Drive 50% of 1 V or 10 V output with a resistive load. Rise time is from 10% to 90% of program voltage change at maximum current. Fall time is from 90% to 10% of program voltage change at maximum current.

[2] Measurements obtained are per default bandwidth setting.

Noise 10 Hz to 20 MHz (Peak-peak)

Valtaga Danga			Current	Current range			
Voltage Range	1 µA	10 µA	100 μA	1 mA	10 mA	120 mA	
2 V	50 mV	50 mV	50 mV	50 mV	30 mV	30 mV	
20 V	50 mV	50 mV	50 mV	50 mV	30 mV	30 mV	

Remote sense operating range	Ensure that the maximum voltage between the OUTPUT+ and SENSE+, OUTPUT– and SENSE– does not exceed 3 V.
Temperature coefficient	Maximum change in output/readback per °C after a 30-minute warm-up is 0.15.
Guard output resistance	0.2 kΩ
Output voltage overshoot, ±(% of output + offset) ^[1]	During turn-on or turn-off, the output plus overshoot $<0.1\%$ + 10 mV.
Maximum sense lead resistance	1 $M\Omega$ for rated accuracy
Voltage line regulation	0.01% of range
Current line regulation	0.04% of range
Current load regulation	Current load regulation 0.04% + 100 μA
Programming language	Standard Commands for Programmable Instruments (SCPI)
Recommended calibration interval	One year

[1] Measurements obtained are per default bandwidth setting.

NOTE

- All channels are isolated from the ground and from each other. Isolation is +60 VDC, Category I.
- Three hours warm-up time recommended.
- The measurement accuracy value is x (1 + a X y),


where,

- x = accuracy specification at room temperature^[1],
- *a* = temperature coefficient, and
- y = temperature change for U2722A USB Modular Source Measure Unit: 22 ° C to 0 ° C, 28 ° C to 50 ° C temperature change for U2723A USB Modular Source Measure Unit: 18 ° C to 0 ° C, 28 ° C to 50 ° C

[1] Typical room temperature is measured at 23 ° C.

1 Specifications

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

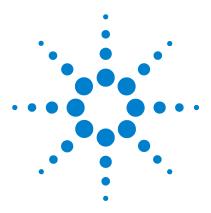

U2722A/U2723A USB Modular Source Measure Units Service Guide

Getting Started

2

Introduction 10 Self-Test 10 Self-Calibration 12 Agilent Technologies Calibration Services 14 Calibration Interval 14 Types of Service Available 14 Extended Service Contracts 14 Obtaining Repair Service (Worldwide) 15 Repackaging for Shipment 16 Cleaning 16

This chapter discusses the self-test and self-calibration procedure for the U2722A/U2723A USB Modular Source Measure Units. It also provides the information for returning your U2722A/U2723A to Agilent for calibration or servicing.

If you have a defective module, you can return it to Agilent for repair or replacement.



Introduction

Self-Test

- A brief power-on self-test occurs automatically whenever you turn on the instrument. This limited test assures that the instrument is capable of operation.
- If the self-test fails, the power indicator on the front panel will start blinking. You can use the SYSTem: ERRor? query command from the remote interface to read the error messages. If repair is required, contact an Agilent Service Center. Please refer to the programmer's reference guide for more information on the error messages.
- Self-test may be initiated remotely by sending the *TST? SCPI command to the instrument.


CAUTION

Disconnect all connections from the output terminals before performing the self-test procedure. Ensure that the output terminals are not connected to any load before you turn on the U2722A/U2723A.

Agilent Measurement Manager

To start the self-test procedure using the Agilent Measurement Manager, perform the following steps.

1 Click Tools > Self-Test.

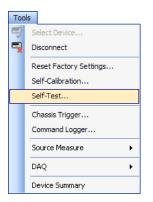

2 Click Start on the Self-Test form.

Slot	Model	Serial Number	Status	Result
] -	U2722A	MY48000028		
<u>itruction:</u> If Test Instructio	n: This operation will take a	approximately 6 minutes to comple	ete.	

3 Click **OK** to continue when the message box appears.




- 4 Wait for a few minutes for the self-test to complete.
- **5** The result is displayed on the form once the self-test has completed.

Self-Calibration

To perform self-calibration using the U2722A/U2723A Agilent Measurement Manager, perform the following steps.

1 Click Tools > Self-Calibration.

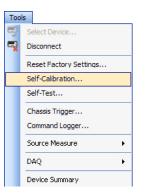

2 Click Start on the Self-Calibration form.

Self-Ca	alibration Form				
Please select respective device to view the self-calibration instructions. Self-calibration usually need few minutes to be completed. Please be patient. Please do not close this form before the operations have been completed.					
	Slot	Model	Serial Number	Status	Resu
	-	U2722A	MY48000028		
<					>
Instructi	on:				
Self Cal	libration Instruction: 1	This operation will tak	e approximately 6 minutes to cor	nplete.	~
					×
<				_	
				Start	Close

3 Click **OK** to continue when the message box appears.

Agilent Measurement Manager				
2	Self-calibration will overwrite all your current settings to default settings. Do you still want to continue?			

- **4** Wait for a few minutes for the self-calibration to complete.
- **5** The result is displayed on the form once the self-calibration has completed.

CAUTION Disconnect all connections from the output terminals before performing the self-calibration procedure. Ensure that the output terminals are not connected to any load before you turn on the U2722A/U2723A. It is recommended that the U2722A/U2723A is powered-up for at least 45 minutes before performing self-calibration.

Agilent Technologies Calibration Services

When your instrument is due for calibration, contact your local Agilent Service Center for a low-cost recalibration. The U2722A/U2723A is supported on automated calibration systems, which allows Agilent to provide this service at a competitive price.

Calibration Interval

A one-year interval is adequate for most applications. Accuracy specifications are under warranty only if adjustments are made at regular calibration intervals. Accuracy specifications will not be offered warranty beyond the one-year calibration interval. Agilent does not recommend extending calibration intervals beyond two years for any application. Agilent recommends that a complete readjustment should always be performed at the calibration interval. This will ensure that the U2722A/U2723A will remain within specifications for the next calibration interval. The readjustment provides the best long-term stability and accuracy.

Types of Service Available

If your instrument fails during the warranty period, Agilent will repair or replace it under the terms of your warranty. After your warranty expires, Agilent offers repair services at competitive prices.

Extended Service Contracts

Most Agilent products are provided with optional service contracts that extend the coverage period after the standard warranty expires. If you have this service contract and your instrument happens to fail during the coverage period, Agilent will repair or replace it according to the contract.

Obtaining Repair Service (Worldwide)

To obtain service for your instrument (in-warranty, under service contract, or post-warranty), contact your nearest Agilent Service Center. They will arrange to have your unit repaired or replaced, and are able to provide warranty or repair cost information where applicable.

To obtain warranty, service, or technical support information you can contact Agilent at one of the following telephone numbers.

In the United States: 800 829 4444

In Europe: 31 20 547 2111

In Japan: (81) 426 56 7832

You can also use our Web link for the information on contacting Agilent worldwide:

www.agilent.com/find/assist

Or contact your Agilent representative.

Before shipping your instrument, ensure that you acquire shipping instructions, including the components to be shipped, from the Agilent Service Center. Agilent recommends that you retain the original shipping carton for use in such shipments.

Repackaging for Shipment

If the unit is to be shipped to Agilent for service or repair, make sure that you do the following.

- Attach a tag to the unit identifying the owner and indicating the required service or repair. Include the model number and full serial number.
- Place the unit in its original container with appropriate packaging material for shipping.
- Secure the container with strong tape or metal bands.
- If the original shipping container is not available, place your unit in a container with at least four inches of compressible packaging material around all sides for the instrument. Use static-free packaging materials to avoid additional damage to your unit.

NOTE

Agilent suggests that you always insure your shipments.

Cleaning

Clean the outer area of the instrument with a soft, lint-free, and slightly dampened cloth. Do not use detergent. Disassembly is not required for cleaning.



U2722A/U2723A USB Modular Source Measure Units Service Guide

3 Performance Verification and Adjustment

Performance Verification and Adjustment 18 Recommended Test Equipment 18 Test Consideration 18 Performance Verification 19 Voltage Tests 19 Current Tests 21 Test Record Forms 24 Source Voltage Mode Programming and Readback Accuracy 24 Source Current Mode Programming and Readback Accuracy 25 Adjustment 26

The performance verification procedures described in this chapter verify that the U2722A/U2723A USB Modular Source Measure Units is operating normally and is within its warranted specifications.



Performance Verification and Adjustment

This section contains the performance verification and adjustment procedures. If the U2722A/U2723A fails any of the tests or if any abnormal test results are obtained, return the unit to the Agilent Service Center for readjustment. Readjustment can also be carried out using Agilent Measurement Manager revision 1.7 or above.

Recommended Test Equipment

The recommended test equipment for the performance verification is listed in the table below. If the exact equipment is not available, substitute the performance verification standards of equivalent requirement(s).

 Table 3-1
 Recommended test equipment

Equipment	Requirement(s)	Recommended model	Purpose	Used
Digital multimeter (DMM)	• 8½ digits resolution	Agilent 3458A	Measures DC voltage and current	Performance verification and adjustment

Test Consideration

For optimum performance, all procedures should comply with the following recommendations.

- Ensure that the ambient temperature is stable and between 22 °C and 28 °C. The ideal temperature for performing performance verification should be 25 °C \pm 1 °C.
- Make sure that the ambient relative humidity is less than 80%.
- Allow a three-hour warm-up period before performance verification.
- Keep the test connection cables as short as possible.

Performance Verification

Voltage Tests



Test each output channel individually. Refer to the appropriate test record form.

Source Voltage Mode Programming and Readback Accuracy

This test verifies that the voltage programming and readback through the USB are within published specifications.

Test Settings


 Table 3-2
 Test settings for source voltage mode programming and readback accuracy

Agilent 3458A settings ¹			
Function	Range		
DC voltage	1 V (for U2722A/U2723A drives \leq 1 V)		
	10 V (for U2722A/U2723A drives \leq 10 V)		

1 Use the highest resolution available on the DMM.

Test Setup

The test setup for no load condition is shown in the following figure.

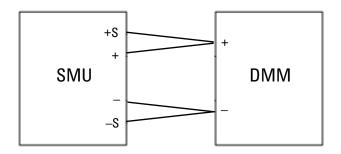



Test Procedure

- 1 Turn off the U2722A/U2723A. Connect the DMM to the output to be tested (refer to Figure 3-1). Ensure that no load is connected. Turn on the U2722A/U2723A.
- **2** Configure the selected output as shown in the following.
 - **a** Configure the NPLC to 10.
 - **b** Configure the voltage range.
 - **c** Configure the current range.
 - **d** Program the clamp current, I_{clamp} .
 - e Program the drive voltage, V_{drive}.
- **3** Enable the output.
- 4 Wait for a few seconds for the output to settle.
- 5 Record the voltage reading on the DMM, V_{meas}.
- **6** Read back the drive voltage over the USB.
- 7 Record the readback voltage reading over the USB, V_{rdbk}.
- 8 Compute (V_{meas} V_{drive}) and (V_{rdbk} V_{meas}). Compare the values with the test limit values.

- **9** Repeat step 2 through step 8 for each iteration to complete the performance verification for the selected output.
- **10** Repeat step 1 through step 9 for the rest of the outputs.

Current Tests

Source Current Mode Programming and Readback Accuracy

This test verifies that the current programming and readback through the USB are within published specifications.

Test Settings


Table 3-3	Test settings for source current mode programming and
	readback accuracy


Agilent 3458A settings ¹				
Function Range				
DC current	1 μA (for U2722A/U2723A drives $\leq~1~\mu\text{A}$)			
	10 μA (for U2722A/U2723A drives \leq 10 $\mu\text{A})$			
	100 μA (for U2722A/U2723A drives $\leq~$ 100 $\mu A)$			
	1 mA (for U2722A/U2723A drives \leq 1 mA)			
	10 mA (for U2722A/U2723A drives \leq 10 mA)			
	100 mA (for U2722A/U2723A drives \leq 100 mA)			
	1 A (for U2722A/U2723A drives >100 mA)			

1 Use the highest resolution available on the DMM.

Test Setup

The test setup for no load condition is shown in the following figure.

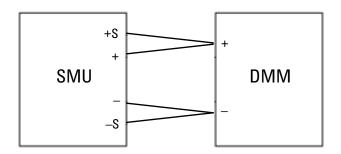



Test Procedure

- 1 Turn off the U2722A/U2723A. Connect the DMM to the output to be tested (refer to Figure 3-2). Ensure that there is no load connected. Turn on the U2722A/U2723A.
- 2 Configure the selected output as shown in the following.
 - **a** Configure the NPLC to 10.
 - **b** Configure the voltage range.
 - **c** Configure the current range.
 - **d** Program the clamp voltage, V_{clamp}.
 - e Program the drive current, I_{drive} .
- **3** Enable the output.
- **4** Wait for a few seconds for the output to settle.
- ${\bf 5}\,$ Record the current reading on the DMM, $I_{meas}.$
- **6** Read back the drive current over the USB.
- 7 Record the readback current reading over the USB, I_{rdbk}.
- **8** Compute $(I_{meas} I_{drive})$ and $(I_{rdbk} I_{meas})$. Compare the values with the test limit values.

- Repeat step 2 through step 8 for each iteration to complete the performance verification for the selected output.
- Repeat step 1 through step 9 for the rest of the outputs.

Test Record Forms

Source Voltage Mode Programming and Readback Accuracy

Iteration	Test point	Voltage range	Clamp current	Current range	$V_{meas} - V_{drive}$	V _{rdbk} – V _{meas}	Limit	
1		1 V 2 V	120 mA	120 mA				
2			10 mA	10 mA			±2.25 mV	
3	1 \/		1 mA	1 mA				
4	IV		100 µA	100 µA				
5			10 µA	10 µA				
6			1 μA	1 µA				
7				120 mA	120 mA			
8			10 mA	10 mA				
9	10.1/	20.1/	1 mA	1 mA			±15 mV	
10		10 V 20 V	100 µA	100 µA			±13 mv	
11			10 µA	10 µA				
12			1 μΑ	1 µA				

 Table 3-4
 Source voltage mode programming and readback accuracy

Source Current Mode Programming and Readback Accuracy


Table 3-5	Source current mode	programming and	readback accuracy

Iteration	Test point	Current range	Clamp voltage	Voltage range	I _{meas} — I _{drive}	l _{rdbk} — l _{meas}	Limit	
1		1 μΑ	20 V	20 V			±1.275 nA	
2	0.5 μΑ		2 V	2 V			±1.275 nA	
3	5 μA	10 0	20 V	20 V			±12.75 nA	
4	5 μΑ	10 µA	2 V	2 V			±12.75 nA	
5	E0 A	100 μA	20 V	20 V			±112.5 nA	
6	- 50 μΑ	του μα	2 V	2 V			±112.5 nA	
7	- 0.5 mA	0 E m 0	1 mA	20 V	20 V			±1.125 μA
8		TIIIA	2 V	2 V			±1.125 μA	
9	5 mA	10 mA	20 V	20 V			±11.25 μA	
10	3 IIIA	TUTILA	2 V	2 V			±11.25 μA	
11	- 60 mA	60 mA 120 mA	20 V	20 V			±0.16 mA	
12		120 IIIA	2 V	2 V			±0.16 mA	


Adjustment

The following information describes the procedure for voltage and current adjustments for the U2722A/U2723A using Agilent Measurement Manager revision 1.7 or above.

1 Establish the connection between the U2722A/U2723A and the PC. Launch the Agilent Measurement Manager as shown below.

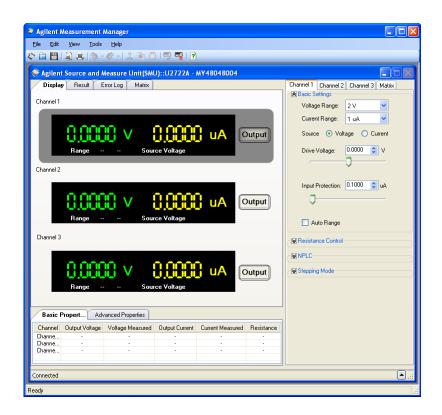

2 Select Tools > Source Measure > Adjustment to start the adjustment.

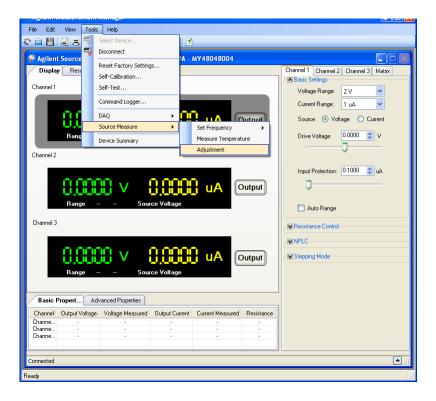

3 A message box will appear to inform that the adjustment operation will take approximately two hours. During this period, you will not be able to operate the U2722A/U2723A. Click **Yes** to continue with the adjustment operation.



4 Establish the connection between the 3458A and the PC to proceed with the adjustment operation. Click **OK** to continue.



If the 3458A is not detected, an error message will appear as shown in the following figure. Reconnect the 3458A to the PC and click **Yes** to proceed. Select **No** to exit the adjustment operation.

SMU Er	ror Message (MY48048004)
♪	3458A Multimeter is not found. Press Yes to reconnect and No to exit adjustment operation.
	Yes No

- 5 The 3458A and U2722A/U2723A will be triggered to perform self-test and self-calibration. During this process, make sure that there is no connection on the instruments terminals. If self-test or self-calibration fails, cycle the U2722A/U2723A power and repeat step 1 through step 5. In the unlikely event that self-test or or self-calibration repeatedly fails, contact your nearest Agilent Sales Office.
- **6** After the self-test and self-calibration have completed, a message box shown in the following will appear to indicate you to connect the respective U2722A/U2723A output to the voltage terminal of the 3458A. After the connection is established, click **OK** to continue. The Agilent Measurement Manager will now perform voltage adjustment on channel 1.



7 When the voltage adjustment has completed, connect the respective U2722A/U2723A output to the current terminal of the 3458A. After the connection is established, click **OK** to continue with current adjustment for channel 1.

SMU Adjustment
Please setup the correct channel 1 connection to the current terminals in DMM.
ОК

- 8 After the voltage and current adjustments for channel 1 have completed, the 3458A will proceed with voltage and current adjustments for channel 2 followed by voltage and current adjustments for channel 3. Follow the instructions on the message box to complete the adjustment operation.
- **9** When the adjustment operation has completed, a message box as shown in the following will appear. Click **OK** to end the adjustment operation.



10 A message box will appear as shown below prompting you to power cycle the U2722A/U2723A for the adjustment to take effect. To power cycle the U2722A/U2723A, power off the U2722A/U2723A and restart it. Ensure that the U2722A/U2723A is powered-off properly before restarting.



3 Performance Verification and Adjustment

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

A

accuracv Source Current Mode Programming and Measurement, 21, 25 Source Voltage Mode Programming and Measurement, 19, 24 specifications, 14 voltage/current programming, 4 voltage/current readback, 4 adjustment procedure. See procedure Agilent 3458A, 18, 21 calibration services, 14 service, 14, 15 Agilent Measurement Manager self-calibration, 12, 13 self-test, 10, 11 ambient ideal temperature. 18 relative humidity, 18 temperature, 18 warm-up period, 18

C

Calibration interval, 7, 14, performance. See performance procedure. See procedure self. See Agilent Measurement Manager services. See Agilent standards, 18 channel, 19, 20, 22 Characteristics, 1 performance, 6 product, 2 circuit, 6 cleaning, 16 compliance EMC, 2 safety, 2 storage, 2 connection cable. See test connector, output. See output consideration, test. See test contact, 10, 14, 15 contract, service, 14, 15 current clamp, 20 DC. 21 drive. 22. 22 output ratings, 4 programmable, 18 programming, 4, 21 readback, 4, 21, 22 range, 20, 22 source. See source test. 21. 22

D

DC current. See current voltage, 19 degree, pollution. See pollution degree Digital Multimeter, 18, 19, 20, 21, 22, 22 dimensions, 2 disassembly, 16 drive current. See current voltage. See voltage

E

ELV power source, isolated. See power

EMC, 2 environment, operating, 2 equipment, test. *See test*

G

guard, 7

Η

Hi-Speed USB 2.0, 2 humidity, relative ambient. *See ambient* operating, 2 storage, 2

ideal temperature. *See ambient* interface, remote. *See remote* interval, calibration. *See Calibration* I/O connector, 2 isolated, ELV power source. *See power* isolation, 7 iteration, 21, 23, 24, 25

L

limit, test. *See test* load, 6, 10, 13, 20, 22

Μ

material, packaging, 16 MEAS:CURR?, 22

measurement accuracy. *See accuracy* manager. *See Agilent Measurement Manager* source current mode, 21, 25 source voltage mode, 19, 24 message box, 11, 13 multimeter, digital. *See Digital Multimeter*

Ν

noise, 6 no load condition, 20, 22

0

operating environment. See environment, operating range, remote sense, 7 temperature, 2 OUTP ON, 20, 22 output channel, 19 connector. 2 guard resistance. See guard number, 4 ratings, 4 temperature coefficient, 7 terminals, 10, 13 test. 20. 21. 22 voltage overshoot, 7

P

packaging materials. *See material, packaging* performance calibration, 17, 18 characteristics. *See Characteristics* specifications, 4, 5 test, 18 pollution degree, 2 power consumption, 2 source, isolated ELV, 2 procedure adjustment, 26 calibration, 19, 20, 22 test, current, 22 test, voltage, 20 product Agilent, 14 characteristics. See *Characteristics* specifications, 4 programming language, 7 source current mode, 21, 25 source voltage mode, 19, 24 voltage/current. *See current or voltage*

R

range, current/voltage. See current or voltage ratings, output. See output readback. See current or voltage recommended, test equipment, 18 record form, test, See test Regulatory markings, VI relative humidity. See humidity, relative remote interface, 2, 10 sense operating range. See operating range, remote sense repackaging for shipment, 16 repair service, 14, 15 resolution, 4, 18, 19, 21 result. test. 18 rise/fall time. 6

S

safety. See compliance SCPI commands programming language, 7 self-test, 10 Self-calibration. See Agilent Measurement Manager Self-test, 10 Agilent Measurement Manager. See Agilent Measurement Manager sense, remote. See remote service calibration. 14 contract, 14, 15 repair, 15 types, 14 settings, test. See test setup, test. See test shipment, 16 shock and vibration, 2 source current mode, 21, 25 power, isolated ELV. See power voltage mode, 19, 24 specifications accuracy. See accuracy performance. See performance product. See product standard calibration. 18 commands, programming language. See SCPI commands warranty, 14 storage. See compliance support, technical, 15 SYSTEM: ERROR?, 10

T

technical support. See support, technical temperature ambient/ideal. See ambient coefficient, 7 operating. See operating terminals output. See output

test

connection cable, 18 consideration, 18 current. See current equipment, 18 limit, 20, 22 procedure, calibration. See procedure procedure, current. See procedure procedure, voltage. See procedure record form, 19, 24, 25 result. See result, test self. See Self-test settings, current, 21 settings, voltage, 19 setup, current, 22 setup, voltage, 20 shock and vibration, 2 voltage. See voltage tools self-calibration, 12 self-test, 10 *TST?, 10 types, service. See service

U

USB, 4, 19, 20, 22 Hi-Speed 2.0. *See Hi-Speed USB 2.0* USBTMC 488.2, 2

V

vibration. See shock and vibration

voltage clamp, 22 DC, 19 drive, 20, 20 output ratings, 4 output, overshoot. *See output* programmable, 18 programming, 4, 19, 21 range, 20, 22 readback, 4, 19, 20 source. *See source* test, 19, 20, 20

W

warm-up, 7, 18 warranty, 3, 14 in, 15 post, 15 weight, 3 worldwide, repair service, 15

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

www.agilent.com

Contact us

To obtain service, warranty or technical assistance, contact us at the following phone or fax numbers:

United States:	
(tel) 800 829 4444	(fax) 800 829 4433
(lei) 000 023 4444 Canada:	(Iax) 000 023 4433
ounduu	
(tel) 877 894 4414	(fax) 800 746 4866
China:	
(tel) 800 810 0189	(fax) 800 820 2816
Europe:	
(tel) 31 20 547 2111	
Japan:	
(tel) (81) 426 56 7832	(fax) (81) 426 56 7840
Korea:	
(tel) (080) 769 0800	(fax) (080) 769 0900
Latin America:	
(tel) (305) 269 7500	
Taiwan:	
(tel) 0800 047 866	(fax) 0800 286 331
Other Asia Pacific Cou	ntries:
(tel) (65) 6375 8100	(fax) (65) 6755 0042
	(, (, 5700 0012

Or visit Agilent World Wide Web at: www.agilent.com/find/assist

Product specifications and descriptions in this document are subject to change without notice. Always refer to the Agilent Web site for the latest revision.

® Agilent Technologies, Inc., 2009–2013

Fifth Edition, August 2, 2013

U2722-90021

