

## Errata

**Title & Document Type:** 5065A Rubidium Vapor Frequency Standard Operating and Service Manual

**Manual Part Number:** 05065-9041

**Revision Date:** November 1979

### About this Manual

We've added this manual to the Agilent website in an effort to help you support your product. This manual provides the best information we could find. It may be incomplete or contain dated information, and the scan quality may not be ideal. If we find a better copy in the future, we will add it to the Agilent website.

### HP References in this Manual

This manual may contain references to HP or Hewlett-Packard. Please note that Hewlett-Packard's former test and measurement, life sciences, and chemical analysis businesses are now part of Agilent Technologies. The HP XXXX referred to in this document is now the Agilent XXXX. For example, model number HP8648A is now model number Agilent 8648A. We have made no changes to this manual copy.

### Support for Your Product

Agilent no longer sells or supports this product. You will find any other available product information on the Agilent Test & Measurement website:

[www.agilent.com](http://www.agilent.com)

Search for the model number of this product, and the resulting product page will guide you to any available information. Our service centers may be able to perform calibration if no repair parts are needed, but no other support from Agilent is available.




**Agilent Technologies**

HP 5065A

OPERATING AND SERVICE MANUAL
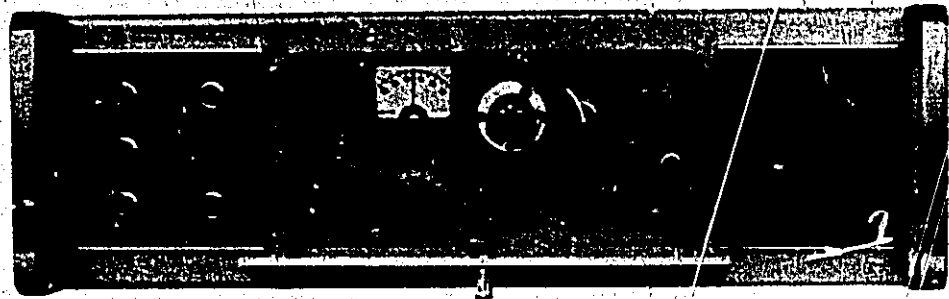
# 5065A RUBIDIUM VAPOR FREQUENCY STANDARD



 **HEWLETT  
PACKARD**

HP 5065A

## **SAFETY**

*This product has been designed and tested according to International Safety Requirements. To ensure safe operation and to keep the product safe, the information, cautions, and warnings in this manual must be heeded. Refer to Section 1 for general safety considerations applicable to this product.*

## **CERTIFICATION**

*Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.*

## **WARRANTY**

*This Hewlett-Packard product is warranted against defects in material and workmanship for a period of one year from date of shipment, except that in the case of certain components listed in Table 1-3 of this manual, the warranty shall be for the specified period. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products which prove to be defective.*

*For warranty service or repair, this product must be returned to a service facility designated by HP. However, warranty service for products installed by HP and certain other products designated by HP will be performed at Buyer's facility at no charge within the HP service travel area. Outside HP service travel areas, warranty service will be performed at Buyer's facility only upon HP's prior agreement and Buyer shall pay HP's round trip travel expenses.*

*For products returned to HP for warranty service, Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.*

## **LIMITATION OF WARRANTY**

*The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.*

*NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.*

## **EXCLUSIVE REMEDIES**

*THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.*

## **ASSISTANCE**

*Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.*

*For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.*

# **RUBIDIUM VAPOR FREQUENCY STANDARD**

## **5065A**

### **SERIAL PREFIX: 1908A**

This manual applies directly to HP Model 5065A Rubidium Vapor Frequency Standards having serial prefix 1908A.

### **OLDER INSTRUMENTS**

Changes required to backdate this manual for older instruments are in Section VII.

### **OPTIONS**

For instruments having Options 001, 002, or 003 refer to Sections III through VII.

Copyright                      HEWLETT-PACKARD                      1979  
5301 STEVENS CREEK BLVD., SANTA CLARA, CALIF. 95050

Manual Part No. 05065-9041  
Microfiche Part No. 05065-9042

Printed: NOV 1979



**HEWLETT  
PACKARD**

## MANUAL CONTENTS

This manual is supplied to help you make best use of your instrument. The manual covers eight sections of information as follows:

Section I is an introduction to the instrument. Electrical specifications and accessories information is given.

Section II covers inspections, power, mounting, packing, shipping, and connection.

Section III outlines operating procedures.

Section IV discusses technical operations.

Section V contains disassembly and repair procedures and an in-cabinet performance check.

Section VI lists replaceable parts.

Section VII gives options and manual changes information.

Section VIII contains circuit diagrams, component locators and waveforms. Included are adjustment procedures and troubleshooting information.

## HOW TO ORDER

To order an operating and service manual, contact the nearest Hewlett-Packard Sales and Service Office. Give complete model name, and nine-digit serial number. The serial number plate is on the rear panel. Comments on this manual are welcome at any Sales and Service Office.

**TABLE OF CONTENTS**

Section		Page
<b>I</b>	<b>GENERAL INFORMATION</b> .....	1-1
	1-1. Introduction .....	1-1
	1-2. Description .....	1-1
	1-5. Options .....	1-1
	1-6. Circuit Checks and Outputs .....	1-1
	1-8. Terminology .....	1-1
	1-10. Specifications .....	1-1
	1-13. Instrument Identification .....	1-1
<b>II</b>	<b>INSTALLATION</b> .....	2-1
	2-1. Unpacking and Inspection .....	2-1
	2-3. Storage and Shipment .....	2-1
	2-4. Environment .....	2-1
	2-6. Extended Storage .....	2-1
	2-8. RVFR Storage Procedure .....	2-1
	2-10. Packaging .....	2-1
	2-14. Electrical Connections .....	2-2
	2-15. Power Connection .....	2-2
	2-18. Mating Connectors .....	2-2
	2-20. Operation as Bench or Rack Instrument .....	2-3
	2-22. Installation Location .....	2-3
<b>III</b>	<b>OPERATION</b> .....	3-1
	3-1. Introduction .....	3-1
	3-3. Options 001 and 002 (Option 003 = 001 and 002) .....	3-1
	3-5. Operating Procedure .....	3-1
	3-6. General .....	3-1
	3-8. Turn-On Procedure (see Figure 3-2) .....	3-1
	3-9. Turn-On After Long Storage .....	3-1
	3-10. Frequency Offset and Calibration .....	3-2
	3-18. Frequency Comparison Using K34-59991A Linear Phase Detector .....	3-5
	3-19. Operation with Time Standard Option 001 (or 003) .....	3-9
	3-22. Setting the Clock Phase to an External Clock .....	3-9
	3-24. Automatic Synchronization .....	3-9
	3-26. Manual Synchronization .....	3-9
	3-28. Setting the Clock .....	3-9
	3-29. Operation with Standby Power Supply Option 002 .....	3-11
<b>IV</b>	<b>THEORY OF OPERATION</b> .....	4-1
	4-1. Theory .....	4-1
	4-2. General .....	4-1
	4-15. Option 001, Time Standard .....	4-2
	4-20. Option 002, Standby Power Supply .....	4-3
<b>V</b>	<b>MAINTENANCE</b> .....	5-1
	5-1. Introduction .....	5-1
	5-5. Instrument Access .....	5-1
	5-7. Periodic Maintenance .....	5-1
	5-8. Instrument/Troubleshooting .....	5-6
	5-9. Introduction .....	5-6
	5-15. Fault Finding .....	5-7
	5-19. Loop Alignment Procedure .....	5-12
	5-20. Introduction .....	5-12
	5-22. +20 Volt Adjustment (A15 Power Supply and Regulator Assembly) .....	5-12
	5-24. A10 Frequency Adjustment .....	5-12
	5-25. RF Alignment .....	5-13
	5-26. Signal-to-Noise Ratio .....	5-14
	5-27. Modulation Frequency Adjustment .....	5-14
	5-28. Phase Adjustment Recheck .....	5-14

**TABLE OF CONTENTS (Continued)**

Section		Page
	5-29. Phase Detector and Integrator Zero Adjustment .....	5-15
	5-30. Loop Gain Adjustment .....	5-15
	5-31. Loop Assembly (A14) Alignment .....	5-15
	5-32. Option 002, Standby Power Supply Maintenance .....	5-16
	5-37. Battery Removal and Replacement .....	5-16
	5-38. Clock Display Assembly A19 .....	5-16
VI	REPLACEABLE PARTS .....	6-1
	6-1. Introduction .....	6-1
	6-4. Ordering Information .....	6-1
VII	MANUAL CHANGES AND OPTIONS .....	7-1
	7-1. Manual Changes .....	7-1
	7-3. Newer Instruments .....	7-1
	7-5. Older Instruments .....	7-1
	7-7. Options .....	7-1
	7-9. Option 001 Time Standard .....	7-1
VIII	CIRCUIT DIAGRAMS .....	8-1
	8-1. General .....	8-1

**LIST OF FIGURES**

Figure		Page
1-1.	Model 5065A and Accessories .....	1-0
2-1.	Electrical Hookup for RVFR Storage .....	2-2
2-2.	Conversion for Rack Mounting .....	2-3
3-1.	RVFR Pumping .....	3-2
3-2.	Turn-On Procedure .....	3-3
3-3.	Magnetic Field Control .....	3-5
3-4.	Error Measurement .....	3-5
3-5.	Equipment Setup for Calibrating Phase Measurement System .....	3-7
3-6.	Equipment Setup for Frequency Difference Measurement .....	3-8
3-7.	Internal Measurement with Automatic Synchronization .....	3-12
3-8.	Internal Measurement with Manual Synchronization .....	3-12
3-9.	Front Panel Controls .....	3-13
3-10.	Rear Panel Operating Controls .....	3-14
3-11.	Top Operating Controls .....	3-15
4-1.	Rubidium Absorption Plot .....	4-1
4-2.	Rb87 Absorption Cell Output .....	4-2
4-3.	RVFR Assembly Block Diagram .....	4-3
5-1.	A8TP3 Waveform at $200 \times 10^{-10}$ and Phase Misadjusted .....	5-2
5-2.	A8TP3 Waveform at $200 \times 10^{-10}$ and Phase Correct .....	5-2
5-3.	Harmonic and Non-Harmonic Distortion Test Setup .....	5-3
5-4.	Equipment Setup for Synchronization and Delay Checks .....	5-4
5-5.	5 MHz Output Stability Test Setup .....	5-5
5-6.	5065A Simplified Block Diagram .....	5-7
5-7.	Meter Response in ERROR Position .....	5-10
5-8.	Waveform at A8TP3 with Severe Phase Shift .....	5-12
5-9.	R.F. Alignment Setup .....	5-13
5-10.	Oscilloscope Indication at Resonance with A8R43 (Modulating Phase Adjustment) Correctly Adjusted .....	5-13
5-11.	Signal-to-Noise Test Setup .....	5-14
6-1.	Modular Cabinet Parts .....	6-2

LIST OF FIGURES (Continued)


Figure		Page
7-1.	Battery Charger Assembly A2 Option 002 .....	7-3
7-2.	A2 Battery Charger Assembly .....	7-3
7-3.	100 kHz Regenerative Divider .....	7-8
7-4.	A4 100 kHz Divider .....	7-11
7-5.	A4 100 kHz Frequency Divider Assembly .....	7-11
7-6.	A1 Waveforms .....	7-21
7-7.	Synthesizer Assembly A1 Block Diagram .....	7-21
7-8.	A1 Synthesizer Assembly .....	7-23
7-9.	Part of A1 Synthesizer Assembly .....	7-23
7-10.	A1 Waveforms .....	7-25
7-11.	Synthesizer A1 Phase-Locked Oscillator Section .....	7-25
7-12.	A7 AC Amplifier Component Locator .....	7-35
7-13.	A7 AC Amplifier Schematic Diagram .....	7-35
7-14.	Top Operating Controls .....	7-37
7-15.	A5 Digital Divider Assembly (Option 001) .....	7-39
7-16.	A16 Digital Divider Power Supply Assembly .....	7-41
7-17.	A19 LED Digital Clock Assembly .....	7-51
7-18.	Top Operating Controls .....	7-53
7-19.	A5 Digital Divider Assembly .....	7-55
7-20.	A16 Digital Divider Power Supply Assembly .....	7-57
8-1.	Schematic Diagram Notes .....	8-2
8-2.	Block Diagram .....	8-3
8-3.	Front and Rear Panel and Top Internal Views .....	8-4
8-4.	Wiring Diagram (Sheet 1 of 3) .....	8-5
8-5.	Bottom Internal View .....	8-6
8-6.	Wiring Diagram (Sheet 2 of 3) .....	8-7
8-7.	Wiring Diagram (Sheet 3 of 3) .....	8-9
8-8.	Synthesizer Assembly A1 Block Diagram Digital Section .....	8-11
8-9.	Synthesizer Assembly A1 Digital Section (Sheet 1 of 2) .....	8-17
8-9.	Synthesizer Assembly A1 Phase-Locked Oscillator Section (Sheet 2 of 2) .....	8-19
8-10.	A2 Battery Charge Assembly (Option 002 and 003) .....	8-21
8-11.	A3 Multiplier Assembly .....	8-25
8-12.	A4 100 kHz Frequency Divider .....	8-27
8-13.	A5 Digital Divider Assembly (Option 001) (Sheet 1 of 3) .....	8-33
8-14.	A5A2 Master Clock Board (Option 001) (Sheet 2 of 3) .....	8-35
8-15.	A5A3 Preset Clock Board (Option 001) (Sheet 3 of 3) .....	8-37
8-16.	A6 1 MHz Frequency Divider Assembly .....	8-41
8-17.	A7 AC Amplifier Assembly .....	8-43
8-18.	A8 Phase Detector Assembly .....	8-47
8-19.	A9 Integrator Assembly .....	8-49
8-20.	A10 Oscillator Assembly Block Diagram .....	8-53
8-21.	A11 RVFR Temperature Controller Assembly .....	8-55
8-22.	A12 RVFR Assembly and Buffer A13 Amplifier Assembly .....	8-59
8-23.	A14 Logic Assembly .....	8-63
8-24.	A15 Power Supply and Regulator Assembly .....	8-65
8-25.	A16 Digital Divider Power Supply Assembly .....	8-67
8-26.	A19 Series 1740 Digital Clock Schematic Diagram .....	8-71



**LIST OF TABLES**

<b>Table</b>		<b>Page</b>
1-1.	Equipment Supplied .....	1-2
1-2.	Accessories Available .....	1-2
1-3.	Specifications .....	1-3
2-1.	115/230 Volt Conversion .....	2-2
2-2.	Mating Connectors .....	2-3
3-1.	Operating Checks .....	3-1
3-2.	Front Panel Lamp Indications .....	3-4
3-3.	Frequency Offset Change Instructions .....	3-6
3-4.	Typical Frequency Offset Change, Sample (Insufficient MAGNETIC FIELD Control) .....	3-7
3-5.	Typical Frequency Offset Change, $0 \times 10^{-10}$ Offset to $-300 \times 10^{-10}$ .....	3-8
3-6.	Offset Frequency Settings .....	3-10
3-7.	Synthesizer Setting vs. Frequency Offset .....	3-11
3-8.	Recommended Test Equipment .....	3-11
4-1.	Logic Signals .....	4-3
5-1.	Assembly Designations .....	5-1
5-2.	In-Cabinet Performance Check .....	5-2
5-3.	Circuit Checks .....	5-8
5-4.	Signal Checks .....	5-10
5-5.	Recommended Test Equipment .....	5-11
5-6.	A5 Troubleshooting .....	5-17
6-1.	Table of Abbreviations .....	6-1
6-2.	Replaceable Parts .....	6-3
6-3.	Option 002 and 003 Replaceable Parts .....	6-21
6-4.	Option 001 Replaceable Parts .....	6-23
6-5.	Options 001, 003 Only Replaceable Parts .....	6-27
6-6.	Manufacturers Code List .....	6-31
7-1.	Manual Changes .....	7-1
7-2.	Battery Charger Replaceable Parts .....	7-5
7-3.	A4 100 kHz Divider Replaceable Parts .....	7-13
7-4.	A1 Synthesizer Assembly Replaceable Parts .....	7-17
7-5.	A1 Troubleshooting .....	7-26
7-6.	A1 Troubleshooting .....	7-27
7-7.	A1 Troubleshooting .....	7-28
7-7.	A1 Troubleshooting .....	7-29
7-8.	A1 Troubleshooting .....	7-32
7-9.	A7 AC Amplifier Assembly Replaceable Parts .....	7-38
7-10.	A16 Resistor Parts List .....	7-52
7-11.	A16 Resistor Parts List .....	7-58
7-12.	A5A4 Parts List .....	7-58

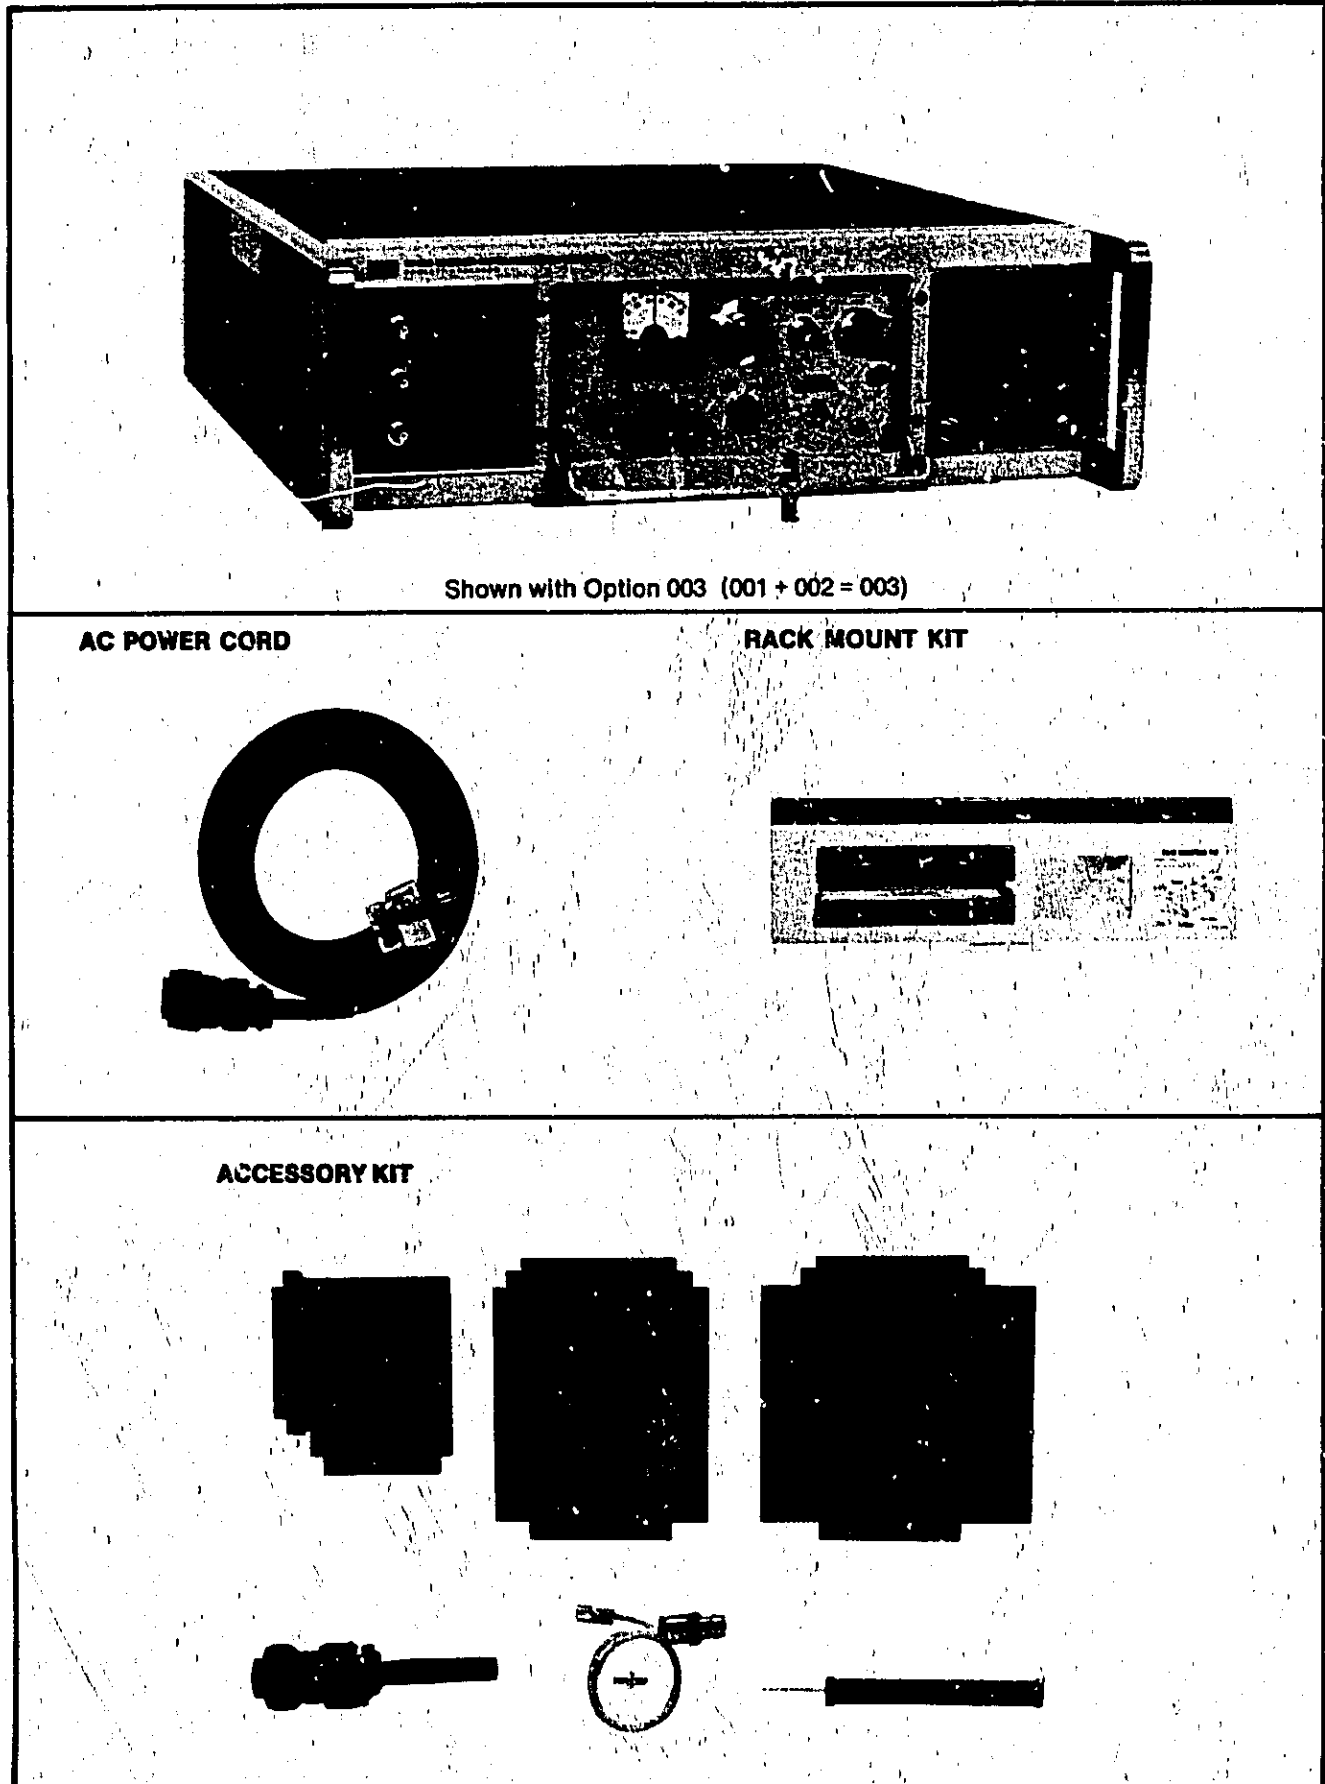Figure 1-1. Model 5065A and Accessories



## SECTION I

### GENERAL INFORMATION

#### 1-1. INTRODUCTION

##### 1-2. Description

1-3. The Hewlett-Packard Model 5065A Rubidium Vapor Frequency Standard is a compact, self-contained secondary frequency standard which uses an optically-pumped Rubidium vapor cell as the reference element. A 5 MHz oscillator is stabilized against a natural atomic resonance, the hyperfine transition of Rubidium 87. This technique produces a long-term stability of better than  $1 \times 10^{-11}$  per month with excellent short-term stability which is conservatively rated at less than  $5 \times 10^{-12}$  rms averaged over a one-second period. Output frequencies are 5 MHz, 1 MHz, and 100 kHz.

1-4. Frequency setting for any offset of the UTC time reference is accomplished by changing the microwave excitation frequency and the magnetic field applied to an  $Rb^{87}$  vapor cell. Thumbwheel switch control (of a digital frequency synthesizer) provides approximate step adjustment of the microwave excitation frequency with a range of 1000 parts in  $10^{10}$ . In addition, the front-panel MAGNETIC FIELD control provides for exact adjustment of the  $Rb^{87}$  hyperfine transition with a resolution of 2 parts in  $10^{12}$ .

##### 1-5. Options

a. A digital clock, Option 001, provides a clock display and a one pulse per second (1 PPS) electrical output. The clock pulse may be retarded up to 1-second in increments as small as 1-microsecond and as large as 0.1-second. In addition, a separate control provides continuous adjustment of clock-pulse delay from 0- to 1-microsecond.

b. Standby battery, Option 002, provides a 10-minute minimum power source (at 25°C) in the event of external ac power failure. A front-panel lamp flashes when ac power is interrupted and lights continuously during fast charge. Charge rate is controlled by a 3-position front-panel switch; FAST, CHARGE-FLOAT, RESET.

##### 1-6. Circuit Checks and Outputs

1-7. The CIRCUIT CHECK switch and meter provide continuous monitoring of outputs and other signals. The CONTINUOUS OPERATION lamp gives an indication of correct operation. The 5 MHz, 1 MHz, and 100 kHz output levels are at least 1 volt rms when properly terminated with 50 ohms.

#### 1-8. TERMINOLOGY

1-9. The definitions of the following terms apply to these terms as used throughout this manual.

a. ATOMIC TIME. Time scale based on the hyperfine resonance of Cesium 133.

b. UNIVERSAL TIME (UT2). Time scale based on the earth's rotation about its axis with correction for angular position and seasonal variations; proceeds at a rate slightly slower than Atomic time.

c. UNIVERSAL TIME (COORDINATED) (UTC). A piecewise uniform scale which approximates UT2 to 0.1-second by step adjustments in phase as announced by the Bureau International de l'Heure in Paris.

d. HYPERFINE RESONANCE OF  $Rb^{87}$ . Hyperfine resonant frequency arising from the difference in energy between the upper and lower ground states of  $Rb^{87}$ .

e. RVFR (Rubidium Vapor Frequency Reference). The assembly which houses the  $Rb^{87}$  lamp, filter cell, the  $Rb^{87}$  absorption cell, and the harmonic generator/mixer diode.

#### 1-10. SPECIFICATIONS

1-11. Table 1-3 lists the technical specifications for the Model 5065A.

1-12. Table 1-1 lists equipment supplied and Table 1-2 lists accessories available for the Model 5065A.

#### 1-13. INSTRUMENT IDENTIFICATION

1-14. Hewlett-Packard uses a two-section nine-digit serial number (0000A00000) mounted on the rear-panel to identify this instrument. The first four digits are the serial prefix and the last five digits refer to the specific instrument. If the serial prefix on your instrument differs from that listed on the title page of this manual, differences exist between the manual and your instrument. Lower serial prefixes are documented in Section VII and higher serial prefixes are covered by a manual change sheet included with the manual. If this sheet is missing contact the nearest Hewlett-Packard Sales and Service office, (lists are provided at the rear of this manual).

Model 5065A  
Circuit Diagrams, Theory, and Maintenance

Table 1-1. Equipment Supplied

Equipment	Description	HP Part No.
AC Power Cable	3-Conductor with ground pin	05061-6091
Accessory Kit includes:		05065-6066
Adapter	Micon, male-to-male	1250-0813
Connector	Plug, female	1251-0126
Screwdriver	Ceramic	3710-C033
Cable Assembly Test	Micon to BNC	05060-6116
Board Extender	15 pin	05065-6064
Board Extender	15 pin, extra wide	05065-6065
Board Extender	12 pin	05061-6073

Table 1-2. Accessories Available

Accessory	Description	HP Part No.
Standby Power Supply	24 Vdc, 2-ampere supply with 18 ampere-hours standby batteries	Model 5085A
Cable	Connects 5065A to 5085A dc output.	103A-16A
Extension Slides and Rack	Permits sliding instrument out and tilting from rack-mounted position	1490-0718 1490-0721
Standby Power Supply	24 Vdc, 2-ampere supply with 12 ampere-hours sealed standby batteries for flying clock experiments. Operates on 6, 12, and 24 Vdc, 115 Vac/230 Vac, $\pm 10\%$ , 48 to 440 Hz.	K02-5060A
Rack Mount Kit	Provides conversion from bench to rack model	5060-8740

Table 1-3. Specifications

5065A		OUTPUTS:	
<b>Frequency Stability:</b>		<b>Frequencies:</b> 5 MHz, 1 MHz, 100 kHz.	
Long term: $\pm 1 \times 10^{-11}$ per month (maximum limit of drift rate).		<b>Voltage Levels:</b> $> 1$ V rms into 50 ohms at 5 MHz, 1 MHz, 100 kHz.	
Short term*: for 5 MHz output.		<b>Connectors:</b> BNC Front and Rear for 5 MHz, 1 MHz, 100 kHz.	
Fractional Frequency Fluctuations		<b>Harmonic Distortion:</b> (5 MHz, 1 MHz, 100 kHz) Down more than 40 dB from rated output.	
Avg. Time ( $\tau$ )		<b>Nonharmonically Related Output:</b> (5 MHz, 1 MHz, 100 kHz) Down more than 80 dB from rated output.	
$< 7.5 \times 10^{-10}$	1 ms	<b>Signal-to-Noise Ratio:</b> For 1 and 5 MHz, $> 87$ dB at rated output (in a 30 kHz noise bw).	
$< 1.5 \times 10^{-10}$	10 ms	<b>ENVIRONMENTAL:</b>	
$< 1.5 \times 10^{-11}$	0.1 s	<b>Temperature, Operating:</b> $0^\circ$ to $50^\circ$ C. Frequency change is $< \pm 4 \times 10^{-11}$ from frequency reference at $25^\circ$ C.	
$< 5 \times 10^{-12}$	1 s	<b>Temperature, Nonoperating:</b> $-40^\circ$ to $+75^\circ$ C. (With Options to $50^\circ$ C.)	
$< 1.6 \times 10^{-12}$	10 s	<b>Production Units Have Passed Type Test as Follows:</b>	
$< 5 \times 10^{-13}$	100 s	HUMIDITY: 0 to 95% relative humidity.	
$< 5 \times 10^{-13}$	1000 s	VIBRATION: MIL-STD-167 and MIL-E-5400, CURVE I, with isolators.	
<b>Calibration Accuracy:</b> Set at factory to $\pm 1 \times 10^{-11}$ of specified time scale.		SHOCK: MIL-T-21200, and MIL-E-5400 (30 G's).	
<b>Stability:</b> $\pm 2 \times 10^{-12}$ .		ELECTROMAGNETIC COMPATIBILITY (EMC): MIL-I-6181D and MIL-STD-461, Class A.	
<b>Time Scale:</b> Set at factory to UTC unless specified differently.		ALTITUDE: Frequency change is $> 5 \times 10^{-11}$ from 0 to 40,000 ft.	
<b>Tunability:</b> Coarse Frequency Synthesizer Adjustment: Range: $1000 \times 10^{-10}$		FREQUENCY STABILITY DUE TO:	
Resolution: $< 2 \times 10^{-9}$ thumbwheel adjust.		Magnetic Fields: $< 5 \times 10^{-12}$ for 1 gauss dc change or 1 gauss peak ac, $60 \pm 10\%$ Hz and $400 \pm 10\%$ Hz.	
Fine Frequency Magnetic Field Adjustment: Range: $2 \times 10^{-9}$ Resolution: $2 \times 10^{-12}$		Line Voltage: $< 4 \times 10^{-12}$ over specified input range.	
<b>Warm-up:</b> Within $1 \times 10^{-10}$ in 1 hour and $5 \times 10^{-11}$ in 4 hours of final frequency after 24 hours "off" time at $25^\circ$ C. Units typically warm-up to better than $\pm 2$ parts in $10^{11}$ of factory calibrated frequency.		<b>MATING CONNECTORS:</b>	
<b>*DEFINITION OF TERMS</b>		EXT DC Input: HP 1251-0126 (5-contact), Cannon MS 3106E-14S-5S (Series ME) furnished.	
<b>Short-Term Stability:</b>		<b>POWER:</b> 115 or 230 Vac $\pm 10\%$ , 50 to 400 Hz, or 23 to 30 Vdc.	
See Statistics of Atomic Frequency Standards by David W. Allen, Proceedings of IEEE, Feb. 1966, p. 221, and HP Application Note 116 for measurement details.		Approx. power required:	
<b>Stability:</b>		24 Vdc	
The degree to which an oscillator may be adjusted to correspond with a reference. This is also termed calibration.		115 Vac	
		Without Options	
		35 W	
		49 W	
		Option 001 (Add)	
		7.5 W	
		10 W	
		Option 002 (Add)	
		0 W	
		6 W	
		Option 003 (Add)	
		7.5 W	
		16 W	
		<b>WEIGHT:</b> Net, 34 lb (15.4 kg). Shipping, 51 lb (23.5 kg). Option 001, add 2 lb (0.9 kg). Option 002, add 3.5 lb (1.6 kg).	
		<b>WARRANTY:</b> 1 year, except 3 years for RVFR.	

Table 1-3. Specifications (Continued)

**OPTION 001 TIME STANDARD**

**CLOCK PULSE:**

Rate: 1 pulse per second. Rise Time: <50 ns.  
Fall Time: <1  $\mu$ s. Amplitude: +10V peak  $\pm$ 10%  
Jitter: 5 ns rms avg. Width: 20  $\mu$ s min. All specs  
with 50 $\Omega$  load. Output: Front-panel BNC.

**SYNCHRONIZATION:** Automatic to 10  $\pm$ 1  $\mu$ s, delayed  
from reference input pulse (rear BNC). Manual  
adj. to  $\pm$ 50 ns. Reference pulse must be >+5 v with  
a rise time <50 ns and width >0.5  $\mu$ s.

**CLOCK MOVEMENT:** 24-hour LED Digital Clock.

**OPTION 002 STANDBY POWER SUPPLY**

**CAPACITY:** 10-minute minimum at 25°C after full  
charge (incl. Option 001).

**CHARGE CONTROL:** Front panel, Fast Charge-  
Float-Reset switch.

**INDICATOR:** A front-panel light flashes when ac  
power is interrupted and battery is being used.  
A continuous light indicates a fast charge condition.

**OPTION 003**

Combines Options 001 and 002

**PERFORMANCE OF QUARTZ OSCILLATOR ONLY**  
(Rubidium Control Loop Open)

**AGING RATE:** < $\pm$ 5  $\times$  10<sup>-10</sup> per 24 hours.

**FREQUENCY ADJUSTMENTS:**

**Fine Adjustment:** 5  $\times$  10<sup>-8</sup> range, with dial readings  
of parts in 10<sup>10</sup>.

**Coarse Adjustment:** 1 part in 10<sup>6</sup>, screwdriver  
adjustment at front panel.

**STABILITY:**

**As a Function of Ambient Temperature:** Fre-  
quency change is less than 2.5  $\times$  10<sup>-8</sup> total from  
0° to +50° C.

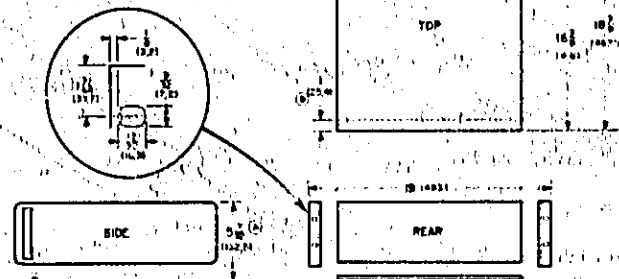
**As a Function of Load:**  $\pm$ 2  $\times$  10<sup>-11</sup> from open  
circuit to short, 50 $\Omega$ , L, or C load change.

**As a Function of Supply Voltage:**  $\pm$ 5  $\times$  10<sup>-11</sup> for  
23 to 30 Vdc from 26 Vdc reference, or for  
115/230 Vac  $\pm$ 10%.

**DIMENSIONS:**

**NOTES:**

- (1) DIMENSIONS IN INCHES AND (MILLIMETERS)
- (2) DIM TAKE HEIGHT INCLUDING FILED SURF
- (3) DIM TAKE HEIGHT INCLUDING FILED SURF AND DIM TAKE HEIGHT
- (4) DIM TAKE HEIGHT



# INSTALLATION

## SECTION II INSTALLATION

### 2-1. UNPACKING AND INSPECTION

2-2. If the shipping carton is damaged, ask that the carrier's agent be present when the instrument is unpacked. Inspect instrument for damage (scratches, dents, broken knobs, etc.). If instrument is damaged or fails Performance Check, notify the carrier and the nearest Hewlett-Packard Sales and Service office immediately (Sales and Service Offices listed inside back cover). Retain the shipping carton and the padding material for the carrier's inspection. The office will arrange for repair or replacement without waiting for the claim against the carrier to be settled.

### 2-3. STORAGE AND SHIPMENT

#### 2-4. Environment

2-5. Temperatures during storage and shipment should be limited as follows:

a. Maximum temperature: +75°C (165°F), +50°C (122°F) with Options 001, 002, or 003. Longterm storage +35°C (95°F).

b. Minimum temperature: -40°C (-40°F).

#### NOTE (Option 002 Only)

When placing the 5065A in storage, remove the top cover and momentarily remove fuse F4 located directly over the battery. Replace the fuse. When ac power is reapplied, the battery will be automatically switched into the circuit.

#### 2-6. Extended Storage

2-7. If the Model 5065A is to be stored for an extended period (longer than 2 months) or if immediate operation is required after storage, then RVFR tube should have power applied to it for the duration of the storage as described in the following procedure.

#### 2-8. RVFR Storage Procedure

a. Remove all power from 5065A and remove bottom cover.

b. Disconnect the red and black twisted pair of wires from XA4(1) and XA8(1) respectively.

c. Obtain a current-limiting power supply capable of producing 100 milliamps (power supply voltage is not important).

d. Before turning on power supply, place a short across its output terminals.

e. Connect the power supply as shown in Figure 2-1. The short should remain in place on the power supply output.

f. Set power supply voltage and current controls to minimum position. The precautions of steps d, e, and f are to prevent the filter capacitor on the power supply output from discharging into the RVFR.

g. Turn on Power Supply and adjust voltage high enough so output current can be set with current-limit control. Read current on power supply meter.

h. Set current-limit control so supply output current is 100 mA.

i. Reduce voltage control setting so that it is just above the point where further reduction would reduce the power supply output current.

j. Recheck polarity of power supply connection to red and black wires. This must be properly connected.

k. Remove short from power supply output to allow current to flow into the RVFR. Adjust power supply voltage and/or current limit to bring current to 100 mA.

l. The power supply should remain connected for the duration of storage.

2-9. When the 5065A is to be operated again:

1. Disconnect the power supply and reconnect RVFR red wire to XA4(1) and the black wire to XA8(1). Check POLARITY.

2. Apply power to the 5065A. Follow turn-on procedure in Section III.

#### 2-10. Packaging

2-11. To protect valuable electronic equipment during storage or shipment always use the best packaging methods available. Your Hewlett-Packard Sales and Service office can provide packing material such as that used for original factory packaging. Contract packaging companies in many cities can provide dependable custom packaging on short notice. Here is a recommended method:

2-12. The original packaging procedure is to:

a. Wrap the instrument in large plastic sheet or bag.


b. Place the wrapped instrument into a "same-size" carton (HP Part No. 9211-1102).

c. When the carton is sealed, install 4 polyurethane foam, post-packs (HP Part No. 9220-1316) on each corner of the carton.

d. Install boxed instrument into the final cardboard outer carton (HP Part No. 9211-1101) seal effectively and label properly.



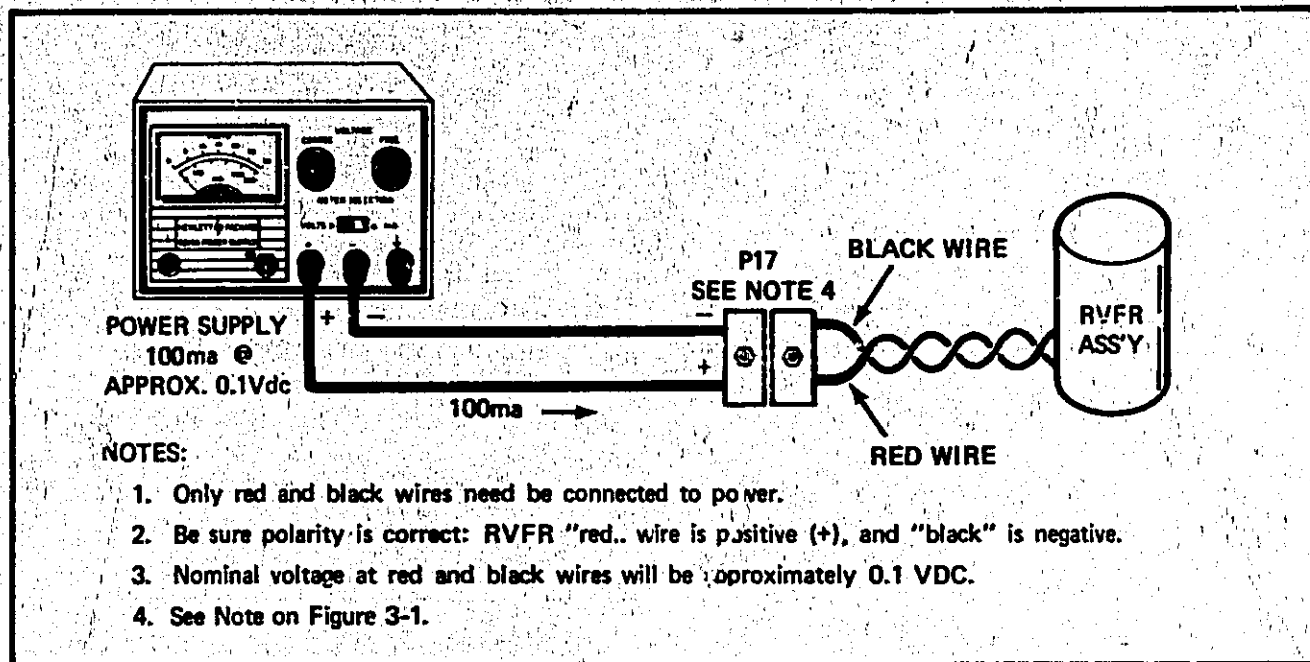Figure 2-1. Electrical Hookup for RVFR Storage



2-13. Alternate methods which provide effective protection for the instrument can also be used, however, the previously described method is considered the better one.

#### 2-14. ELECTRICAL CONNECTIONS

#### 2-15. Power Connection

#### CAUTION

The Model 5065A has the negative side of its power supply grounded. When operating with auxiliary equipment such as an external battery or clock, check to ensure that the equipment can be connected together.

2-16. LINE VOLTAGE. The Model 5065A can be operated from either 115- or 230-volt ( $\pm 10\%$ ) ac power lines. A slide switch on the rear panel permits quick conversion for operation from either voltage. Insert a narrow-blade screwdriver in the switch slot and set the switch to expose the correct numbers to correspond to the line voltage used (Table 2-1). The instrument is supplied with a 115-volt fuse; change this fuse for 230-volt operation (Table 2-1).

#### IMPORTANT

Before connecting ac power to the instrument, be certain slide switch is properly positioned for 115 or 230 volt operation.

Table 2-1. 115/230 Volt Conversion

Conversion	115 Volts	230 Volts
Slide Switch	Right	Left
AC Line Fuse	1A slo-blo	0.5 A slo-blo

2-17. POWER CABLE. The Model 5065A is equipped with a detachable three-conductor power cable. Install as follows:

a. Connect the round, three-conductor female plug to the ac line jack on the instrument rear panel.

b. Connect male plug (two-blade with round grounding pin) to three-conductor (grounded) outlet. Exposed portions of the instrument are grounded through the round pin for safety; when only two-conductor outlets are available, use connector adapter (HP Stock No. 1251-0048) and connect short wire from adapter to a suitable ground.

#### 2-18. Mating Connectors

2-19. Table 2-2 lists the Model 5065A front and rear panel connectors and their respective mating connectors. Not all connectors listed are shipped with the instrument but are included in the table as useful information for installation.

**2-20. OPERATION AS BENCH OR RACK INSTRUMENT**

2-21. The Model 5065A is shipped from the factory ready for operation as a bench instrument. Parts necessary to convert the instrument for operation as a rack-mounted instrument are not supplied. When ordered separately, Rack Mounting Kit is available by ordering HP Part No. 5060-8740. To convert for rack operation, refer to Figure 2-1 and proceed as follows:

- a. Remove feet (press the foot-release button, slide foot forward toward center of instrument, and lift off).
- b. Remove adhesive-backed trim strips on sides, just behind front handles.
- c. Attach filler strip along bottom edge of front panel.
- d. Attach mounting brackets to sides (larger corner notch toward bottom of instrument, see Figure 2-2). Instrument is now ready to mount in standard, 19-inch rack.

**2-22. INSTALLATION LOCATION**

2-23. The Rb<sup>87</sup> absorption cell in the RVFR Assembly A12 is slightly sensitive to external magnetic fields. Avoid installing this instrument near large motor-generators, transformers, or other equipment which radiate strong magnetic fields of 2 Gauss or more.

Figure 2-2. Conversion for Rack Mounting

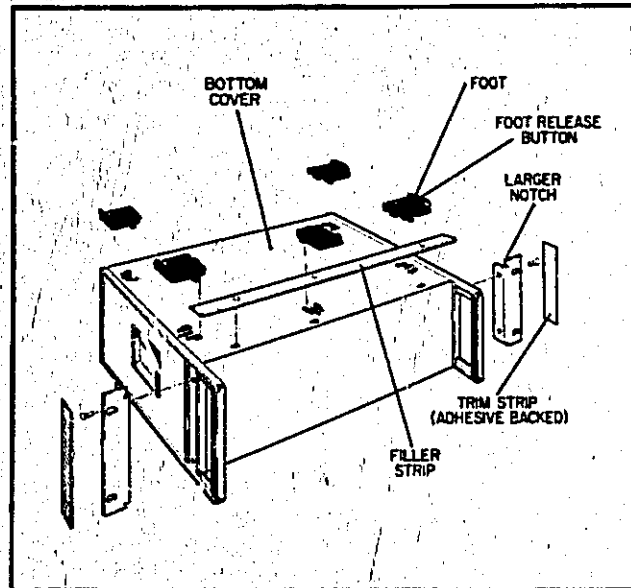


Table 2-2. Mating Connectors

Connector Description	Connector HP Part No.	Mating Connector HP Part No.	Mating Connector Description
Rear BNC Female jack (J1, 2, 3, 4, 5)	1250-0140	1250-0061*	BNC male plug, UG88/U
EXT DC, 5-pin male jack (J9)	1251-0111	1251-0126	5-pin female plug
AC LINE, 3-pin male jack (J8)	1251-1458	1251-2457	3-pin female plug
Front Panel OUTPUT Signal jacks (J10, 11, and 12)	1250-0102	1250-0061*	BNC male plug, UG88/U
1 PPS, BNC jack (J14) Option 001 only	1250-0102	1250-0061*	BNC male plug, UG88/U
*These connectors not shipped with the instrument.			

**OPERATION**

## SECTION III

### OPERATION

#### 3-1. INTRODUCTION

3-2. This section provides operating procedures for the 5065A Rubidium Vapor Frequency Standard. Tables 3-1 and 3-2 gives the basic turn-on procedure. Figures 3-9, 3-10, and 3-11 explain front, top, and rear controls and connectors.

#### 3-3. OPTIONS 001 AND 002 (Option 003 = 001 and 002)

3-4. Operating procedures for Option 001 (Time Standard) and Option 002 (Standby Power Supply) are covered in Paragraphs 3-19 through 3-31.

#### 3-5. OPERATING PROCEDURE

##### 3-6. General

3-7. In instruments equipped with Option 002, Standby Power Supply, remember that the internal standby battery is fully discharged when delivered and must be brought to full charge (16 hours minimum) before it can deliver rated standby power. Battery charging instructions are included in Figure 3-2, Turn-On Procedure. For more standby power, available accessories are the HP Model 5085A Standby Power Supply or HP Model K02-5060A Power Supply.

##### 3-8. Turn-On Procedure (see Figure 3-2)

##### 3-9. Turn-On After Long Storage


If the 5065A has been in storage for longer than 2 months, there is a possibility of cell flooding occurring in the RVFR tube. If after 1 hour of warm-up from initial turn-on no 2nd harmonic is present, then cell flooding can be suspected. The following procedure should be used to correct cell flooding.

- a. Remove all power from 5065A and remove bottom cover.
- b. Disconnect the red and black twisted pair of wires from XA4(1) and XA8(1) respectively.
- c. Obtain a current-limiting power supply capable of producing 1 amp (power supply voltage is not important).
- d. Before turning on power supply, place a short across its output terminals.
- e. Connect the power supply as shown in Figure 3-1. The short should remain in place on the power supply output.
- f. Set power supply voltage and current controls to minimum position. The precautions of steps d, e, and f are to prevent the filter capacitor on the power supply output from discharging into the RVFR.

Table 3-1. Operating Checks

CIRCUIT CHECKS		
Switch Position	Meter Indication	Description
BATTERY	35-45 Option 002)	Indicates battery voltage
SUPPLY	38 - 42	Indicates +20 volts regulated supply
LAMP OVEN	10 - 45	Indicates power to lamp oven in RVFR
CELL OVEN	10 - 45	Indicates power to absorption cell oven in RVFR
OSC OVEN	25 - 50	Indicates power to quartz OSC oven
PHOTO I	25 - 50	Indicates RVFR output current
5 MHz	35 - 45 (no load)	Indicates 5 MHz output level
CONTROL	-50 to +50	Indicates dc control voltage to quartz oscillator
ERROR	0	Indicates frequency difference between RVFR and microwave field as a dc voltage
2ND HARMONIC	20 - 50	Indicates 2ND HARMONIC level
1 MHz	38 - 42 (no load)	Indicates 1 MHz output level
100 kHz	38 - 42 (no load)	Indicates 100 kHz output level

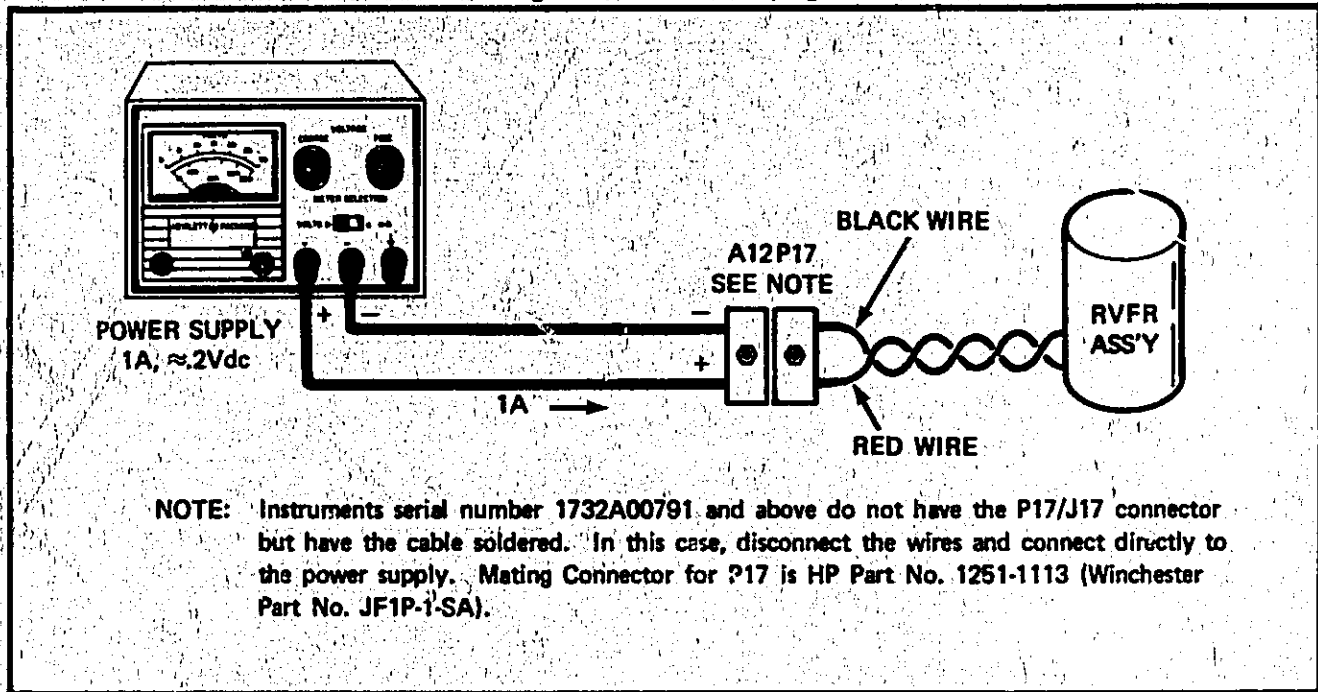Figure 3-1. RVFR Pumping



g. Turn on Power Supply and adjust voltage high enough so output current can be set with current-limit control. Read current on power supply meter.

h. Set current-limit control so supply output current is 1A.

i. Reduce voltage control setting so that it is just above the point where further reduction would reduce the power supply output current.

j. Recheck polarity of power supply connection to A12P17. This must be properly connected.

k. Remove short from power supply output to allow current to flow into the RVFR. Adjust power supply voltage and/or current limit to bring current to 1A.

l. Reconnect 5065A to AC line. Set front panel MODE switch to LOOP OPEN, meter switch to 2nd HARMONIC. Allow power supply and 5065A to operate continuously.

m. Within 12 to 48 hours signal should begin to appear on 2ND HARMONIC meter. NOTE: the quartz oscillator on the 5065A must be within about  $1 \times 10^{-7}$  of 5 MHz for the signal to appear. If possible, set the 5065A oscillator against a reference standard before proceeding.

n. Check 2ND HARMONIC meter readings twice per day until reading is greater than 10 or reaches a maximum. If this does not occur within 15 days then cell flooding is not the problem.

o. When checking 2ND HARMONIC meter reading also record meter reading in PHOTO 1 position.

p. When 2ND HARMONIC reading is maximum or greater than 10, remove power from 5065A. Remove power supply connection, and reconnect red wire to XA4(1) and the black wire to XA8(1).

q. Replace bottom cover and reconnect AC power to 5065A. The 5065A internal circuit will now optimize the rubidium in the RVFR. Operate the 5065A continuously for about 1 week. The 2ND HARMONIC reading should stabilize. If the meter stabilizes at greater than 25 the instrument can be returned to service. If the reading is less than 25 perform adjustments described in paragraphs 5-24 thru 5-31 in the 5065A Operating and Service Manual.


### 3-10. FREQUENCY OFFSET AND CALIBRATION

3-11. The Rubidium Vapor Frequency Standard is a secondary frequency standard with a specified long term stability drift less than 1 part in  $10^{11}$  per month.

3-12. Over a period of time, it may be necessary to check the offset that has accrued since last calibration and recalibrate the instrument to a primary frequency standard.

3-13. Frequency adjustment can be made after determining the frequency error with respect to a reference. Front panel MAGNETIC FIELD control is then adjusted to correct any frequency offset.

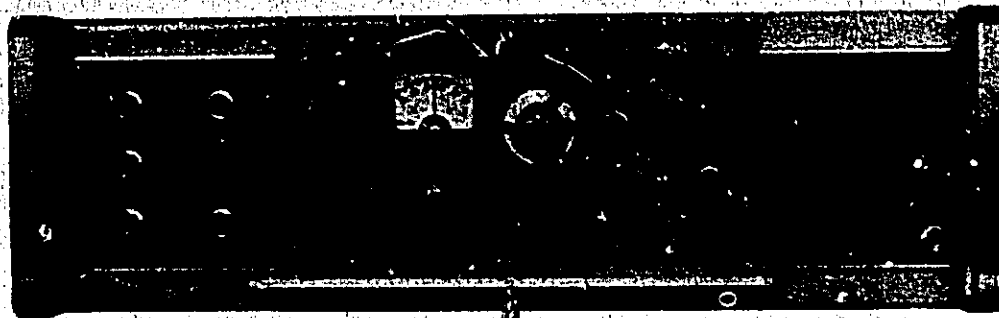Figure 3-2. Turn-On Procedure



1. Set rear 115/230 Vac switch to correspond with line voltage used.
2. Check that function switch is set at OPER and OSC FREQ FINE is set at 250. It should remain in this position during normal operation.
3. Connect ac power cord (supplied) between rear ac jack and ac line power.
4. On units equipped with Option 002, Standby Power Supply, press BATTERY switch to RESET; then switch to FAST CHARGE. Note that BATTERY lamp comes on. If ac line power falls, the BATTERY lamp will pulse.
5. Allow 1-hour warmup and then press START/AUTO to START momentarily. In units equipped with Option 001, a mechanical lock prevents placing this switch at AUTO START.
6. Press LOGIC RESET. CONTINUOUS OPERATION lamp should come on to indicate that frequency-stabilizing feedback loop is locked. If not, refer to Section V. Use 50 $\Omega$  load on outputs.
7. Rotate CIRCUIT CHECK (all positions) and check for meter readings (Table 3-1). If readings do not check out, refer to troubleshooting information in Section V. Note: After a 1-hour

warmup, the 5065A is within approximately 1 part in 10<sup>10</sup> of the UTC Time Scale and within approximately 5 parts in 10<sup>11</sup> after 4 hours.

#### NOTE

If CONTINUOUS OPERATION lamp goes off after instrument has warmed up, the CIRCUIT CHECK meter switch should be set to the LAMP OVEN and CELL OVEN positions. If either meter indication is full scale, the instrument should be turned off immediately. If not the RVFR assembly could be damaged.

8. Let the 5065A battery continue to fast charge for a total of 16 hours. At the end of this time, set BATTERY switch to FLOAT for a continuous trickle charge.
9. After 24 hours running time, thermal equilibrium is established and meter readings are stabilized. Rotate CIRCUIT CHECK switch through all positions and record readings on the door chart.
10. See Paragraph 5-7 for periodic adjustments.

Table 3-2. Front Panel Lamp Indications

FRONT PANEL LIGHTS		DESCRIPTION
INTEGRATOR LIMIT	CONTINUOUS OPERATION	
OFF	ON	Indicates Normal Operation
ON	ON	Indicates quartz oscillator is locked to resonant frequency of RVFR but oscillator has exceeded one-half its control range. To correct this proceed as follows: <ol style="list-style-type: none"> <li>1. Set CIRCUIT CHECK switch to CONTROL.</li> <li>2. Adjust OSC FREQ ADJ COARSE control for zero on CIRCUIT CHECK meter. NOTE: this adjustment may cause CONTINUOUS OPERATION lamp to go off. If this occurs, momentarily press LOGIC RESET button. CONTINUOUS OPERATION lamp should come on and stay on.</li> </ol>
ON	OFF	Indicates one of the following troubles: <ol style="list-style-type: none"> <li>1. Quartz oscillator control limit has been exceeded. To correct, set CIRCUIT CHECK to CONTROL, adjust OSC FREQ ADJ COARSE for zero on CIRCUIT CHECK meter, then momentarily press LOGIC RESET.</li> <li>2. Synthesizer Assembly A1 failure.</li> </ol>
OFF	OFF	Press LOGIC RESET switch. If CONTINUOUS OPERATION lamp does not come on, look for one or more of the following troubles: <ol style="list-style-type: none"> <li>1. Quartz oscillator not locked to Rubidium resonance.</li> <li>2. 2nd harmonic signal too low.</li> <li>3. Fundamental signal too high.</li> <li>4. Cell or lamp ovens not operating normally. Check CELL OVEN and LAMP OVEN on CIRCUIT CHECK meter. If meter is maximum TURN INSTRUMENT OFF.</li> <li>5. Synthesizer failure.</li> <li>6. FUNCTION switch not set to OPER.</li> </ol>

3-14. The two following calibration technique measures the changing phase relationship between the 5065A 5 MHz output and a primary frequency standardd (HP 5061A Cesium Beam Frequency Standard or equivalent) 5 MHz output over an 8-hour period. Either procedure may be used and both are equally accurate. The phase change is converted to frequency error and the necessary MAGNETIC FIELD adjustment is set in.

3-15. The procedure is divided into two parts; Table 3-9 lists recommended test instruments and equipment.


However, items with equivalent specifications may be substituted.

- a. Calibrating the measurement system.
- b. Performing the error measurement.

3-16. Calibrating the Measurement System: To calibrate the system for phase error measurement, proceed as follows:

- a. Connect equipment as shown in Figure 3-5.
- b. Set HP 8405A FREQ RANGE to agree with input frequency (5 MHz).

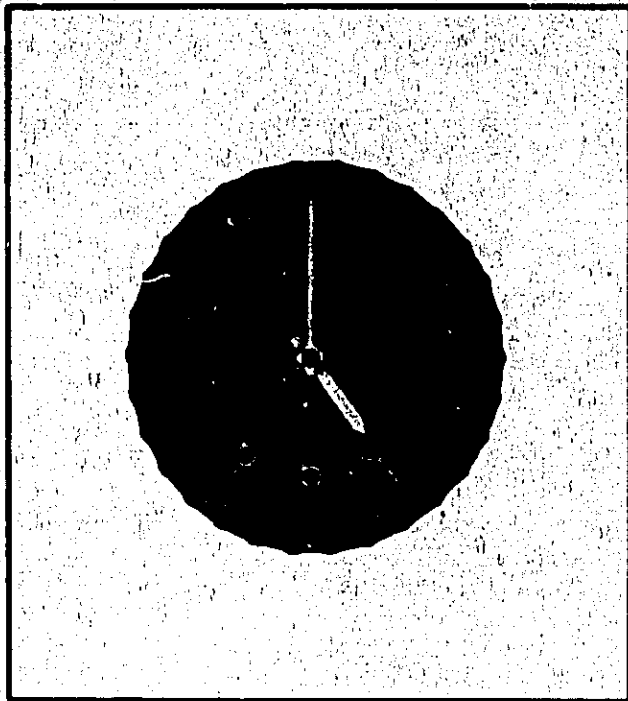Figure 3-3. Magnetic Field Control



c. Zero HP 8405A PHASE meter by cranking in necessary offset with METER OFFSET control and the red ZERO knob.

d. With the meter zeroed, set the RANGE switch at +6. Recenter the PHASE meter with the red ZERO knob.

e. Set strip chart recorder range to .5 volt. Set pen to chart scale center with recorder zero control.

f. Set HP 8405A phase range to  $\pm 180$  and change METER OFFSET by  $+180^\circ$ .

g. Adjust 10k ohm pot for full scale pen deflection on recorder.

h. Change METER OFFSET polarity to (-) using the center knob of the METER OFFSET CONTROL. Pen should move to opposite chart edge. Make required fine adjustments to record zero and 10k pot for full scale chart deflection. The recorder is now calibrated for  $360^\circ$  or  $0.2\mu\text{sec}$  full scale.

3-17. Frequency Difference Measurement: To perform the frequency difference measurement, proceed as follows:


a. Connect equipment shown in Figure 3-6.

b. Set HP 8405A Vector Voltmeter PHASE RANGE to  $180^\circ$  and METER OFFSET switch to 0.

c. Determine frequency error  $\Delta f/f$  using the relationship  $\frac{\Delta t}{t} = \frac{\Delta f}{f}$ .

d. Since chart calibration is  $0.2\mu\text{sec}$  full range (at 5 MHz), error in proportional parts can be determined from the strip chart record as illustrated in Figure 3-4.

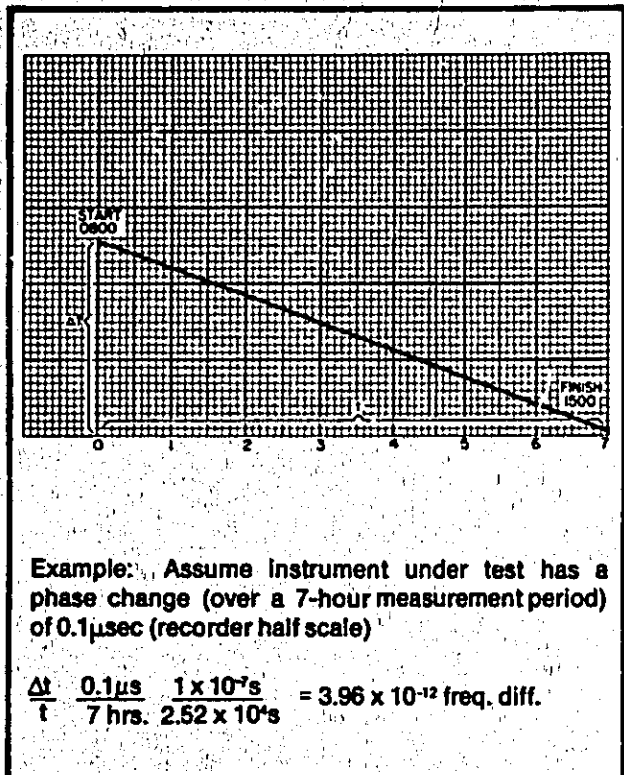Figure 3-4. Error Measurement



Example: Assume instrument under test has a phase change (over a 7-hour measurement period) of  $0.1\mu\text{sec}$  (recorder half scale)

$$\frac{\Delta t}{t} = \frac{0.1\mu\text{s}}{7\text{ hrs.}} = \frac{1 \times 10^{-7}\text{s}}{2.52 \times 10^4\text{s}} = 3.96 \times 10^{-12} \text{ freq. diff.}$$

e. Since one minor division of the MAGNETIC FIELD adjustment changes the 5065A frequency by 4 parts in  $10^{12}$ , in Figure 3-4, the dial would be changed one minor division. During the phase measurement a cw movement of the HP 8405A phase meter indicates the 5065A frequency is higher than the reference standard and a ccw movement indicates the frequency is lower than the reference. If the MAGNETIC FIELD adjustment is at the end of the range:

1. Set the Magnetic Field adjustment to 5.00 and measure the frequency offset again. This is the "desired change in offset" (see Table 3-4). See Table 3-6 for an example of this calculation.

f. Increasing the MAGNETIC FIELD setting increases the 5065A frequency and decreasing this setting lowers it. Make this adjustment as required to align the 5065A with the reference standard.

g. After the MAGNETIC FIELD control has been reset, another phase comparison will show if the adjustment is correct, or if another adjustment is needed.

### 3-18. FREQUENCY COMPARISON USING K34-59991A LINEAR PHASE DETECTOR

a. Connect the K34-59991A OUTPUT terminals to a HP 680 Strip Chart Recorder or equivalent. Set recorder for 1V full scale and 1 in./hr. and turn on recorder.

b. Connect K34-59991A to line power and turn on the power switch.



Table 3-3. Frequency Offset Change Instructions

1. Remove instrument top cover and note setting of TIME SCALE thumbwheel and position of HI-LO switches. Record this information in Item 1.

**NOTE**

Be certain to include the correct algebraic sign (+ or -) with the numbers used in the following calculations.

2. Locate thumbwheel switch setting in Table 3-7 and record the corresponding Offset  $\times 10^{-10}$  value in Item 1 under Offset ( $\times 10^{-10}$ ).

3. Record the desired change in offset under Item 2 in the space provided.

4. Algebraically add the sum of Item 1 and Item 2 (Offset  $\times 10^{-10}$ ) and record the total in Item 3.

5. Locate the nearest Offset  $\times 10^{-10}$  in Table 3-7 that corresponds to the total offset recorded in Item 3. Record this offset, its corresponding TW switch setting, and HI-LO switch setting under Item 4 in the appropriate spaces provided.

6. Algebraically subtract Item 4 from Item 3 and record this remaining Frequency Offset in Item 5.

7. Divide the remainder recorded in Item 5 by 2 and record the answer in Item 6.

**NOTE**

The division in Step 7 is performed to convert the frequency offset to be corrected by MAGNETIC FIELD ADJUSTMENT into front panel MAGNETIC FIELD control setting.

8. Note present front panel MAGNETIC FIELD control setting and record this setting in Item 7.

9. Algebraically add the new MAGNETIC FIELD control setting from the setting recorded in Item 7. Record this total in Item 8.

**NOTE**

If the addition performed in Step 9 gives a negative number or a number greater than 10, the synthesizer setting selected in Item 4 must be changed. Select the adjacent offset from Table 3-7 closest to total offset recorded in Item 3, and record this new information in Item 4. Repeat Steps 5 through 9 using the new data. (See example, Table 3-4.)

10. Record Item 4 and Item 8 information in spaces provided under Item 9.

11. Set Synthesizer Assembly A1, TIME SCALE thumbwheel switch to the new setting recorded in Item 9a.

12. Set Synthesizer Assembly A1, HI-LO switch to the position recorded in Item 9b. Replace instrument top cover.

13. Adjust front panel MAGNETIC FIELD control to the setting recorded in Item 9c. Then perform Frequency Offset and Calibration (paragraph 3-10) again to align the 5065A with the reference standard.

14. Set front panel CIRCUIT CHECK switch to CONTROL and slowly adjust OSC FREQ COARSE control for CIRCUIT CHECK meter indication of "0".

15. If CONTINUOUS OPERATION lamp is off, wait 2 minutes, then momentarily press front panel LOGIC RESET button. CONTINUOUS OPERATION lamp should come on and stay on. The 5065A offset has been changed and the instrument is operating normally.

Table 3-4. Typical Frequency Offset Change, Sample (Insufficient MAGNETIC FIELD Control)

ITEM	OFFSET (x 10 <sup>-9</sup> )	TW SWITCH SETTING	HI-LO SWITCH
1. Present synthesizer Assy TIME SCALE settings (see Table 3-7 for corresponding frequency offset)	<u>-163.770</u>	<u>8619</u>	<u>HI</u>
2. Desired change in Offset	<u>-1 x 10<sup>-9</sup></u>		
3. Sum (Item 1) + (Item 2)	<u>-173.770</u>		
4. Nearest synthesizer setting (Table 3-8)	<u>-172.789</u>	<u>8238</u>	<u>HI</u>
5. Remaining offset to be adjusted by MAGNETIC FIELD control	<u>-.98</u>	$(-173.770) - (-172.789)$ (Item 3) - (Item 4)	
6. Change required in MAGNETIC FIELD control setting	<u>-.49</u>	$\frac{\text{Item 5}}{2}$	$\frac{.03}{2}$
7. Present MAGNETIC FIELD control setting	<u>5.00</u>		
8. New MAGNETIC FIELD control setting	<u>4.51</u>	$(-.49) + (5.00)$	
9. New offset settings are:			
a. Synthesizer TW switch		Item 4	<u>8238</u>
b. Synthesizer HI-LO switch		Item 4	<u>HI</u>
c. MAG FIELD control		Item 8	<u>4.51</u>

Figure 3-5. Equipment Setup for Calibrating Phase Measurement System


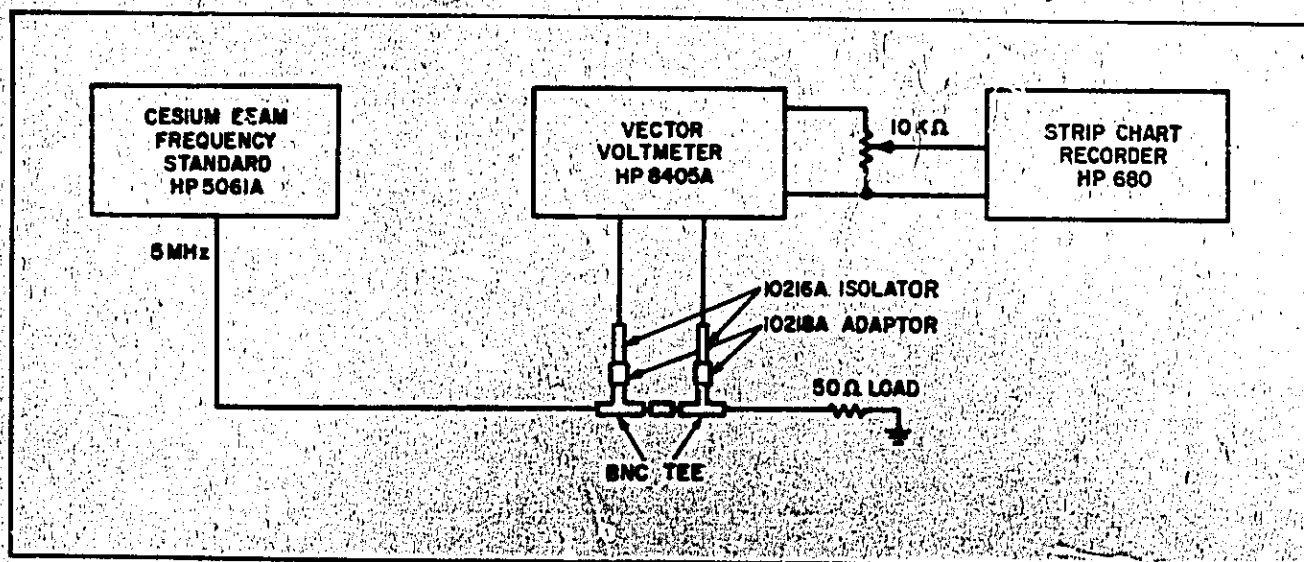


Table 3-5. Typical Frequency Offset Change,  $0 \times 10^{-10}$  Offset to  $-300 \times 10^{-10}$

ITEM	OFFSET ( $\times 10^{-10}$ )	TW SWITCH SETTING	HI-LO SWITCH
1. Present synthesizer Assy TIME SCALE settings (see Table 3-9 for corresponding frequency offset)	_____	_____	_____
2. Desired change in offset	_____		
3. Sum (Item 1) + (Item 2)	_____		
4. Nearest synthesizer setting (Table 3-8)	_____	_____	_____
5. Remaining offset to be adjusted by MAGNETIC FIELD control	_____		(Item 3) - (Item 4)
6. Change required in MAGNETIC FIELD control setting	_____	$\frac{\text{Item 5}}{2}$	
7. Present MAGNETIC FIELD control setting	_____		
8. New MAGNETIC FIELD control setting	_____		Item 6) + (Item 7)
9. New offset settings are:			
a. Synthesizer TW switch			Item 4. _____
b. Synthesizer HI-LO switch			Item 4. _____
c. MAG FIELD control			Item 8. _____

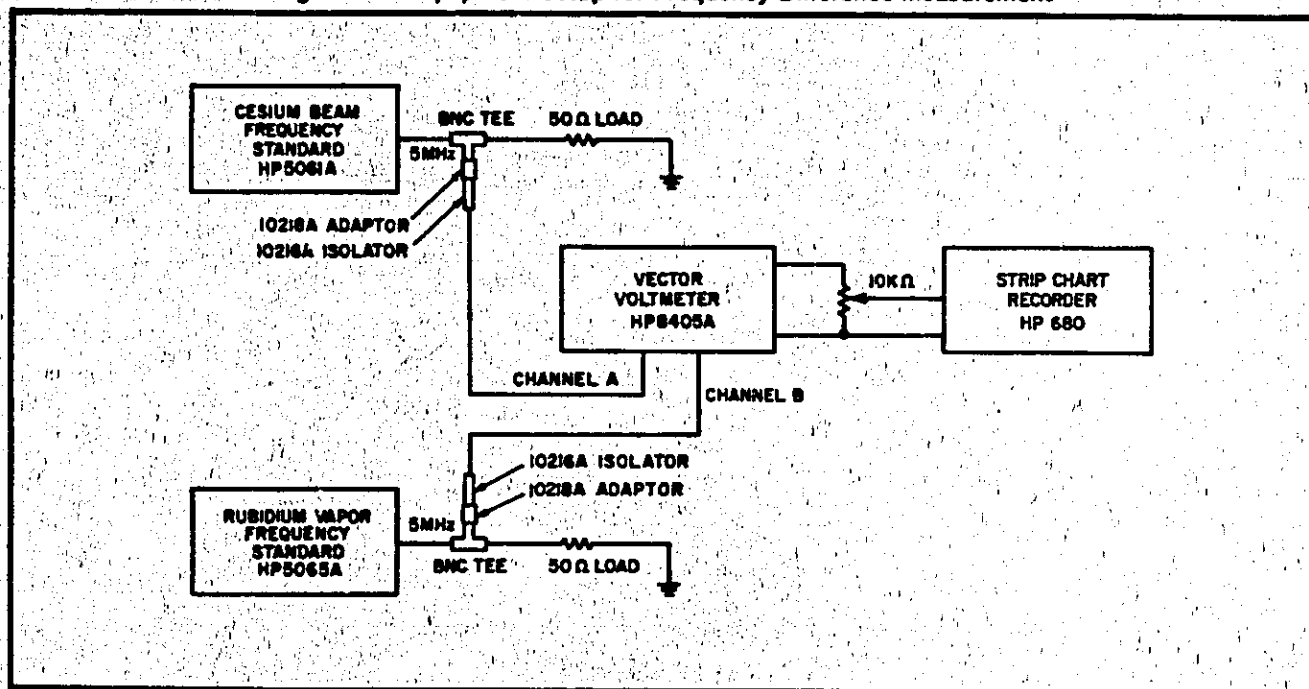Figure 3-6. Equipment Setup for Frequency Difference Measurement



c. Connect a reference 5 MHz to INPUT A and the 5065A 5 MHz output to INPUT B.

d. Set "Zero-Oper-Full" front panel mounted toggle switch to "Zero". Adjust "Zero Scale" control for a zero scale trace on recorder.

e. Set switch to "Full" and adjust "Full Scale" control for a full scale trace on recorder.

f. Check both "Zero" and "Full Scale" outputs and readjust if necessary.

g. The recorder will now provide a continuous record of frequency comparison and will be automatically reset when the recorder pen reaches zero or full-scale position.

h. With the recorder set for 1 volt full scale and 1 in./hr., the phase difference recorder will be 0.2  $\mu$ sec full scale with 5 MHz inputs. See Figure 3-4 for an example of a frequency difference measurement under these conditions.

### 3-19. OPERATION WITH TIME STANDARD OPTION 001 (or 003)

3-20. Option 001 provides Model 5065A with a one pulse-per-second clock output. The divider drive is an internally connected 1 MHz signal from A6 frequency Divider Assembly. TIME DELAY controls are located on the A5 Assembly and can be seen with the top cover removed. The TIME DELAY six thumbwheel switch controls the phase of the clock-pulse output from 1 microsecond to 1 second with respect to an external reference. The 0-1 microsecond TIME DELAY screwdriver adjustment allows fine adjustment over any 1 microsecond portion of the thumbwheel settings.

3-21. The time standard option includes a 24 hour, LED digital clock assembly (A19) which indicates time in hours, minutes and seconds. The SYNC button on Divider Assembly A5 enables the instrument to synchronize to an external reference standard. The digital clock is set by pressing the SET pushbutton, SLOW/FAST switch and HOLD pushbutton (located on rear of clock).

### 3-22. SETTING THE CLOCK PHASE TO AN EXTERNAL CLOCK

3-23. The phase difference between the 5065A 1-PPS output and an external reference clock may be set to any desired point between coincidence and 1 second by using the following procedure. The technique used will depend on the Model 5065A application and individual user requirements.

### 3-24. Automatic Synchronization

3-25. To automatically synchronize the 1-PPS output pulse and the internal clock drive with an external 1-PPS reference, proceed as follows:

a. Remove the top cover for access to TIME DELAY controls.

b. Rotate the 0-1 sec TIME DELAY control maximum cw for minimum delay (do not overtighten).

c. Set the TIME DELAY thumbwheel switches for the desired time delay of the clock pulse. The thumbwheel switches read directly. However, there is a 9-11  $\mu$ sec built-in delay in the digital divider circuit which should be added to the time-delay calculation.

d. Connect the reference pulse to the rear SYNC INPUT jack (must be greater than +5V with less than 50 nanoseconds rise-time and a width greater than 0.5  $\mu$ sec).

e. Press SYNC pushbutton on A5 Assembly and hold down at least 1-second. The next tick of the clock output will be delayed according to the setting of the thumbwheel switches (plus the 9 to 11  $\mu$ sec built-in delay). For more precise adjustment of time delay, the 0-1  $\mu$ sec TIME DELAY provides continuous delay adjustment from 0-1  $\mu$ sec.

f. When the clock pulse is synchronized, the digital clock will advance in synchronism with the instrument 1PPS.

g. For a delay of less than 10  $\mu$ sec, the thumbwheel switches are first set at 999,999. Then the thumbwheel setting is decreased as required and final adjustment is made with the 0 to 1  $\mu$ sec TIME DELAY control. Use an arrangement like that of Figure 3-8 to accurately measure time intervals between the two 1-PPS pulses. For short delay intervals, use an oscilloscope. For longer delay intervals, use the optional counter arrangement.

### 3-26. Manual Synchronization

3-27. If the reference pulse does not meet the requirements for sync operation ( $>+5V$ ,  $<50$  nanosecond rise time, and width  $>0.5 \mu$ sec), use the technique of Figure 3-8 to measure time intervals. Set time delay of the 5065A 1-PPS output as required with the TIME DELAY thumbwheel switches and 0-1  $\mu$ sec control. For small delay intervals, use an oscilloscope. For larger delay intervals, use the optional counter arrangement.

### 3-28. Setting the Clock

a. Remove top cover.

b. Set hours, minutes, and seconds by placing the SLOW/FAST toggle switch at FAST, and momentarily depress the SET pushbutton for rapid advance of the display. Place toggle switch to SLOW and press SET pushbutton for slow advance of the display.

c. Set seconds on the display slightly ahead of the reference clock, and then press the HOLD pushbutton. Release HOLD pushbutton when reference clock time is identical to the digital clock.

d. Replace the instrument top cover.

Table 3-8. Offset Frequency Settings

Offset (x 10 <sup>-6</sup> )	Synthesizer Thumbwheel Setting	Synthesizer Frequency	Hi-LO Switch Setting	Offset (x 10 <sup>-6</sup> )	Synthesizer Thumbwheel Setting	Synthesizer Frequency	Hi-LO Switch Setting
-1000.619	9348	5314417.18	LO	-484.432	9587	5314769.98	HI
-986.764	9189	5314426.83		-472.694	8491	5314778.00	
-977.485	9030	5314432.99		-468.270	8904	5314781.02	
-970.804	8871	5314437.56		-458.497	9317	5314787.70	
-958.700	8394	5314445.83		-447.258	9047	5314795.38	
-950.573	7758	5314451.38		-440.981	8777	5314799.67	
-940.729	5691	5314458.11		-430.592	7697	5314806.77	
-930.051	9841	5314465.41		-418.827	9730	5314814.81	
-911.851	7472	5314477.85		-403.318	8253	5314825.41	
-903.502	8267	5314483.55		-396.379	8793	5314830.16	
-893.419	8744	5314490.45		-389.910	9063	5314834.58	
-888.110	8903	5314494.07		-378.205	9333	5314842.58	
-881.000	9062	5314498.93		-367.897	8936	5314849.82	
-870.988	9221	5314505.78		-360.496	8142	5314854.88	
-855.841	9380	5314516.13		-350.578	9603	5314861.46	
-844.926	8919	5314523.59		-336.597	8682	5314871.02	
-840.537	8458	5314526.59		-330.570	9079	5314875.14	
-830.246	9539	5314533.62		-315.411	9476	5314885.50	
-817.281	8776	5314542.48		-303.530	8825	5314893.62	
-809.448	9237	5314547.84		-293.988	9349	5314900.15	
-800.445	8935	5314553.99	-286.102	8571	5314905.53		
-789.990	8029	5314561.14	-279.522	9222	5314910.03		
-777.700	9698	5314569.54	-269.131	9095	5314917.13		
-763.045	8347	5314579.55	-255.182	8841	5314926.66		
-754.607	8951	5314585.32	-250.274	8714	5314930.02		
-745.271	9253	5314591.70	-240.036	8333	5314937.01		
-737.056	8808	5314597.32	-230.504	7693	5314943.53		
-723.264	9555	5314606.74	-221.054	6301	5314949.99		
-712.141	8522	5314614.34	-205.481	9873	5314960.63		
-707.350	8967	5314617.62	-191.251	5952	5314970.36		
-695.305	9412	5314625.85	-181.450	7603	5314977.05		
-685.673	8681	5314632.30	-172.789	8238	5314982.97		
-678.286	9269	5314637.48	-163.770	8619	5314989.14		
-668.835	9126	5314645.31	-154.369	8873	5314995.56		
-658.605	8983	5314650.93	-147.878	9000	5315000.00		
-647.504	8697	5314658.48	-139.498	9127	5315005.73		
-640.497	8411	5314663.31	-128.265	9254	5315013.40		
-630.506	7696	5314670.14	-112.423	9381	5315024.23		
-621.028	5980	5314676.62	-101.785	8889	5315031.50		
-608.302	9857	5314685.31	-97.677	8397	5315034.31		
-591.175	7013	5314697.02	-88.401	9508	5315040.65		
-582.542	8014	5314702.92	-77.379	8651	5315048.18		
-572.122	8586	5314710.04	-71.051	9143	5315052.51		
-562.949	8872	5314716.31	-60.293	8413	5315059.86		
-556.364	9015	5314720.81	-47.664	9635	5315068.49		
-547.544	9158	5314726.84	-32.628	8667	5315078.77		
-535.114	9301	5314735.34	-26.959	9032	5315082.64		
-526.775	8745	5314741.04	-14.426	9397	5315091.21		
-516.291	9444	5314748.20	-6.024	8556	5315096.95		
-502.712	9031	5314757.48	0.000	9159	5315101.07		
-497.249	8618	5314761.22	HI				

**Table 3-7. Synthesizer Setting vs. Frequency Offset**  
(See Table 3-6 for Thumbwheel Switch Settings)

Synthesizer Thumbwheel Setting	Offset (x 10 <sup>-10</sup> )	Synthesizer Thumbwheel Setting	Offset (x 10 <sup>-10</sup> )
5691	-940.729	8889	-101.765
5952	-191.251	8903	-888.110
5980	-621.028	8904	-468.270
6301	-221.054	8919	-844.926
7013	-591.175	8935	-800.445
7472	-911.851	8936	-367.897
7603	-181.450	8951	-754.607
7696	-630.506	8967	-707.350
7697	-430.592	8983	-658.605
7698	-230.504	9000	-147.878
7758	-950.573	9015	-556.364
8014	-582.542	9030	-977.485
8029	-789.990	9031	-502.712
8142	-360.496	9032	-26.959
8238	-172.789	9047	-447.258
8253	-403.318	9062	-881.000
8267	-903.502	9063	-389.910
8333	-240.036	9079	-330.570
8347	-763.045	9085	-269.131
8394	-958.700	9126	-666.835
8397	-97.677	9127	-139.498
8411	-640.497	9143	-71.051
8413	-60.293	9158	-547.544
8458	-840.537	9159	-0.000
8491	-472.694	9189	-966.784
8522	-712.141	9221	-870.988
8558	-6.024	9222	-279.522
8571	-286.102	9237	-809.448
8586	-572.122	9253	-745.271
8618	-497.249	9254	-128.265
8619	-163.770	9269	-678.286
8651	-77.379	9301	-535.144
8667	-32.628	9317	-458.497
8681	-685.873	9333	-378.205
8682	-336.597	9348	-1000.819
8697	-647.564	9349	-293.966
8714	-250.274	9380	-855.841
8744	-893.419	9381	-112.423
8745	-526.775	9412	-695.305
8776	-817.281	9444	-516.291
8777	-440.981	9476	-315.411
		9539	-830.264
8793	-396.379	9555	-723.264
8808	-737.056	9587	-484.432
8825	-303.530	9603	-350.578
8841	-255.182	9698	-777.700
8871	-970.804	9730	-418.827
8872	-562.949	9857	608.302
8873	-154.369	9873	-205.481

**Table 3-8. Recommended Test Equipment**

Instrument Type	Required Characteristics	Recommended Instrument
Frequency Standard	Frequency: 5 MHz Output Level: 1 V rms into 50 ohms	HP Model 5061A
Recorder	Strip Chart, 1 inch/hr.	HP Model 680
Vector Voltmeter	Frequency: 1 MHz to 1 GHz Voltage range: 1.5 mV to 1 V rms	HP Model 8405A
Terminations	Impedance: 50 ohms	HP Model 11048B

**3-29. OPERATION WITH STANDBY POWER SUPPLY OPTION 002**

3-30. Option 002 provides the 5065A with at least 10 minutes of standby power so that the Model 5065A can be moved; for example, from one room to another. Maximum recharge (FAST CHARGE) takes 16 to 18 hours. Necessary recharge time can be calculated on the basis of 1 1/2 hours charge time per minute of standby operation up to a maximum of 16 to 18 hours. The front-panel BATTERY warning light indicates three battery-circuit conditions:

- a. Flashes on and off when instrument is powered from internal battery supply (when disconnected from line power).
- b. On when battery is being FAST CHARGED (with 5065A connected to line power).
- c. Off with BATTERY switch at FLOAT (continuous trickle charge).

3-31. If the instrument must be turned off for any reason, remove ac power and then momentarily disconnect F4 (this is the fuse located over the battery). In this manner, relay A2K1 is unlatched to de-energize the circuits and prevent battery drain.

Figure 3-7. Internal Measurement with Automatic Synchronization

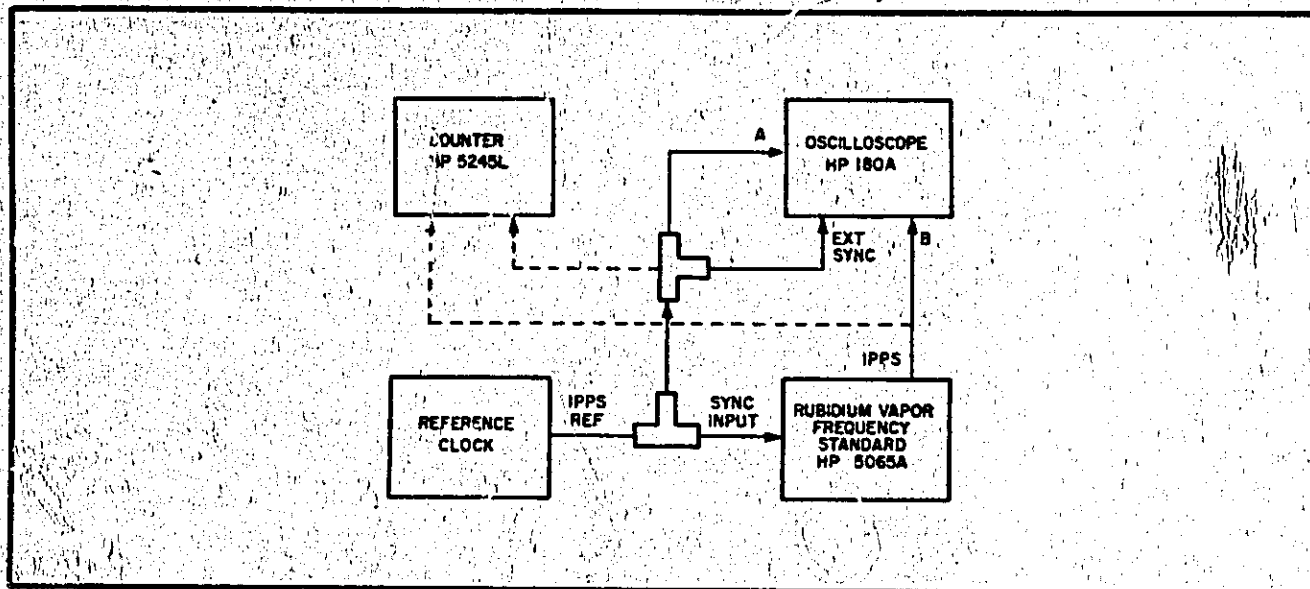


Figure 3-8. Internal Measurement with Manual Synchronization


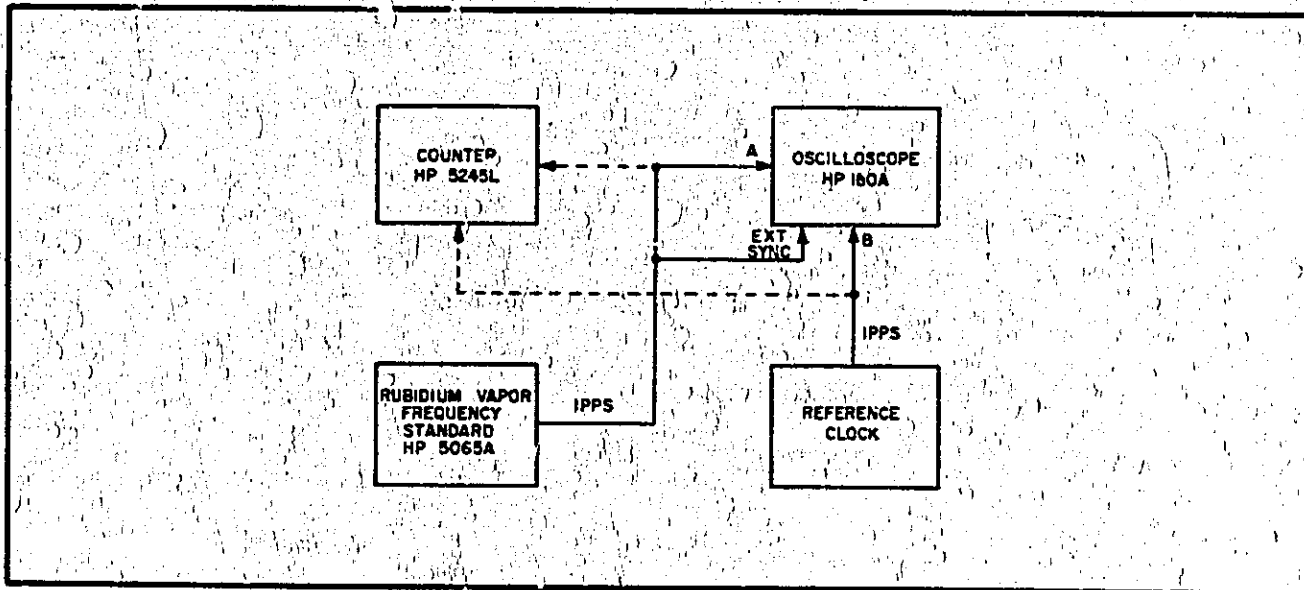



Figure 3-9. Front Panel Controls

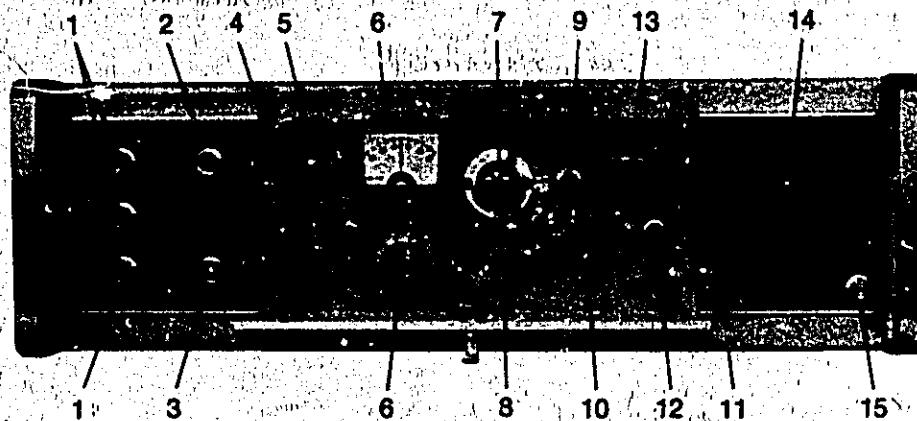

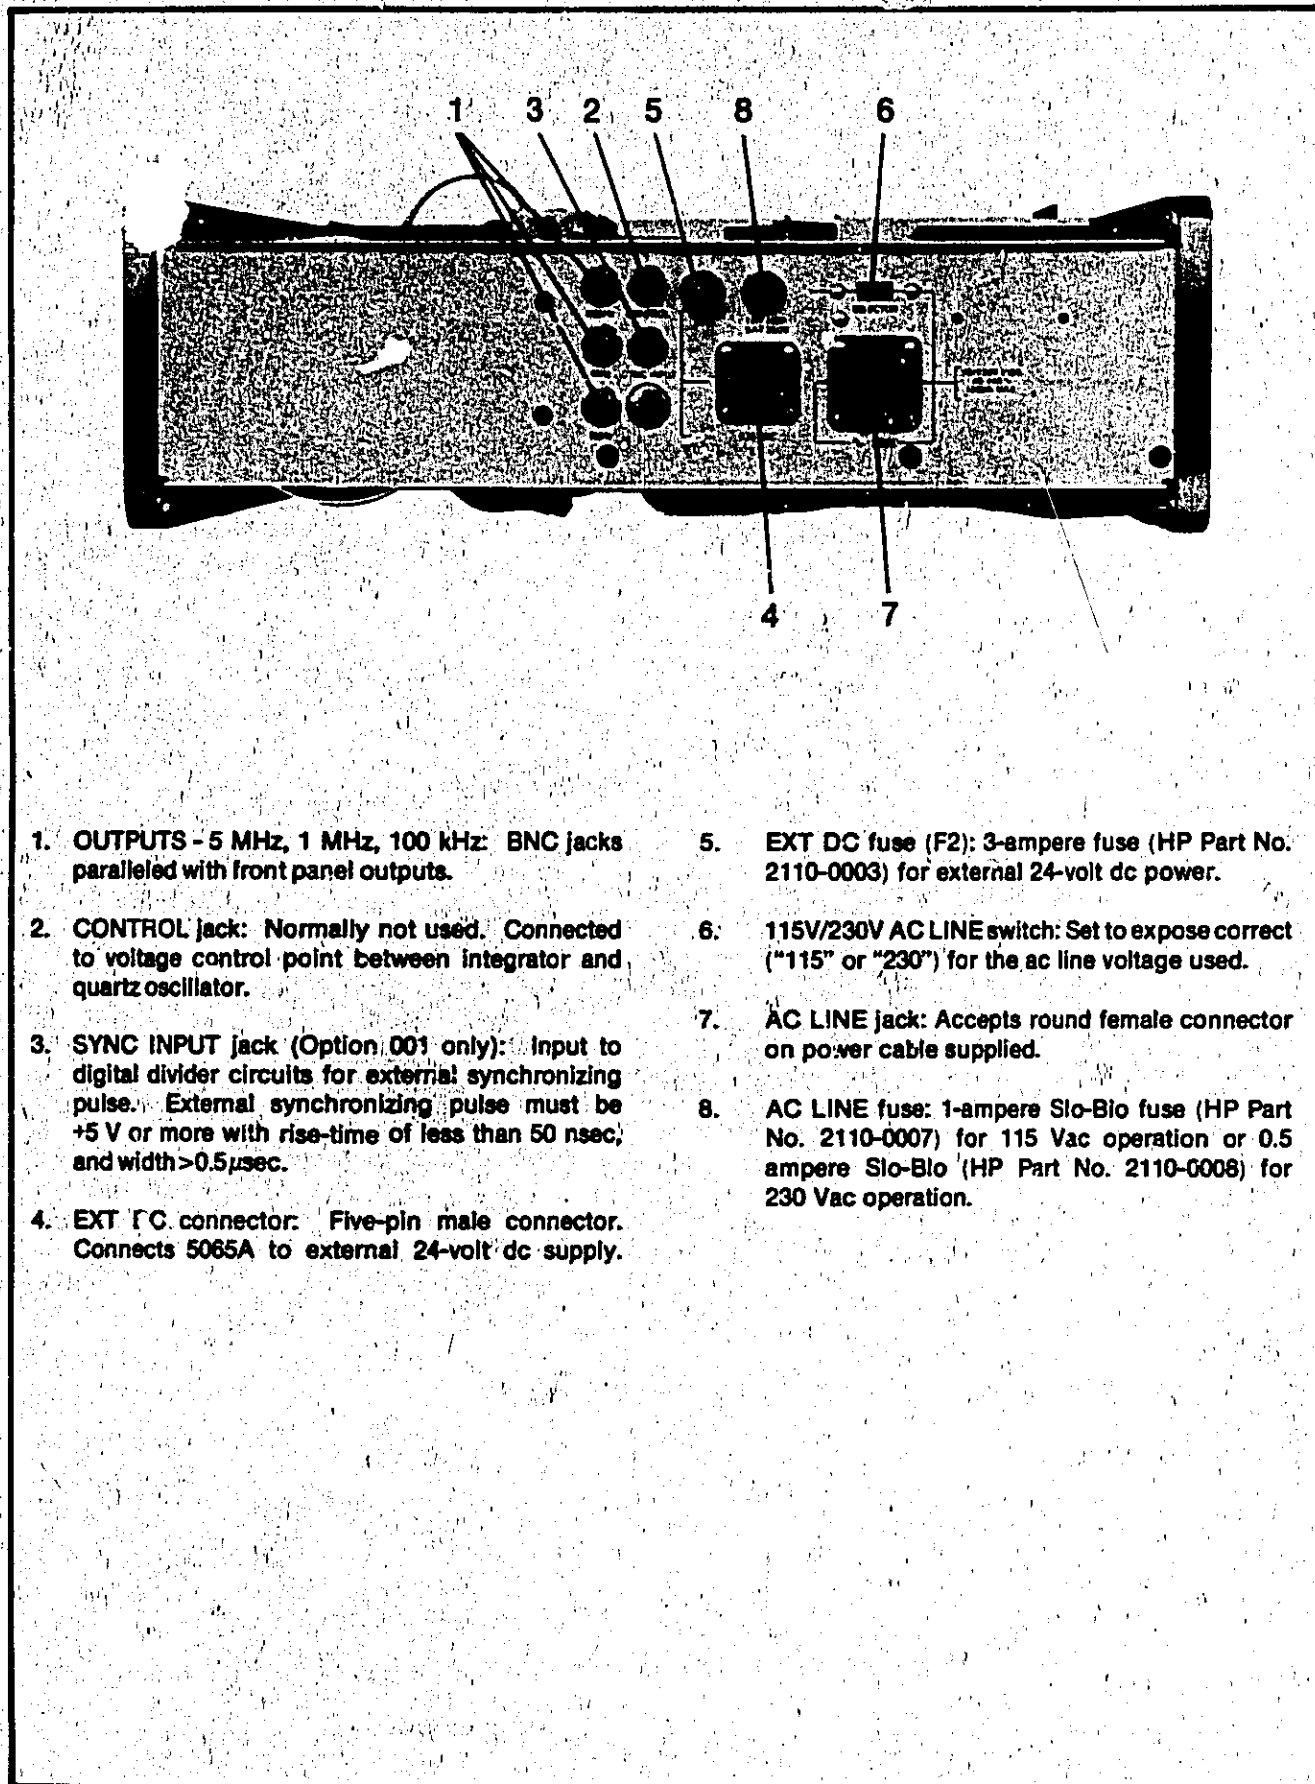1. **OUTPUTS:** 5 MHz, 1 MHz, 100 kHz: BNC jacks paralleled with rear-panel outputs. Output level is 1 volt rms (minimum) into 50 ohm load.
2. **INTEGRATOR LIMIT lamp:** Normally off indicating that quartz oscillator dc correction voltage is less than the dynamic limit of  $\pm 5$  Vdc. When ON, indicates that quartz oscillator dc correction voltage is approaching the dynamic limit of  $\pm 5$  Vdc.
3. **CONTINUOUS OPERATION lamp:** Normally on, indicates circuits are functioning properly.
4. **START-AUTO/START divider mode switch:** Allows regenerative dividers to be operated in one of two modes: to manually start dividers, momentarily press to START, then release; for automatic start, set to AUTO START.
5. **LOGIC RESET switch:** Push to reset logic circuit and enable CONTINUOUS OPERATION lamp when operation is resumed after power interruption, repair, or adjustment.
6. **CIRCUIT CHECK meter and switch:** Provides monitoring of various circuits for operation checks and trouble indication, as specified in Table 5-3.
7. **MAGNETIC FIELD adjustment:** A high-resolution, 10-turn potentiometer with clock dial; controls the magnetic field within the RVFR Assy. Used as a fine control to set the 5065A to a specific frequency. A change of one minor division will change the frequency by 4 parts in  $10^2$ . Total adjustment is 2 parts in  $10^6$ .
8. **FUNCTION switch:** Controls the instrument mode of operation. OPERATE: Instrument operating with quartz oscillator locked to the RVFR resonant frequency. LOOP OPEN: All circuits operating with loop open.
9. **SYNTHESIZER CHECK jack:** Synthesizer Assembly A1 output frequency is available at this BNC jack to check Synthesizer operation as outlined in TIME SCALE CHECK of Table 5-2.
10. **BATTERY switch (Option 002 and 003 only):** Controls BATTERY lamp and internal standby battery charging rate. Three position switch has three functions:
  - a. **FAST CHARGE:** Charges battery at rapid rate with 16 hours maximum charging time.
  - b. **FLOAT:** Standby battery receives trickle charge (normal position).
  - c. **RESET:** Resets BATTERY lamp circuits after ac line power failure.
11. **BATTERY lamp (Option 002 and 003 only):** Operates with front panel BATTERY switch. Flashes on and off when ac power fails. When BATTERY switch is set to FAST CHARGE (16 HOURS MAX) lamp is on. Set BATTERY switch to RESET to turn lamp off.
12. **OSC FREQ ADJ COARSE:** Provides quartz oscillator frequency adjustment of 1 part in  $10^6$ . Use only COARSE control to correct oscillator frequency with frequency-locked operation.
13. **OSC FREQ ADJ FINE:** Control used for testing only. Normally set to 250.
14. **24-Hour Digital Clock (Option 001 and 003 only):** See Paragraph 3-29.
15. **1 PPS (Option 001 and 003 only):** +10V peak, 20  $\mu$ sec pulse at 1 pulse-per-second rate.

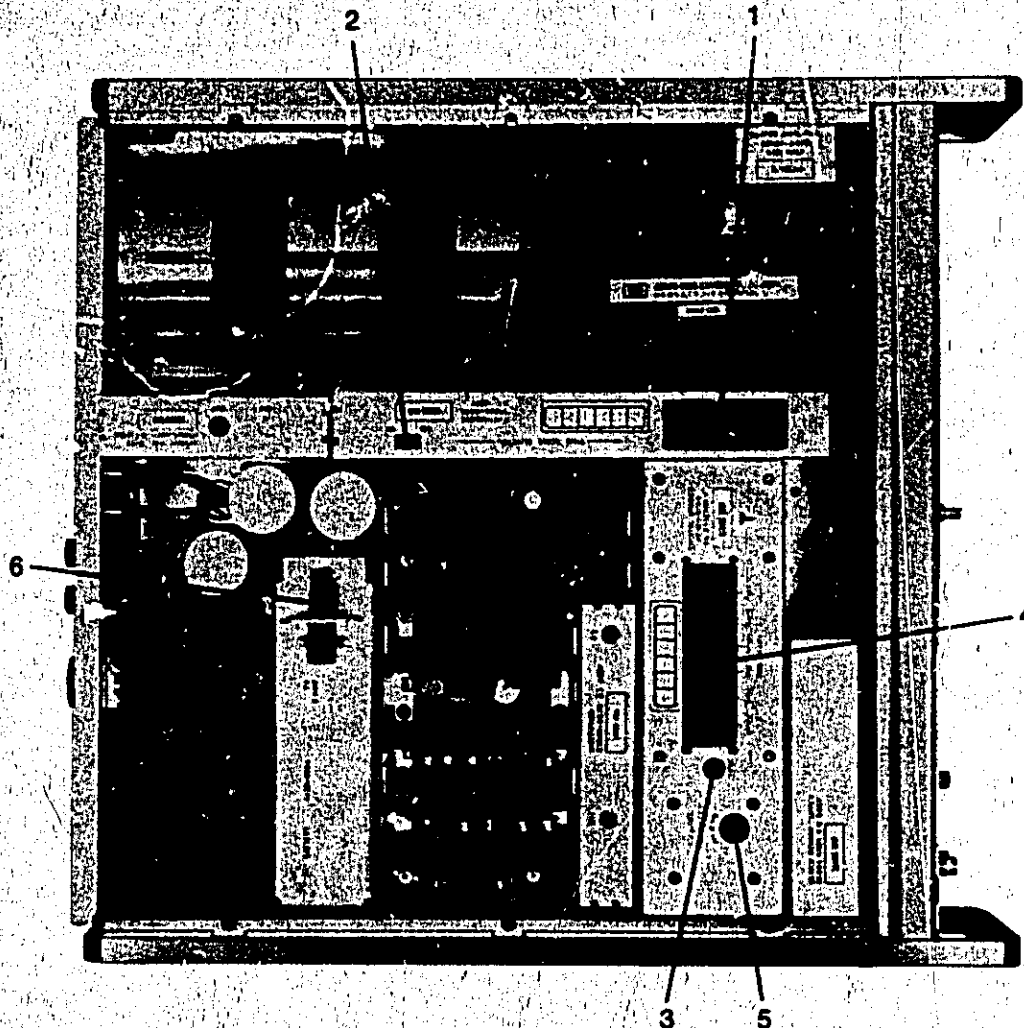


Figure 3-10. Rear Panel Operating Controls



1. **OUTPUTS - 5 MHz, 1 MHz, 100 kHz:** BNC jacks paralleled with front panel outputs.
2. **CONTROL jack:** Normally not used. Connected to voltage control point between integrator and quartz oscillator.
3. **SYNC INPUT jack (Option 001 only):** Input to digital divider circuits for external synchronizing pulse. External synchronizing pulse must be +5 V or more with rise-time of less than 50 nsec, and width  $>0.5\mu\text{sec}$ .
4. **EXT DC connector:** Five-pin male connector. Connects 5065A to external 24-volt dc supply.
5. **EXT DC fuse (F2):** 3-ampere fuse (HP Part No. 2110-0003) for external 24-volt dc power.
6. **115V/230V AC LINE switch:** Set to expose correct ("115" or "230") for the ac line voltage used.
7. **AC LINE jack:** Accepts round female connector on power cable supplied.
8. **AC LINE fuse:** 1-ampere Slo-Blo fuse (HP Part No. 2110-0007) for 115 Vac operation or 0.5 ampere Slo-Blo (HP Part No. 2110-0008) for 230 Vac operation.

Figure 3-11. Top Operating Controls



1. Synthesizer TIME CLOCK SELECTOR thumbwheel switch: selects synthesized frequency.
2. Synthesizer TIME SCALE SELECTOR HI-LO switch: used with thumbwheel switch to select synthesized frequency.
3. Clock SYNC switch (Option 001 and 003 only): Synchronizes digital clock with an external clock when depressed; clock remains synchronized when released.
4. Clock TIME DELAY thumbwheel switch (Option 001 and 003 only): selects time delay between an external reference pulse and the internal 1 pulse-per-second clock pulse. Adjustable in decade steps from 1  $\mu$ s to 1 sec.
5. 0-1  $\mu$ SEC TIME DELAY control (Options 001 and 003 only): allows continuous adjustment of clock pulse delay over any 1  $\mu$ sec range.
6. Battery fuse (F4): removed momentarily to disconnect optional standby battery from circuit for storage or shipment. Battery will remain disconnected after fuse is replaced.

# THEORY

## SECTION IV

### THEORY OF OPERATION

#### 4-1. THEORY

##### 4-2. General

4-3. For circuit theory on individual assemblies, refer to the schematic fold-out pages at the rear of this manual.

4-4. The simplified block diagram of Figure 5-6 shows the frequency-stabilizing feedback loop. The 5 MHz quartz oscillator output is stabilized, first by comparing the 5 MHz output in a frequency-synthesizing and multiplying process with the resonant frequency of  $Rb^{87}$ , and then translating the difference frequency into a control voltage which corrects the quartz oscillator frequency.


4-5. Oscillator Assembly A10 generates the 5 MHz for A3 Multiplier where 5 MHz is: (1) phase modulated at 137 Hz, (2) multiplied to 60 MHz and, (3) combined with the synthesized 5.315... MHz after multiplication to 60 MHz. The 5.315... MHz is derived from 5 MHz in a frequency-synthesizing process. The combined 60 MHz and 5.315... MHz signal goes from A3 Multiplier to the harmonic generator step-recovery diode in A12 RVFR (Rubidium Vapor Frequency Reference) Assy. The harmonic generator/step-recovery diode couples to the  $Rb^{87}$  absorption cell which is housed in a microwave cavity tuned to 6.834685 GHz, the  $Rb^{87}$  resonant frequency. In the harmonic generator/step-recovery diode, 5.315... MHz phase-modulates the 114th harmonic of 60 MHz to produce the 6.834685... GHz lower sideband which matches the microwave cavity resonance and causes energy level transitions in the  $Rb^{87}$  gas.

4-6. Figure 4-3 shows the  $Rb^{87}$  absorption cell which contains the  $Rb^{87}$  gas. A 100-MHz oscillator in A12 RVFR Assy drives the lamp filled with  $Rb^{87}$  gas. The resulting light output passes through the  $Rb^{85}$  filter cell and the  $Rb^{87}$  absorption cell. The light output of the  $Rb^{87}$  absorption cell is monitored by a photodiode.  $Rb^{85}$  photo excitation is removed in the  $Rb^{85}$  filter cell to remove undesired transitions. When the  $Rb^{87}$  gas is


excited by the 6.834685... GHz microwave field at its resonant frequency, it increases in opacity to reduce light transmission about 1/2% as illustrated in Figure 4-1. This phenomenon permits using  $Rb^{87}$  gas as a frequency reference. Phase modulation at 137 Hz (in A3 Multiplier) produces a sinusoidal scan of the excitation frequency. As a result, 2nd harmonic 274 Hz appears in the photodiode output when "on" frequency and fundamental 137 Hz appears when "off" frequency, as shown in Figure 4-2. For example, as the 6.834685... GHz excitation is steered towards the  $Rb^{87}$  natural resonance by the feedback action of the frequency-control system, second harmonic appears in the photodiode output is mostly 2nd harmonic 274 Hz with a small amount of 137 Hz.

4-7. Temperature control of the  $Rb^{87}$  lamp and absorption cell in the A12 RVFR Assy is accomplished by temperature control circuits in the A11 Temperature Control Assy working with temperature sensors and heating elements in A12 cell and lamp ovens. Operating current for these ovens is monitored in the CELL OVEN and LAMP OVEN positions of the CIRCUIT CHECK switch. The A10 Oscillator Assy has its own temperature-control circuit for the 5 MHz quartz oscillator. Operating current for the oscillator oven is monitored in the OSC OVEN position of the CIRCUIT CHECK switch.

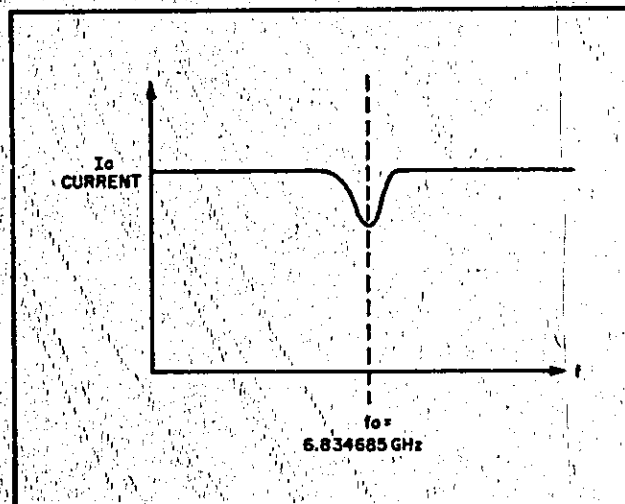Figure 4-1. Rubidium Absorption Plot



Figures 4-2. Rb<sup>7</sup>. Absorption Cell Output

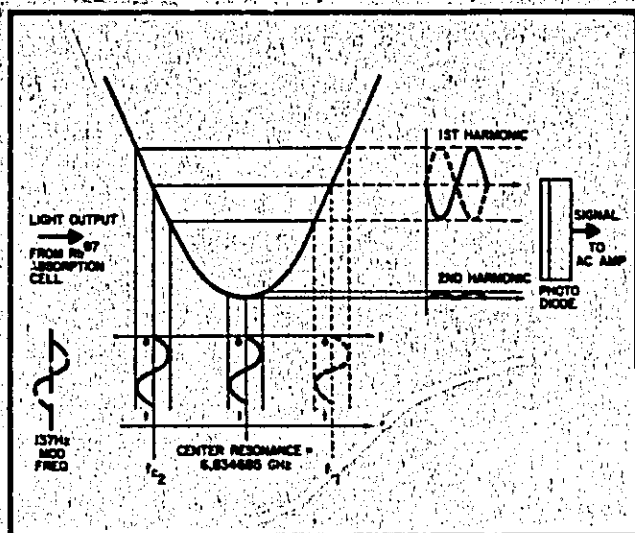

4-8. The A12 RVFR photodiode output is applied to A7J1. This signal contains a fundamental frequency of 137 Hz, a second harmonic of 274 Hz and is proportional to the frequency error. The composite input signal is amplified and then the 137 Hz and 274 Hz signals are separated, filtered and amplified. The 137 Hz output at A7("Y") is connected A8(18) and the 274 Hz output at A7("WBO") is connected to the 2ND HARMONIC position of MI via A17(13).

4-9. In A8 Phase Detector, a reference 137 Hz signal is compared in phase with the 137 Hz input signal. The resulting dc output is either positive or negative depending on the phase of the 137 Hz input. Also, the dc output amplitude is proportional to the 137 Hz input amplitude. This dc output goes to the ERROR position of the CIRCUIT CHECK meter and to A9 Integrator Assembly.

4-10. In A9 Integrator Assembly, the dc error signal is amplified and integrated to slow feedback loop response. Connecting to this assembly is the FUNCTION switch which opens the control loop so that the A10 Oscillator can operate independently. In this LOOP OPEN position, A9 output is shorted to the input and the error signal is not amplified. With the FUNCTION switch at OPERate, the amplified and integrated dc control voltage connects to a varactor diode in A10 quartz oscillator circuit to correct the 5 MHz output frequency.

4-11. One 5 MHz output from A10 Oscillator is routed through a power amplifier in A3 Multiplier Assembly to A13 Buffer Amplifier. In A13 module, power amplifiers feed A1 Synthesizer and the front and rear 5 MHz output jacks. The second 5 MHz output from A10 Oscillator supplies A6 1 MHz Frequency Divider.

4-12. The A6 1 MHz Frequency Divider processes 5 MHz in a regenerative frequency divider to produce 1 MHz. One MHz outputs go to the front and rear 1 MHz output jacks and also to A4, 100 kHz Frequency Divider. A start circuit, which includes the START-AUTO-START switch, provides for manual or automatic starting of the regenerative divider circuit. Another A6 output is 1 MHz from a buffer amplifier which feeds the A5 Digital Divider Assembly.

4-13. The front panel START-AUTO-START switch permits manual starting so that frequency-divider circuits will not restart automatically. In the AUTO-START position, this switch provides for automatic restarting of divider circuits so the 5065A instrument can serve as a frequency source. When the Option 001 Time Standard is installed, a mechanical lock prevents using the AUTO-START position.

4-14. The A4 Frequency Divider processes the A6 1 MHz output through a decade divider to produce 100 kHz at front and rear 100 kHz output jacks

#### 4-15. OPTION 001, TIME STANDARD

4-16. Time Standard Option 001 consists of A5 Digital Divider, A16 Digital Divider Power Supply, and the front panel mechanical clock. The A5 module processes 1 MHz to produce digitally delayed 1 PPS output pulses. A SYNC INPUT jack at the rear enables the user to synchronize with an external reference. Incremental delay of the 1 PPS output is set by the TIME DELAY thumbwheel switches. Continuously-variable delay of the 1 PPS output, that is processed by the A16 module for a "tick" pulse output at the front-panel 1 PPS jack, is set by the 0-1  $\mu$ sec TIME DELAY adjustment.

4-17. An additional A5 control is the SYNC switch. To synchronize the 1 PPS output with a reference pulse, the SYNC pushbutton is depressed for at least 1-second and then released. If a sync pulse is connected to the rear SYNC INPUT jack, one reference pulse will enter the synchronizing circuits during the 1-second interval. This pulse will reset the digital divider. The output 1 PPS "tick" pulse from the 1 PPS front panel jack will then be in sync with the reference pulse.

4-18. Two 1 PPS inputs connect to the A16 Digital Divider Power Supply from the A5 module. One input pulse is shaped in a blocking oscillator and then amplified to provide the front panel 1 PPS "tick" output. The other 1 PPS input triggers a flip-flop stage which provides clock-driving pulses. The flip-flop output drives push-pull amplifiers to pulse the front-panel clock at a 1 PPS (or 10 PPS) rate.

4-19. The A14 Logic Assembly monitors several key points in the 5065A circuits and turns off the CONTINUOUS OPERATION lamp to indicate an operational discontinuity when one or more of the logic inputs indicate a "non-operating" condition. These logic inputs are shown in Table 4-1. In addition to the CONTINUOUS OPERATION lamp output, the Logic Assembly delivers an INTEGRATOR LIMIT lamp output when the A9 integrator output exceeds 50% of maximum. After an operational discontinuity, the LOGIC RESET switch resets the CONTINUOUS OPERATION lamp when all logic inputs are "operational."

**4-20. OPTION 002, STANDBY POWER SUPPLY**

4-21. Standby Power Supply Option 002 automatically cuts in battery power if there is an ac (or dc) line interruption; for example when the unit is moved. This is accomplished by floating the battery across the power supply so that the battery takes over should ac (or dc) line power fail. This option consists of A2 Battery Charger Assembly, the nickel-cadmium battery, and the BATTERY switch and lamp. The nickel-cadmium


Table 4-1. Logic Signals

Signal	Non-Operational Condition
a. Synthesizer Lock Signal	When present
b. AC Amplifier 2nd Harmonic Signal	When absent
c. Phase Detector Fundamental Error Signal	When too much signal
d. Cell Temperature Signal	When cell oven is full on or turned off
e. Lamp Temperature Signal	When lamp oven is full on or turned off
f. Function Switch Signal	When present with Function switch at LOOP OPEN

standby battery is charged as desired in either FAST CHARGE mode or a FLOAT (trickle charge) mode by a constant current charging circuit. The front panel BATTERY lamp pulses on and off to indicate a line-power discontinuity. With the BATTERY switch at FAST CHARGE, the BATTERY lamp glows steadily.

4-22. The FAST CHARGE position of the BATTERY switch is used to recharge the battery after discharge. After charging in the FAST CHARGE position, the BATTERY switch is set to FLOAT, for a trickle charge to maintain battery charge.

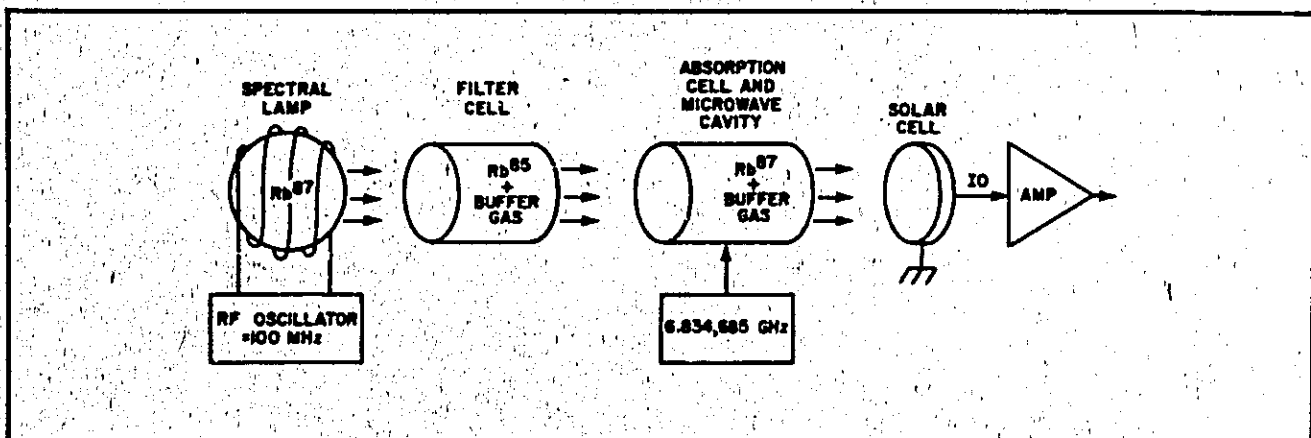Figure 4-3. RVFR Assembly Block Diagram



# MAINTENANCE

## SECTION V MAINTENANCE

### 5-1. INTRODUCTION

5-2. This section provides maintenance and service information for the instrument. This section is organized as follows:

Paragraph No.	Section
5-7	Periodic Maintenance
5-8	Instrument Troubleshooting
5-19	Loop Alignment Procedure

5-3. In addition to the above sections, Table 5-1 lists module designations, Table 5-2 gives in-cabinet performance check to check instrument specifications, Table 5-3 gives front panel meter checks, Table 5-4 lists signal checks, and Table 5-5 gives recommended test equipment for performance checks maintenance, and troubleshooting.

Table 5-1. Assembly Designations

Assy	Name	HP Part No.
A1	Synthesizer	05065-6076
A2	Battery Charger (Opt. 002, 003)	05065-6022
A3	Multiplier	05065-6079
A4	100 kHz Frequency Divider	05065-6070
A5	Digital Divider (Opt. 001, 003)	05065-6084
A6	1 MHz Frequency Divider	05065-6016
A7	AC Amplifier	05065-6080
A8	Phase Detector	05065-6013
A9	Integrator	05065-6015
A10	Oscillator	00105-6034
A11	RVFR Temperature Controller	05065-6024
A12	RVFR	05065-6001
A13	Buffer Amplifier	05065-6020
A14	Logic	05065-6012
A15	Power Supply and Regulator	05065-6023
A16	Power Supply, Digital Divider (Option 001, 003)	05065-6085
A17	Terminal Board	05065-6014
A18	Jumper Board	05065-6057 05065-60125 (Opt. 001)
A19	Clock Display	and 05065-60136 (Opt. 003)

5-4. For individual module or circuit board maintenance, see the appropriate schematic foldout page. The individual foldouts include theory, normal operation, operational checks, troubleshooting (including waveforms and/or voltages), and required circuit alignment after repair or replacement.

### 5-5. INSTRUMENT ACCESS

5-6. For access to the modules or circuit boards in the instrument, remove top and bottom covers. Remove four screws from the cover and slide it towards the rear. To replace cover, reverse procedure.

### 5-7. PERIODIC MAINTENANCE

a. Monitor all CIRCUIT CHECK meter readings and check these readings against those listed on the front panel door.

b. When the quartz oscillator control voltage exceeds  $\frac{1}{2}$  of its dynamic range, the INTEGRATOR LIMIT light will come on; this does not indicate a trouble. When this light comes on, proceed as follows:

- 1) Set CIRCUIT CHECK switch to CONTROL.
- 2) Observing the meter, adjust OSC. FREQ. ADJ. COARSE control to zero meter.

c. Over a period of time, the second harmonic signal level as seen on the meter may decay somewhat due to an aging process in the A12 RVFR Assembly. When this second harmonic signal level reaches  $\frac{1}{2}$  of its initial value, the instrument should be adjusted to reset the second harmonic signal level. This adjustment is performed as follows:


- 1) Set front panel OSC. FREQ. ADJ. FINE control to 250.
- 2) Set CIRCUIT CHECK meter to CONTROL. Observing the meter indication, adjust OSC. FREQ. ADJ. COARSE control for a zero reading.
- 3) Set FUNCTION switch to LOOP OPEN.
- 4) Set OSC. FREQ. ADJ. FINE control to 200.
- 5) Remove instrument top cover. Connect the vertical input of an oscilloscope to A8TP3 and the horizontal input to A8TP2. Use the oscilloscope horizontal amplifier instead of the triggered internal sweep.




**Model 5085A**  
**Circuit Diagrams, Theory, and Maintenance**

- 6) Adjust Oscilloscope for a pattern similar to Figure 5-2. If waveform looks like Figure 5-1, phase and/or amplitude are misadjusted. Perform Loop Alignment, Paragraphs 5-19 through 5-31. If waveforms look like Figure 5-2 in shape and not necessarily in amplitude, continue to next step.
- 7) Adjust A3R3 and A3R11 fully ccw, then adjust cw 1/4 turn until the oscilloscope pattern just splits. Readjust A3R3 and A3R11 cw slightly to where the pattern is similar to Figure 5-2. Splitting is observed at the lower right and left ends of the waveform.
- 8) Remove oscilloscope connections and replace top cover. Set OSC. FREQ. ADJ. FINE to 250 and set FUNCTION switch to OPERate.
- 9) Press LOGIC RESET pushbutton. CONTINUOUS OPERATION light will come on and stay on.

**Figure 5-1. A8TP3 Waveform at  $200 \times 10^{-10}$  and Phase Misadjusted**

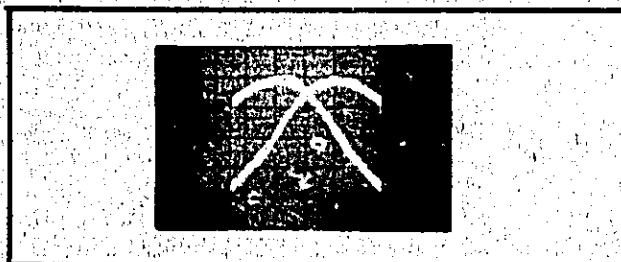

**Figure 5-2. A8TP3 Waveform at  $200 \times 10^{-10}$  and Phase Correct**

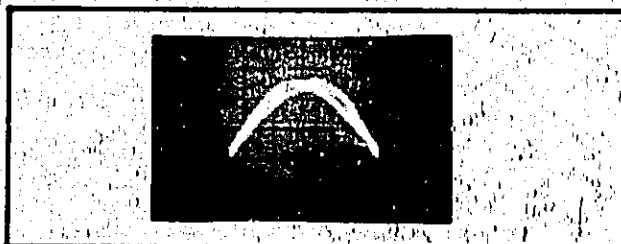

**Table 5-2. In-Cabinet Performance Check**

**1. CIRCUIT CHECK METER CHECK**

The circuit checks below involve setting the front panel CIRCUIT CHECK switch to all its positions and observing the corresponding indication on CIRCUIT CHECK meter. Switch positions and normal indications are listed in Table 5-3. Perform the circuit checks as follows: Set CIRCUIT CHECK switch to all its positions. CIRCUIT CHECK meter indications should be as in Table 5-3.

**2. OUTPUT FREQUENCIES**

Place instrument in operation (CONTINUOUS OPERATION light on, ALARM light off).

Connect 5 MHz from a Primary Frequency Standard as an external time base to an Electronic Counter.

Connect the Counter to each of the following OUTPUTS of the instrument under test:

FRONT PANEL	REAR PANEL
1 MHz	1 MHz
5 MHz	5 MHz
100 kHz	100 kHz

Counter should display the correct frequency, plus or minus the inherent 1-count error of the Counter.

**3. OUTPUT VOLTAGES**

Place instrument in operation (CONTINUOUS OPERATION light on, ALARM light off).

Connect an RMS Voltmeter through a 50-ohm Feed-thru to front panel 5 MHz, 1 MHz, 100 kHz, rear panel 5 MHz, 1 MHz, and 100 kHz output jacks. Voltmeter should indicate between 1.0 and 1.5 Vrms for each frequency checked. Connect the same outputs to the vertical channel of an Oscilloscope. Oscilloscope display should be a clean sine wave.

**4. HARMONIC DISTORTION CHECK**


Harmonic distortion in the 5 MHz, 1 MHz, and 100 kHz output signals should be at least 40 dB down from the 1 Vrms output. To perform this check, a Spectrum Analyzer is tuned to the fundamental frequency and an amplitude reference is established. The output frequency spectrum is then investigated to determine fundamental-to-sideband amplitude relationship at harmonic pair of the fundamental.

Set instrument to normal operation mode (CONTINUOUS OPERATION light on).

Connect equipment shown in Figure 5-3.

Table 5-2. In-Cabinet Performance Check (Cont'd)

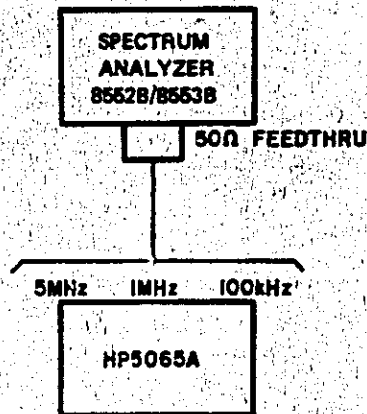Figure 5-3. Harmonic and Non-Harmonic Distortion Test Setup



To perform the check proceed as follows:

- a. Connect 5 MHz output through 50-ohm Feedthru to Spectrum Analyzer input. Check spectrum at 5 MHz center to 4th harmonic (20 MHz). Harmonics should be below 40 dB.
- b. Remove connection from instrument 5 MHz output and connect to 1 MHz output jack. Check spectrum at 1 MHz center to 5th harmonic (5 MHz). Harmonics should be below 40 dB.
- c. Remove connection from instrument 1 MHz output and connect to 100 kHz output jack. Check spectrum at 100 kHz center to 50th harmonic (5 MHz). Harmonics should be below 40 dB. Disconnect Spectrum Analyzer from instrument.

#### 5. NON-HARMONIC DISTORTION CHECK

Non-harmonic distortion in the 5 MHz, 1 MHz, and 100 kHz output signals should be at least 80 dB down from the 1 Vrms output. To perform this check, a Spectrum Analyzer is tuned to the fundamental frequency and an amplitude reference is established. The output frequency spectrum is then investigated to determine fundamental-to-sideband amplitude relationship at non-harmonic points in the spectrum.

Set instrument to normal operation mode (CONTINUOUS OPERATION light on).

Connect equipment shown in Figure 5-3.

To perform the check proceed as follows:

- a. Connect 5 MHz output through 50-ohm Feedthru to Spectrum Analyzer input. Check spectrum at 5 MHz  $\pm 5$  kHz. All sidebands should be at least 80 dB below the carrier.

- b. Remove connection from instrument 5 MHz output and connect to 1 MHz output jack. Check spectrum at 1 MHz center  $\pm 5$  kHz. All sidebands should be 80 dB below the carrier.

- c. Remove connection from instrument 1 MHz output and connect to 100 kHz output jack. Check spectrum at 100 kHz  $\pm 5$  kHz. All sidebands, except harmonically related, should be 80 dB below the carrier. Disconnect equipment from instrument.

#### 6. CLOCK PULSE CHECK (OPTION 001 and 003)

- a. Pulse Parameters. Connect 5065A 1 PPS output to Oscilloscope vertical input. Set instrument for normal operation (CONTINUOUS OPERATION light on, ALARM light off, DIVIDER MODE switch to AUTO START). Parameters should be as indicated:

Rate: 1 pulse-per second  
Amplitude: +10V peak  $\pm 10\%$   
Width: 20  $\mu$ sec minimum  
Rise Time: <50 nsec  
Fall Time: <2  $\mu$ sec

- b. Pulse Jitter. To verify pulse jitter specification (<5 nS rms pulse to pulse) one of two methods may be used. If the HP Model 5390A system is to be used for checking short term frequency stability, use the procedure described in Method 1 below. If the 5390A system is not available, use the procedure described in Method 2.

##### Method 1.

In this procedure the Model 9825A Computing Controller is used to control the Model 5345A frequency counter. The counter takes data under the direction of the Controller. The Controller performs the RMS calculation. Proceed as follows:

- (1) Set 5345A front panel controls as  
SAMPLE RATE ..... CCW  
FUNCTION ... TIME INT. A TO B  
GATE TIME ..... MIN  
CHANNEL A and B  
Input Resistance ..... 1M $\Omega$   
ATTEN ..... X20  
Coupling ..... DC  
SLOPE ..... +  
Input ..... COM A

- (2) If a cable is connected to Channel B input remove it.

- (3) Connect 1 PPS output from 5065A 50 ohm feedthru termination to the Channel A input of the 5345A. Adjust Channel A and B LEVEL controls so that each channel triggers about in the middle of the pulse (+5V) and the counter displays approximately 1 second.

Table 5-2. In-Cabinet Performance Check (Cont'd)

(4) Remove cassette from 9825A controller and turn power switch off.

(5) Set 9825A controller power switch on and type the following program into controller. Press STORE after each line (do not type line number).

```

0: flt 2
1: dim AC[100]
2: wrt 710, "I2F3G5E8I1"
3: wait 50
4: for I=1 to 100
5: red 710, AC[I]
6: next I
7: 0→S; 0→T
8: for I=1 to 99
9: S+(AC[I]-AC[I+1])↑2→S
10: T+(AC[I]-AC[I+1])→T
11: next I
12: r(.01*S-(.01*T)↑2)→D
13: prt "RMS jitter =", D, "sec"
14: end
*29718
    
```

(6) Press RUN. Controller will take measurements and print results. Measurement takes approximately 200 seconds.

**Method 2.**

Alternate method for checking pulse jitter. This method uses the HP Model 5370A Time Interval Counter to check pulse jitter. This procedure may be used if the 5345A/9825A combination is not available. The 5370A may also be used to check synchronization and time delay in Section 5 of this performance check.

(1) Connect 5 MHz from 5061A under test to FREQ STD INPUT on 5370A rear panel. Set FREQ STD switch to EXT.

(2) On 5370A turn on AC power, and set START and STOP Channel Controls as follows:

Slope .....	f
Attenuation .....	X10
Input Resistance .....	1MΩ
Coupling .....	DC
Com/Sep .....	START COM

(3) Set FUNCTION: TRIG LVL. Set START and STOP trigger LEVEL controls for a reading of ≈0.5.

(4) Connect 1 PPS from 5065A through 50 ohm feedthrough termination to START input.

(5) Set FUNCTION: TI. 5370A should display approximately 1 second. Reading will change slightly every other second. START and STOP lights should be flashing at a 1 second rate.

(6) Set STATISTICS: STD DEVIATION. SAMPLE SIZE will automatically go to 100.

(7) Measurement of RMS pulse jitter takes about 3-1/2 minutes. During this time the display will not change. RMS pulse jitter must be less than 5 nanoseconds.

**7. SYNCHRONIZATION AND TIME DELAY CHECK**


The Digital Clock output pulse can be automatically synchronized with a reference pulse to within  $10 \pm 1 \mu\text{second}$ . To check synchronization, proceed as follows:

a. With 5061A in normal operation connect equipment as shown in Figure 5-4.

NOTE: Reference pulse must be greater than +5V with a rise time of 50 ns or less.

Note: Set input trigger for + slope and +5V.

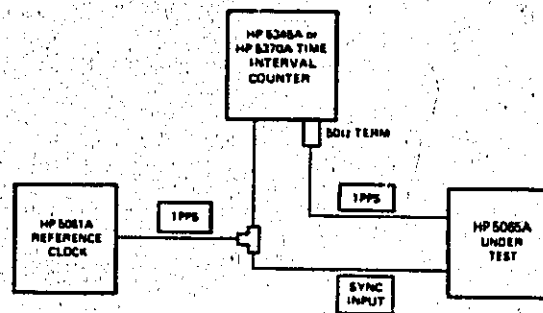Figure 5-4. Equipment Setup for Synchronization and Delay Checks



b. Press and hold Clock SYNC button located on Digital Divider Assembly A5 for at least one second. The digital clock will synchronize on the first pulse input after the SYNC button is pressed. The time interval counter will display a  $10 \pm 1 \mu\text{s}$  time delay.

c. Time Delay. To check the time delay thumbwheels, proceed as follows:

1. Connect equipment as shown in Figure 5-4.

Table 5-2. In-Cabinet Performance Check (Cont'd)

2. Check TIME DELAY by setting thumb-wheel switch to following positions and observing output pulse delay on Time Interval Counter. Time interval change should correspond with switch settings.

7 $\mu$ s	800 $\mu$ s	80 ms
8 $\mu$ s	7 ms	700 ms
70 $\mu$ s	8 ms	800 ms
80 $\mu$ s	70 ms	899.999 ms
700 $\mu$ s		

3. Adjust 0-1  $\mu$ s TIME DELAY control. Time interval counter should show delay change of 1  $\mu$ s.

8. FREQUENCY STABILITY OF 5 MHz OUTPUT (Sigma y of Tau)

The rms deviation of the 5 MHz output is measured using the HP Model 5390A Frequency Stability Analyzer option 010, and the Model 105B option H66. This equipment enables measurements of Sigma y of Tau for averaging times as short as 50 ms.

In this procedure measurements will be made with averaging times between 50 msec and 100 seconds. Since the 100 second averaging time measurement takes over 3 hours to complete, this portion of the test may be deleted.

The information given below is designed to be used in conjunction with the 5390A FSA option 010 "Sigma y of Tau" users manual. System connection should be done per this manual. The following information provides the necessary operating parameters to enable the operator to verify the 5065A specification over the measurement range.

The test assumes that the reference standard is an HP Model 5061A with option 004 or another 5065A.

To perform the tests, connect to 5390A FSA System as shown in Figure 5-5. Input information to FSA System as follows:

Step	Data Requested	Input Data
1	Program name	ffddmtd (see Note 1)
2	Max data array size	100
	Max numb. tau's	10
3	Year	Last 2 digits of year
4	Key function	ENTER MEAS PARAMETERS (fo)
	tau	.05 CONTINUE .1 CONTINUE 1 CONTINUE 10 CONTINUE 100 CONTINUE 0 CONTINUE
	number of samples	100
	measurement bandwidth	100,000
	carrier frequency	5e6
	correction coefficient	1.414
5	Key function	START MEASUREMENT (f5)
	Measurement description	5065A s/n Performance Test

Note:

ffddmtd = fractional frequency difference dual-mixer time difference method.

The 5390A will type heading, measurement parameter data, and then proceed with the measurement. Measured values should be equal to or less than the corresponding values given in the specifications, Table 1-1.

Figure 5-5. 5 MHz Output Stability Test Setup

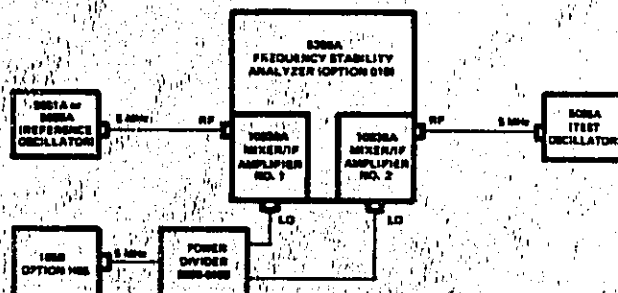


Table 5-2. In-Cabinet Performance Check (Cont'd)

### 6. FREQUENCY STABILITY CHECK

The specification for long-term frequency stability of the 5065A is less than  $1 \times 10^{-11}$  per month. To verify this frequency stability, the 5065A must be compared with a primary frequency standard to observe frequency change over a 30-day period.

a. Refer to Section 3-20, Frequency Offset and Calibration, for instructions on making a phase check between the 5065A and a reference standard.

b. Before proceeding with this check allow a 24-hour warmup.

c. At the beginning of this check adjust the 5065A front panel MAGNETIC FIELD control to set the 5065A frequency within 1 part in  $10^{11}$  of the reference standard frequency.

d. Run this check for 30 days or; make two separate checks with 30 days intervening.

e. Note any change in frequency of the 5065A with respect to the reference standard over the 30-day period. This change should be less than 1 part in  $10^{11}$ .

With practice, the operator will be able to verify frequency stability for most purposes by observing frequency change over a 48-hour period. However, if the 5065A frequency stability specification must be verified, a 30-day check will be required.

## 5-8. INSTRUMENT TROUBLESHOOTING

### 5-8. Introduction

5-10. When operational checks indicate a frequency change that is not within specifications for either UTC or A1 time scales according to the setting of the TIME SCALE thumbwheel and HI-LO switches, the following checks should be made prior to servicing:

a. If instrument is operating on A1 time scale, check Synthesizer TIME SCALE thumbwheel switch and HI-LO switch setting against the indicated A1 settings on the A12 RVFR decal.

b. If the instrument is operating on the UTC time scale, check Synthesizer TIME SCALE thumbwheel switch and HI-LO switch settings against the UTC settings on the operating card mounted on the front panel door.

c. Check synthesizer frequency according to the table on foldout page which lists synthesizer output frequencies versus TIME SCALE settings.

#### NOTE

If CONTINUOUS OPERATION light goes out after instrument has warmed up, the CIRCUIT CHECK meter switch should be set to the LAMP OVEN and CELL OVEN positions. If either meter indication is full scale, the instrument should be turned off immediately. If not, the RVFR Assembly could be damaged by excessive heat.

5-11. In troubleshooting the 5065A, it is helpful to consider the instrument as consisting of 3 sections: (1) RF section, (2) RVFR and, (3) the low-frequency section. These are shown in the simplified block diagram of Figure 5-8.


5-12. The RF Section, by multiplication and synthesis, generates the excitation signals for the RVFR. If the excitation frequencies and power levels are correct, the RVFR Assembly should respond. This response is a 137 Hz signal if the RF excitation is slightly off frequency, and a 274 Hz (2nd Harmonic) signal if the excitation is "on frequency". The RVFR will not operate properly if the cell heater circuit is not working. In the low frequency section, the error signal is amplified and phase detected to give a dc voltage proportional to the excitation frequency error. This error signal is processed by the integrating amplifier and sent to the Quartz oscillator as a control signal to hold the Quartz oscillator at the correct frequency.

5-13. The front panel meter monitors various points in the loop. These are indicated in Figure 8-2. Four of the five input signals to the logic assembly (which can turn off the CONTINUOUS OPERATION light) may be monitored on the CIRCUIT CHECK meter. These are:

- The 2ND HARMONIC signal
- The CELL OVEN signal
- The LAMP OVEN signal
- The fundamental ERROR signal

The one alarm signal that is not monitored is the "Synthesizer lock" signal.

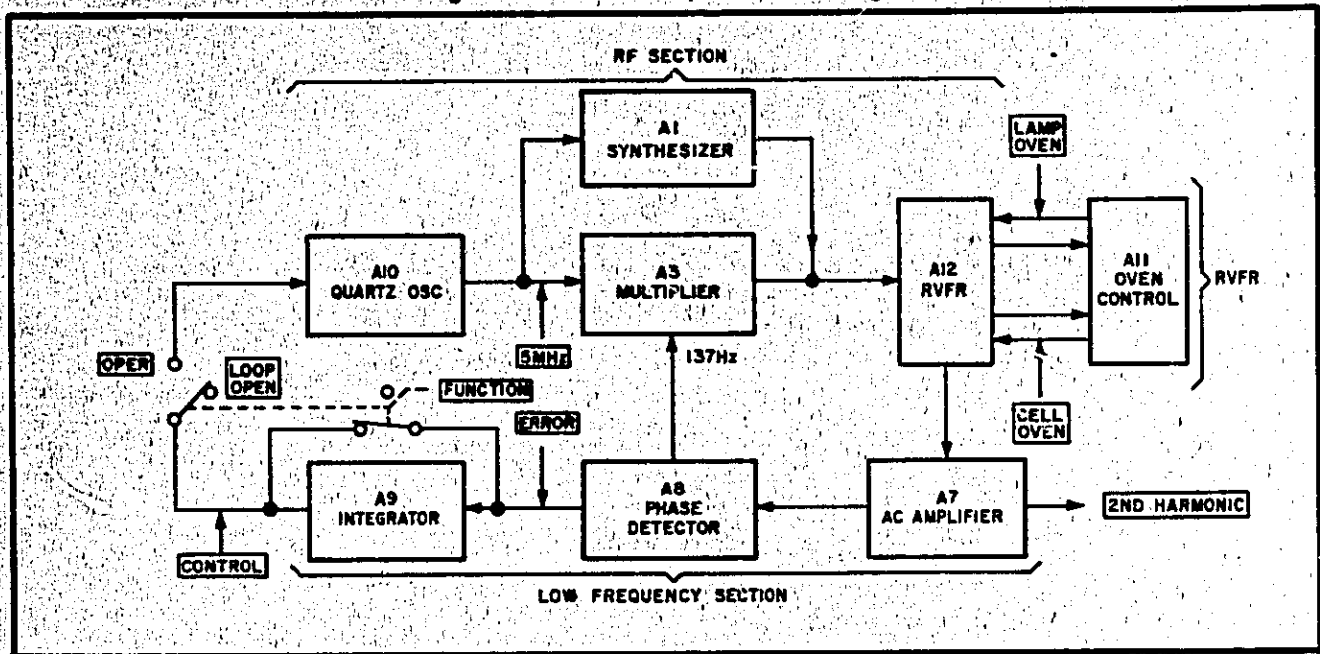Figure 5-6. 5065A Simplified Block Diagram



5-14. The FUNCTION switch allows the servo loop to be opened for troubleshooting and instrument alignment. Once the servo loop has been opened, troubleshooting becomes fairly straightforward because the individual circuits can be checked without feedback present.

#### 5-15. Fault Finding

5-16. This section makes extensive use of Table 5-3, CIRCUIT CHECKS, and Table 5-4, SIGNAL CHECKS to provide a means of isolating the fault. For example, if a fault is indicated by the erroneous meter reading, the CIRCUIT CHECKS table provides the necessary tests to further pinpoint the trouble. Where pertinent, the CIRCUIT CHECKS table refers to the SIGNAL CHECKS table for further tests.

5-17. A fault is normally first seen when CONTINUOUS OPERATION light goes off. The first step in finding the trouble is to use the front-panel CIRCUIT CHECK meter. Table 5-3, CIRCUIT CHECKS, provides normal indication, as well as recommended procedure if a meter indication is not correct. The use of this meter together with the recommended procedures of the CIRCUIT CHECKS and SIGNAL CHECKS tables provides a useful first step in isolating a fault.

5-18. There is a small possibility that the 5065A may lose its calibration and go off frequency without turning off the CONTINUOUS OPERATION light. If this occurs: 1) check Synthesizer output frequency (see Section 3-10, Frequency Offset Settings) and, 2) Check for proper operation and setting of the MAGNETIC FIELD control.

Table 5-3. Circuit Checks

<p>Make checks in the order shown with function switch set to OPER and OSC FREQ ADJ FINE set to 250.</p> <p style="text-align: center;"><b>NOTE</b></p> <p>If all meter readings are normal, but CONTINUOUS OPERATION light will not come on, check: 1) CONTINUOUS OPERATION light bulb, 2) A1 Synthesizer circuit (see foldout, Page 8-13), 3) A14 Logic Assembly (see foldout, Page 8-47).</p>			
CIRCUIT CHECK Switch Position	Normal Indication	Nature of Meter Indication	Checks to Make if Reading Abnormal
BATTERY	35 to 45	Meter signal supplied from positive side of internal battery (Option 002 only) through Terminal Board A17(1) to S4(A).	Standby Power Supply maintenance, Paragraph 5-32.
SUPPLY	38 to 42	Meter signal is regulated +20 V from A15 Power Supply through A17(2) to S4(B).	Check A15 Assembly, foldout page Check ac fuse.
LAMP OVEN	10 to 40 After about 1-hour	These signals indicate LAMP and CELL heater currents. These signals vary with ambient temperature. As ambient temperature decreases the meter signals will increase, indicating increased heater current.	NOTE: If either reading is full scale, remove power and allow oven to cool; then effect repairs. CONTINUED OPERATION WITH METER AT FULL SCALE (AFTER INITIAL WARMUP) CAN CAUSE DAMAGE TO RVFR ASSY.
CELL OVEN	10 to 45 After about 1-hour	These signals supplied by A11 Temperature Control through A17(3) to S4(C) (LAMP) and through A17(4) to S4(D) (CELL)	Check A11 Assembly, foldout page Note: If cell oven meter reading is zero, loss of signal from RVFR can result
OSC OVEN	35 to 45 (for ambient temperature of 25°C) After about 1-hour	This meter signal indicates power applied to proportional oven in A10 Oscillator Assembly. Routes through A17(5) to S4(E). Normal reading achieved after oven is at operating temperature (about 1-hour)	Check dc power connections to A10 Assembly; then check this section of metering circuit. If all check out, replace A10.
PHOTO I	25 to 50	Meter signal is A12 RVFR photo diode current: routes through A7 Assembly, and through A17(6) to S4(F). Normal reading indicates Rb <sup>7</sup> lamp is on.	Remove A7P1 and use meter such as HP 412A to measure Photo I directly. Value should be about twice meter reading; 80µa = a 40 meter reading. If measured current and meter reading do not correspond, trouble is in Q1, Q2, or IC1 circuits of A7. If current is much less than 50µa: 1) there is no dc power to A12 RVFR Assembly at A12J16 or, 2) the A12 RVFR Assembly is defective.

Table 5-3. Circuit Checks (Continued)

CIRCUIT CHECK Switch Position	Normal Indication	Nature of Meter Indication	Checks to Make if Reading Abnormal
5 MHz	38 to 42 with no load at front or rear 5 MHz jack	Meter signal comes from A13 Buffer Amplifier through A17(10) to S4(L). Signal represents 5 MHz output; is less when loaded.	If signal is low, but not zero: (1) Check front and rear jacks for loading (meter reading is established with no cables or other loads connected). (2) Perform "Output Voltage and Waveforms" check described in Figure 8-20.  If signal is zero: Check 5 MHz signal path from A10(1V) to A3J2, from A3J3 to A13J1, and from A13J2 and J4 to front and rear 5 MHz jacks. Check 5 MHz meter circuit in A13 Buffer Amplifier.
CONTROL	-50 to +50	Meter signal comes from A9 Integrator Amplifier through A17(11) to S4(M) and also to rear panel CONTROL jack. This signal represents the frequency correction voltage that steers the A10 Quartz Oscillator. When this meter signal exceeds about +2.5 V or -5.0 V, INTEGRATOR LIMIT light will come on. When this occurs; set OSC FREQ ADJ COARSE control for zero indication on meter.	Should be reset to zero with OSC FREQ ADJ COARSE (cw to make meter go-). If meter does not respond, set FUNCTION switch to LOOP OPEN. Meter should zero; 1) if it does, perform signal check in Table 5-4, 2) if meter does not zero, check FUNCTION switch circuit, meter circuit, and A9 Integrator Assembly (see foldout, Page 8-33).
ERROR	Zero	Meter signal comes from A8 Phase Detector (filtered from the A12 photo diode output and amplified in A7 (AC Amplifier). This signal is the fundamental 137 Hz ac error signal that is zero when "on frequency".	If reading is not normal, switch CIRCUIT CHECK switch to CONTROL and make "Control" checks above.
2ND HARMONIC	20 to 40	Meter signal comes from A14 Logic Assembly through A17(13) to S4(P). This signal represents 274 Hz voltage level from A7 AC Amplifier.	If meter reading has slowly dropped to less than 20, refer to instructions in Paragraph C of PERIODIC MAINTENANCE, Section 5-7. If meter reading has suddenly dropped, indicating a possible trouble in RVFR or RF sections of servo loop, see Table 5-4; SIGNAL CHECKS.
1 MHz and 100 kHz	38 to 42 with no load connected to front and rear jacks	These signals represent the amount of 1 MHz and 100 kHz at front and rear output jacks. 1 MHz signal routes from A6 Freq. Div. through A17(14) to S4(R). 100 kHz signal routes from A4 Freq. Div. through A17(15) to S4(S).	Check front and rear jacks for loads. Push START-AUTO START switch momentarily to START and then release. Signal should come up to proper value. If not, check A4 or A6 circuit as required.



Table 5-4. Signal Checks

The following checks test operation of the RF section, the RVFR section, and the preamplifier and 2nd harmonic detector sections of A7 AC Amplifier.

1. Set FUNCTION switch to LOOP OPEN.
2. Set CIRCUIT CHECK switch to 2ND HARMONIC.
3. Check to be sure OSC FREQ ADJ FINE is set to 250. Adjust OSC FREQ ADJ COARSE slowly over its entire range until an indication is seen on the meter. If no indication is observed, refer to the RVFR check on foldout, Page 8-62.

**NOTE**

If there is another frequency standard available, it should be used to set the 5065A internal oscillator. This setup will check operation of the OSC FREQ ADJ COARSE control; also it will insure proper frequency setting of the quartz oscillator in A10 Assembly.

**CAUTION**


**THE REFERENCE FREQUENCY STANDARD MUST BE OPERATING ON THE SAME TIME SCALE AS THE 5065A UNDER TEST.**

4. If a response is seen, set CIRCUIT CHECK switch to ERROR. Slowly adjust OSC FREQ ADJ COARSE control. As the frequency of the quartz oscillator is adjusted through resonance, the meter will respond as shown in Figure 5-7. If meter response is erratic, check A1 Synthesizer Assembly as described on foldout, Page 8-11.

Continue adjustment until meter is at the resonant point. Then proceed to step 5.

If meter does not respond in the preceding ERROR adjustment, but reacted normally in step 3, check A7 output amplifier circuit, interconnection between A7 and A8, the phase detector circuit in A8, and also the ERROR metering circuit. (See Figure 5-7.)

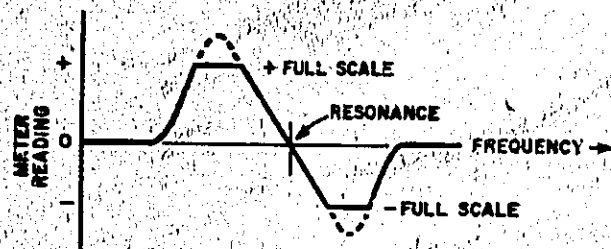Figure 5-7. Meter Response in ERROR Position



5. Set FUNCTION switch to OPER and CIRCUIT CHECK switch to CONTROL.
6. Control voltage meter indication should remain approximately at 0. If so, continue with step 7. If control voltage moves to full scale or wanders around erratically, the following are possible troubles:
  - a) No signal connection between A8 and A9 Assemblies.
  - b) Defective A9 Assembly (see foldout, Page 8-49).
  - c) No signal connection between A9 and A10 Assemblies.
  - d) Defective electronic control circuit in A10. If A10 is defective, it must be returned to the factory for repair. See foldout, Page 8-53 for removal instructions.
7. Adjust OSC FREQ ADJ COARSE control about  $\frac{1}{4}$  turn. CONTROL voltage should move a corresponding amount and then stop. If it does, press LOGIC RESET button. CONTINUOUS OPERATION light will come on; system is OK. If this light does not come on, check A14 Logic Assembly for proper input voltages and circuit operation. (See foldout, Page 8-67, also check A1 Synthesizer as described on foldout, Page 8-11.)

Table 5-5. Recommended Test Equipment

Instrument	Required Characteristics	Use	Model
Primary Frequency Standard	Frequency: 5 MHz and 1 MHz Output Level: 1V rms at 50 ohms Accuracy: $\pm 1 \times 10^{-11}$	Performance Check	HP 5061A Option 004
Frequency Stability Analyzer system	Capable of automatically measuring short term frequency fluctuations with averaging times of 10 msec and greater	Performance Check	HP 5390A Opt 010 with HP 1051A (Option H66)
50-ohm Feedthrough Termination	50 ohms shunt connections male and female BNC	Performance Check Troubleshooting	HP 11348B
RMS Voltmeter	Voltage Range: .3V to 3V full scale Frequency Range: 10 Hz to 10 MHz Accuracy: $\pm 5\%$ full scale	Performance Check Troubleshooting	HP 3400A
Oscilloscope	Vertical Frequency Response: dc to 50 MHz Sensitivity: .05V/cm Calibrated Sweeps: 2 sec to .05 $\mu$ sec/cm	Performance Check Troubleshooting Adjustments	HP 180 with HP 1820C and HP 1805A HP 10006A Probe
Spectrum Analyzer	Frequency Response: 1 kHz to 110 MHz Response: $\pm 0.5$ dB Sensitivity: -130 dBm Scan Width: 2 kHz to 100 MHz Stability: Residual FM less than 20 Hz peak-to-peak	Performance Check	HP 8552B and HP 8553B
Vector Voltmeter**	Frequency: 1 MHz to 1 GHz Voltage Range: 1.5 mV to 1V rms	Performance Check	HP 8405A**
Strip Chart Recorder	Chart Speed: 1, 2, 4, 8, in./hr. Spans: .1, .5, 1, and 5V full scale Input Resistance: 200k/volt Accuracy: $\pm 2\%$ full scale	Performance Check	HP 680A
RF Voltmeter	Range: 10 mV to 10V rms Frequency Range: 500 kHz to 60 MHz Accuracy: $\pm 3\%$ full scale	Performance Check Troubleshooting	HP 411A
DC Power Supply	Range: 0 to 20 Vdc Output I: 0 to 1A Line Regulation: 0.001%	Troubleshooting	HP 6101A
Time Interval Counter	Resolution of $> 2$ nsec per measurement	Performance Check	HP 5370A*
DC Electronic Voltmeter	Resistance Range: 10 $\Omega$ to 10 M $\Omega$ Voltage Range: 0.1 to 100V full scale Voltage: $\pm 2\%$ full scale	Performance Check Troubleshooting Adjustments	HP 410C
Phase Comparator**	Frequency Range: 100 kHz to 10 MHz Input Sensitivity: .1V rms Output: 1V into 100K $\Omega$ for 360° phase change	Performance Check	K34-59991A**
Clip-on DC Milliammeter	Range: 3 mA to 30 mA Accuracy: $\pm 0.1$ mA $\pm 3\%$ full scale	Troubleshooting	HP 428B
Variable Line Source	Variable from 103V rms to 127V rms and 206V rms to 254V rms	Troubleshooting	Superior electric powerstat (115V line) 3PF116 or (230V line) 3PF216
Wave Analyzer	B.W. 10 Hz Frequency: 137 Hz Sensitivity: 100 nV	Troubleshooting	HP 3581A

\*Not needed if HP 5390A Frequency Stability Analyzer available.

\*\*The Model 8405A or the Model K34-59991A may be used for frequency offset and comparison measurements. It is not necessary to have both equipments.

**5-19. LOOP ALIGNMENT PROCEDURE**

**5-20. Introduction**

5-21. If any loop adjustment has been changed, the frequency stabilizing loop of the 5065A should be re-aligned according to the procedures of the following sections. Allow at least 3 hours warmup to permit all circuits to become fully stabilized before proceeding with this alignment. The loop adjustments are as follows:


**5-22. +20 Volt Adjustment (A15 Power Supply and Regulator Assembly)**

5-23. With power disconnected, remove A15 Power Supply circuit board. Mount it on an extender board. Connect power, and after a few minutes warmup, monitor +20 volts at A15C5. Adjust A15R17 as necessary. Be sure to disconnect line power before replacing the A15 Power Supply circuit board.

**5-24. A10 Frequency Adjustment**

- Set controls: FUNCTION switch at LOOP OPEN OSC FREQ ADJ FINE at 250.
- Connect oscilloscope vertical input to A8TP3. Connect oscilloscope horizontal input to the sweep test output A8TP2. Set horizontal gain for about a 5 cm horizontal sweep. Set vertical gain at about .05 volts/cm through a 10:1 divider probe.
- Adjust A3R3, A3R11 full ccw then cw 1/4 turn. Using a screwdriver, adjust front-panel OSC FREQ ADJ COARSE slowly until an oscilloscope pattern roughly similar to Figure 5-8 appears. This oscilloscope response is an indication that the 5065A is turned near resonance.

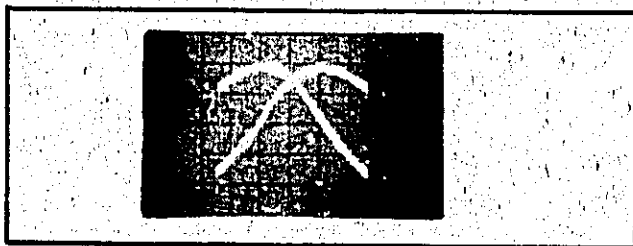Figure 5-8. Waveform at A8TP3 with Severe Phase Shift



- Note that when A10 Oscillator is adjusted through resonance, the oscilloscope pattern will change from a positive hump to a straight line (which is the resonance center); and then to a negative hump. Adjust OSC FREQ ADJ COARSE for the straight line center-resonance position between the positive and negative humps.
- Set OSC FREQ ADJ FINE at 200 for a  $50 \times 10^{-10}$  frequency offset. An oscilloscope pattern similar to Figure 5-8 or 5-10 will appear.
- Make a preliminary phase adjustment if necessary. Adjust A8R43 (on top of A8 board) so the ends of the waveform come together as shown in Figure 5-10.


**5-25. RF Alignment**

a. Remove bottom cover for access to chassis bottom. Remove A5 Assembly if Option 001 is installed for access to the multiplier adjustments. Note that removal of the A5 Assembly in no way affects operation of the rest of the 5065A circuits.

b. Figure 5-9 shows the RF alignment test equipment setup.


c. Before proceeding locate the resonance signal and set up a frequency offset as described in Paragraph 5-24.

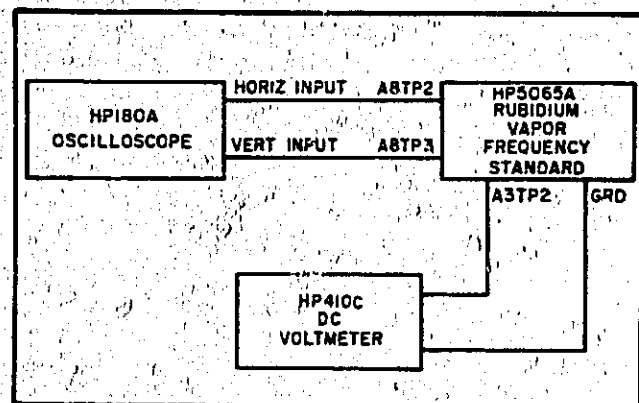Figure 5-9. R.F. Alignment Setup



d. Adjust A3R3 on the Multiplier Assembly for maximum amplitude of the oscilloscope signal. Then adjust A3R3 ccw until the oscilloscope pattern amplitude is reduced by 1/2 to prevent RVFR and amplifier saturation during this alignment.

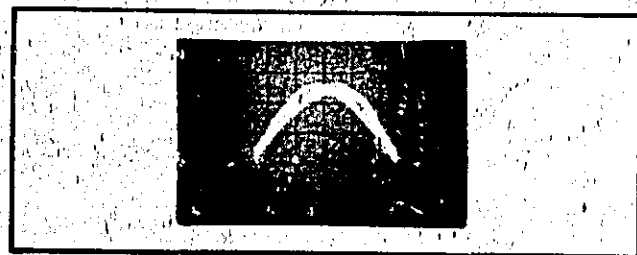Figure 5-10. Oscilloscope Indication at Resonance with A8R43 (Modulating Phase Adjustment) correctly adjusted



- Adjust A8R43 (adjustment facing top of A8 board) for minimum phase shift on the wave form. A pattern without phase shift is shown in Figure 5-10. Phase shift will split the pattern at the two ends as in Figure 5-8.
- Phase modulation adjustment. Adjust A3R11 cw until the oscilloscope pattern just reaches a maximum, then adjust A3R11 slightly ccw so the pattern is reduced by 5 or 10%.

**NOTE**

It may be necessary to readjust A8R43 for minimum phase shift.

g. On the chassis-bottom side of the unit, note the short jumper cable connected between J7 and J8 of the A3 Multiplier. Disconnect this jumper from A3J8 and note that the oscilloscope pattern will disappear.

h. Using the Micon-to-BNC test cable provided, connect a 50-ohm coaxial load to A3J8.

i. At the bottom of the A3 Multiplier is AGC testpoint A3TP2. Connect a dc voltmeter between this point and ground. Record the reading. Nominal AGC voltage is about +4.5 volts.

j. Remove the 50-ohm load from A3J8. Reconnect the short jumper cable to A3J8. The oscilloscope pattern will reappear. Leave the dc voltmeter connected to A3 TP2 so that the AGC voltage may be monitored.

**NOTE**

The following adjustments may peak the signal at several different points. In tuning you should select peaks which are fairly broad and easy to tune. In addition to easier tuning, this ensures maximum RF power stability over the specified operating temperature range of the 5065A.

k. The next step is the adjustment of matching network adjustments A3C59, A3C61, A3L25, and diode bias adjustment, A3R40. These adjustments are at the side of the A3 Multiplier Assembly and can be reached with the A5 Digital Divider removed. The restricted space calls for shortened tuning tools. A small mirror will be helpful. Adjust A3C59, A3C61, A3L25, and A3R40 for maximum signal on the oscilloscope. Ensure the AGC voltage does not fall below the value recorded. If it does, retune these adjustments as necessary. During this adjustment, the oscilloscope pattern should remain rounded at the top. If any clipping or distortion occurs, the RF drive should be reduced slightly by adjustment of A3R3. This adjustment will be reset later in this procedure.

l. Adjust A3R3 ccw. The pattern on the oscilloscope screen will get smaller. Continue to adjust A3R3 ccw with oscilloscope set to .02 V/cm through a 10:1 probe until there is just enough definition at the ends of the oscilloscope pattern to make a phase adjustment (typical level .03 V). Now adjust A8R43 so that the ends of the oscilloscope pattern coincide. When this adjustment is properly made the oscilloscope pattern will look similar to Figure 5-10 with the ends of the pattern coinciding, but with less amplitude. Adjust A3R3 cw until a phase shift starts (the end of the oscilloscope pattern just start to split).

m. Repeat step k to ensure the matching network (A3C59, A3C61, and A3L25) and diode bias (A3R40) are optimized. RF alignment is complete when (1) A3R3 is adjusted as far cw as possible without a phase shift occurring; (2) A3C59, A3C61, A3L25, and A3R40 are

adjusted for a broad peak and maximum amplitude signal; (3) after the preceding adjustments the AGC voltage is not less than the value recorded in step i; (4) the signal-to-noise ratio (see Section 5-26) is greater than 250.

n. Connect HP 302A to A7TP2. Set HP 302A MODE SELECTOR to BFO and adjust FREQUENCY control to 137 Hz. Set MODE SELECTOR to AFC; SCALE VALUE to ABSOLUTE, 300 mV full scale. Read 137 Hz signal level; typical correct level should be 130 to 160 mV.

o. Disconnect all test equipment and set OSC FREQ ADJ FINE to 250.

**5-26. Signal-to-Noise Ratio**

a. This test requires the use of a low frequency wave analyzer such as an HP 3581A (if another wave analyzer is to be used, see step m).

**NOTE**

The purpose of this test is to insure that the signal-to-noise ratio of the RVFR, as installed in the instrument, is sufficient to give the Model 5065A its specified short-term stability. This test is not critical to the alignment of the 5065A and may be ignored insofar as alignment is concerned.

b. Set front-panel controls: OSC FREQ ADJ FINE at 250, FUNCTION switch ... at LOOP OPEN.

c. Connect a dc voltmeter to A8TP3.

d. Adjust OSC FREQ ADJ COARSE for a reading of less than  $\pm 0.05$  volt.

e. Remove voltmeter from A8TP3.

f. Set OSC FREQ ADJ FINE at 300.

g. Set 5381A controls:

POWER ..... ON  
SCALE ..... VOLTS  
AMPLITUDE REF LEVEL ..... NORMAL  
dBv/LIN - dBm ..... dBv/LIN  
INPUT SENSITIVITY  
..... 3V (VERNIER TO CAL)  
SWEEP MODE ..... OFF  
RESOLUTION BANDWIDTH ..... 10 Hz  
DISPLAY SMOOTHING ..... MAX  
FREQUENCY ..... 137 Hz

h. Connect a 100K $\Omega$  resistor across the 3581A input terminals. Type, tolerance or rating of this resistor is not important in this application.

i. Connect 3581A input to A7TP2. Connect 3581A ground to 5065A chassis. Adjust 3581A FREQUENCY and INPUT SENSITIVITY for a maximum on-scale reading. Record this reading as  $V_s$ . It should be approximately 150 mV.

j. Disconnect the +20-volt red lead from the A3 Multiplier Assembly.

k. Set 3581A AMPLITUDE REFERENCE control to X.001. Noise reading should be in mid or lower half of scale. Meter should not peg on noise peaks. Adjust INPUT SENSITIVITY if necessary to achieve this. OVERLOAD light should remain out.

l. 3581A reading will be noisy. Watch meter for about 20 seconds to estimate the average reading. Record this reading as  $V_n$ . Typical value is approximately 300  $\mu$ V.

m. Multiply this reading by 0.72 and divide into  $V_s$  measured in step i. Note: the .72 factor converts the noise measured in the 3581A's 10 Hz resolution bandwidth (11.5 Hz noise bandwidth) to equivalent noise in a 6 Hz noise bandwidth. If another analyzer is used its noise measurement must be converted by use of the formula

$$V_n \sqrt{\frac{6}{B}}$$

where B = the noise bandwidth of the analyzer used for the measurement, and V is the measured noise voltage. Signal-to-noise ratio is given by

$$S/n = \frac{V_s}{.72 \times V_n}$$

For satisfactory operation, the signal-to-noise ratio should be 250 or greater. Low signal-to-noise ratio can be caused by improper alignment of the RF matching network in the A3 Multiplier Assembly or insufficient 137 Hz phase modulation (see step f of Section 5-25, RF Alignment, the preceding section).

n. Reconnect +20V red lead to the A3 Multiplier Assembly. Set OSC FREQ ADJ FINE Control at 250.

#### 5-27. Modulation Frequency Adjustment

a. Connect a frequency counter to A8TP2 and measure the frequency. If the frequency is between 136 Hz and 138 Hz do not make any adjustments.

b. If frequency of step a is outside 137 Hz  $\pm$  1 Hz range, adjust A8R8 for a frequency of 137 Hz  $\pm$  1 Hz.

#### 5-28. Phase Adjustment Recheck

a. Before proceeding further, locate the resonance signal and set up a frequency offset as described in Section 5-24, Frequency Adjustments.

b. If the oscilloscope pattern is split (out of phase) readjust A8R43 until the pattern looks like Figure 5-10.

c. Remove oscilloscope connections.

#### 5-29. Phase Detector and Integrator Zero Adjustment

a. Set FUNCTION switch to LOOP OPEN.

b. Disconnect yellow lead (slide-on connector) from A7 AC Amplifier.

c. Connect a dc voltmeter to A8TP3, and adjust A8R35 for a reading of less than 1 mV dc.

d. Disconnect dc voltmeter from A8TP3 and connect it to CONTROL jack on the rear panel.

e. Connect a short jumper between pins 14 and 15 on A9 Assembly socket (XA9) to short the A9 input.

f. Set FUNCTION switch to OPER and measure dc voltage at the rear panel CONTROL jack.

g. The voltage of the previous step will probably be drifting slightly. Adjust A9 Integrator zero control R10 (FINE) to stop this drift. If R10 does not have sufficient range to stop the drift, then R3 (COARSE) should be adjusted to bring R10 into range. To use the dc voltmeter on a lower range for finer adjustment, set FUNCTION switch to LOOP OPEN and then back to OPER. This will discharge the integrating capacitor and set the control voltage near zero. Observe the control voltage for a short period of time. If the drift exceeds 20 mV/minute, repeat the zeroing adjustments.

h. Remove shorting jumper from XA9 (14 and 15). Reconnect the yellow wire slide-on connector to A7. Dc voltmeter may be left connected for the next step.

#### 5-30. Loop Gain Adjustment

a. Check that the dc voltmeter is connected to rear-panel CONTROL jack and that controls are set as follows:

FUNCTION ..... OPER  
OSC FREQ ADJ FINE ..... 250

b. Observing the dc voltmeter, adjust OSC FREQ ADJ COARSE for less than 100 mV at the CONTROL jack.

c. Set FUNCTION switch to LOOP OPEN and connect the dc voltmeter to A8TP3.

d. Set OSC FREQ ADJ FINE to 200 and then adjust A7R17 for a reading of  $+0.5 \pm .05$  volts on the dc voltmeter.

e. Adjust OSC FREQ ADJ FINE to 300. Dc voltmeter should read approximately -.5 volts. If the reading is off appreciably, repeat this procedure.

f. Set OSC FREQ ADJ FINE at 250 and remove the dc voltmeter connections.

#### 5-31. Logic Assembly (A14) Alignment

a. Remove the A14 Logic Assembly circuit board and mount it on the extender board provided. It is not necessary to remove power when removing this board.

b. Set front-panel controls as follows:

FUNCTION ..... OPER  
OSC FREQ ADJ FINE ..... 250  
CIRCUIT CHECK switch ..... 2ND HARMONIC

c. Connect a dc voltmeter to A14(1) and adjust A7R29 for a reading of +4.0 volts on the dc voltmeter. With this adjustment, the CIRCUIT CHECK meter reading (2ND HARMONIC) should be between 36 and 44.

d. Connect a jumper between XA9 pins 10 and 12 (bottom of chassis). Set OSC FREQ ADJ FINE at 310 and then adjust A14R8 just to the point where the CONTINUOUS OPERATION light is extinguished. Leave the jumper connected for the following checks:

e. Make the following checks of the A14 Logic Assembly:

- 1) Set OSC FREQ ADJ FINE at 250. Then press the LOGIC RESET button. CONTINUOUS OPERATION light should come on. Turn the OSC FREQ ADJ FINE control slowly cw and note when the CONTINUOUS OPERATION light extinguishes. The OSC FREQ ADJ FINE reading should be between 300 and 320. If not, repeat step a.
- 2) Remove jumper from XA9, reset OSC FREQ ADJ FINE to 250, and press the LOGIC RESET button. The CONTINUOUS OPERATION light should come on. Leave jumper disconnected.
- 3) Remove the cable from A3J1 (bottom of chassis). The CONTINUOUS OPERATION light should go out after about 5 seconds.
- 4) Reconnect the cable to A3J1 and press LOGIC RESET button. CONTINUOUS OPERATION light should come on.
- 5) Connect a dc-VTVM such as a HP 412A to the CONTROL jack at the rear of the unit.
- 6) Adjust OSC FREQ ADJ COARSE slowly ccw. INTEGRATOR LIMIT light should come on between +2 and +4 volts as read on the meter.
- 7) Adjust OSC FREQ ADJ COARSE slowly cw. INTEGRATOR LIMIT light should come on between -4 and -7 volts.
- 8) Adjust OSC FREQ ADJ COARSE for a zero reading and then disconnect VTVM. This completes the procedure.

#### 5-32. OPTION 002, Standby Power Supply Maintenance

5-33. To insure maximum battery capacity the internal battery should be "exercised" at least every 90 days. To exercise the battery, disconnect the instrument power cord from ac power source. The front-panel BATTERY lamp will flash on and off to indicate ac power line failure. Operate the 5065A for 10 minutes, then reconnect the instrument to the ac power source. Set the "Battery" switch to RESET, then to FAST-CHARGE for at least 16 hours.

5-34. BATTERY lamp should be on for this time period. At the end of the charge period set the "Battery" switch to FLOAT.

#### NOTE

Several exercise cycles may have to be performed if the internal battery is left in TRICKLE CHARGE mode for long periods of time.

The meter reading in BATTERY position should be between 30 and 50.

5-35. During FAST CHARGE cycle, connect a clip-on milliammeter to the orange lead (+) of the internal battery. Charging current should be 90 to 150 mA. Set the BATTERY switch to FLOAT position. Current should be 12 to 34 mA depending on battery condition and line voltage.

5-36. If the internal battery supply fails to maintain a charge after several charge-discharge cycles, verify that the charging current is sufficient (Paragraph 5-35). If the current is as listed in Paragraph 5-35, replace the internal battery. Troubleshooting information for the A2 Battery Charger Board Assembly is located with the A2 schematic in Section VIII.


#### 5-37. Battery Removal and Replacement

- a. Disconnect instrument from ac and/or dc power source, and remove top and bottom covers.
- b. With instrument on its side remove internal battery fuse (F4) to electrically disconnect the internal battery. Do not reinstall the fuse.
- c. Unsolder orange No. 14 AWG wire from XA2(4).
- d. Unsolder brown No. 14 AWG wire from capacitor C1.
- e. Remove 6 Hex-nuts securing the battery cover and battery to instrument chassis.
- f. Remove the battery and cover.
- g. Unsolder orange wire from the + terminal of the battery and brown wire from the - terminal of the battery.
- h. To install a new battery perform steps a to g in reverse order. When step b is performed, reinstall the fuse.

#### 5-38. CLOCK DISPLAY ASSEMBLY A19

5-39. The A19 LED Clock Display Assembly has no adjustments and requires no periodic maintenance. Should repair be necessary, the unit may be removed and operated on the bench while remaining connected to the instrument. When operating in this manner, however, the Clock Display chassis or circuit common must be connected to the instrument chassis with a CLIP LEAD OR JUMPER WIRE.

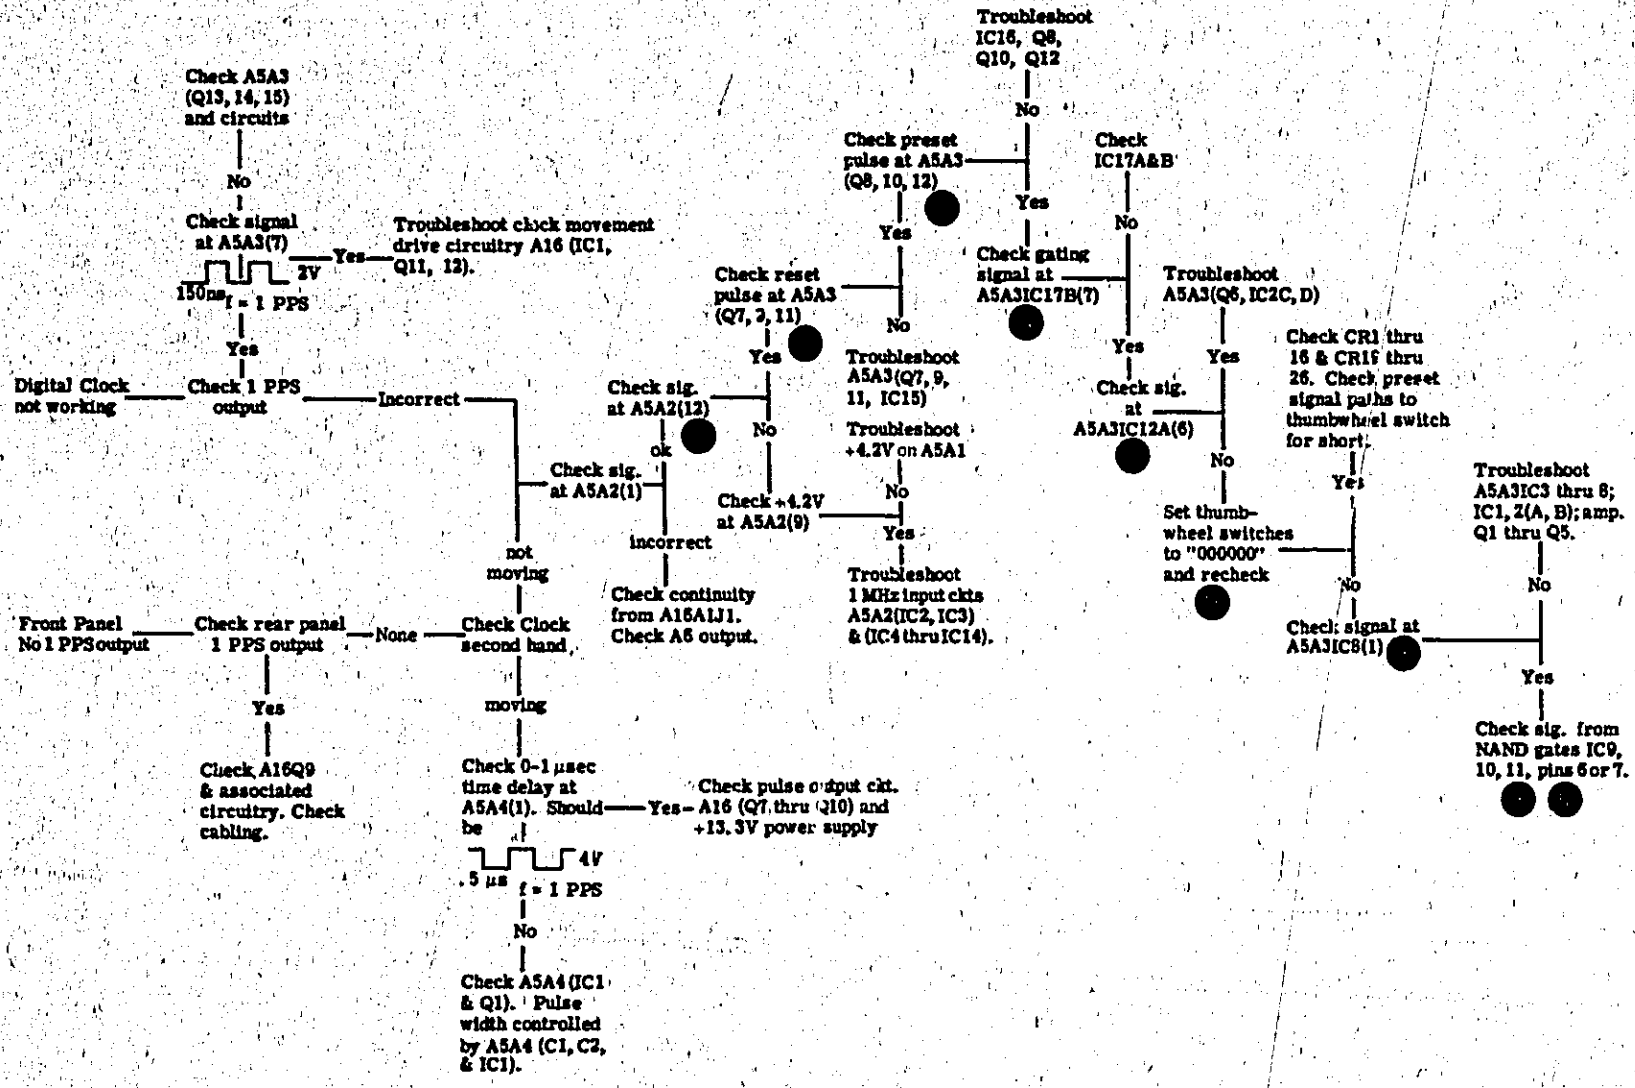Table 5-6. A5 Troubleshooting



Hewlett-Packard Model 5065A  
Rubidium Vapor Frequency Standard  
Serial No. \_\_\_\_\_

Tests Performed by \_\_\_\_\_

Date \_\_\_\_\_

PERFORMANCE CHECKS

Description	Check
1. CIRCUIT CHECK Meter	<input type="checkbox"/> See Table 5-3
2. 5 MHz, 1 MHz, 100 kHz Outputs	<input type="checkbox"/> Correct Frequency
3. Output Voltages/Waveforms	<input type="checkbox"/> at least 1 V rms.
4. Harmonic Distortion	<input type="checkbox"/> 40 dB
5. Non-Harmonic Distortion	<input type="checkbox"/> 80 dB
6. Frequency Stability	<input type="checkbox"/> $1 \times 10^{-11}$
7. Option 001 Time Standard	<input type="checkbox"/> Rate: 1PPS Width: 20 $\mu$ sec Level: +10 V p-p +10% Rise Time: 50 nsec Fall Time: 1 $\mu$ sec Jitter: 1 nsec Delay: 10 $\mu$ sec to 1 sec
8. RMS Deviation:	
1 sec averaging	<input type="checkbox"/> $5 \times 10^{-12}$
10 sec averaging	<input type="checkbox"/> $1.6 \times 10^{-12}$
100 sec averaging	<input type="checkbox"/> $5 \times 10^{-13}$



# PARTS LIST

**SECTION VI**  
**REPLACEABLE PARTS**

**6-1. INTRODUCTION**

6-2. This section contains parts number information needed to order replacement parts. Table 6-2 to 6-8 lists parts by assembly reference designation and/or by option number/assembly designation. The part numbers also provide the following information on each part:

- a. Description of part (see abbreviations in Table 6-1).
- b. Typical manufacturer of the part in a five-digit code; see list of manufacturers in Table 6-7.
- c. Manufacturer's part number.
- d. Total quantity used in the instrument (TQ column).

6-3. Miscellaneous parts are listed at the end of each table.

**6-4. ORDERING INFORMATION**

6-5. To obtain replacement parts, address order of inquiry to the nearest Hewlett-Packard Sales and Service Office (see lists at rear of this manual for addresses). Identify parts by their Hewlett-Packard part numbers.

6-6. To obtain a part not listed, include:

- a. Instrument model number.
- b. Instrument serial number.
- c. Description of the part.
- d. Function and location of the part.


Table 6-1. Table of Abbreviations

REFERENCE DESIGNATORS			
A	assembly	F	fuse
B	motor	FL	filter
BT	battery	IC	integrated circuit
C	capacitor	J	jack
CP	coupler	K	relay
CR	diode	L	inductor
DL	delay line	LS	loud speaker
DS	device signaling (lamp)	M	meter
E	misc electronic part	MK	microphone
		MP	mechanical part
		P	plug
		Q	transistor
		R	resistor
		RT	thermistor
		S	switch
		T	transformer
		TB	terminal board
		TP	test point
		U	integrated circuit
		V	vacuum tube, neon bulb, photocell, etc.
		VR	voltage regulator
		W	wire
		X	socket
		Y	crystal
		Z	tuned cavity, network

ABBREVIATIONS			
A	amperes	H	henries
AFC	automatic frequency control	HDW	hardware
AMPL	amplifier	HEX	hexagonal
		HG	mercury
BFO	beat frequency oscillator	HR	hour(s)
BE CU	beryllium copper	HZ	hertz
BH	binder head		
BP	bandpass	IF	intermediate freq
BRS	brass	IMPG	impregnated
BWO	backward wave oscillator	INCD	incandescent
		INCL	include(s)
CCW	counter-clockwise	INS	insulation(ed)
CER	ceramic	INT	internal
CNO	cabinet mount only	K	kilo = 1000
COEF	coefficient	LH	left hand
COM	common	LN	linear taper
COMP	composition	LK WASH	lock washer
COMPL	complete	LOG	logarithmic taper
CONN	connector	LPF	low pass filter
CP	cadmium plate		
CRT	cathode-ray tube	M	milli = 10 <sup>-3</sup>
CW	clockwise	MEG	mega = 10 <sup>6</sup>
DEPC	deposited carbon	MET FLM	metal film
DR	drive	MET OX	metallic oxide
ELECT	electrolytic	MFR	manufacturer
ENCAP	encapsulated	MHZ	mega hertz
EXT	external	MINAT	minature
F	farads	MOM	momentary
FH	flat head	MOS	metal oxide substrate
FIL H	filister head	MTG	mounting
FXD	fixed	MY	"mylar"
G	giga (10 <sup>9</sup> )	N	nano (10 <sup>-9</sup> )
GE	germanium	N C	normally closed
GL	glass	NE	neon
GRD	ground(ed)	NI PL	nickel plate
		N/O	normally open
		NOM	nominal
		NPO	negative positive zero (zero temperature coefficient)
		NPN	negative-positive-negative
		NRFR	not recommended for field replacement
		NSR	not separately replaceable
		OBD	order by description
		OH	oval head
		OX	oxide
		P	peak
		PC	printed circuit
		PF	picofarads = 10 <sup>-12</sup> farads
		PH BRZ	phosphor bronze
		PHL	Phillips
		PIV	peak inverse voltage
		PNP	positive-negative-positive
		P/O	part of
		POLY	polystyrene
		POR/C	porcelain
		POS	position(s)
		POT	potentiometer
		PP	peak-to-peak
		PT	point
		PWV	peak working voltage
		RECT	rectifier
		RF	radio frequency
		RH	round head or right hand
		RMO	rack mount only
		RMS	root-mean square
		RWV	reverse working voltage
		S-B	slow-blow
		SCR	screw
		SE	selenium
		SECT	section(s)
		SEMICON	semiconductor
		SI	silicon
		SIL	silver
		SL	slide
		SPG	spring
		SPL	special
		SST	stainless steel
		SR	split ring
		STL	steel
		TA	tantalum
		TD	time delay
		TGL	toggle
		THD	thread
		TI	titanium
		TOL	tolerance
		TRIM	trimmer
		TWT	traveling wave tube
		U	micro = 10 <sup>-3</sup>
		VAR	variable
		VDCW	dc working volts
		W	with
		W	watts
		WIV	working inverse voltage
		WW	wirewound
		W/O	without

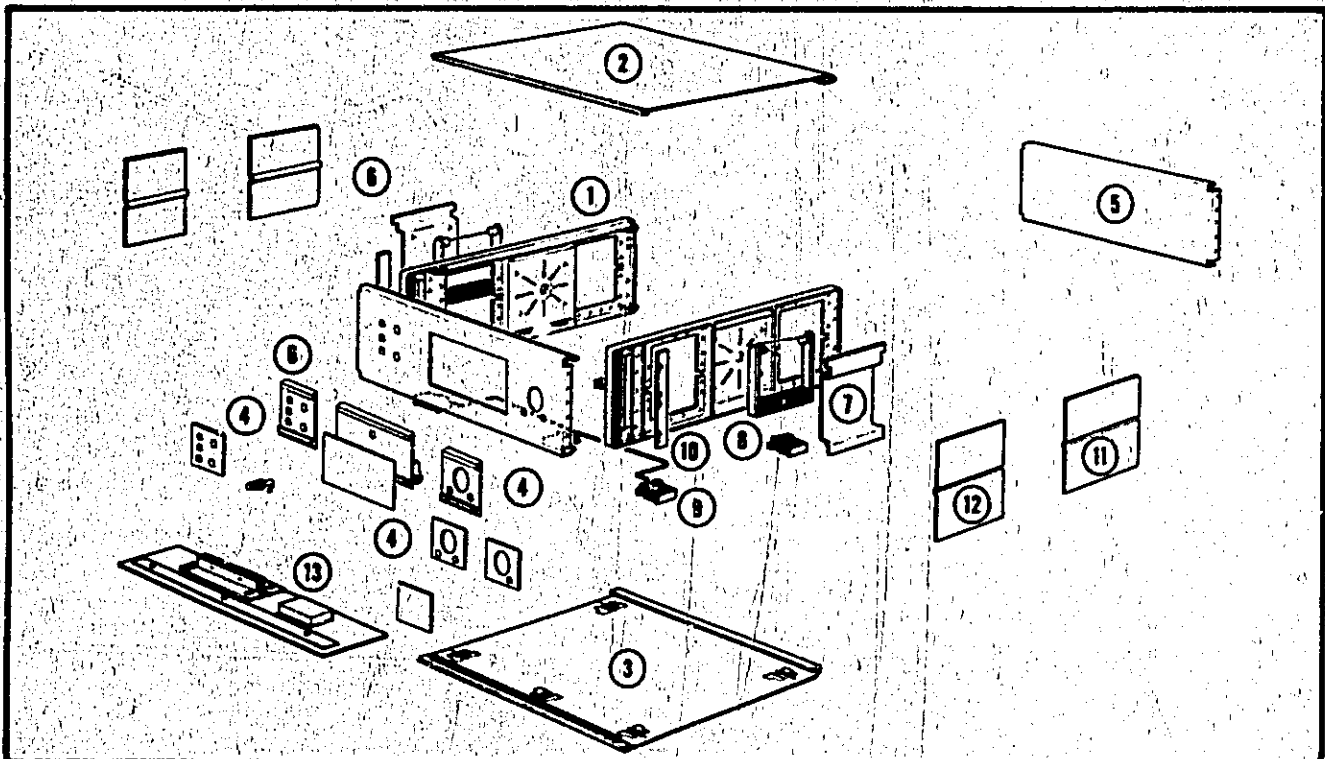Figure 6-1. Modular Cabinet Parts



Item No.	Description	HP Part Number
1	Side Frame Assembly	5060-0732
2	Cover: Top	05061-2041
3	Cover: Bottom	05065-2048
4	Panel: Front	05065-0008
	Panel: Left Insert	05065-0050
	Door	05065-2018
	Door Panel	05054-0051
	Latch	05010-0582
	Plate, Center	05061-2022
	Standard Panel Insert	05065-0052
	Panel Option 001 Insert	05061-0022
	Panel Option 002 Insert	05065-0053
	5	Panel: Rear
6	Plate: Left Panel	05035-2017
7	Retainer: 5½" Mod. Handle	5060-0766
8	Handle: 5H Side	5060-0222
9	Foot Assembly: FM	5060-0767
10	Trim Strip	5000-0051
11	Rear Side Plate Cover	5000-0738
12	Front Side Plate Cover	5000-0739
13	Kit: 5H Rack Mount	5060-0775

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1	05065-0070	2	1	MODULE ASSEMBLY, SYNTHESIZER (SERIES 1000)	20400	05065-0070
A1B1	3100-2052	0	1	SWITCH-TUMBLED WHEEL 4 MOD, 1-2-4-8 BCD (INCLUDES B1A, B, C, D)	20400	3100-2052
A1B2	3101-0045	2	1	SWITCH-8L DPDT STD .5A 125VAC/DC	20400	3101-0045
A1V1	0010-0102	6	1	A1 MISCELLANEOUS PARTS CRYSTAL-QUARTZ 9,315 MHZ	20400	0010-0102
	0340-0119	4	2	TERMINAL-STUD 8SL-PIN PRESS-MTG	20400	0340-0119
	0510-0207	2	2	THREADED INSERT-STD 4-40, 100-LG STL	20400	0510-0207
	1250-0001	2	5	CONNECTOR-HP 8MS M 8SL-MOLE-PR 50-OMM	20400	1250-0001
	05065-0035	0	1	COVER, SYNTHESIZER	20400	05065-0035
	05000-0007	4	1	BRACKET, END	20400	05000-0007
	05005-2032	4	1	PLATE, END	20400	05005-2032
	05005-0030	2	1	CHASSI, SYNTHESIZER	20400	05005-0030
	05005-2043	9	1	PLATE, END	20400	05005-2043
A1A1	05065-0073	6	1	BOARD ASSEMBLY, SYNTHESIZER (NOT FOR REPLACEMENT) FOR REPLACEMENT ORDER 05065-0070	20400	05065-0073
A1A1C1	0150-0121	5	22	CAPACITOR-FXD .1UF +80-20% 50VDC CER	20400	0150-0121
A1A1C2	0140-0223	7	1	CAPACITOR-FXD 200PF +-1% 300VDC MICA	72130	DM15P261F0300V1C
A1A1C3	0100-0127	2	10	CAPACITOR-FXD 1UF +-20% 25VDC CER	20400	0100-0127
A1A1C4				DELETED		
A1A1C5				DELETED		
A1A1C6	0140-0192	9	1	CAPACITOR-FXD 60PF +-5% 100VDC MICA	72130	DM15E60J0300V1C
A1A1C7				DELETED		
A1A1C8	0100-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	20400	0100-0127
A1A1C9	0150-0121	5		CAPACITOR-FXD .1UF +80-20% 50VDC CER	20400	0150-0121
A1A1C10	0140-0192	9		CAPACITOR-FXD 60PF +-5% 100VDC MICA	72130	DM15E60J0300V1C
A1A1C11				DELETED		
A1A1C12	0100-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	20400	0100-0127
A1A1C13	0150-0121	5		CAPACITOR-FXD .1UF +80-20% 50VDC CER	20400	0150-0121
A1A1C14	0140-0192	9		CAPACITOR-FXD 60PF +-5% 100VDC MICA	72130	DM15E60J0300V1C
A1A1C15				DELETED		
A1A1C16	0140-0192	9		CAPACITOR-FXD 60PF +-5% 100VDC MICA	72130	DM15E60J0300V1C
A1A1C17	0150-0121	5		CAPACITOR-FXD .1UF +80-20% 50VDC CER	20400	0150-0121
A1A1C18	0140-0192	9		CAPACITOR-FXD 60PF +-5% 100VDC MICA	72130	DM15E60J0300V1C
A1A1C19	0140-0192	9		CAPACITOR-FXD 60PF +-5% 100VDC MICA	72130	DM15E60J0300V1C
A1A1C20	0140-0223	7	1	CAPACITOR-FXD 200PF +-1% 300VDC MICA	72130	DM15P261F0300V1C
A1A1C21	0100-0170	9	11	CAPACITOR-FXD .47UF +80-20% 25VDC CER	20400	0100-0170
A1A1C22	0100-0291	3	8	CAPACITOR-FXD 1UF +-10% 15VDC TA	50200	150D10E903552
A1A1C23	0150-0121	5		CAPACITOR-FXD .1UF +80-20% 50VDC CER	20400	0150-0121
A1A1C24	0100-0291	3		CAPACITOR-FXD 1UF +-10% 15VDC TA	50200	150D10E903552
A1A1C25	0100-0170	9		CAPACITOR-FXD .47UF +80-20% 25VDC CER	20400	0100-0170
A1A1C26	0150-0121	5		CAPACITOR-FXD .1UF +80-20% 50VDC CER	20400	0150-0121
A1A1C27	0100-0170	9		CAPACITOR-FXD .47UF +80-20% 25VDC CER	20400	0100-0170
A1A1C28				DELETED		
A1A1C29	0150-0093	0	10	CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0150-0093
A1A1C30	0100-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	20400	0100-0127
A1A1C31	0100-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	20400	0100-0127
A1A1C32	0150-0121	5		CAPACITOR-FXD .1UF +80-20% 50VDC CER	20400	0150-0121
A1A1C33	0140-0223	0	2	CAPACITOR-FXD 200PF +-1% 300VDC MICA	72130	DM15P261F0300V1C
A1A1C34				DELETED		
A1A1C35	0140-0170	2	3	CAPACITOR-FXD 1000PF +-2% 100VDC MICA	72130	DM15P1020J0300V1C
A1A1C36	0150-0093	0		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0150-0093
A1A1C37	0150-0093	0		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0150-0093
A1A1C38	0100-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	20400	0100-0127
A1A1C39	0150-0093	0		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0150-0093
A1A1C40	0150-0100	0	4	CAPACITOR-FXD 50UF +-20% 50VDC TA	50200	150D06E900002
A1A1C41	0100-0155	8	1	CAPACITOR-FXD 2.2UF +-20% 20VDC TA	50200	150D225X00202
A1A1C42	0150-0121	5		CAPACITOR-FXD .1UF +80-20% 50VDC CER	20400	0150-0121
A1A1C43	0140-0223	0		CAPACITOR-FXD 200PF +-1% 300VDC MICA	72130	DM15P261F0300V1C
A1A1C44	0100-0110	1	7	CAPACITOR-FXD 0.01UF +-10% 15VDC TA	50200	150D06E903552
A1A1C45	0150-0093	0		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0150-0093
A1A1C46				DELETED		
A1A1C47	0100-0302	3	1	CAPACITOR-FXD 800PF +-1% 300VDC MICA	20400	0100-0302
A1A1C48	0100-0137	6	1	CAPACITOR-FXD 100UF +-20% 10VDC TA	50200	150D107001002
A1A1C49	0100-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	20400	0100-0127
A1A1C50				DELETED		
A1A1C51	1902-3100	3	1	DIODE-ZNR 2.75V 2% 00-7 PDS, 4M TC+, .01%Z	20400	1902-3100
A1A1C52	1901-0025	2	10	DIODE-GEN PNP 100V 200MA 00-7	20400	1901-0025
A1A1C53	1910-0010	0	10	DIODE-GE 60V 60MA 1US 00-7	20400	1910-0010
A1A1C54	1910-0010	0		DIODE-GE 60V 60MA 1US 00-7	20400	1910-0010
A1A1C55	1910-0010	0		DIODE-GE 60V 60MA 1US 00-7	75400	1910-0010
A1A1C56	1910-0010	0		DIODE-GE 60V 60MA 1US 00-7	20400	1910-0010
A1A1C57	1902-3100	0	2	DIODE-ZNR 2.75V 2% 00-7 PDS, 4M TC+, .05%Z	20400	1902-3100
A1A1C58				DELETED		
A1A1C59				DELETED		
A1A1C60	1910-0010	0		DIODE-GE 60V 60MA 1US 00-7	20400	1910-0010
A1A1C61	1910-0010	0		DIODE-GE 60V 60MA 1US 00-7	20400	1910-0010
A1A1C62	1910-0010	0		DIODE-GE 60V 60MA 1US 00-7	20400	1910-0010
A1A1C63	1902-3100	3	1	DIODE-ZNR 13.5V 5% 00-7 PDS, 4M TC+, .05%Z	20400	1902-3100
A1A1C64	1910-0010	0		DIODE-GE 60V 60MA 1US 00-7	20400	1910-0010

See introduction to this section for ordering information  
\*Indicates factory selected value.

Table 6-2. Replaceable Parts (Continued)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1A1CR16	1910-0010	0		DIODE-GE 60V 60MA 1US DC-7	28480	1910-0010
A1A1CR17	1910-0010	0		DIODE-GE 60V 60MA 1US DC-7	28480	1910-0010
A1A1CR18	1910-0010	0		DIODE-GE 60V 60MA 1US DC-7	28480	1910-0010
A1A1CR19				DELETED		
A1A1CR20				DELETED		
A1A1CR21	1910-0010	0		DIODE-GE 60V 60MA 1US DC-7	28480	1910-0010
A1A1CR22	1910-0010	0		DIODE-GE 60V 60MA 1US DC-7	28480	1910-0010
A1A1CR23	1910-0010	0		DIODE-GE 60V 60MA 1US DC-7	28480	1910-0010
A1A1CR24	1910-0010	0		DIODE-GE 60V 60MA 1US DC-7	28480	1910-0010
A1A1CR25	1902-3203	6	3	DIODE-ZNR 10,7V 5Z DC-7 P08,4W TC0+,0575	28480	1902-3203
A1A1CR26	1901-0040	1	30	DIODE-SWITCHING 30V 50MA 2MS DC-35	28480	1901-0040
A1A1CR27	0122-0013	3	1	DIODE-VVC 30PF 5Z DC-10 807-MIN	28480	0122-0013
A1A1CR28				DELETED		
A1A1CR29	1902-3125	1	2	DIODE-ZNR 6,90V 2Z DC-7 P08,4W TC0+,045Z	28480	1902-3125
A1A1CR30	1901-0040	1		DIODE-SWITCHING 30V 50MA 2MS DC-35	28480	1901-0040
A1A1CR31	1901-0040	1		DIODE-SWITCHING 30V 50MA 2MS DC-35	28480	1901-0040
A1A1CR32	1901-0050	3	2	DIODE-SWITCHING 60V 200MA 2MS DC-35	28480	1901-0050
A1A1CR33	1901-0050	3	2	DIODE-SWITCHING 60V 200MA 2MS DC-35	28480	1901-0050
A1A1CR34	1901-0040	1		DIODE-SWITCHING 30V 50MA 2MS DC-35	28480	1901-0040
A1A1CR35	1901-0040	1		DIODE-SWITCHING 30V 50MA 2MS DC-35	28480	1901-0040
A1A1CR36	1901-0040	1		DIODE-SWITCHING 30V 50MA 2MS DC-35	28480	1901-0040
A1A1CR37	1901-0040	1		DIODE-SWITCHING 30V 50MA 2MS DC-35	28480	1901-0040
A1A1CR38	1901-0040	1		DIODE-SWITCHING 30V 50MA 2MS DC-35	28480	1901-0040
A1A1CR39	1901-0040	1		DIODE-SWITCHING 30V 50MA 2MS DC-35	28480	1901-0040
A1A1CR40	1901-0040	1		DIODE-SWITCHING 30V 50MA 2MS DC-35	28480	1901-0040
A1A1CR41	1901-0040	1		DIODE-SWITC 30V 50MA 2MS DC-35	28480	1901-0040
A1A1IC1	1020-0322	0	4	IC CNTR TTL DECD NEG-EDGE-TY16	10324	N0280N
A1A1IC2	1020-0322	0	4	IC CNTR TTL DECD NEG-EDGE-TY16	10324	N0280N
A1A1IC3	1020-0070	0	1	IC SATE TTL NAND 8-IMP	01295	047430N
A1A1IC4	1020-0315	1	1	IC Mv DTL MONOSTBL	07263	031MC
A1A1IC5	1020-0322	0		IC CNTR TTL DECD NEG-EDGE-TY16	10324	N0280N
A1A1IC6	1020-0322	0		IC CNTR TTL DECD NEG-EDGE-TY16	10324	N0280N
A1A1L1	0100-1010	1	1	COIL-MLD 5,0UM 10Z 0045 .155DX,375LS-NOM	28480	0100-1010
A1A1L2	0100-0112	2	1	COIL-MLD 4,7UM 10Z 0033 .155DX,375LS-NOM	28480	0100-0112
A1A1L3	0100-0029	0	1	COIL-MLD 10UM 10Z 0030 .250X,313LS-NOM	28480	0100-0029
A1A1L4	0100-0115	0	1	COIL-MLD 10UM 10Z 0059 .155DX,375LS-NOM	28480	0100-0115
A1A1L5	0100-0137	1	0	COIL-MLD 1MM 5Z 0060 .100X,04LS-NOM	28480	0100-0137
A1A1L7	0100-0090	1	1	COIL-MLD 1UM 10Z 0050 .155DX,375LS-NOM	28480	0100-0090
A1A1L8	0100-0137	1	1	COIL-MLD 1MM 5Z 0060 .100X,04LS-NOM	28480	0100-0137
A1A1L9	0100-1009	2	1	COIL-MLD 4,7UM 5Z 0080 .250X,74LS-NOM	28480	0100-1009
A1A101	1054-0072	0	1	TRANSISTOR NPN 2N3050 SI TC-55 P0025W	04713	2N3050
A1A102	1054-0069	1	3	TRANSISTOR NPN SI P00300MW FT0600MHZ	04713	2N700
A1A103	1054-0069	1	3	TRANSISTOR NPN SI P00300MW FT0600MHZ	04713	2N700
A1A104	1054-0069	1	3	TRANSISTOR NPN SI P00300MW FT0600MHZ	04713	2N700
A1A105				DELETED		
A1A106				DELETED		
A1A107	1054-0013	7	2	TRANSISTOR NPN 2N2218A SI TC-5 P00800MW	04713	2N2218A
A1A108	1054-0092	2	7	TRANSISTOR NPN SI P00200MW FT0600MHZ	28480	1054-0092
A1A109	1054-0013	7	2	TRANSISTOR NPN 2N2218A SI TC-5 P00800MW	04713	2N2218A
A1A1020	1054-0047	2	1	TRANSISTOR NPN 2N3725 SI TC-5 P00800MW	01295	2N3725
A1A1021	1054-0092	2		TRANSISTOR NPN SI P00200MW FT0600MHZ	28480	1054-0092
A1A1022	1054-0092	2		TRANSISTOR NPN SI P00200MW FT0600MHZ	28480	1054-0092
A1A1023	1054-0023	9	24	TRANSISTOR NPN SI TC-18 P00300MW	28480	1054-0023
A1A1024	1054-0003	5	22	TRANSISTOR NPN SI TC-39 P00600MW	28480	1054-0003
A1A1025	1054-0003	5	22	TRANSISTOR NPN SI TC-39 P00600MW	28480	1054-0003
A1A1026	1054-0092	2		TRANSISTOR NPN SI P00200MW FT0600MHZ	28480	1054-0092
A1A1027	1054-0023	0		TRANSISTOR NPN SI TC-18 P00300MW	28480	1054-0023
A1A1R1	0757-0010	3	1	RESISTOR 025 1Z .5W F TC00+-100	28480	0757-0010
A1A1R2	0757-0900	4	10	RESISTOR 100 2Z .125W F TC00+-100	24540	C0-1/8-T0-101-G
A1A1R3	0090-3311	1	1	RESISTOR 51 5Z 2W 40 TC00+-200	26480	0090-3311
A1A1R4	0757-0920	2	32	RESISTOR 10K 2Z .125W F TC00+-100	24540	C0-1/8-T0-1001-G
A1A1R5	0757-0920	2	32	RESISTOR 1K 2Z .125W F TC00+-100	24540	C0-1/8-T0-1001-G
A1A1R6	0757-0940	0	46	RESISTOR 10K 2Z .125W F TC00+-100	24540	C0-1/8-T0-1002-G
A1A1R7	0757-0940	0	46	RESISTOR 10K 2Z .125W F TC00+-100	24540	C0-1/8-T0-1002-G
A1A1R8	0757-0940	0	46	RESISTOR 10K 2Z .125W F TC00+-100	24540	C0-1/8-T0-1002-G
A1A1R9	0757-0940	0	46	RESISTOR 10K 2Z .125W F TC00+-100	24540	C0-1/8-T0-1002-G
A1A1R10	0757-0940	0	46	RESISTOR 10K 2Z .125W F TC00+-100	24540	C0-1/8-T0-1002-G
A1A1R11	0757-0940	0	46	RESISTOR 10K 2Z .125W F TC00+-100	24540	C0-1/8-T0-1002-G
A1A1R12	0757-0940	0	46	RESISTOR 10K 2Z .125W F TC00+-100	24540	C0-1/8-T0-1002-G
A1A1R13	0757-0940	0	46	RESISTOR 10K 2Z .125W F TC00+-100	24540	C0-1/8-T0-1002-G
A1A1R14	0757-0940	0	46	RESISTOR 10K 2Z .125W F TC00+-100	24540	C0-1/8-T0-1002-G
A1A1R15	0757-0940	0	46	RESISTOR 10K 2Z .125W F TC00+-100	24540	C0-1/8-T0-1002-G

See introduction to this section for ordering information  
\*Indicates factory selected value

Table 6-2. Replaceable Parts (Continued)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1A1R16	0757-0948	0		RESISTOR 10K 2% .125W F TC00-100	2454b	C4-1/8-T0-1002-G
A1A1R17	0757-0948	0		RESISTOR 10K 2% .125W F TC00-100	2454b	C4-1/8-T0-1002-G
A1A1R18	0757-0948	1	0	RESISTOR 510 2% .125W F TC00-100	2454b	C4-1/8-T0-511-G
A1A1R19	0757-0948	0		RESISTOR 10K 2% .125W F TC00-100	2454b	C4-1/8-T0-1002-G
A1A1R20	0757-0948	2		RESISTOR 1K 2% .125W F TC00-100	2454b	C4-1/8-T0-1001-G
A1A1R21	0757-0948	2	0	RESISTOR 4.7K 2% .125W F TC00-100	2454b	C4-1/8-T0-4701-G
A1A1R22	0757-0948	2	0	RESISTOR 1K 2% .125W F TC00-100	2454b	C4-1/8-T0-1001-G
A1A1R23	0757-0948	0		RESISTOR 10K 2% .125W F TC00-100	2454b	C4-1/8-T0-1002-G
A1A1R24	0757-0948	0		RESISTOR 10K 2% .125W F TC00-100	2454b	C4-1/8-T0-1002-G
A1A1R25	0757-0948	0		RESISTOR 10K 2% .125W F TC00-100	2454b	C4-1/8-T0-1002-G
A1A1R26	0757-0948	0		RESISTOR 10K 2% .125W F TC00-100	2454b	C4-1/8-T0-1002-G
A1A1R27				DELETED		
A1A1R28	0757-0947	3	1	RESISTOR 62K 2% .125W F TC00-100	2454b	C4-1/8-T0-6202-G
A1A1R29	0757-0948	0	3	RESISTOR 30K 2% .125W F TC00-100	2454b	C4-1/8-T0-3002-G
A1A1R30	0757-0948	0		RESISTOR 10K 2% .125W F TC00-100	2454b	C4-1/8-T0-1002-G
A1A1R31	0757-0948	0		RESISTOR 51 2% .125W F TC00-100	2454b	C4-1/8-T0-5100-G
A1A1R32				DELETED		
A1A1R33	0757-0948	0		RESISTOR 10K 2% .125W F TC00-100	2454b	C4-1/8-T0-1002-G
A1A1R34	0757-0948	3	2	RESISTOR 2.4K 2% .125W F TC00-100	2454b	C4-1/8-T0-2401-G
A1A1R35	0757-0947	1	5	RESISTOR 200 2% .125W F TC00-100	2454b	C4-1/8-T0-2001-G
A1A1R36	0721-0811	3	2	RESISTOR 500K 1% .125W CF TC00-500	91637	DC1/8-501-F
A1A1R37	0757-0948	0	1	RESISTOR 270 2% .125W F TC00-100	2454b	C4-1/8-T0-271-G
A1A1R38	0757-0948	1	0	RESISTOR 2K 2% .125W F TC00-100	2454b	C4-1/8-T0-2001-G
A1A1R39	0757-0948	5	1	RESISTOR 75K 2% .125W F TC00-100	2454b	C4-1/8-T0-7502-G
A1A1R40	0757-0947	1	15	RESISTOR 24K 2% .125W F TC00-100	2454b	C4-1/8-T0-2402-G
A1A1R41	0757-0948	4	0	RESISTOR 51 2% .125W F TC00-100	2454b	C4-1/8-T0-5100-G
A1A1R42	0757-0948	4	0	RESISTOR 51 2% .125W F TC00-100	2454b	C4-1/8-T0-5100-G
A1A1R43	0757-0948	7	7	RESISTOR 1.6K 2% .125W F TC00-100	2454b	C4-1/8-T0-1601-G
A1A1R44	0757-0948	0	4	RESISTOR 3.3K 2% .125W F TC00-100	2454b	C4-1/8-T0-3301-G
A1A1R45	0757-0948	0	4	RESISTOR 3.3K 2% .125W F TC00-100	2454b	C4-1/8-T0-3301-G
A1A1R46	0757-0948	0	4	RESISTOR 3.3K 2% .125W F TC00-100	2454b	C4-1/8-T0-3301-G
A1A1R47	0757-0948	0	4	RESISTOR 3.3K 2% .125W F TC00-100	2454b	C4-1/8-T0-3301-G
A1A1R48	0757-0948	0	4	RESISTOR 3.3K 2% .125W F TC00-100	2454b	C4-1/8-T0-3301-G
A1A1R49	0757-0948	0	4	RESISTOR 3.3K 2% .125W F TC00-100	2454b	C4-1/8-T0-3301-G
A1A1R50	0757-0948	0	4	RESISTOR 3.3K 2% .125W F TC00-100	2454b	C4-1/8-T0-3301-G
A1A1R51	0757-0948	0	4	RESISTOR 3.3K 2% .125W F TC00-100	2454b	C4-1/8-T0-3301-G
A1A1R52	0757-0948	0	4	RESISTOR 3.3K 2% .125W F TC00-100	2454b	C4-1/8-T0-3301-G
A1A1R53	0757-0948	0	4	RESISTOR 3.3K 2% .125W F TC00-100	2454b	C4-1/8-T0-3301-G
A1A1R54	0757-0948	0	4	RESISTOR 3.3K 2% .125W F TC00-100	2454b	C4-1/8-T0-3301-G
A1A1R55	0757-0948	0	4	RESISTOR 3.3K 2% .125W F TC00-100	2454b	C4-1/8-T0-3301-G
A1A1R56	0698-3130	2	0	RESISTOR 100K 2% .125W F TC00-100	2454b	C4-1/8-T0-1002-G
A1A1R57	0698-3130	2	3	RESISTOR 2.7K 1% .125W CF TC00-800	91637	DC1/8-2704-F
A1A1R58	0698-3130	2	2	RESISTOR 2.7K 1% .125W CF TC00-800	91637	DC1/8-2704-F
A1A1R59	0757-0948	2	2	RESISTOR 1K 2% .125W F TC00-100	2454b	C4-1/8-T0-1001-G
A1A1R60	0757-0948	2	0	RESISTOR 1K 2% .125W F TC00-100	2454b	C4-1/8-T0-1001-G
A1A1R61	0757-0948	7	0	RESISTOR 1.6K 2% .125W F TC00-100	2454b	C4-1/8-T0-1601-G
A1A1R62	0757-0948	0	1	RESISTOR 120 2% .125W F TC00-100	2454b	C4-1/8-T0-121-G
A1A1R63	0757-0948	0	0	RESISTOR 3K 2% .125W F TC00-100	2454b	C4-1/8-T0-3001-G
A1A1R64	0698-3129	0	0	RESISTOR 1K 1% .125W CF TC00-800	91637	DC1/8-1004-F
A1A1R65	0721-0811	3	3	RESISTOR 500K 1% .125W CF TC00-500	91637	DC1/8-501-F
A1A1R66	0757-0948	4	4	RESISTOR 33K 2% .125W F TC00-100	2454b	C4-1/8-T0-3302-G
A1A1R67	0698-3129	0	1	RESISTOR 2.21K 1% .125W CF TC00-800	91637	DC1/8-2214-F
A1A1R68	0698-3127	7	2	RESISTOR 4.75K 2% .125W CF TC00-1500	91637	DC1/8-4754-F
A1A1R69	0757-0948	0	0	RESISTOR 10K 2% .125W F TC00-100	2454b	C4-1/8-T0-1002-G
A1A1R70	0757-0948	0	3	RESISTOR 0.6K 2% .125W F TC00-100	2454b	C4-1/8-T0-6001-G
A1A1R71	0698-3130	2	2	RESISTOR 2.7K 1% .125W CF TC00-800	91637	DC1/8-2704-F
A1A1R72	0757-0948	2	1	RESISTOR 0.2K 2% .125W F TC00-100	2454b	C4-1/8-T0-2001-G
A1A1R73	0757-0948	2	0	RESISTOR 1K 2% .125W F TC00-100	2454b	C4-1/8-T0-1001-G
A1A1R74	0757-0948	2	0	RESISTOR 1K 2% .125W F TC00-100	2454b	C4-1/8-T0-1001-G
A1A1R75	0757-0948	2	1	RESISTOR 5.0K 2% .125W F TC00-100	2454b	C4-1/8-T0-5001-G
A1A1R76	0757-0948	7	0	RESISTOR 1.6K 2% .125W F TC00-100	2454b	C4-1/8-T0-1601-G
A1A1R77	0757-0948	4	0	RESISTOR 51 2% .125W F TC00-100	2454b	C4-1/8-T0-5100-G
A1A1R78	0757-0948	4	1	RESISTOR 2.7K 2% .125W F TC00-100	2454b	C4-1/8-T0-2701-G
A1A1R79	0757-0948	0	0	RESISTOR 30K 2% .125W F TC00-100	2454b	C4-1/8-T0-3002-G
A1A1R80	0757-0948	0	0	RESISTOR 100 2% .125W F TC00-100	2454b	C4-1/8-T0-101-G
A1A1R81				DELETED		
A1A1R82	0757-0917	3		RESISTOR 510 2% .125W F TC00-100	2454b	C4-1/8-T0-511-G
A1A1T1	05065-0012	0	1	TRANSFORMER, CLOCKING OSCILLATOR	28480	05065-0012
A1A1T2	05065-0011	0	2	TRANSFORMER, 9.3 MHZ	28480	05065-0011
A1A1T3	05065-0011	0	2	TRANSFORMER, 9.3 MHZ	28480	05065-0011
A1A1X1	1200-0159	7	1	SOCKET-XYAL 2-CONT MC-6/U DIP-2LDR	28480	1200-0159
	0340-0037	5	2	TERMINAL-STUD DNL-TUR PRESS-NTC	28480	0340-0037
	0340-0039	7	2	TERMINAL BUSHING - TEFLON MOUNTS IN	28480	0340-0039
	0340-0162	7	1	INSULATOR-252N ALUMINUM	28480	0340-0162
A2				OPT 062 OR 603 FOR CALLOUTS SEE TABLE 6.3.		
A3	05065-0078	0	1	MODULE ASSEMBLY, MULTIPLIER	28480	05065-0078
A3C1	0100-3030	0	5	CAPACITOR-FOTMNU 5000PF +80 -20% 200V	28480	0100-3030
A3C2	0100-3030	0	5	CAPACITOR-FOTMNU 5000PF +80 -20% 200V	28480	0100-3030
A3C3	0100-3030	0	5	CAPACITOR-FOTMNU 5000PF +80 -20% 200V	28480	0100-3030

See introduction to this section for ordering information  
\*Indicates factory selected value

Model 5065A  
Circuit Diagrams, Theory, and Maintenance

Table 6-2. Replaceable Parts (Continued)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A3J1	1250-0250	2	1	CONNECTOR-RF 50M M 56L-HOLE-FR 50-OHM	2040	1250-0250
A3J2	1250-0250	2	1	CONNECTOR-RF 50M M 56L-HOLE-FR 50-OHM	2040	1250-0250
A3J3	1250-0250	2	1	CONNECTOR-RF 50M M 56L-HOLE-FR 50-OHM	2040	1250-0250
A3J4	1250-0250	2	1	CONNECTOR-RF 50M M 56L-HOLE-FR 50-OHM	2040	1250-0250
A3J5	1250-0250	2	1	CONNECTOR-RF 50M M 56L-HOLE-FR 50-OHM	2040	1250-0250
A3J6	1250-0250	2	1	CONNECTOR-RF 50M M 56L-HOLE-FR 50-OHM	2040	1250-0250
A3J7	1250-0250	2	1	CONNECTOR-RF 50M M 56L-HOLE-FR 50-OHM	2040	1250-0250
A3J8	1250-0250	2	1	CONNECTOR-RF 50M M 56L-HOLE-FR 50-OHM	2040	1250-0250
	0505-0114	3	1	GUIDE-PC 80 BE-CU .074-80-TMMS 3-LE	2040	0505-0114
	0505-2045	1	1	COVER, MULTIPLIER	2040	0505-2045
	0505-2052	0	1	RD, MULTIPLIER MODULE	2040	0505-2052
	0505-2054	2	1	SPACER, ELASTIC	2040	0505-2054
	0505-2055	4	1	PLATE, END	2040	0505-2055
	0505-2056	6	1	PLATE, BOTTOM	2040	0505-2056
A3A1	0505-6009	1	1	BOARD ASSY, MULTIPLIERINDY FOR REPLACEMENT, FOR REPLACEMENT ORDER 0505-6078	2040	0505-6009
A3A1C1	0100-2055	2	11	CAPACITOR-V TRM-CER 9-35PF 200V PC-MTG	52703	304322 9/35PF N650
A3A1C2	0100-2055	0	11	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C3	0100-2055	0	1	CAPACITOR-FXD 100PF +-5% 100VDC MICA	72130	0119F101J0500AVICR
A3A1C4	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C5	0170-0070	3	3	CAPACITOR-FXD .047UF +-20% 50VDC POLYE	04411	002-4730R5#2
A3A1C6	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C7	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C8	0100-2055	0	10	CAPACITOR-FXD .01UF +-20% 100VDC MICA	2040	0100-2055
A3A1C9	0170-0070	3	3	CAPACITOR-FXD .047UF +-20% 50VDC POLYE	04411	002-4730R5#2
A3A1C10	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C11	0100-2055	0	1	CAPACITOR-FXD 320PF +-5% 100VDC MICA	2040	0100-2055
A3A1C12	0100-0116	1	1	CAPACITOR-FXD 5.0UF +-10% 35VDC TA	50209	150D685X01602
A3A1C13	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC MICA	2040	0100-2055
A3A1C14	0170-0070	3	3	CAPACITOR-FXD .047UF +-20% 50VDC POLYE	04411	002-4730R5#2
A3A1C15	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C16	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C17	0170-0070	3	3	CAPACITOR-FXD .047UF +-20% 50VDC POLYE	04411	001PE1030R5#1
A3A1C18	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C19	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C20	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C21	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C22	0170-0070	3	3	CAPACITOR-FXD .047UF +-20% 50VDC POLYE	04411	001PE1030R5#1
A3A1C23	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C24	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C25	0170-0070	3	3	CAPACITOR-FXD .047UF +-20% 50VDC POLYE	04411	002-4730R5#2
A3A1C26	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C27	0100-0950	0	1	CAPACITOR-FXD 80PF +-5% 100VDC MICA	2040	0100-0950
A3A1C28	0170-0070	3	3	CAPACITOR-FXD .047UF +-20% 50VDC POLYE	04411	001PE1030R5#1
A3A1C29	0170-0070	3	3	CAPACITOR-FXD .047UF +-20% 50VDC POLYE	04411	001PE1030R5#1
A3A1C30	0121-0046	2	1	CAPACITOR-V TRM-CER 9-35PF 200V PC-MTG	52703	304322 9/35PF N650
A3A1C31	0170-0070	3	3	CAPACITOR-FXD .047UF +-20% 50VDC POLYE	04411	001PE1030R5#1
A3A1C32	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C33	0121-0046	2	1	CAPACITOR-V TRM-CER 9-35PF 200V PC-MTG	52703	304322 9/35PF N650
A3A1C34	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C35	0100-0050	0	4	CAPACITOR-FXD 1000PF +-5% 10VDC CER	2040	0150-0050
A3A1C36	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C37	0100-0116	0	10	CAPACITOR-FXD 5.0UF +-10% 35VDC TA	04001	69F3557
A3A1C38	0170-0070	3	3	CAPACITOR-FXD .047UF +-20% 50VDC POLYE	04411	001PE1030R5#1
A3A1C39	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C40	0150-0050	0	1	CAPACITOR-FXD 1000PF +-5% 10VDC CER	2040	0150-0050
A3A1C41	0170-0070	3	3	CAPACITOR-FXD .047UF +-20% 50VDC POLYE	04411	001PE1030R5#1
A3A1C42	0150-0050	0	1	CAPACITOR-FXD 1000PF +-5% 10VDC CER	2040	0150-0050
A3A1C43	0150-0050	0	1	CAPACITOR-FXD 1000PF +-5% 10VDC CER	2040	0150-0050
A3A1C44	0100-0974	7	2	CAPACITOR-FXD 80PF +-5% 100VDC MICA	2040	0100-0974
A3A1C45	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C46	0121-0046	2	1	CAPACITOR-V TRM-CER 9-35PF 200V PC-MTG	52703	304322 9/35PF N650
A3A1C47	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C48	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C49	0121-0046	2	1	CAPACITOR-V TRM-CER 9-35PF 200V PC-MTG	52703	304322 9/35PF N650
A3A1C50	0100-2251	7	1	CAPACITOR-FXD 5.0PF +-25PF 500VDC CER	2040	0100-2251
A3A1C51	0100-0179	4	1	CAPACITOR-FXD 33PF +-5% 100VDC MICA	2040	0100-0179
A3A1C52	0121-0046	2	1	CAPACITOR-V TRM-CER 9-35PF 200V PC-MTG	52703	304322 9/35PF N650
A3A1C53	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C54	0100-2055	0	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	2040	0100-2055
A3A1C55	0100-2210	6	2	CAPACITOR-FXD 1000PF +-5% 100VDC MICA	2040	0100-2210
A3A1C56	0100-0974	6	1	CAPACITOR-FXD 80PF +-5% 100VDC MICA	2040	0100-0974
A3A1C57	0100-0974	7	1	CAPACITOR-FXD 80PF +-5% 100VDC MICA	2040	0100-0974
A3A1C58	0100-0182	0	1	CAPACITOR-FXD 87PF +-5% 100VDC MICA	2040	0100-0182
A3A1C59	0121-0046	2	1	CAPACITOR-V TRM-CER 9-35PF 200V PC-MTG	52703	304322 9/35PF N650
A3A1C60	0100-2210	6	1	CAPACITOR-FXD 1000PF +-5% 100VDC MICA	2040	0100-2210

See introduction to this section for ordering information  
\*Indicates factory selected value

Table 6-2. Replaceable Parts (Continued)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
ASA1C61	0122-0221	2		CAPACITOR-V TRMR-CER 9-35PF 200V PC-MTC	25753	304322 9/35PF N650
ASA1C71	1701-0535	0	6	DIODE-SCHOTTKY	28480	1701-0535
ASA1C72	1701-0535	0	4	DIODE-SCHOTTKY	28480	1701-0535
ASA1C73	0122-0221	7	4	DIODE-VVC 100PF 10X C4/C25-MIN2 BYR-10V	28480	0122-0221
ASA1C74	0122-0221	7	4	DIODE-VVC 100PF 10X C4/C25-MIN2 BYR-10V	28480	0122-0221
ASA1C75	0122-0221	7	4	DIODE-VVC 100PF 10X C4/C25-MIN2 BYR-10V	28480	0122-0221
ASA1C76	0122-0221	7	4	DIODE-VVC 100PF 10X C4/C25-MIN2 BYR-10V	28480	0122-0221
ASA1C77	1701-0535	0	4	DIODE-SCHOTTKY	28480	1701-0535
ASA1C78	1701-0535	0	4	DIODE-SCHOTTKY	28480	1701-0535
ASA1C79	1701-0179	9	2	DIODE-SCHOTTKY	28480	1701-0179
ASA1C80	1701-0179	7	2	DIODE-SCHOTTKY	28480	1701-0179
ASA1C81	1701-0535	0	4	DIODE-SCHOTTKY	28480	1701-0535
ASA1C82	1701-0535	0	4	DIODE-SCHOTTKY	28480	1701-0535
ASA1C83	1701-0535	0	4	DIODE-SCHOTTKY	28480	1701-0535
ASA1C84	1701-0535	0	4	DIODE-SCHOTTKY	28480	1701-0535
ASA1L1	9100-2284	0	5	COIL-MLO 470UH 10X G450 .0950X.25LG-NOM	28480	9100-2284
ASA1L2	9100-0145	1	6	COIL-MLO 8.2UH 10X G450 .0950X.25LG-NOM	28480	9100-0145
ASA1L3	9100-2284	0	6	COIL-MLO 470UH 10X G450 .0950X.25LG-NOM	28480	9100-2284
ASA1L4	9100-2284	0	6	COIL-MLO 470UH 10X G450 .0950X.25LG-NOM	28480	9100-2284
ASA1L5	9100-0145	1	6	COIL-MLO 8.2UH 10X G450 .0950X.25LG-NOM	28480	9100-0145
ASA1L6	05065-0010	2	1	COIL, FILTER AMPLIFIER	28480	05065-0010
ASA1L7	9100-2284	0	1	COIL-MLO 470UH 10X G450 .0950X.25LG-NOM	28480	9100-2284
ASA1L8	9100-0145	1	1	COIL-MLO 8.2UH 10X G450 .0950X.25LG-NOM	28480	9100-0145
ASA1L9	9100-0145	1	1	COIL-MLO 8.2UH 10X G450 .0950X.25LG-NOM	28480	9100-0145
ASA1L10	9100-2284	0	1	COIL-MLO 470UH 10X G450 .0950X.25LG-NOM	28480	9100-2284
ASA1L11	9100-0145	1	1	COIL-MLO 8.2UH 10X G450 .0950X.25LG-NOM	28480	9100-0145
ASA1L12	9100-2279	2	2	COIL-MLO 180UH 10X G450 .0950X.25LG-NOM	28480	9100-2279
ASA1L13	9100-1619	2	3	COIL-MLO 8.2UH 10X G450 .1350X.375LG-NOM	28480	9100-1619
ASA1L14	9100-1661	4	1	COIL-MLO 8.2UH 5X G470 .2150X.545LG-NOM	28480	9100-1661
ASA1L15	05065-0020	7	1	TRANSFORMER, 60 MHZ DRIVE	28480	05065-0020
ASA1L16	9100-2279	2	2	COIL-MLO 180UH 10X G450 .0950X.25LG-NOM	28480	9100-2279
ASA1L17	9100-1619	2	2	COIL-MLO 8.2UH 10X G450 .1350X.375LG-NOM	28480	9100-1619
ASA1L18	9100-2272	5	2	COIL-MLO 47UH 10X G450 .0950X.25LG-NOM	28480	9100-2272
ASA1L19	9100-1619	2	2	COIL-MLO 8.2UH 10X G450 .1350X.375LG-NOM	28480	9100-1619
ASA1L20	05065-0016	6	1	COIL, 20 MHZ	28480	05065-0016
ASA1L21	05065-0019	4	1	TRANSFORMER, POWER AMPLIFIER	28480	05065-0019
ASA1L22	9100-0145	1	1	COIL-MLO 8.2UH 10X G450 .0950X.25LG-NOM	28480	9100-0145
ASA1L23	9100-2272	5	1	COIL-MLO 47UH 10X G450 .0950X.25LG-NOM	28480	9100-2272
ASA1L24	05065-0017	0	1	COIL, 60 MHZ	28480	05065-0017
ASA1L25	05065-0013	2	1	COIL, MATCHING HARMONIC GENERATOR	28480	05065-0013
ASA101	1055-0327	7	16	TRANSISTOR NPN 2N708 SI TC-18 PD=300mW	04713	2N708
ASA102	1055-0327	0	6	TRANSISTOR J-FET 2N4410 N-CHAN D-MODE	01295	2N4410
ASA103	1055-0326	3	1	TRANSISTOR MOSFET 3N120 N-CHAN D-MODE	01920	3N120
ASA104	1055-0323	0	6	TRANSISTOR NPN SI TC-18 PD=300mW	28480	1055-0323
ASA105	1055-0327	0	6	TRANSISTOR J-FET 2N4410 N-CHAN D-MODE	01295	2N4410
ASA106	1055-0327	0	6	TRANSISTOR J-FET 2N4410 N-CHAN D-MODE	01295	2N4410
ASA107	1055-0203	0	1	TRANSISTOR PNP SI PD=300mW FT=700MHZ	28480	1055-0203
ASA108	1055-0327	0	6	TRANSISTOR J-FET 2N4410 N-CHAN D-MODE	01295	2N4410
ASA109	1055-0233	3	1	TRANSISTOR NPN 2N3866 SI TC-18 PD=300mW	01920	2N3866
ASA101	0757-0924	2	2	RESISTOR 1K 2% .125W F TC00+-100	24540	C4-1/8-T0-1001-G
ASA102	0757-0924	1	2	RESISTOR 200 2% .125W F TC00+-100	24540	C4-1/8-T0-201-G
ASA103	2100-1790	1	1	RESISTOR-TRMR 200 5% WH SIDE-ADJ 1-TRM	28480	2100-1790
ASA104	0757-0928	0	6	RESISTOR 200 2% .125W F TC00+-100	24540	C4-1/8-T0-201-G
ASA105	0757-0928	0	6	RESISTOR 1.5K 2% .125W F TC00+-100	24540	C4-1/8-T0-1501-G
ASA106	0757-0928	0	6	RESISTOR 1.5K 2% .125W F TC00+-100	24540	C4-1/8-T0-1501-G
ASA107	0757-0974	2	1	RESISTOR 120K 2% .125W F TC00+-100	24540	C4-1/8-T0-1202-G
ASA108	0757-0997	0	2	RESISTOR 75 2% .125W F TC00+-100	24540	C4-1/8-T0-7502-G
ASA109	0757-0901	3	1	RESISTOR 110 2% .125W F TC00+-100	24540	C4-1/8-T0-111-G
ASA1010	0757-0973	0	2	RESISTOR 51 2% .125W F TC00+-100	24540	C4-1/8-T0-5102-G
ASA1011	2100-1792	0	1	RESISTOR-TRMR 20K 5% WH SIDE-ADJ 1-TRM	28480	2100-1792
ASA1012	0757-0925	3	3	RESISTOR 1.1K 2% .125W F TC00+-100	24540	C4-1/8-T0-1101-G
ASA1013	0757-0943	2	10	RESISTOR 10K 2% .125W F TC00+-100	24540	C4-1/8-T0-3002-G
ASA1014	0757-0948	0	2	RESISTOR 10K 2% .125W F TC00+-100	24540	C4-1/8-T0-1002-G
ASA1015	0757-0948	0	2	RESISTOR 10K 2% .125W F TC00+-100	24540	C4-1/8-T0-1002-G
ASA1016	0757-0950	1	2	RESISTOR 10K 2% .125W F TC00+-100	24540	C4-1/8-T0-3002-G
ASA1017	0757-0924	2	2	RESISTOR 1K 2% .125W F TC00+-100	24540	C4-1/8-T0-1001-G
ASA1018	0757-0924	2	2	RESISTOR 1K 2% .125W F TC00+-100	24540	C4-1/8-T0-1001-G
ASA1019	0757-0959	3	3	RESISTOR 30K 2% .125W F TC00+-100	24540	C4-1/8-T0-3002-G
ASA1020	0757-0959	3	3	RESISTOR 30K 2% .125W F TC00+-100	24540	C4-1/8-T0-3002-G
ASA1021	0757-0925	3	3	RESISTOR 1.1K 2% .125W F TC00+-100	24540	C4-1/8-T0-1101-G
ASA1022	0757-0931	1	2	RESISTOR 2K 2% .125W F TC00+-100	24540	C4-1/8-T0-2001-G
ASA1023	0757-0924	2	2	RESISTOR 1K 2% .125W F TC00+-100	24540	C4-1/8-T0-1001-G
ASA1024	0757-0948	0	2	RESISTOR 10K 2% .125W F TC00+-100	24540	C4-1/8-T0-1002-G
ASA1025	0757-0950	3	3	RESISTOR 30K 2% .125W F TC00+-100	24540	C4-1/8-T0-3002-G

See Introduction to this section for ordering information  
\*Indicates factory selected value



Model 5065A  
Circuit Diagrams, Theory, and Maintenance

Table 6-2. Replaceable Parts (Continued)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A3A1R26	0797-0924	2		RESISTOR 1K 2% .125W F TC00+-100	2454b	CA-1/8-T0-1001-0
A3A1R27	0797-0924	2		RESISTOR 1K 2% .125W F TC00+-100	2454b	CA-1/8-T0-1001-0
A3A1R28	0797-0925	2	20	RESISTOR 20K 2% .125W F TC00+-100	2454b	CA-1/8-T0-2002-0
A3A1R29	0797-0925	3		RESISTOR 1.1K 2% .125W F TC00+-100	2454b	CA-1/8-T0-1101-0
A3A1R30	0797-0925	0		RESISTOR 10K 2% .125W F TC00+-100	2454b	CA-1/8-T0-1002-0
A3A1R31	0797-0925	3		RESISTOR 30K 2% .125W F TC00+-100	2454b	CA-1/8-T0-3002-0
A3A1R32	0797-0926	0	3	RESISTOR 07K 2% .125W F TC00+-100	2454b	CA-1/8-T0-0702-0
A3A1R33	0797-0931	1		RESISTOR 2K 2% .125W F TC00+-100	2454b	CA-1/8-T0-2001-0
A3A1R34	0797-0931	5	2	RESISTOR 13K 2% .125W F TC00+-100	2454b	CA-1/8-T0-1302-0
A3A1R35	0797-0934	0	3	RESISTOR 10K 2% .125W F TC00+-100	2454b	CA-1/8-T0-1002-0
A3A1R36	0797-0924	2		RESISTOR 1K 2% .125W F TC00+-100	2454b	CA-1/8-T0-1001-0
A3A1R37	0698-3432	7	1	RESISTOR 20.1 1% .125W F TC00+-100	01800	PM553-1/8-T0-20.1-0
A3A1R38	0697-3443	0	2	RESISTOR 207 1% .125W F TC00+-100	2454b	CA-1/8-T0-207A-0
A3A1R39	0797-0924	0	1	RESISTOR 17.0 1% .125W F TC00+-100	19701	MPA11/8-T0-1700-0
A3A1R40	2100-1777	0	2	RESISTOR-TWRD 20K 5% HW TOP-ADJ 1-TRN	20400	2100-1777
A3A1R41	0698-3443	0		RESISTOR 207 1% .125W F TC00+-100	2454b	CA-1/8-T0-207F-0
A3A1T1	00105-0003	0	1	TRANSFORMER, POWER AMP	20400	00105-0003
A3A1T2	03065-0014	0	1	TRANSFORMER, 5-10 MHZ	20400	03065-0014
A3A1T3	03065-0015	0	1	TRANSFORMER, 10-20 MHZ	20400	03065-0015
	1205-0033	0	1	HEAT SINK TO-5/TO-18-C6	20400	1205-0033
A4	05065-0070	0	1	BOARD ASSEMBLY, 100 MHZ DIVIDER	20400	05065-0070
A4C1	0100-0113	0		CAPACITOR-PXD 1000P+-20-15% 30VDC TA	00001	09735507
A4C2	0100-0121	0		CAPACITOR-PXD .1UF +-50-20% 50VDC CER	20400	0100-0121
A4C3	0100-0121	0	1	CAPACITOR-PXD 2000PF +-2% 300VDC MICA	20400	0100-0121
A4C4	0100-0121	0		CAPACITOR-PXD .1UF +-50-20% 50VDC CER	20400	0100-0121
A4C5	0100-0121	0		CAPACITOR-PXD .1UF +-50-20% 50VDC CER	20400	0100-0121
A4C6	0100-0291	0		CAPACITOR-PXD 1UF+-10% 30VDC TA	50289	150D105X9035A2
A4C7	0100-0104	0	1	CAPACITOR-PXD .015UF +-10% 200VDC POLYE	20400	0100-0104
A4C8	0100-0291	0		CAPACITOR-PXD 1UF+-10% 30VDC TA	50289	150D105X9035A2
A4C9	0100-0121	0	1	CAPACITOR-PXD 0000PF +-1% 300VDC MICA	20400	0100-0121
A4C10	0100-0121	0	1	CAPACITOR-PXD 1000PF +-5% 300VDC MICA	20400	0100-0121
A4C11	0100-0291	0		CAPACITOR-PXD 1UF+-10% 30VDC TA	50289	150D105X9035A2
A4C12	0100-0121	0	1	CAPACITOR-PXD 5000PF +-2% 300VDC MICA	20400	0100-0121
A4C13	0100-0174	0		CAPACITOR-PXD .47UF +-50-20% 25VDC CER	20400	0100-0174
A4C14	0100-0174	0		CAPACITOR-PXD .47UF +-50-20% 25VDC CER	20400	0100-0174
A4C15	0100-0174	0		CAPACITOR-PXD .47UF +-50-20% 25VDC CER	20400	0100-0174
A4C16	0100-0174	0		CAPACITOR-PXD .47UF +-50-20% 25VDC CER	20400	0100-0174
A4C17	0100-0174	0		CAPACITOR-PXD .47UF +-50-20% 25VDC CER	20400	0100-0174
A4C18	0100-0174	0		CAPACITOR-PXD .47UF +-50-20% 25VDC CER	20400	0100-0174
A4C19	0100-2331	0	2	CAPACITOR-PXD 0200PF +-1% 100VDC MICA	20400	0100-2331
A4C20	0100-0174	0		CAPACITOR-PXD .47UF +-50-20% 25VDC CER	20400	0100-0174
A4C21	0100-2331	0		CAPACITOR-PXD 0200PF +-1% 100VDC MICA	20400	0100-2331
A4C22	0100-0104	0	7	CAPACITOR-PXD .015UF +-10% 200VDC POLYE	20400	0100-0104
A4C23	0100-0174	0		CAPACITOR-PXD .47UF +-50-20% 25VDC CER	20400	0100-0174
A4C24	1902-3105	0	7	DIODE-ZNR 5.62V 2% DC-7 PDI-100 TC00+-016%	20400	1902-3105
A4C25	1901-0000	0	1	DIODE-RECTIFYING 30V 50MA 2NS DO-35	20400	1901-0000
A4C26	1020-0055	0	1	IC CNTR TTL DECD SYNCHRD POS-EDGE-TRIG	01295	0N7490AN
A4L1	0100-0129	0	0	COIL-MLD 220UH 5% 0.045 .1550X.375L6-NOM	20400	0100-0129
A4L2	0100-0129	0	1	COIL-MLD 220UH 5% 0.045 .1550X.375L6-NOM	20400	0100-0129
A4L3	0100-0129	0	1	COIL-MLD 220UH 5% 0.045 .1550X.375L6-NOM	20400	0100-0129
A4L4	0100-1047	0	2	COIL-MLD 870UH 5% 0.045 .190X.44L6-NOM	20400	0100-1047
A4L5	0100-1047	0	0	COIL-MLD 870UH 5% 0.045 .190X.44L6-NOM	20400	0100-1047
A4Q1	1054-0005	0	7	TRANSISTOR NPN 2N708 SI TO-18 PD=300mW	04713	2N708
A4Q2	1054-0005	0	7	TRANSISTOR NPN 2N708 SI TO-18 PD=300mW	04713	2N708
A4Q3	1054-0005	0	5	TRANSISTOR NPN SI TO-18 PD=300mW	20400	1054-0005
A4Q4	1054-0005	0	7	TRANSISTOR NPN 2N708 SI TO-18 PD=300mW	04713	2N708
A4Q5	1053-0010	0	2	TRANSISTOR PNP SI TO-18 PD=300mW	20400	1053-0010
A4Q6	1053-0010	0	2	TRANSISTOR PNP SI TO-18 PD=300mW	20400	1053-0010
A4Q7	1054-0005	0	7	TRANSISTOR NPN 2N708 SI TO-18 PD=300mW	04713	2N708
A4Q8	1054-0005	0	7	TRANSISTOR NPN 2N708 SI TO-18 PD=300mW	04713	2N708
A4Q9	1054-0005	0	7	TRANSISTOR NPN 2N708 SI TO-18 PD=300mW	04713	2N708
A4R1	0797-0931	0	5	RESISTOR 13K 2% .125W F TC00+-100	2454b	CA-1/8-T0-1302-0
A4R2	0797-0944	0	0	RESISTOR 0.6K 2% .125W F TC00+-100	2454b	CA-1/8-T0-0601-0
A4R3	0797-0931	0	4	RESISTOR 51 2% .125W F TC00+-100	2454b	CA-1/8-T0-5100-0
A4R4	0797-0931	0	4	RESISTOR 51 2% .125W F TC00+-100	2454b	CA-1/8-T0-5100-0
A4R5	0797-0927	0	3	RESISTOR 1.3K 2% .125W F TC00+-100	2454b	CA-1/8-T0-1301-0
A4R6	0797-0927	0	5	RESISTOR 1.3K 2% .125W F TC00+-100	2454b	CA-1/8-T0-1301-0
A4R7	0797-0917	0	3	RESISTOR 510 2% .125W F TC00+-100	2454b	CA-1/8-T0-511-0
A4R8	0797-0915	0	1	RESISTOR 430 2% .125W F TC00+-100	2454b	CA-1/8-T0-431-0
A4R9	0797-0927	0	5	RESISTOR 1.3K 2% .125W F TC00+-100	2454b	CA-1/8-T0-1301-0
A4R10	0797-0900	0	4	RESISTOR 100 2% .125W F TC00+-100	2454b	CA-1/8-T0-101-0

See introduction to this section for ordering information  
\*Indicates factory selected value

Table 6-2. Replaceable Parts (Continued)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A6R11	0757-0900	9	1	RESISTOR 2.0K 1% .125W F TC90±100	24540	0757-0900
A6R12	0757-0930	8	2	RESISTOR 3.0K 2% .125W F TC90±100	24540	C4=1/8-T0-3001-C
A6R13	0757-0935	5	5	RESISTOR 3K 2% .125W F TC90±100	24540	C4=1/8-T0-3001-C
A6R14	0757-0924	2	2	RESISTOR 1K 2% .125W F TC90±100	24540	C4=1/8-T0-1001-C
A6R15	0757-0941	3	6	RESISTOR 5.1K 2% .125W F TC90±100	24540	C4=1/8-T0-5101-C
A6R16	0757-0941	3	3	RESISTOR 5.1K 2% .125W F TC90±100	24540	C4=1/8-T0-5101-C
A6R17	0757-0935	5	5	RESISTOR 3K 2% .125W F TC90±100	24540	C4=1/8-T0-3001-C
A6R18	0757-0906	4	4	RESISTOR 100 2% .125W F TC90±100	24540	C4=1/8-T0-101-C
A6R19	0757-0917	3	3	RESISTOR 510 2% .125W F TC90±100	24540	C4=1/8-T0-511-C
A6R20	0757-0920	7	7	RESISTOR 1.0K 2% .125W F TC90±100	24540	C4=1/8-T0-1001-C
A6R21	0757-0940	2	2	RESISTOR 4.7K 2% .125W F TC90±100	24540	C4=1/8-T0-4701-C
A6R22	0757-0949	7	7	RESISTOR 1.0K 2% .125W F TC90±100	24540	C4=1/8-T0-1001-C
A6R23	0757-0936	6	6	RESISTOR 3.3K 2% .125W F TC90±100	24540	C4=1/8-T0-3301-C
A6R24	0757-0907	1	1	RESISTOR 200 2% .125W F TC90±100	24540	C4=1/8-T0-201-C
A6R25	0757-0918	4	2	RESISTOR 500 2% .125W F TC90±100	24540	C4=1/8-T0-501-C
A6R26	0757-0900	4	4	RESISTOR 100 2% .125W F TC90±100	24540	C4=1/8-T0-101-C
A6R27	0757-0926	4	2	RESISTOR 1.2K 2% .125W F TC90±100	24540	C4=1/8-T0-1201-C
A6R28	0757-0918	4	4	RESISTOR 500 2% .125W F TC90±100	24540	C4=1/8-T0-501-C
A6R29	0757-0932	2	1	RESISTOR 2.2K 2% .125W F TC90±100	24540	C4=1/8-T0-2201-C
A6R30	0757-0907	1	1	RESISTOR 200 2% .125W F TC90±100	24540	C4=1/8-T0-201-C
A6R31	0757-0911	7	7	RESISTOR 100 2% .125W F TC90±100	24540	C4=1/8-T0-101-C
A6R32	0757-0915	1	1	RESISTOR 430 2% .125W F TC90±100	24540	C4=1/8-T0-431-C
A6R33	0757-0907	6	6	RESISTOR 75 2% .125W F TC90±100	24540	C4=1/8-T0-7501-C
A6R34	0757-0922	6	6	RESISTOR 820 2% .125W F TC90±100	24540	C4=1/8-T0-821-C
A6R35	0757-0942	4	4	RESISTOR 5.0K 2% .125W F TC90±100	24540	C4=1/8-T0-5001-C
A6T1	05001-0007	5	2	TRANSFORMER, 1 MHZ OUTPUT	20400	05001-0007
A6T2	107A-0C	1	1	TRANSFORMER ASSEMBLY, 100 KHZ	20400	107A-0C
A6				FOR CALL-OUTS OF COMP., SEE TABLE 6-4.		
A6	05000-0016	6	1	BOARD ASSEMBLY, 1 MHZ DIVIDER	20400	05000-0016
A6C1	0100-0101	4	4	CAPACITOR-FXD .01UF ±10% 200VDC POLYE	20400	0100-0101
A6C2	0100-0113	4	4	CAPACITOR-FXD 100UF ±20% 15% 30VDC TA	00001	0773557
A6C3	0100-0127	2	2	CAPACITOR-FXD 1UF ±20% 25VDC CER	20400	0100-0127
A6C4	0100-0127	2	2	CAPACITOR-FXD 1UF ±20% 25VDC CER	20400	0100-0127
A6C5	0100-0170	1	1	CAPACITOR-FXD 500PF ±2% 300VDC MICA	72130	DM15F0150300V1C
A6C6	0100-0101	4	4	CAPACITOR-FXD .01UF ±10% 200VDC POLYE	20400	0100-0101
A6C7	0100-0121	5	5	CAPACITOR-FXD .1UF ±20% 20% 50VDC CER	20400	0100-0121
A6C8	0100-0101	4	4	CAPACITOR-FXD .01UF ±10% 200VDC POLYE	20400	0100-0101
A6C9	0100-0121	5	5	CAPACITOR-FXD .1UF ±20% 20% 50VDC CER	20400	0100-0121
A6C10	0100-0170	4	4	CAPACITOR-FXD 500PF ±2% 300VDC MICA	72130	DM15F0150300V1C
A6C11	0100-0170	2	2	CAPACITOR-FXD 500PF ±2% 300VDC MICA	72130	DM15F0150300V1C
A6C12	0100-0200	4	1	CAPACITOR-FXD 500PF ±2% 300VDC MICA	72130	DM15F0150300V1C
A6C13	0100-0101	4	4	CAPACITOR-FXD .01UF ±10% 200VDC POLYE	20400	0100-0101
A6C14	0100-0221	5	1	CAPACITOR-FXD 220PF ±1% 300VDC MICA	72130	DM15F221F300V1C
A6C15	0100-0101	4	4	CAPACITOR-FXD .01UF ±10% 200VDC POLYE	20400	0100-0101
A6C16	0100-0231	7	1	CAPACITOR-FXD 400PF ±1% 300VDC MICA	72130	DM15F401F300V1C
A6C17	0100-0121	5	5	CAPACITOR-FXD .1UF ±20% 20% 50VDC CER	20400	0100-0121
A6C18	0100-0121	5	5	CAPACITOR-FXD .1UF ±20% 20% 50VDC CER	20400	0100-0121
A6C19	0100-0221	1	1	CAPACITOR-FXD 220PF ±1% 300VDC MICA	72130	DM15F221F300V1C
A6C20	0100-0200	4	2	CAPACITOR-FXD 47PF ±5% 500VDC MICA	72130	DM15E470J500V1C
A6C21	0121-0040	2	2	CAPACITOR-V TRMR-CER 9-35PF 200V PC-MTB	50703	304322 9/35PF 200V
A6C22	0100-0170	2	2	CAPACITOR-FXD 500PF ±2% 300VDC MICA	72130	DM15F0150300V1C
A6C23	0100-0121	5	5	CAPACITOR-FXD .1UF ±20% 20% 50VDC CER	20400	0100-0121
A6C24	0100-0150	6	1	CAPACITOR-FXD 3000PF ±2% 300VDC MICA	72130	DM15F3000J300V1C
A6C25	0100-0127	2	2	CAPACITOR-FXD 1UF ±20% 25VDC CER	20400	0100-0127
A6C26	0100-0150	5	1	CAPACITOR-FXD 3000PF ±2% 300VDC MICA	72130	DM15F3000J300V1C
A6C27	0100-0121	5	5	CAPACITOR-FXD .1UF ±20% 20% 50VDC CER	20400	0100-0121
A6C28	0100-0121	5	5	CAPACITOR-FXD .1UF ±20% 20% 50VDC CER	20400	0100-0121
A6C29	0100-0121	5	5	CAPACITOR-FXD .1UF ±20% 20% 50VDC CER	20400	0100-0121
A6CR1	1901-0040	1	1	DIODE-SWITCHING 30V 50MA 2MS 00-35	20400	1901-0040
A6CR2	1901-0040	1	1	DIODE-SWITCHING 30V 50MA 2MS 00-35	20400	1901-0040
A6CR3	1902-3125	1	1	DIODE-2MR 6.00V 2% 00-7 PD, 4M TC±.045K	20400	1902-3125
A6CR4	1901-0040	1	1	DIODE-SWITCHING 30V 50MA 2MS 00-35	20400	1901-0040
A6CR5	1901-0040	1	1	DIODE-SWITCHING 30V 50MA 2MS 00-35	20400	1901-0040
A6CR6	1901-0040	1	1	DIODE-SWITCHING 30V 50MA 2MS 00-35	20400	1901-0040
A6CR7	1901-0040	1	1	DIODE-SWITCHING 30V 50MA 2MS 00-35	20400	1901-0040
A6L1	9100-0100	1	1	COIL-MLO 220UH 5% 0005 .15SDX, 375LS-NOM	20400	9100-0100
A6L2	9100-0107	5	1	COIL-MLO 27UH 10% 0005 .18SDX, 437LS-NOM	20400	9100-0107
A6L3	9100-0100	1	1	COIL-MLO 220UH 5% 0005 .15SDX, 375LS-NOM	20400	9100-0100
A6L4	9100-0110	5	2	COIL-MLO 500UH 5% 0005 .19DX, 44LS-NOM	20400	9100-0110
A6L5	9100-0110	5	5	COIL-MLO 500UH 5% 0005 .19DX, 44LS-NOM	20400	9100-0110

See Introduction to this section for ordering information.  
\*Indicates factory selected value

Model 5085A  
Circuit Diagrams, Theory, and Maintenance

Table 6-2. Replaceable Parts (Continued)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A66	9140-0129	1		COIL-MLO 2X0UM 5K 2000 .1550K.375LC-N07	21409	9140-0129
A601	1850-0000	7		TRANSISTOR NPN 2N700 SI TC-18 PD-300mW	04713	2N700
A602	1850-0003	5		TRANSISTOR NPN SI TC-18 PD-300mW	20400	1850-0003
A603	1850-0003	3		TRANSISTOR NPN SI TC-18 PD-300mW	20400	1850-0003
A604	1850-0005	7		TRANSISTOR NPN 2N700 SI TC-18 PD-300mW	04713	2N700
A605	1850-0000	0	1	TRANSISTOR J-FET P-CMAN 0-MODE TC-02 SI	07203	2N4333
A606	1850-0005	7		TRANSISTOR NPN 2N700 SI TC-18 PD-300mW	04713	2N700
A607	1850-0023	9		TRANSISTOR NPN SI TC-18 PD-300mW	20400	1850-0023
A608	1850-0005	7		TRANSISTOR NPN 2N700 SI TC-18 PD-300mW	04713	2N700
A609	1850-0005	7		TRANSISTOR NPN 2N700 SI TC-18 PD-300mW	04713	2N700
A610	1850-0005	5		TRANSISTOR NPN SI TC-18 PD-300mW	20400	1850-0005
A601	0757-0900	4		RESISTOR 100 2K .125W F TC00-100	24540	C0-1/8-T0-101-0
A602	0757-0900	2		RESISTOR 4.7K 2K .125W F TC00-100	24540	C0-1/8-T0-0721-0
A603	0757-0921	4	1	RESISTOR 750 2K .125W F TC00-100	24540	C0-1/8-T0-751-0
A604	0757-0930	4		RESISTOR 3.3K 2K .125W F TC00-100	24540	C0-1/8-T0-3301-0
A605	0757-0903	4		RESISTOR 51 2K .125W F TC00-100	24540	C0-1/8-T0-510-0
A606	0757-0920	2		RESISTOR 1K 2K .125W F TC00-100	24540	C0-1/8-T0-1001-0
A607	0757-0907	6		RESISTOR 75 2K .125W F TC00-100	24540	C0-1/8-T0-7500-0
A608	0757-0920	2		RESISTOR 1K 2K .125W F TC00-100	24540	C0-1/8-T0-1001-0
A609	0757-0920	2		RESISTOR 1K 2K .125W F TC00-100	24540	C0-1/8-T0-1001-0
A610	0757-0957	1		RESISTOR 24K 2K .125W F TC00-100	24540	C0-1/8-T0-2402-0
A611	0757-0920	7		RESISTOR 1.0K 2K .125W F TC00-100	24540	C0-1/8-T0-1001-0
A612	0757-0910	2	2	RESISTOR 470 2K .125W F TC00-100	24540	C0-1/8-T0-471-0
A613	0757-0903	9		RESISTOR 51 2K .125W F TC00-100	24540	C0-1/8-T0-510-0
A614	0757-0903	0	2	RESISTOR 43K 2K .125W F TC00-100	24540	C0-1/8-T0-4302-0
A615	0757-0903	9		RESISTOR 20K 2K .125W F TC00-100	24540	C0-1/8-T0-2002-0
A616	0757-0904	0		RESISTOR 0.0K 2K .125W F TC00-100	24540	C0-1/8-T0-0000-0
A617	0757-0930	0	2	RESISTOR 1.0K 2K .125W F TC00-100	24540	C0-1/8-T0-1001-0
A618	0757-0930	2	3	RESISTOR 07K 2K .125W F TC00-100	24540	C0-1/8-T0-0702-0
A619	0757-0970	4	0	RESISTOR 150K 2K .125W F TC00-100	24540	C0-1/8-T0-1502-0
A620	0757-0903	4		RESISTOR 51 2K .125W F TC00-100	24540	C0-1/8-T0-510-0
A621	0757-0917	3		RESISTOR 310 2K .125W F TC00-100	24540	C0-1/8-T0-311-0
A622	0757-0970	7	1	RESISTOR 200K 1K .125W F TC00-100	24540	C0-1/8-T0-2001-0
A623	0757-0903	0		RESISTOR 51 2K .125W F TC00-100	24540	C0-1/8-T0-510-0
A624	0757-0920	7		RESISTOR 1.0K 2K .125W F TC00-100	24540	C0-1/8-T0-1001-0
A625	0757-0900	8		RESISTOR 4.7K 2K .125W F TC00-100	24540	C0-1/8-T0-0701-0
A626	0757-0903	0		RESISTOR 51 2K .125W F TC00-100	24540	C0-1/8-T0-510-0
A627	0757-0900	0	0	RESISTOR 15K 2K .125W F TC00-100	24540	C0-1/8-T0-1503-0
A628	0757-0900	0		RESISTOR 10K 2K .125W F TC00-100	24540	C0-1/8-T0-1002-0
A629	0757-0900	4		RESISTOR 100 2K .125W F TC00-100	24540	C0-1/8-T0-101-0
A630	0757-0920	2		RESISTOR 1K 2K .125W F TC00-100	24540	C0-1/8-T0-1001-0
A631	0757-0920	0		RESISTOR 000 2K .125W F TC00-100	24540	C0-1/8-T0-001-0
A632	0757-0903	0	10	RESISTOR 51 2K .125W F TC00-100	24540	C0-1/8-T0-510-0
A633	0757-0900	0		RESISTOR 10K 2K .125W F TC00-100	24540	C0-1/8-T0-1002-0
A634	0757-0920	0		RESISTOR 020 2K .125W F TC00-100	24540	C0-1/8-T0-021-0
A635	0757-0900	0		RESISTOR 5.0K 2K .125W F TC00-100	24540	C0-1/8-T0-5001-0
A671	05001-0000	3	1	TRANSFORMER, 5 HNZ INPUT	20400	05001-0000
A672	05001-0005	1	1	TRANSFORMER, 1 HNZ-4 HNZ	20400	05001-0005
A673	05001-0007	5	1	TRANSFORMER, 1 HNZ OUTPUT	20400	05001-0007
A7	05005-0000	1	1	MODULE ASSEMBLY, AC AMPLIFIER	20400	05005-0000
	0340-0119	A		TERMINAL-BYD/20L-PIN PRESS-MTS	20400	0340-0119
	0510-0207	2		THREADED INSERT-BYD 4-00 .140-03 OTL	20400	0510-0207
	1250-1202	0	1		20400	1250-1202
	0505-0032	1	1	COVER, SIGNAL AMPLIFIER	20400	0505-0032
	05005-0033	0	1	CHASSIS, SIGNAL AMPLIFIER	20400	05005-0033
	05005-2024	0	1	PLATE, END	20400	05005-2024
A7A1	05005-0070	0	1	BOARD ASSEMBLY, AC AMPLIFIER (NOT FOR REPLACEMENT) FOR REPLACEMENT ORDER 05005-0000	20400	05005-0070
A7A1C1	0100-0110	1		CAPACITOR-PXD 0.001UF-10% 35VDC TA	50209	1500051903502
A7A1C2	0100-0100	0		CAPACITOR-PXD 0.001UF-20% 50VDC TA	50209	1500051900002
A7A1C3	0100-0113	3		CAPACITOR-PXD 100UF-20-15% 50VDC TA	00001	04933567
A7A1C4	0100-0291	3		CAPACITOR-PXD 1UF-10% 35VDC TA	50209	15001051903502
A7A1C5	0170-0000	1	2	CAPACITOR-PXD .25UF +-20% 50VDC POLYE	00001	001CE2200P052
A7A1C6	0100-0001	0	2	CAPACITOR-PXD .001UF +-5% 200VDC POLYE	50209	202000352
A7A1C7	0100-0100	7	0	CAPACITOR-PXD .001UF +-5% 200VDC POLYE	20400	0100-0100
A7A1C8	0100-0100	7		CAPACITOR-PXD .001UF +-5% 200VDC POLYE	20400	0100-0100
A7A1C9	0270-0110	1		CAPACITOR-PXD 0.001UF-10% 35VDC TA	50209	1500051903502
A7A1C10	0100-0110	1		CAPACITOR-PXD 0.001UF-10% 35VDC TA	50209	1500051903502
A7A1C11	0170-0097	7	4	CAPACITOR-PXD .01UF-10% 35VDC TA	50209	1500051903502
A7A1C12	0170-0091	0	3	CAPACITOR-PXD .01213UF +-2% 50VDC	20400	0170-0091
A7A1C13	0170-0090	0	2	CAPACITOR-PXD .0252UF +-1% 50VDC POLYSTY	20400	0170-0090
A7A1C14	0170-0091	0		CAPACITOR-PXD .01213UF +-2% 50VDC	20400	0170-0091
A7A1C15	0100-0110	1		CAPACITOR-PXD 0.001UF-10% 35VDC TA	50209	1500051903502

See introduction to this section for ordering information  
\*Indicates factory selected value

Table 6-2. Replaceable Parts (Continued)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A7A1C16	0180-0197	8	2	CAPACITOR-FXD 2.2UF+-10% 20VDC TA	50209	15002254902042
A7A1C17	0180-0180	8	1	CAPACITOR-FXD 22UF+-20% 16VDC TA	50209	15002262003522
A7A1C18	0180-0901	6		CAPACITOR-FXD .002UF +-5% 200VDC POLYE	20400	2792P0352
A7A1C19	0180-0180	7		CAPACITOR-FXD .033UF +-5% 200VDC POLYE	20400	0100-0180
A7A1C20	0180-0180	7		CAPACITOR-FXD .033UF +-5% 200VDC POLYE	20400	0100-0180
A7A1C21	0180-0097	7		CAPACITOR-FXD 47UF+-10% 35VDC TA	50209	15004764903592
A7A1C22	0180-0097	7		CAPACITOR-FXD 47UF+-10% 35VDC TA	50209	15004764903592
A7A1C23	0180-0197	8		CAPACITOR-FXD 2.2UF+-10% 20VDC TA	50209	15002254902042
A7A1C24	1902-3203	6		DIODE-ZNR 14.7V 5% 00-7 PDM, 4W TCR+.057%	20400	1902-3203
A7A1C25	1902-3203	6		DIODE-ZNR 14.7V 5% 00-7 PDM, 4W TCR+.057%	20400	1902-3203
A7A1C26	1901-0025	2		NOT ASSIGNED	20400	1901-0025
A7A1C27	1901-0025	2		DIODE-ZEN PRP 100V 200MA 00-7	20400	1901-0025
A7A1C28	1901-0025	2		DIODE-ZEN PRP 100V 200MA 00-7	20400	1901-0025
A7A1C29	1020-0210	1	3	IC OP AMP LP 8-07P-P	20400	1020-0210
A7A1C30	1020-0210	1		IC OP AMP GP 8-07P-P	20400	1020-0210
A7A1C31	1020-0210	1		IC OP AMP GP 8-07P-P	20400	1020-0210
A7A101	1054-0023	0		TRANSISTOR NPN SI TO-18 PDS304MH	20400	1054-0023
A7A102	1054-0023	0		TRANSISTOR NPN SI TO-18 PDS304MH	20400	1054-0023
A7A103				NOT ASSIGNED		
A7A104				NOT ASSIGNED		
A7A105	1054-0023	0		TRANSISTOR NPN SI TO-18 PDS304MH	20400	1054-0023
A7A106	1054-0023	0		TRANSISTOR NPN SI TO-18 PDS304MH	20400	1054-0023
A7A107	1054-0023	0		TRANSISTOR NPN SI TO-18 PDS304MH	20400	1054-0023
A7A108	1054-0023	0		TRANSISTOR NPN SI TO-18 PDS304MH	20400	1054-0023
A7A109	1054-0023	0		TRANSISTOR NPN SI TO-18 PDS304MH	20400	1054-0023
A7A110	1054-0023	0		TRANSISTOR NPN SI TO-18 PDS304MH	20400	1054-0023
A7A111	0757-0905	1	10	RESISTOR 51K 2% .125W F TC00+-100	24540	CA-1/B-T0-5102-0
A7A112	0698-3059	0	2	RESISTOR 20K 2% .125W F TC00+-100	24540	0698-3059
A7A113	0757-0905	3	1	RESISTOR 51K 2% .125W F TC00+-100	24540	CA-1/B-T0-5102-0
A7A114	0757-0905	1		RESISTOR 51K 2% .125W F TC00+-100	24540	CA-1/B-T0-5102-0
A7A115	0698-3059	1		RESISTOR 20K 2% .125W F TC00+-100	24540	0698-3059
A7A116	0757-0905	1		RESISTOR 51K 2% .125W F TC00+-100	24540	CA-1/B-T0-5102-0
A7A117	0757-0905	1		RESISTOR 51K 2% .125W F TC00+-100	24540	CA-1/B-T0-5102-0
A7A118	0757-0905	1		RESISTOR 51K 2% .125W F TC00+-100	24540	CA-1/B-T0-5102-0
A7A119	0757-0905	2		RESISTOR 1K 2% .125W F TC00+-100	24540	CA-1/B-T0-1001-0
A7A120	0757-0905	2		RESISTOR 1K 2% .125W F TC00+-100	24540	CA-1/B-T0-1001-0
A7A121	0757-0955	0		RESISTOR 20K 2% .125W F TC00+-100	24540	CA-1/B-T0-2002-0
A7A122	0757-0955	1		RESISTOR 20K 2% .125W F TC00+-100	24540	CA-1/B-T0-2002-0
A7A123	0757-0955	1		RESISTOR 20K 2% .125W F TC00+-100	24540	CA-1/B-T0-2002-0
A7A124	0698-3059	0	0	RESISTOR 10.9K 1% .125W F TC00+-100	24540	CA-1/B-T0-1092-F
A7A125	0698-3059	0	2	RESISTOR 0.005K 1% .125W F TC00+-100	24540	CA-1/B-T0-0052-F
A7A126	0698-3059	0		RESISTOR 10.9K 1% .125W F TC00+-100	24540	CA-1/B-T0-1092-F
A7A127	2100-1701	3	1	RESISTOR-YRHM 10K 5% 1W BIDE-ADJ 1-TM	20400	2100-1701
A7A128	0757-0970	0		RESISTOR 150K 2% .125W F TC00+-100	24540	CA-1/B-T0-1502-0
A7A129	0757-0970	0		RESISTOR 10K 2% .125W F TC00+-100	24540	CA-1/B-T0-1002-0
A7A130	0757-0955	0		RESISTOR 20K 2% .125W F TC00+-100	24540	CA-1/B-T0-2002-0
A7A131	0757-0955	0		RESISTOR 300 2% .125W F TC00+-100	24540	CA-1/B-T0-301-0
A7A132	0757-0955	0		RESISTOR 20K 2% .125W F TC00+-100	24540	CA-1/B-T0-2002-0
A7A133	0698-3059	0		RESISTOR 10.9K 1% .125W F TC00+-100	24540	CA-1/B-T0-1092-F
A7A134	0757-0970	0		RESISTOR 150K 2% .125W F TC00+-100	24540	CA-1/B-T0-1502-0
A7A135	0757-0970	0		RESISTOR 10K 2% .125W F TC00+-100	24540	CA-1/B-T0-1002-0
A7A136	0698-3059	0		RESISTOR 10.9K 1% .125W F TC00+-100	24540	CA-1/B-T0-1092-F
A7A137	0698-3059	0		RESISTOR 10.9K 1% .125W F TC00+-100	24540	CA-1/B-T0-1092-F
A7A138	0757-0970	0		RESISTOR 150K 2% .125W F TC00+-100	24540	CA-1/B-T0-1502-0
A7A139	0757-0955	0		RESISTOR 20K 2% .125W F TC00+-100	24540	CA-1/B-T0-2002-0
A7A140	0757-0911	0		RESISTOR 300 2% .125W F TC00+-100	24540	CA-1/B-T0-301-0
A7A141	0698-3059	0		RESISTOR 10.9K 1% .125W F TC00+-100	24540	CA-1/B-T0-1092-F
A7A142	0757-0941	3		RESISTOR 5.1K 2% .125W F TC00+-100	24540	CA-1/B-T0-5101-0
A7A143	0757-0941	3		RESISTOR 5.1K 2% .125W F TC00+-100	24540	CA-1/B-T0-5101-0
				A7A1 MISCELLANEOUS PARTS		
	0240-0037	5		TERMINAL-BYUC DBL-TUR PRESS-MTS	20400	0240-0037
	0240-0039	7		TERMINAL SUBMING - TEPLON; MOUNTS IN	20400	0240-0039

See introduction to this section for ordering information  
\*Indicates factory selected value

Table 6-2. Replaceable Parts (Continued)

Reference Designation	HP Part Number	C	Qty	Description	Mfr Code	Mfr Part Number
	05000-0013	0	1	BOARD ASSEMBLY, PHASE DETECTOR	28400	05000-0013
ABC1	0170-0091	0	1	CAPACITOR-FXD .0121UF +-2% 50VDC	28400	0170-0091
ABC2	0100-0117	2	2	CAPACITOR-FXD 2.7UF+-10% 35VDC TA	50209	1500275X90350Z
ABC3	0170-0090	0	1	CAPACITOR-FXD .0252UF +-1% 50VDC POLYSTY	28400	0170-0090
ABC4	0100-0370	1	1	CAPACITOR-FXD .02UF+-10% 35VDC TA	50209	1500065X90350Z
ABC5	0100-0200	0	1	CAPACITOR-FXD 5PF +-10% 50VDC MICA	72136	D*13C050*0500*Y1CR
ABC6	0100-0121	5	5	CAPACITOR-FXD .1UF +-20% 50VDC CER	28400	0150-0121
ABC7	0100-0170	0	1	CAPACITOR-FXD 100PF +-2% 300VDC MICA	72136	D*15P10150300*V1CR
ABC8	0100-0370	7	7	CAPACITOR-FXD 20PF +-5% 50VDC MICA	28400	0100-0370
ABC9	0100-0113	0	1	CAPACITOR-FXD 100UF+-20-15% 30VDC TA	06001	0*P35567
ABC10	0100-0113	0	1	CAPACITOR-FXD 100UF+-20-15% 30VDC TA	06001	0*P35567
ABC11	0100-0200	4	4	CAPACITOR-FXD 47PF +-5% 50VDC MICA	72136	D*15E470J0500*V1CR
ABC12	0100-0370	7	7	CAPACITOR-FXD 20PF +-5% 50VDC MICA	28400	0100-0370
ABC13	0100-0093	0	1	CAPACITOR-FXD .01UF +-20-20% 100VDC CER	28400	0150-0093
ABC14	0100-0370	7	7	CAPACITOR-FXD 20PF +-5% 50VDC MICA	28400	0100-0370
ABC15	0100-0100	3	10	CAPACITOR-FXD 0.7UF+-10% 35VDC TA	50209	1500475X90350Z
ABC16	0100-0100	3	3	CAPACITOR-FXD 0.7UF+-10% 35VDC TA	50209	1500475X90350Z
ABC17	0100-0009	0	2	CAPACITOR-FXD .07UF +-10% 50VDC POLYE	01002	0*F17A0076
ABC18	0100-0009	0	2	CAPACITOR-FXD .07UF +-10% 50VDC POLYE	01002	0*F17A0076
ABC19	0170-0000	3	3	CAPACITOR-FXD .22UF +-20% 50VDC POLYE	04011	001CE2200*F5M2
ABC20	0100-0113	0	1	CAPACITOR-FXD 100UF+-20-15% 30VDC TA	06001	0*P35567
ABC21	0100-0291	3	3	CAPACITOR-FXD .1UF+-10% 35VDC TA	50209	1500105X90350Z
ABC22	0170-0005	2	2	CAPACITOR-FXD .1UF +-20% 50VDC POLYE	04011	001PE1000*F5M3
ABC23	0100-0291	3	3	CAPACITOR-FXD .1UF+-10% 35VDC TA	50209	1500105X90350Z
ABC24	0170-0005	2	2	CAPACITOR-FXD .1UF +-20% 50VDC POLYE	04011	002-0730*F5M2
ABC25	0170-0005	2	2	CAPACITOR-FXD .1UF +-20% 50VDC POLYE	04011	001PE1000*F5M3
ABC26	0170-0005	2	2	CAPACITOR-FXD .1UF +-20% 50VDC POLYE	04011	001PE1000*F5M3
ABC27	1901-0033	2	2	DIODE-SEM PRP 100V 200MA DC-7	28400	1901-0033
ABC28	1901-0033	2	2	DIODE-SEM PRP 100V 200MA DC-7	28400	1901-0033
ABC29	1901-0000	1	1	DIODE-SWITCHING 30V 50MA 2NB DC-35	28400	1901-0000
ABC30	1901-0000	1	1	DIODE-SWITCHING 30V 50MA 2NB DC-35	28400	1901-0000
ABC31	1901-0000	1	1	DIODE-SWITCHING 30V 50MA 2NB DC-35	28400	1901-0000
ABC32	1901-0033	2	2	DIODE-SEM PRP 100V 200MA DC-7	28400	1901-0033
ABC33	1901-0033	2	2	DIODE-SEM PRP 100V 200MA DC-7	28400	1901-0033
ABC34	0170-0020	3	3	CORE-SWELDING BEAD	28400	0170-0020
ABC35	0170-0020	3	3	CORE-SWELDING BEAD	28400	0170-0020
ABC36	0170-0020	3	3	CORE-SWELDING BEAD	28400	0170-0020
ABC37	1854-0023	0	1	TRANSISTOR NPN SI TO-18 PD=300MW	28400	1854-0023
ABC38	1854-0023	0	1	TRANSISTOR NPN SI TO-18 PD=300MW	28400	1854-0023
ABC39	1854-0023	0	1	TRANSISTOR NPN SI TO-18 PD=300MW	28400	1854-0023
ABC40	1854-0023	7	7	TRANSISTOR NPN 2N708 SI TO-18 PD=300MW	04713	2N708
ABC41	1854-0023	7	7	TRANSISTOR NPN 2N708 SI TO-18 PD=300MW	04713	2N708
ABC42	1854-0023	7	7	TRANSISTOR NPN 2N708 SI TO-18 PD=300MW	04713	2N708
ABC43	1854-0023	7	7	TRANSISTOR NPN 2N708 SI TO-18 PD=300MW	04713	2N708
ABC44	1854-0023	7	7	TRANSISTOR NPN 2N708 SI TO-18 PD=300MW	04713	2N708
ABC45	1854-0023	7	7	TRANSISTOR NPN 2N708 SI TO-18 PD=300MW	04713	2N708
ABC46	1854-0023	7	7	TRANSISTOR NPN 2N708 SI TO-18 PD=300MW	04713	2N708
ABC47	1854-0023	7	7	TRANSISTOR NPN 2N708 SI TO-18 PD=300MW	04713	2N708
ABC48	1854-0023	7	7	TRANSISTOR NPN 2N708 SI TO-18 PD=300MW	04713	2N708
ABC49	1854-0023	7	7	TRANSISTOR NPN 2N708 SI TO-18 PD=300MW	04713	2N708
ABC50	1854-0023	7	7	TRANSISTOR NPN 2N708 SI TO-18 PD=300MW	04713	2N708
ABC51	1854-0023	0	1	TRANSISTOR NPN SI TO-18 PD=300MW	28400	1854-0023
ABC52	1853-0005	3	2	TRANSISTOR PNP 2N941 SI TO-18 PD=250MW	28400	1853-0005
ABC53	1853-0005	5	5	TRANSISTOR PNP 2N941 SI TO-18 PD=250MW	28400	1853-0005
ABC54	0757-0900	0	1	RESISTOR 10K 2% .125W F TC00+-100	24540	C0-1/8-T0-1002-G
ABC55	0757-0907	1	1	RESISTOR 24K 2% .125W F TC00+-100	24540	C0-1/8-T0-2402-G
ABC56	0757-0907	1	1	RESISTOR 24K 2% .125W F TC00+-100	24540	C0-1/8-T0-2402-G
ABC57	0757-0907	1	1	RESISTOR 24K 2% .125W F TC00+-100	24540	C0-1/8-T0-2402-G
ABC58	0757-0907	0	1	RESISTOR 47.5K 1% .125W F TC00+-100	24540	C0-1/8-T0-0752-P
ABC59	0757-0909	3	3	RESISTOR 30K 2% .125W F TC00+-100	24540	C0-1/8-T0-3002-G
ABC60	0757-0400	1	1	RESISTOR 12.1K 1% .125W F TC00+-100	24540	C0-1/8-T0-1212-P
ABC61	0757-0400	0	1	RESISTOR 22.1K 1% .125W F TC00+-100	24540	C0-1/8-T0-2212-P
ABC62	2100-1775	0	2	RESISTOR-TMR 5K 5% NW TOP-ADJ 1-TMR	28400	2100-1775
ABC63	0757-0900	5	5	RESISTOR 10K 2% .125W F TC00+-100	24540	C0-1/8-T0-1002-G
ABC64	0757-0900	0	1	RESISTOR 10K 2% .125W F TC00+-100	24540	C0-1/8-T0-1002-G
ABC65	0757-0905	7	2	RESISTOR 7.5K 2% .125W F TC00+-100	24540	C0-1/8-T0-7501-G
ABC66	0757-0972	0	1	RESISTOR 150K 2% .125W F TC00+-100	24540	C0-1/8-T0-1002-G
ABC67	0757-0900	0	1	RESISTOR 10K 2% .125W F TC00+-100	24540	C0-1/8-T0-1002-G
ABC68	0757-0972	0	1	RESISTOR 100K 2% .125W F TC00+-100	24540	C0-1/8-T0-1002-G
ABC69	0757-0914	0	2	RESISTOR 300 2% .125W F TC00+-100	24540	C0-1/8-T0-301-G
ABC70	0757-0907	1	1	RESISTOR 24K 2% .125W F TC00+-100	24540	C0-1/8-T0-2402-G
ABC71	0757-0900	0	1	RESISTOR 10K 2% .125W F TC00+-100	24540	C0-1/8-T0-1002-G
ABC72	0757-0900	0	1	RESISTOR 10K 2% .125W F TC00+-100	24540	C0-1/8-T0-1002-G
ABC73	0757-0907	1	1	RESISTOR 10K 2% .125W F TC00+-100	24540	C0-1/8-T0-1002-G
ABC74	0757-0907	1	1	RESISTOR 20K 2% .125W F TC00+-100	24540	C0-1/8-T0-201-G
ABC75	0757-0900	0	2	RESISTOR 10K 2% .125W F TC00+-100	24540	C0-1/8-T0-1002-G
ABC76	0757-0900	0	1	RESISTOR 10K 2% .125W F TC00+-100	24540	C0-1/8-T0-1002-G
ABC77	0757-0907	1	1	RESISTOR 24K 2% .125W F TC00+-100	24540	C0-1/8-T0-2402-G
ABC78	0757-0907	1	1	RESISTOR 24K 2% .125W F TC00+-100	24540	C0-1/8-T0-2402-G
ABC79	0757-0909	2	2	RESISTOR 30K 2% .125W F TC00+-100	24540	C0-1/8-T0-301-G
ABC80	0757-0914	0	1	RESISTOR 300 2% .125W F TC00+-100	24540	C0-1/8-T0-301-G

See Introduction to this section for ordering information  
\*Indicates factory selected value

Table 6-2. Replaceable Parts (Continued)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A8R26	0757-0956	2		RESISTOR 27K 2% .125W F TC90+-100	2454b	CA=1/8-T0-2702-S
A8R27	0757-0957	1		RESISTOR 24K 2% .125W F TC90+-100	2454b	CA=1/8-T0-2402-S
A8R28	0757-0958	5		RESISTOR 3K 2% .125W F TC90+-100	2454b	CA=1/8-T0-3001-S
A8R29	0757-0959	3		RESISTOR 1.5K 2% .125W F TC90+-100	2454b	CA=1/8-T0-1501-S
A8R30	0757-0958	6		RESISTOR 1.5K 2% .125W F TC90+-100	2454b	CA=1/8-T0-1501-S
A8R31	0757-0928	6		RESISTOR 1.5K 2% .125W F TC90+-100	2454b	CA=1/8-T0-1501-S
A8R32	0757-0928	6		RESISTOR 1.5K 2% .125W F TC90+-100	2454b	CA=1/8-T0-1501-S
A8R33	0757-0928	6		RESISTOR 15K 2% .125W F TC90+-100	2454b	CA=1/8-T0-1502-S
A8R34	0757-0952	6		RESISTOR 15K 2% .125W F TC90+-100	2454b	CA=1/8-T0-1502-S
A8R35	2100-1777	6		RESISTOR-TMR 20K 5% 1/4W TOP=ADJ 1-TM	20480	2100-1777
A8R36	0690-3431	6	2	RESISTOR 23.7 1% .125W F TC90+-100	03080	PM55-1/8-T0-237-F
A8R37	0757-0952	6		RESISTOR 15K 2% .125W F TC90+-100	2454b	CA=1/8-T0-1502-S
A8R38	0757-0952	6		RESISTOR 15K 2% .125W F TC90+-100	2454b	CA=1/8-T0-1502-S
A8R39	0757-0952	6		RESISTOR 47K 2% .125W F TC90+-100	2454b	CA=1/8-T0-4702-S
A8R40	0757-0965	1		RESISTOR 51K 2% .125W F TC90+-100	2454b	CA=1/8-T0-5102-S
A8R41	0757-0960	6		RESISTOR 67K 2% .125W F TC90+-100	2454b	CA=1/8-T0-6702-S
A8R42	0757-0958	6		RESISTOR 20K 2% .125W F TC90+-100	2454b	CA=1/8-T0-2002-S
A8R43	2100-1923	1	1	RESISTOR-TMR 70K 5% 1/4W SIDE=ADJ 1-TM	20480	2100-1923
A8R44	0727-0602	1	1	RESISTOR 3 1% .5W CF TC90-500	20480	0727-0602
A8R45	0757-0965	1		RESISTOR 51K 2% .125W F TC90+-100	2454b	CA=1/8-T0-5102-S
A8R46	0690-3431	6		RESISTOR 23.7 1% .125W F TC90+-100	03080	PM55-1/8-T0-237-F
A8R47	0757-0965	1		RESISTOR 51K 2% .125W F TC90+-100	2454b	CA=1/8-T0-5102-S
A8R48	0757-0931	1		RESISTOR 2K 2% .125W F TC90+-100	2454b	CA=1/8-T0-2001-S
ADY1	9100-0340	6	1	TRANSFORMER 1 V; 60 CPS	20480	9100-0340
AO	05005-0015	6	1	BOARD ASSEMBLY, INTEGRATOR	20480	05005-0015
A9C1	0100-0100	1	1	CAPACITOR-PXD .1UF +-10% 200VDC POLYE	20480	0100-0100
A9C2	0150-0121	5		CAPACITOR-PXD .1UF +-20% 50VDC CER	20480	0150-0121
A9C3	0170-0044	1	1	CAPACITOR-PXD .5UF +-10% 200VDC POLYE	20480	0170-0044
A9C4	0100-0101	6		CAPACITOR-PXD .01UF +-10% 200VDC POLYE	20480	0100-0101
A9CR1	1902-0025	4	1	DIODE-ZNR 10V 5% DO-7 PDM .4W TC90 .050K	20480	1902-0025
A9CR2	1901-0040	1		DIODE-SWITCHING 30V 50MA 2MS DO-35	20480	1901-0040
A9CR3	1901-0040	1		DIODE-SWITCHING 30V 50MA 2MS DO-35	20480	1901-0040
A9CR4	1901-0040	1		DIODE-SWITCHING 30V 50MA 2MS DO-35	20480	1901-0040
A9CR5	1901-0040	1		DIODE-SWITCHING 30V 50MA 2MS DO-35	20480	1901-0040
A9CR6	1901-0040	1		DIODE-SWITCHING 30V 50MA 2MS DO-35	20480	1901-0040
A9CR7	1901-0040	1		DIODE-SWITCHING 30V 50MA 2MS DO-35	20480	1901-0040
A9CR8	1902-0040	3	2	DIODE-ZNR 10V 5% DO-7 PDM .4W TC90 .050K	20480	1902-0040
A9CR9	1902-0040	3	2	DIODE-ZNR 10V 5% DO-7 PDM .4W TC90 .050K	20480	1902-0040
A9CR10	1901-0040	1		DIODE-SWITCHING 30V 50MA 2MS DO-35	20480	1901-0040
A9Q1A	1855-0040	1	2	TRANSISTOR-JFET DUAL N-CHAND-MODES	20480	1855-0040
A9Q1B	1855-0040	1		TRANSISTOR-JFET DUAL N-CHAND-MODES	20480	1855-0040
A9Q2	1854-0003	5		TRANSISTOR NPN 51 TC-39 PDM005MW	20480	1854-0003
A9Q3	1853-0006	6	1	TRANSISTOR PNP 51 TC-02 PDM005MW	20480	1853-0006
A9R1	0757-0972	6		RESISTOR 100K 2% .125W F TC90+-100	2454b	CA=1/8-T0-1002-S
A9R2	0757-0965	1		RESISTOR 51K 2% .125W F TC90+-100	2454b	CA=1/8-T0-5102-S
A9R3	2100-1055	9	1	RESISTOR-TMR 200 5% 1/4W SIDE=ADJ 22-TM	32997	3037P-1-201
A9R4	0757-0965	2	2	RESISTOR 50K 2% .125W F TC90+-100	2454b	CA=1/8-T0-5002-S
A9R5	0757-0965	1		RESISTOR 51K 2% .125W F TC90+-100	2454b	CA=1/8-T0-5102-S
A9R6	0757-0972	6		RESISTOR 100K 2% .125W F TC90+-100	2454b	CA=1/8-T0-1002-S
A9R7	0757-0909	3		RESISTOR 240 2% .125W F TC90+-100	2454b	CA=1/8-T0-2401-S
A9R8	0757-0924	2		RESISTOR 1K 2% .125W F TC90+-100	2454b	CA=1/8-T0-1001-S
A9R9	0690-3127	7		RESISTOR 4.75K 2% .125W CF TC90-1300	91537	0C=1/8-75K-S
A9R10	2100-1062	6	1	RESISTOR-TMR 50K 5% 1/4W SIDE=ADJ 22-TM	32997	3037P-1-503
A9R11	0757-0924	2		RESISTOR 1K 2% .125W F TC90+-100	2454b	CA=1/8-T0-1001-S
A9R12	0757-0959	3		RESISTOR 20K 2% .125W F TC90+-100	2454b	CA=1/8-T0-2002-S
A9R13	0757-0941	3		RESISTOR 5.1K 2% .125W F TC90+-100	2454b	CA=1/8-T0-5101-S
A9R14	0757-0940	6		RESISTOR 10K 2% .125W F TC90+-100	2454b	CA=1/8-T0-1002-S
A9R15	0757-0940	6		RESISTOR 10K 2% .125W F TC90+-100	2454b	CA=1/8-T0-1002-S
A9R16	0757-0930	6		RESISTOR 1.0K 2% .125W F TC90+-100	2454b	CA=1/8-T0-1001-S
A9R17	0757-0940	6		RESISTOR 10K 2% .125W F TC90+-100	2454b	CA=1/8-T0-1002-S
A9R18	0757-0924	2		RESISTOR 1K 2% .125W F TC90+-100	2454b	CA=1/8-T0-1001-S
A9R19	0757-0924	2		RESISTOR 1K 2% .125W F TC90+-100	2454b	CA=1/8-T0-1001-S
A9R20	0757-0940	2		RESISTOR 3.7K 2% .125W F TC90+-100	2454b	CA=1/8-T0-3701-S
A9R21	0757-0935	5		RESISTOR 3K 2% .125W F TC90+-100	2454b	CA=1/8-T0-3001-S
A9R22	0757-0931	5		RESISTOR 2K 2% .125W F TC90+-100	2454b	CA=1/8-T0-2001-S
A9R23	0757-0955	9		RESISTOR 20K 2% .125W F TC90+-100	2454b	CA=1/8-T0-2002-S
A9R24	0757-0955	9		RESISTOR 20K 2% .125W F TC90+-100	2454b	CA=1/8-T0-2002-S
A9R25	0757-0955	9		RESISTOR 20K 2% .125W F TC90+-100	2454b	CA=1/8-T0-2002-S
A10	00105-6013	1		OSCILLATOR ASSY: 5 MHz FACTORY REPAIR ONLY. FOR REPLACEMENT, ORDER HP PART NO. 00105-6034	20480	00105-6013

See Introduction to this section for ordering information  
\*Indicates factory selected value



Table 6-2. Replaceable Parts (Continued)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1B				FOR CALL-OUTS OF COMP. SEE PAGE 6-20.		
A1B	2000-0020	5	1	MODULE ASSEMBLY, BUFFER AMPLIFIER	20400	05005-0020
A1B01	0100-2034	0		CAPACITOR-FDTRUJ 5000PF +50 -20% 200V	20400	0100-2034
A1B02	0100-2034	0		CAPACITOR-FDTRUJ 5000PF +50 -20% 200V	20400	0100-2034
A1B11	1250-0901	2		CONNECTOR-RF SWS M SBL-HOLE-FR 50-OHM	20400	1250-0901
A1B12	1250-0901	2		CONNECTOR-RF SWS M SBL-HOLE-FR 50-OHM	20400	1250-0901
A1B13	1250-0901	2		CONNECTOR-RF SWS M SBL-HOLE-FR 50-OHM	20400	1250-0901
A1B14	1250-0901	2		CONNECTOR-RF SWS M SBL-HOLE-FR 50-OHM	20400	1250-0901
				A1B MISCELLANEOUS PARTS		
	5000-2059	0	1	PLATE, END	20400	5000-2059
	05005-0001	0	1	CHASSIS, BUFFER AMPLIFIER	20400	05005-0001
	05005-0002	0	1	COVER, BUFFER AMPLIFIER	20400	05005-0002
A1B01	05005-0021	7	1	BOARD ASSEMBLY, BUFFER AMPLIFIER (NOT FOR REPLACEMENT) FOR REPLACEMENT ORDER 05005-0020	20400	05005-0021
A1B01C1	0150-0093	0		CAPACITOR-FXD .01UF +50-20% 100VDC CER	20400	0150-0093
A1B01C2	0150-0093	0		CAPACITOR-FXD .01UF +50-20% 100VDC CER	20400	0150-0093
A1B01C3	0150-0093	0		CAPACITOR-FXD .01UF +50-20% 100VDC CER	20400	0150-0093
A1B01C4	0150-0093	0		CAPACITOR-FXD .01UF +50-20% 100VDC CER	20400	0150-0093
A1B01C5	0150-0093	0		CAPACITOR-FXD .01UF +50-20% 100VDC CER	20400	0150-0093
A1B01C6	0150-0093	0		CAPACITOR-FXD .01UF +50-20% 100VDC CER	20400	0150-0093
A1B01C7	0100-0190	7	1	CAPACITOR-FXD 4UF +50-20% 1KVDC PPR	20400	7110-0
A1B01C8	0100-0200	0	1	CAPACITOR-FXD 100PF +5% 300VDC NICA	20400	0100-0200
A1B01C9	0150-0093	0		CAPACITOR-FXD .01UF +50-20% 100VDC CER	20400	0150-0093
A1B01C10	0150-0093	0		CAPACITOR-FXD .01UF +50-20% 100VDC CER	20400	0150-0093
A1B01C11	0150-0121	0		CAPACITOR-FXD .1UF +50-20% 50VDC CER	20400	0150-0121
A1B01C12	0150-0093	0		CAPACITOR-FXD .01UF +50-20% 100VDC CER	20400	0150-0093
A1B01C13	1901-0040	1		DIODE-ZNR 5.0V 5% DO-7 PGM, 4M TC=+.057X	20400	1901-0040
A1B01C14	1901-0040	0		DIODE-SWITCHING 30V 50MA 2ND DC-35	20400	1901-0040
A1B01L1	0100-0137	1		COIL-MFD 10M 5% 5000 .150X.040-NDM	20400	0100-0137
A1B01R1	1050-0092	2		TRANSISTOR NPN 01 PD=200mW FT=100ns	20400	1050-0092
A1B01R2	1050-0092	2		TRANSISTOR NPN 01 PD=200mW FT=100ns	20400	1050-0092
A1B01R3	1050-0092	2		TRANSISTOR NPN 01 PD=200mW FT=100ns	20400	1050-0092
A1B01R4	0757-0073	4	5	RESISTOR 5% 2K 1/8W F TC=0-100	20500	C0-1/8-T0-5110-0
A1B01R5	0757-0073	4	5	RESISTOR 5% 2K 1/8W F TC=0-100	20500	C0-1/8-T0-5110-0
A1B01R6	0757-0073	4	5	RESISTOR 5% 2K 1/8W F TC=0-100	20500	C0-1/8-T0-5110-0
A1B01R7	0757-0073	4	5	RESISTOR 5% 2K 1/8W F TC=0-100	20500	C0-1/8-T0-5110-0
A1B01R8	0757-0073	4	5	RESISTOR 5% 2K 1/8W F TC=0-100	20500	C0-1/8-T0-5110-0
A1B01R9	0757-0073	4	5	RESISTOR 5% 2K 1/8W F TC=0-100	20500	C0-1/8-T0-5110-0
A1B01R10	0757-0073	4	5	RESISTOR 5% 2K 1/8W F TC=0-100	20500	C0-1/8-T0-5110-0
A1B01R11	0757-0073	1	2	RESISTOR 5% 2K 1/8W F TC=0-100	20500	C0-1/8-T0-5110-0
A1B01R12	0757-0073	1	2	RESISTOR 5% 2K 1/8W F TC=0-100	20500	C0-1/8-T0-5110-0
A1B01R13	0757-0073	0	2	RESISTOR 5% 2K 1/8W F TC=0-100	20500	C0-1/8-T0-5110-0
A1B01R14	0757-0073	0	2	RESISTOR 5% 2K 1/8W F TC=0-100	20500	C0-1/8-T0-5110-0
A1B01R15	0757-0073	0	2	RESISTOR 5% 2K 1/8W F TC=0-100	20500	C0-1/8-T0-5110-0
A1B01R16	0757-0073	3		RESISTOR 5% 2K 1/8W F TC=0-100	20500	C0-1/8-T0-5110-0
A1B01R17	0757-0073	0		RESISTOR 5% 2K 1/8W F TC=0-100	20500	C0-1/8-T0-5110-0
A1B01R18	0757-0073	0		RESISTOR 5% 2K 1/8W F TC=0-100	20500	C0-1/8-T0-5110-0
A1B01T1	00105-0007	0	2	TRANSFORMER, POWER AMPLIFIER	20400	00105-0007
A1B01T2	00105-0007	0	2	TRANSFORMER, POWER AMPLIFIER	20400	00105-0007
A1C	05005-0012	0	1	BOARD ASSEMBLY, LOGIC	20400	05005-0012
A1C01	0100-0117	2		CAPACITOR-FXD 2.7UF+10% 35VDC TA	50200	1500275X003502
A1C02	0100-0121	5		CAPACITOR-FXD .1UF +50-20% 50VDC CER	20400	0100-0121
A1C03	0100-0117	2		CAPACITOR-FXD 2.7UF+10% 35VDC TA	50200	1500275X003502
A1C04	0100-0100	0		CAPACITOR-FXD 0.01UF+20% 50VDC TA	50200	150000X000002
A1C05	0100-0100	0		CAPACITOR-FXD 0.01UF+20% 50VDC TA	50200	150000X000002
A1C0R1	1901-0040	1		DIODE-SWITCHING 30V 50MA 2ND DC-35	20400	1901-0040
A1C0R2	1901-0040	1		DIODE-SWITCHING 30V 50MA 2ND DC-35	20400	1901-0040
A1C0R3	1901-0040	1		DIODE-SWITCHING 30V 50MA 2ND DC-35	20400	1901-0040
A1C0R4	1901-0040	1		DIODE-SWITCHING 30V 50MA 2ND DC-35	20400	1901-0040
A1C0R5	1901-0040	1		DIODE-SWITCHING 30V 50MA 2ND DC-35	20400	1901-0040
A1C0R6	1901-0040	1		DIODE-SWITCHING 30V 50MA 2ND DC-35	20400	1901-0040
A1C0R7	1901-0040	1		DIODE-SWITCHING 30V 50MA 2ND DC-35	20400	1901-0040
A1C0R8	1901-0040	1		DIODE-SWITCHING 30V 50MA 2ND DC-35	20400	1901-0040
A1C0R9	1901-0040	1		DIODE-SWITCHING 30V 50MA 2ND DC-35	20400	1901-0040
A1C0R10	1901-0040	1		DIODE-SWITCHING 30V 50MA 2ND DC-35	20400	1901-0040

See introduction to this section for ordering information  
\*Indicates factory selected value



Table 6-2. Replaceable Parts (Continued)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A14C11	1901-0040	1		DIODE-SWITCHING 30V 50MA 2MS DC-35	20400	1901-0040
A14C12	1901-0040	1		DIODE-SWITCHING 30V 50MA 2MS DC-35	20400	1901-0040
A14C13	1054-0003	0	1	THYRISTOR-SCR 3MSB TC-39 VRRM=60	03500	345B
A14C14	1902-3020	0	1	DIODE-ZNR 2.07V 5% DC-7 PDS, 4M TC=, 07%	20400	1902-3020
A1401				NOT ASSIGNED		
A1402	1054-0023	0		TRANSISTOR NPN 01 TC-10 PDS=0.000M	20400	1054-0023
A1403	1054-0023	0		TRANSISTOR NPN 01 TC-10 PDS=0.000M	20400	1054-0023
A1404	1054-0003	5		TRANSISTOR NPN 01 TC-10 PDS=0.000M	20400	1054-0003
A1405	1054-0003	5		TRANSISTOR NPN 01 TC-10 PDS=0.000M	20400	1054-0003
A1406	1053-0001	1	3	TRANSISTOR PNP 01 TC-10 PDS=0.000M	20400	1053-0001
A1407	1054-0023	0		TRANSISTOR NPN 01 TC-10 PDS=0.000M	20400	1054-0023
A1408	1054-0003	5		TRANSISTOR NPN 01 TC-10 PDS=0.000M	20400	1054-0003
A1409	1054-0003	5		TRANSISTOR NPN 01 TC-10 PDS=0.000M	20400	1054-0003
A1410	1053-0001	1		TRANSISTOR PNP 01 TC-10 PDS=0.000M	20400	1053-0001
A14011	1054-0003	5		TRANSISTOR NPN 01 TC-10 PDS=0.000M	20400	1054-0003
A14012	1054-0003	5		TRANSISTOR NPN 01 TC-10 PDS=0.000M	20400	1054-0003
A14013	1054-0003	5		TRANSISTOR NPN 01 TC-10 PDS=0.000M	20400	1054-0003
A14014	1054-0003	5		TRANSISTOR NPN 01 TC-10 PDS=0.000M	20400	1054-0003
A14015	1054-0003	5		TRANSISTOR NPN 01 TC-10 PDS=0.000M	20400	1054-0003
A14016	1054-0003	5		TRANSISTOR NPN 01 TC-10 PDS=0.000M	20400	1054-0003
A14017	1054-0003	5		TRANSISTOR NPN 01 TC-10 PDS=0.000M	20400	1054-0003
A14018	1054-0003	5		TRANSISTOR NPN 01 TC-10 PDS=0.000M	20400	1054-0003
A1401				NOT ASSIGNED		
A1402	0757-0950	0		RESISTOR 30K 2% .125W F TC=+100	24500	C4-1/8-T0-3002-G
A1403	0757-0972	0		RESISTOR 100K 2% .125W F TC=+100	24500	C4-1/8-T0-1002-G
A1404	0757-0950	0		RESISTOR 10K 2% .125W F TC=+100	24500	C4-1/8-T0-1002-G
A1405				NOT ASSIGNED		
A1406	0757-0940	0		RESISTOR 10K 2% .125W F TC=+100	24500	C4-1/8-T0-1002-G
A1407	0757-0957	1		RESISTOR 24K 2% .125W F TC=+100	24500	C4-1/8-T0-2402-G
A1408	0100-1775	4		RESISTOR-TERM 5K 5% NH TOP-ADJ 1-TM	20400	A100-1775
A1409	0757-0903	0		RESISTOR 43K 2% .125W F TC=+100	24500	C4-1/8-T0-4302-G
A14010	0757-0910	2		RESISTOR 470 2% .125W F TC=+100	24500	C4-1/8-T0-471-G
A14011	0757-0955	0		RESISTOR 20K 2% .125W F TC=+100	24500	C4-1/8-T0-2002-G
A14012	0757-0950	0		RESISTOR 20K 2% .125W F TC=+100	24500	C4-1/8-T0-2002-G
A14013	0757-0957	1		RESISTOR 24K 2% .125W F TC=+100	24500	C4-1/8-T0-2402-G
A14014	0757-0957	1		RESISTOR 24K 2% .125W F TC=+100	24500	C4-1/8-T0-2402-G
A14015				NOT ASSIGNED		
A14016	0757-0972	0		RESISTOR 100K 2% .125W F TC=+100	24500	C4-1/8-T0-1002-G
A14017	0757-0955	0		RESISTOR 20K 2% .125W F TC=+100	24500	C4-1/8-T0-2002-G
A14018	0757-0957	1		RESISTOR 24K 2% .125W F TC=+100	24500	C4-1/8-T0-2402-G
A14019	0757-0950	0		RESISTOR 20K 2% .125W F TC=+100	24500	C4-1/8-T0-2002-G
A14020	0757-0933	3		RESISTOR 3.4K 2% .125W F TC=+100	24500	C4-1/8-T0-2402-G
A14021	0757-0957	1		RESISTOR 24K 2% .125W F TC=+100	24500	C4-1/8-T0-2402-G
A14022	0757-0957	1		RESISTOR 24K 2% .125W F TC=+100	24500	C4-1/8-T0-2402-G
A14023	0757-0955	0		RESISTOR 20K 2% .125W F TC=+100	24500	C4-1/8-T0-2002-G
A14024	0757-0957	1		RESISTOR 24K 2% .125W F TC=+100	24500	C4-1/8-T0-2402-G
A14025	0757-0940	0		RESISTOR 10K 2% .125W F TC=+100	24500	C4-1/8-T0-1002-G
A14026	0757-0940	0		RESISTOR 33K 2% .125W F TC=+100	24500	C4-1/8-T0-3302-G
A14027	0757-0955	0		RESISTOR 20K 2% .125W F TC=+100	24500	C4-1/8-T0-2002-G
A14028	0757-0940	0		RESISTOR 33K 2% .125W F TC=+100	24500	C4-1/8-T0-3302-G
A14029	0757-0941	3		RESISTOR 5.1K 2% .125W F TC=+100	24500	C4-1/8-T0-5101-G
A14030	0757-0940	0	1	RESISTOR 60K 2% .125W F TC=+100	24500	C4-1/8-T0-6002-G
A14031	0757-0940	0		RESISTOR 10K 2% .125W F TC=+110	24500	C4-1/8-T0-1002-G
A14032	0757-0952	0		RESISTOR 15K 2% .125W F TC=+100	24500	C4-1/8-T0-1502-G
A14033	0757-0957	1		RESISTOR 24K 2% .125W F TC=+100	24500	C4-1/8-T0-2402-G
A14034	0757-0940	7		RESISTOR 7.5K 2% .125W F TC=+100	24500	C4-1/8-T0-7501-G
A14035	0757-0920	2		RESISTOR 1K 2% .125W F TC=+100	24500	C4-1/8-T0-1001-G
A14036	0757-0955	0		RESISTOR 20K 2% .125W F TC=+100	24500	C4-1/8-T0-2002-G
A14037	0757-0975	3	1	RESISTOR 130K 2% .125W F TC=+100	24500	C4-1/8-T0-1302-G
A15	05005-0023	1	1	BOARD ASSEMBLY, VOLTAGE REGULATOR (SERIES 1040)	20400	05005-0023
A15C1	0100-0052	1	1	CAPACITOR-FXD .001UF +-20% 400VDC CER	20400	0100-0052
A15C2	0100-0117	2		CAPACITOR-FXD 2.7UF+-10% 35VDC TA	50200	1500275X003502
A15C3	0100-0104	3		CAPACITOR-FXD 150PF +-5% 300VDC MICA	72130	0150F15130300MVIC
A15C4	0100-0117	2		CAPACITOR-FXD 2.7UF+-10% 35VDC TA	50200	1500275X003502
A15C5	0100-0117	2		CAPACITOR-FXD 2.7UF+-10% 35VDC TA	50200	1500275X003502
A15C6	0100-0097	7		CAPACITOR-FXD .01UF+-10% 35VDC TA	50200	1500470X003502
A15C7	0100-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	20400	0100-0127
A15C8	0100-0113	0		CAPACITOR-FXD 100UF+-20% 15% 30VDC TA	00001	0100F10030VDC
A15C9	0100-0113	0		CAPACITOR-FXD 100UF+-20% 15% 30VDC TA	00001	0100F10030VDC
A15C10	0100-0113	0		CAPACITOR-FXD 100UF+-20% 15% 30VDC TA	00001	0100F10030VDC
A15C11	0100-1700	5	1	CAPACITOR-FXD .01UF+-10% 5VDC TA	50200	1500470X000502

See introduction to this section for ordering information  
\*Indicates factory selected value

Table 6-2. Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A10C1	1901-0200	5	DIODE-PWR RECT 100V 1.5A	28480	1901-0200
A10C2	1901-0200	5	DIODE-PWR RECT 100V 1.5A	28480	1901-0200
A10C3	1901-0200	5	DIODE-PWR RECT 100V 1.5A	28480	1901-0200
A10C4	1901-0200	5	DIODE-PWR RECT 100V 1.5A	28480	1901-0200
A10C5	1902-0767	5	DIODE-ZNR 1N430 9V 5% DO-7 PWR 3W	28480	1902-0767
A10C6	1901-0033	2	DIODE-GEN PRP 100V 200MA DO-7	28480	1901-0033
A10C7	1901-0033	2	DIODE-GEN PRP 100V 200MA DO-7	28480	1901-0033
A10C8	1901-0025	2	DIODE-GEN PRP 100V 200MA DO-7	28480	1901-0025
A10C9A			PART OF A10C9A		
A10C9A	1902-0247	2	DIODE-ZNR 20V 1K DO-7 PWR 4W TC=+.065K	28480	1902-0247
A10L1	0140-0137	1	COIL-MLD 1MH 5% Q=60 .100X.4AL8-NOM	28480	0140-0137
A10L2	0140-0179	1	COIL-MLD 22UH 10% Q=75 .1850X.375LG-NOM	28480	0140-0179
A10M1	1054-0019	7	TRANSISTOR NPN 2N3053 5I TO-18 PWR 1W	01925	2N3053
A10M2	1054-0003	5	TRANSISTOR NPN 5I TO-18 PWR 0.5W	28480	1054-0003
A10M3	1053-0001	1	TRANSISTOR PNP 5I TO-18 PWR 0.5W	28480	1053-0001
A10M4	1055-0001	1	TRANSISTOR J-FET N-CMAM D-MODE 5I	01295	2N5245
A10M5A	1054-0221	0	TRANSISTOR-DUAL NPN PWR 0.5W	28480	1054-0221
A10M5B			PART OF A10M5A		
A10M6	1053-0006	6	TRANSISTOR PNP 2N3134 5I TO-18 PWR 0.5W	00713	2N3134
A10M7	1054-0039	7	TRANSISTOR NPN 2N3053 5I TO-18 PWR 1W	01925	2N3053
A10M8	1054-0039	7	TRANSISTOR NPN 2N3053 5I TO-18 PWR 1W	01925	2N3053
A10M9	1053-0024	0	TRANSISTOR PNP 2N4234 5I TO-18 PWR 1W	00713	2N4234
A10R1	0757-0700	4	RESISTOR 1.2K 2% .125W P TC=0+-100	24540	C4-1/8-T0-1201-C
A10R2	0011-0001	2	RESISTOR .39 5% 2W P TC=0+-200	78042	88M2-39/100-J
A10R3	0757-0700	2	RESISTOR 50K 2% .125W P TC=0+-100	24540	C4-1/8-T0-5002-C
A10R4	0011-0001	1	RESISTOR 9K 1% .125W PWR TC=0+-10	20940	135-1/8-C-9001-F
A10R5	0757-0773	1	RESISTOR 110K 2% .125W P TC=0+-100	24540	C4-1/8-T0-1102-C
A10R6	0011-0002	0	RESISTOR 11K 1% .125W PWR TC=0+-10	20940	0011-0002
A10R7	0011-0001	0	RESISTOR 92K 1% .125W PWR TC=0+-10	20940	135-1/8-C-9200-F
A10R8	0011-0001	0	RESISTOR 1.33K 1% .125W PWR TC=0+-5	20940	135-1/8-C-1330-F
A10R9	0757-0700	0	RESISTOR 22K 2% .125W P TC=0+-100	24540	C4-1/8-T0-2202-C
A10R10					
A10R11	0011-0000	0	RESISTOR 725 1% .125W PWR TC=0+-2.5	20940	135-1/8-A-7250-B
A10R12	0011-0000	5	RESISTOR 333 1% .125W PWR TC=0+-5	20940	135-1/8-C-3330-F
A10R13	0757-0700	0	RESISTOR 10K 2% .125W P TC=0+-100	24540	C4-1/8-T0-1002-C
A10R14	0757-0700	2	RESISTOR 10 1% .125W P TC=0+-100	24540	C4-1/8-T0-1000-F
A10R15	0757-0700	2	RESISTOR 10 1% .125W P TC=0+-100	24540	C4-1/8-T0-1000-F
A10R16	0757-0700	4	RESISTOR 100 2% .125W P TC=0+-100	24540	C4-1/8-T0-1001-C
A10R17	2100-1774	3	RESISTOR-TMR 2K 5% 2W TOP-ADJ 1-TMR	28480	2100-1774
A10T1	0100-2470	3	TRANSFORMER XFRM, 1KVA, 10VCT-12VCT	28480	0100-2470
A10			FOR CALL-OUTS OF COMP., SEE TABLE 6-4.		
A17	05065-0014	2	BOARD ASSEMBLY, TERMINAL	28480	05065-0014
A17R1	0757-0405	0	RESISTOR 601K 1% .125W P TC=0+-100	24540	0757-0405
A17R2	0757-0402	7	RESISTOR 511K 1% .125W P TC=0+-100	24540	0757-0402
A17R3	0757-0402	6	RESISTOR 15K 2% .125W P TC=0+-100	24540	C4-1/8-T0-1502-C
A17R4	0757-0405	0	RESISTOR 601K 1% .125W P TC=0+-100	24540	0757-0405
A17R5	0757-0405	0	RESISTOR 274K 1% .125W P TC=0+-100	24540	C4-1/8-T0-2740-F
A17R6	0090-0403	2	RESISTOR 100K 1% .125W P TC=0+-100	24540	C4-1/8-T0-1000-F
A17R7	0757-0405	1	RESISTOR 51K 2% .125W P TC=0+-100	24540	C4-1/8-T0-5102-C
A17R8	0757-0402	0	RESISTOR 100K 2% .125W P TC=0+-100	24540	C4-1/8-T0-1002-C
A17R9	0757-0405	0	RESISTOR 20K 2% .125W P TC=0+-100	24540	C4-1/8-T0-2002-C
A17R10	0757-0405	3	RESISTOR 102K 1% .125W P TC=0+-100	24540	C4-1/8-T0-1020-F
A17R11	0757-0402	0	RESISTOR 30K 2% .125W P TC=0+-100	24540	C4-1/8-T0-3002-C
A17R12	0757-0400	0	RESISTOR 33K 2% .125W P TC=0+-100	24540	C4-1/8-T0-3302-C
A10	05065-0057	2	JUMPER BOARD ASSEMBLY	28480	05065-0057
A10C1	1901-0200	5	DIODE-PWR RECT 100V 1.5A	28480	1901-0200
A10C2	1901-0200	5	DIODE-PWR RECT 100V 1.5A	28480	1901-0200
A10 MISCELLANEOUS PARTS					
	05065-0006	1	KEY, ACCESSORY	28480	05065-0006
	1250-0013	5	ADAPTER-COAX STR N=8MB M=8MB	28480	1250-0013
	1251-0120	5	CONNECTOR 5-PIN P CIRC STANDARD	28480	1251-0120
	0710-0033	6	ALIGNMENT TOOL	28480	0710-0033
	05065-0110	3	CABLE ASSEMBLY, TEST	28480	05065-0110
	05065-0073	2	BOARD ASSEMBLY, EXTENDER	28480	05065-0073
	05065-0006	7	BOARD ASSEMBLY, EXTENDER 15-PIN	28480	05065-0006
	05065-0005	0	BOARD ASSEMBLY, EXTENDER 15-PIN	28480	05065-0005

See Introduction to this section for ordering information.  
\*Indicates factory selected value

Table 6-2. Replaceable Parts (Continued)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
CHASSIS PARTS						
C1	0100-0204	2	2	CAPACITOR-FXD 2000UF*100-10X 40VDC AL	20480	0100-0204
C2	0100-0204	2	2	CAPACITOR-FXD 2000UF*100-10X 40VDC AL	20480	0100-0204
C3				NOT ASSIGNED		
C4	0100-0050	2	1	CAPACITOR-FXD 1000UF*100-10X 50VDC AL	20480	0100-0050
C5A	0100-3011	5	1	CAPACITOR-FXD 7500PF/7200PF +-10%	20480	0100-3011
C5B				PART OF C5A		
C6	0100-2210	6	1	CAPACITOR-FXD 1000PF +-5% 300VDC MICA	20480	0100-2210
	1520-0001	6	1	PLATE-MOUNTING FOR TRIST LOCK TYPE CAP	20480	1520-0001
C7	0170-0004	7	1	CAPACITOR-FXD .47UF +-10% 100VDC POLYE	10011	0030674914
CR1	1901-0040	1	2	DIODE-SWITCHING 30V 50MA 2WS DO-35	20480	1901-0040
CR2	1901-0040	1	2	DIODE-SWITCHING 30V 50MA 2WS DO-35	20480	1901-0040
CR3	1901-0327	7	1	DIODE-PWR RECT 200V 1A GUS	03508	A140
DB1	2140-0025	0	2	LAMP-INCAND 127 20VDC 40MA T-1-3/4-SULB	20480	2140-0025
	1450-0705	0	1	LAMPHOLDER GRN-TP .332-07A MINTR-PLS-SKT	20480	1450-0705
DB2	2140-0025	0	2	LAMP-INCAND 127 20VDC 40MA T-1-3/4-SULB	20480	2140-0025
	1450-0114	0	1	LAMPHOLDER AMB-TP .332-01A	20480	1450-0114
F1	2110-0504	0	2	FUSEHOLDER BODY 12A MAX FOR UL	H9027	031-1057
	2110-0504	0	2		20480	2110-0504
	00310-48001	0	2	SHOULDER WASHER FOR FUSEHOLDERS	20480	00310-48001
F2	2110-0504	0	2	FUSEHOLDER BODY 12A MAX FOR UL	H9027	031-1057
	2110-0504	0	2	FUSEHOLDER CAP 12A MAX FOR UL	20480	2110-0504
	2110-0504	0	2	FUSEHOLDER CAP 12A MAX FOR UL	20480	2110-0504
	00310-48001	0	2	SHOULDER WASHER FOR FUSEHOLDERS	20480	00310-48001
J1	1250-0140	1	5	CONNECTOR-RF BNC FEM 80L-HOLE-RR 50-OHM	20480	1250-0140
J2	1250-0140	1	5	CONNECTOR-RF BNC FEM 80L-HOLE-RR 50-OHM	20480	1250-0140
J3	1250-0140	1	5	CONNECTOR-RF BNC FEM 80L-HOLE-RR 50-OHM	20480	1250-0140
J4	1250-0140	1	5	CONNECTOR-RF BNC FEM 80L-HOLE-RR 50-OHM	20480	1250-0140
J5	1250-0140	1	5	CONNECTOR-RF BNC FEM 80L-HOLE-RR 50-OHM	20480	1250-0140
J6				NOT ASSIGNED		
J7				NOT ASSIGNED		
J8	1251-0450	0	1	CONNECTOR 3-PIN M CIRC STANDARD	20480	1251-0450
J9	1251-0111	0	1	CONNECTOR 5-PIN M CIRC STANDARD	20480	1251-0111
J10	1250-0102	5	4	CONNECTOR-RF BNC FEM 80L-HOLE-FR 50-OHM	20480	1250-0102
J11	1250-0102	5	4	CONNECTOR-RF BNC FEM 80L-HOLE-FR 50-OHM	20480	1250-0102
J12	1250-0102	5	4	CONNECTOR-RF BNC FEM 80L-HOLE-FR 50-OHM	20480	1250-0102
J13				PART OF OPTIC 001		
J14	1250-0102	5	4	CONNECTOR-RF BNC FEM 80L-HOLE-FR 50-OHM	20480	1250-0102
L1	9100-0337	0	1	TRANSFORMER-AUDIO 1 V <sub>r</sub> 120 CPH; 50 MH	20480	9100-0337
M1	1120-1472	0	1	METER 1.75-IN; 100 UA FSD; PVT & JEWEL	20480	1120-1472
Q1	1054-0020	0	1	TRANSISTOR NPN 6X TC-00 P0025H	20480	1054-0020
Q2	1054-0300	0	3	TRANSISTOR NPN 6X PD-25H FT40MHZ	20480	1054-0300
Q3	1054-0300	0	3	TRANSISTOR NPN 6X PD-25H FT40MHZ	20480	1054-0300
Q4	1054-0300	0	3	TRANSISTOR NPN 6X PD-25H FT40MHZ	20480	1054-0300
R1						
R2	0757-0952	0	1	RESISTOR 15K 2% .125W F TC00-100	24546	C4-1/8-70-1502-5
R3	2100-2425	0	1	RESISTOR-VAR PREC WW 5-TRN 20K 3X	20480	2100-2425
	1140-0014	0	1	TURNS DIAL 15 TURNS (MOD. 2000)	20480	1140-0014
R4						
R5	0757-0952	0	1	RESISTOR 10K 2% .125W F TC00-100	24546	C4-1/8-70-1002-0
R6	2100-2375	0	1	RESISTOR 100K 2% .125W F TC00-100	24546	C4-1/8-70-1002-0
R7	0757-0950	0	1	RESISTOR-VAR PREC WW 10-TRN 1K 5X	20480	2100-2375
				RESISTOR 30K 2% .125W F TC00-100	24546	C4-1/8-70-3002-0
S1	3101-1234	0	1	SWITCH-8L SPDT BYD 1 SA 250VAC BLUR-LUG	20480	3101-1234
S2	3101-1155	0	1	SWITCH-TSL SUBMIN SPDT SA 115VAC	20480	3101-1155
S3	3101-0052	0	1	SWITCH-PS SPST-NO MOM .25A 30VAC BLK-BTN	02300	901
S4	3100-0093	0	1	SWITCH-ROTARY 0.012 STRUT CTR 0PC0; 12	20480	3100-0093
	0370-0077	0	1	RNOB SPRTD BAR:BLK1F0W .2500PF1.0250	20480	0370-0077
S5	3100-2910	0	1	SWITCH-ROTARY 0.012 STRUT CTR 0PC0; 2	20480	3100-2910
T1	9100-2742	0	1	TRANSFORMER-POWER 115/230V 50-1000HZ	20480	9100-2742
W1	05065-0032	0	1	CABLE ASSEMBLY, A3 TO A1	20480	05065-0032
	1250-0921	0	12	CONNECTOR-RF 8MB FEM UNMTD 50-OHM	20480	1250-0921
	0120-0229	0	10	CABLE-COAX 50-OHM 20PF/FT	20480	0120-0229
W2	05065-0033	0	1	CABLE ASSEMBLY, A3 TO A10	20480	05065-0033
	1250-0921	0	6	CONNECTOR-RF 8MB FEM UNMTD 50-OHM	20480	1250-0921
	0120-0229	0	9	CABLE-COAX 50-OHM 20PF/FT	20480	0120-0229
W3	05065-0034	0	1	CABLE ASSEMBLY, A3 TO A13	20480	05065-0034
	1250-0921	0	6	CONNECTOR-RF 8MB FEM UNMTD 50-OHM	20480	1250-0921
	0120-0229	0	9	CABLE-COAX 50-OHM 20PF/FT	20480	0120-0229
W4	05065-0075	0	1	CABLE ASSEMBLY, A3 TO A3	20480	05065-0075
	1250-0921	0	6	CONNECTOR-RF 8MB FEM UNMTD 50-OHM	20480	1250-0921
	0120-0229	0	9	CABLE-COAX 50-OHM 20PF/FT	20480	0120-0229

See introduction to this section for ordering information  
\*Indicates factory selected value

Table 6-2. Replaceable Parts (Continued)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
N5	05005-0036	0	1	CABLE ASSEMBLY, A13 TO A1	20400	05005-0036
	1250-0921	0		CONNECTOR-RF SWS FEM UNMTD 50-OHM	20400	1250-0921
	0120-0229	0		CABLE-COAX 50-OHM 20PP/FT	20400	0120-0229
N6	05005-0037	0	1	CABLE ASSEMBLY, REAR PANEL TO A13	20400	05005-0037
	1250-0030	2	0	NUT-RF CONNECTOR BNC1, 502 LI, 00210	02600	31-2125-2
	1250-0031	3	7	CONTACT-RF CONN SERIES BNC1 FEMALE	02600	31-2109
	0120-0229	0		CABLE-COAX 50-OHM 20PP/FT	20400	0120-0229
N7	05005-0038	0	1	CABLE ASSEMBLY, REAR PANEL TO A6	20400	05005-0038
	1250-0030	2	0	NUT-RF CONNECTOR BNC1, 502 LI, 00210	02600	31-2125-2
	0120-0229	0		CABLE-COAX 50-OHM 20PP/FT	20400	0120-0229
N8	05005-0039	0	1	CABLE ASSEMBLY, REAR PANEL TO A8	20400	05005-0039
	1250-0030	2	0	NUT-RF CONNECTOR BNC1, 502 LI, 00210	02600	31-2125-2
	1250-0031	3	0	CONTACT-RF CONN SERIES BNC1 FEMALE	02600	31-2109
	0120-0229	0		CABLE-COAX 50-OHM 20PP/FT	20400	0120-0229
N9	05005-0040	0	1	CABLE ASSEMBLY, FRONT PANEL TO A8	20400	05005-0040
	1250-0030	2	0	NUT-RF CONNECTOR BNC1, 502 LI, 00210	02600	31-2125-2
	1250-0031	3	0	CONTACT-RF CONN SERIES BNC1 FEMALE	02600	31-2109
	0120-0229	0		CABLE-COAX 50-OHM 20PP/FT	20400	0120-0229
N10	05005-0041	0	1	CABLE ASSEMBLY, FRONT PANEL TO A8	20400	05005-0041
	1250-0030	2	0	NUT-RF CONNECTOR BNC1, 502 LI, 00210	02600	31-2125-2
	1250-0031	3	0	CONTACT-RF CONN SERIES BNC1 FEMALE	02600	31-2109
	0120-0229	0		CABLE-COAX 50-OHM 20PP/FT	20400	0120-0229
N11	05005-0042	0	1	CABLE ASSEMBLY, FRONT PANEL TO N11	20400	05005-0042
	1250-0030	2	0	NUT-RF CONNECTOR BNC1, 502 LI, 00210	02600	31-2125-2
	0120-0229	0		CABLE-COAX 50-OHM 20PP/FT	20400	0120-0229
	05005-0043	0	1	CABLE ASSEMBLY, A10 TO A8	20400	05005-0043
N12	1250-0921	0	1	CONNECTOR-RF SWS FEM UNMTD 50-OHM	20400	1250-0921
	0120-0229	0		CABLE-COAX 50-OHM 20PP/FT	20400	0120-0229
	05005-0044	0	1	CABLE ASSEMBLY, A10 TO A10 (027C)	20400	05005-0044
	0120-0229	0		CABLE-COAX 50-OHM 20PP/FT	20400	0120-0229
N13	05005-0045	0	1	CABLE ASSEMBLY, A10 TO A9	20400	05005-0045
	1250-0921	0		CONNECTOR-RF SWS FEM UNMTD 50-OHM	20400	1250-0921
	0120-0229	0		CABLE-COAX 50-OHM 20PP/FT	20400	0120-0229
	05005-0046	0	1	CABLE ASSEMBLY, A10 TO A10 (027C)	20400	05005-0046
N14	1250-0921	0	1	CONNECTOR-RF SWS FEM UNMTD 50-OHM	20400	1250-0921
	0120-0229	0		CABLE-COAX 50-OHM 20PP/FT	20400	0120-0229
	05005-0045	0	1	CABLE ASSEMBLY, A3 TO A8	20400	05005-0045
	1250-0921	0		CONNECTOR-RF SWS FEM UNMTD 50-OHM	20400	1250-0921
N15	0120-0229	0		CABLE-COAX 50-OHM 20PP/FT	20400	0120-0229
	05005-0046	0	1	CABLE ASSEMBLY, REAR PANEL TO A13	20400	05005-0046
	1250-0030	2	0	NUT-RF CONNECTOR BNC1, 502 LI, 00210	02600	31-2125-2
	1250-0031	3	0	CONTACT-RF CONN SERIES BNC1 FEMALE	02600	31-2109
N16	1250-0921	0	1	CONNECTOR-RF SWS FEM UNMTD 50-OHM	20400	1250-0921
	0120-0229	0		CABLE-COAX 50-OHM 20PP/FT	20400	0120-0229
	05005-0047	0	1	CABLE ASSEMBLY, FRONT PANEL TO A13	20400	05005-0047
	1250-0030	2	0	NUT-RF CONNECTOR BNC1, 502 LI, 00210	02600	31-2125-2
N17	1250-0031	3	0	CONTACT-RF CONN SERIES BNC1 FEMALE	02600	31-2109
	1250-0921	0	1	CONNECTOR-RF SWS FEM UNMTD 50-OHM	20400	1250-0921
	0120-0229	0		CABLE-COAX 50-OHM 20PP/FT	20400	0120-0229
	05005-0048	0	1	CABLE ASSEMBLY, A1 TO FRONT PANEL	20400	05005-0048
N18	1250-0030	2	0	NUT-RF CONNECTOR BNC1, 502 LI, 00210	02600	31-2125-2
	1250-0031	3	0	CONTACT-RF CONN SERIES BNC1 FEMALE	02600	31-2109
	1250-0921	0	1	CONNECTOR-RF SWS FEM UNMTD 50-OHM	20400	1250-0921
	0120-0229	0		CABLE-COAX 50-OHM 20PP/FT	20400	0120-0229
N19	05005-0049	0	1	CABLE ASSEMBLY, A9 TO B5	20400	05005-0049
	0120-0229	0		CABLE-COAX 50-OHM 20PP/FT	20400	0120-0229
N20	05005-0050	0	1	SAME AS N19, USE PREFIX N20	20400	05005-0050
N21	05005-0050	0	1	CABLE ASSEMBLY, A9 TO B5	20400	05005-0050
	0120-0229	0		CABLE-COAX 50-OHM 20PP/FT	20400	0120-0229
XA1			0	NOT ASSIGNED		
XA2	1251-0160	7	0	CONNECTOR-PC EDGE 15-CONT/ROW 1-ROW	20400	1251-0160
XA3			0	NOT ASSIGNED		
XA4	1251-0160	7	0	CONNECTOR-PC EDGE 15-CONT/ROW 1-ROW	20400	1251-0160
XA5			0	NOT ASSIGNED		
XA6	1251-0160	7	0	CONNECTOR-PC EDGE 15-CONT/ROW 1-ROW	20400	1251-0160
XA7			0	NOT ASSIGNED		
XA8	1251-0160	7	0	CONNECTOR-PC EDGE 15-CONT/ROW 1-ROW	20400	1251-0160
XA9	1251-0160	7	0	CONNECTOR-PC EDGE 15-CONT/ROW 1-ROW	20400	1251-0160
XA10			0	NOT ASSIGNED		
XA11	1251-0160	7	0	CONNECTOR-PC EDGE 15-CONT/ROW 1-ROW	20400	1251-0160
XA12			0	NOT ASSIGNED		
XA13			0	NOT ASSIGNED		
XA14	1251-0160	7	0	CONNECTOR-PC EDGE 15-CONT/ROW 1-ROW	20400	1251-0160
XA15	1251-0160	7	0	CONNECTOR-PC EDGE 15-CONT/ROW 1-ROW	20400	1251-0160
MISCELLANEOUS PARTS						
	1251-0159	4	1	CONNECTOR-PC EDGE 15-CONT/ROW 2-ROWS	20400	1251-0159
	1251-0214	2	1	CONNECTOR 9-PIN F D SERIES	20400	1251-0214
	5020-0176	0	1	INSULATOR FOR SNAP-ON PINS	20400	5020-0176
	5000-0766	0	1	HANDLE ASSEMBLY (LIGHT GRAY)	20400	5000-0766
	05001-0091	0	1	CABLE ASSEMBLY, POWER	20400	05001-0091

See introduction to this section for ordering information  
\*Indicates factory selected value

Table 6-2. Replaceable Parts (Continued)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
	05000-0001	0	1	COVER, FIELD DIAL	20400	05000-0001
	05000-0010	0	1	DECK, R.V.F.R.	20400	05000-0010
	05000-0010	4	1	DECK, MAIN	20400	05000-0010
	05000-0017	2	1	DECK, OSCILLATOR	20400	05000-0017
	05000-0027	3	1	CLAMP, R.V.F.R.	20400	05000-0027
	05000-0001	3	1	PAD, CLAMP	20400	05000-0001
	05000-0010	0	1	DOOR, FRONT	20400	05000-0010
				CABINET PARTS		
1	05000-0730	0	1	SIDE FRAME ASSY	20400	05000-0730
2	05000-0001	1	1	COVER, TOP	20400	05000-0001
3	05000-0000	0	1	COVER, BOTTOM	20400	05000-0000
4	05000-0000	3	1	PANEL, FRONT	20400	05000-0000
5	05000-0000	0	1	PANEL, REAR	20400	05000-0000
6	05000-0017	0	1	PLATE, LEFT PANEL	20400	05000-0017
7	05000-0700	0	2	HANDLE ASSEMBLY (LIGHT GRAY)	20400	05000-0700
8	05000-0222	0	1	HANDLE ASSEMBLY (DIE)	20400	05000-0222
9	05000-0707	0	1	FOOT ASSEMBLY	20400	05000-0707
10	05000-0001	0	1	TRIM STRIP	20400	05000-0001
11	05000-0770	0	1	KIT/RACK MOUNT, SM (LIGHT GRAY)	20400	05000-0770
A1Z	05000-0001	0	1	RUBIDIUM VAPOR FREQUENCY REFERENCE FACTORY REPAIR ONLY. FOR REPLACEMENT ORDER HP PART NO. 05000-0071 REPLACEMENT R.V.F.R. KIT.	20400	05000-0001
	05000-0070	0	1	CABLE ASSEMBLY TO HARMONIC GENERATOR	20400	05000-0070
	05000-0001	0	1	CABLE ASSEMBLY, HARMONIC GENERATOR TO MULTI. & SOLAR CELL TO SIGNAL AMPL.	20400	05000-0001
	05000-0001	0	1	CABLE ASSEMBLY TO DECK	20400	05000-0001
A1ZC1	0100-0000	1	1	CAPACITOR-FDTRM 5000PF ±0.5% 50V	13095	0100-0000
A1ZA1	05000-0000	1	1	BOARD ASSEMBLY, LAMP OSCILLATOR PART OF A1ZAI LAMP ASSEMBLY	20400	05000-0000
A1ZAI C1	0100-0003	0	1	CAPACITOR-FXD 0.01UF ±0.5% 200VDC CER	20400	0100-0003
A1ZAI C2	0100-0100	1	1	CAPACITOR-FXD 110PF ±0.5% 200VDC MICA	20400	0100-0100
A1ZAI C3	0100-0200	0	1	CAPACITOR-FXD 11PF ±0.5% 200VDC CER 00-10	20400	0100-0200
A1ZAI C4	0100-0207	1	1	CAPACITOR-FXD 3.99PF ±0.5% 200VDC CER	20400	0100-0207
A1ZAI CR1	1901-0000	0	1	DIODE-STARISTOR 30V 100MA DO-7	20400	1901-0000
A1ZAI L2	0100-0112	2	2	COIL-MLD 0.7UM 100 G33 1.050N, 376LS-NOM	20400	0100-0112
A1ZAI L3	0100-0112	2	2	COIL-MLD 0.7UM 100 G33 1.050N, 376LS-NOM	20400	0100-0112
A1ZAI Q1	1050-0300	1	1	TRANSISTOR NPN 2N3553 50 TO-18 PDSM	01920	2N3553
A1ZAI R1	0090-3000	0	1	RESISTOR 1.5K 1% 5W P TC00±100	20400	0090-3000
A1ZAI R2	0707-0701	1	1	RESISTOR 2W 2% 125M P TC00±100	20400	C4-1/8-70-2001-0
A1ZAI R3	0707-0300	2	1	RESISTOR 10 1% 125M P TC00±100	20400	C4-1/8-70-10R0-0
A1ZAR	05000-0000	0	1	TUNER ASSEMBLY, CAVITY	20400	05000-0000
	05000-0000	0	1	LAMP AND COIL ASSEMBLY PART OF A1ZAR LAMP & COIL ASSEMBLY	20400	05000-0000
	05000-2010	0	1	SUPPORT, LAMP	20400	05000-2010
A1ZAR C01	05000-0000	0	1	LAMP	20400	05000-0000
A1ZAR	05000-0000	0	1	OVEN ASSEMBLY NOT RECOMMENDED FOR FIELD REPAIR	20400	05000-0000

See introduction to this section for ordering information  
\*Indicates factory selected value

Table 6-3. Option 002 and 003 Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
AP	05065-0022	0	1	OPTION 002 & 003 BOARD ASSEMBLY, CHARGER	20480	05065-0022
APC1	0150-0052	1	1	CAPACITOR-FXD .05UF +-2% 400VDC CER	20480	0150-0052
APC2	0150-0049	1	2	CAPACITOR-FXD 20UF+75-10% 50VDC AL	20280	300206050CC2
APC3	0150-0049	1	1	CAPACITOR-FXD 20UF+75-10% 50VDC AL	20280	300206050CC2
APC4	0150-0047	7	1	CAPACITOR-FXD 47UF+-10% 35VDC TA	20280	1500474X0392
APC5	0150-0121	5	1	CAPACITOR-FXD .1UF +-50-20% 50VDC CER	20480	0150-0121
APCR1	1901-0020	5	5	DIODE-PWR RECT 400V 750MA DO-29	20480	1901-0020
APCR2	1901-0020	5	5	DIODE-PWR RECT 400V 750MA DO-29	20480	1901-0020
APCR3	1901-0020	5	5	DIODE-PWR RECT 400V 750MA DO-29	20480	1901-0020
APCR4	1901-0020	5	5	DIODE-PWR RECT 400V 750MA DO-29	20480	1901-0020
APCR5	1901-0020	5	5	DIODE-PWR RECT 400V 750MA DO-29	20480	1901-0020
APCR6	1902-3070	5	1	DIODE-ZNR 4.22V 5% DO-7 PDS,4W TC=,0322	20480	1902-3070
APCR7	1902-3290	1	1	DIODE-ZNR 31.6V 5% DO-7 PDS,4W TC=,0743	20480	1902-3290
APCR8	1000-0003	0	1	TRANSISTOR-SCB 3MSB TC-72 VRRM=0	02500	3450
APCR9	1902-3172	0	1	DIODE-ZNR 11V 2% DO-7 PDS,4W TC=,062X	20480	1902-3172
APCR10				DELETED		
APCR11	1902-3224	1	1	DIODE-ZNR 17.0V 5% DO-7 PDS,4W TC=,067X	20480	1902-3224
APCR12				DELETED		
APCR13	1901-0200	5	1	DIODE-PWR RECT 100V 1.5A	20480	1901-0200
APCR14				DELETED		
APCR15	1902-3104	0	1	DIODE-ZNR 5.02V 5% DO-7 PDS,4W TC=,0142	20480	1902-3104
APCR16	1902-3203	0	1	DIODE-ZNR 14.7V 5% DO-7 PDS,4W TC=,097X	20480	1902-3203
APK1	0490-0475	2	1	RELAY 2C 24VDC-COIL 2A 20VDC	20480	0490-0475
APM1	1054-0003	5	10	TRANSISTOR NPN SI TC-39 PDS=004W	20480	1054-0003
APM2	1054-0003	5	10	TRANSISTOR NPN SI TC-39 PDS=004W	20480	1054-0003
APM3	1054-0003	5	10	TRANSISTOR NPN SI TC-39 PDS=004W	20480	1054-0003
APM4	1054-0003	5	10	TRANSISTOR NPN SI TC-39 PDS=004W	20480	1054-0003
APM5	1054-0003	5	10	TRANSISTOR NPN SI TC-39 PDS=004W	20480	1054-0003
APM6	1054-0003	5	10	TRANSISTOR NPN SI TC-39 PDS=004W	20480	1054-0003
APM7	1054-0003	5	10	TRANSISTOR NPN SI TC-39 PDS=004W	20480	1054-0003
APM8	1054-0003	5	10	TRANSISTOR NPN SI TC-39 PDS=004W	20480	1054-0003
APM9	1054-0003	5	10	TRANSISTOR NPN SI TC-39 PDS=004W	20480	1054-0003
APM10	1054-0003	5	10	TRANSISTOR NPN SI TC-39 PDS=004W	20480	1054-0003
APM11	1054-0003	5	10	TRANSISTOR NPN SI TC-39 PDS=004W	20480	1054-0003
APM12	1054-0001	1	1	TRANSISTOR PNP SI TC-39 PDS=004W	20480	1054-0001
APM13	1054-0024	0	1	TRANSISTOR PNP 3N235A SI TC-5 PDS=10	04713	24234
APM14	1054-0020	0	1	TRANSISTOR NPN SI TC-6 PDS=5W	20480	1054-0020
APM15	1054-0003	5	10	TRANSISTOR NPN SI TC-39 PDS=004W	20480	1054-0003
APN1	0757-0930	0	1	RESISTOR 1.0K 2% .125W F TC=+-100	20540	C4-1/8-TC-1001-G
APN2	0757-0935	1	3	RESISTOR 20K 2% .125W F TC=+-100	20540	C4-1/8-TC-2002-G
APN3	0757-0907	1	2	RESISTOR 200 2% .125W F TC=+-100	20540	C4-1/8-TC-201-G
APN4	0757-0905	0	1	RESISTOR 20K 2% .125W F TC=+-100	20540	C4-1/8-TC-2002-G
APN5	0757-0972	0	2	RESISTOR 100K 2% .125W F TC=+-100	20540	C4-1/8-TC-1002-G
APN6	0757-0911	7	1	RESISTOR 300 2% .125W F TC=+-100	20540	C4-1/8-TC-301-G
APN7	0757-0920	7	1	RESISTOR 1.0K 2% .125W F TC=+-100	20540	C4-1/8-TC-1001-G
APN8	0757-0905	0	1	RESISTOR 20K 2% .125W F TC=+-100	20540	C4-1/8-TC-2002-G
APN9	0757-0900	4	1	RESISTOR 100 2% .125W F TC=+-100	20540	C4-1/8-TC-101-G
APN10	0757-0908	0	7	RESISTOR 10K 2% .125W F TC=+-100	20540	C4-1/8-TC-1002-G
APN11	0757-0940	0	1	RESISTOR 10K 2% .125W F TC=+-100	20540	C4-1/8-TC-1002-G
APN12	0727-0004	0	1	RESISTOR 5 1% .5W CF TC=+-300	20480	0727-0004
APN13	0603-0305	0	1	RESISTOR 3.0 5% .25W FC TC=+400/+500	01121	C0305
APN14	0757-0940	0	1	RESISTOR 10K 2% .125W F TC=+-100	20540	C4-1/8-TC-1002-G
APN15						
APN16	0757-0940	0	1	RESISTOR 10K 2% .125W F TC=+-100	20540	C4-1/8-TC-1002-G
APN17	0757-0926	0	1	RESISTOR 1.0K 2% .125W F TC=+-100	20540	C4-1/8-TC-1001-G
APN18	0757-0931	1	1	RESISTOR 2K 2% .125W F TC=+-100	20540	C4-1/8-TC-2001-G
APN19	0757-0928	0	1	RESISTOR 10K 2% .125W F TC=+-100	20540	C4-1/8-TC-1002-G
APN20	0757-0940	0	1	RESISTOR 10K 2% .125W F TC=+-100	20540	C4-1/8-TC-1002-G
APN21	0757-0940	0	1	RESISTOR 10K 2% .125W F TC=+-100	20540	C4-1/8-TC-1002-G
APN22	0757-0907	1	1	RESISTOR 200 2% .125W F TC=+-100	20540	C4-1/8-TC-201-G
APN23	0757-0200	1	1	RESISTOR 9.09K 1% .125W F TC=+-100	19701	MF4C1/8-TC-9091-F
APN24	0757-0920	2	1	RESISTOR 1K 2% .125W F TC=+-100	20540	C4-1/8-TC-1001-G
APN25	0757-0947	4	1	RESISTOR 10.0K 1% .125W F TC=+-100	20540	C4-1/8-TC-1002-F
APN26	0757-0943	0	1	RESISTOR 11K 1% .125W F TC=+-100	20540	C4-1/8-TC-1102-F
APN27	0757-0940	0	1	RESISTOR 10K 2% .125W F TC=+-100	20540	C4-1/8-TC-1002-G
APN28	0757-0941	3	2	RESISTOR 5.1K 2% .125W F TC=+-100	20540	C4-1/8-TC-5101-G
APN29	0757-0941	3	1	RESISTOR 5.1K 2% .125W F TC=+-100	20540	C4-1/8-TC-5101-G
APN30	0757-0972	0	1	RESISTOR 100K 2% .125W F TC=+-100	20540	C4-1/8-TC-1002-G
APN31	0757-0934	4	1	RESISTOR 2.7K 2% .125W F TC=+-100	20540	C4-1/8-TC-2701-G
APN32						
APN33	2110-0504	0	1	FUSEHOLDER BODY 12A MAX FOR UL	M9027	031.1057
APN34	2110-0505	0	1	FUSEHOLDER CAP 12A MAX FOR UL	20480	2110-0505
APN35	2110-0509	3	1		20480	2110-0509

See introduction to this section for ordering information  
\*Indicates factory selected value

Model 5065A  
Circuit Diagrams, Theory, and Maintenance

Table 6-3. Option 002 and 003 Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
	05005-0020	1	1	HOLDER, BATTERY	20400	05005-0020
BT1	05005-0002	3	1	CABLE ASSEMBLY, BATTERY	20400	05005-0002
B03	2140-0025	4	1	LAMP-INCAND 327 20VDC 40MA T-1-3/4-SULB	20400	2140-0025
	1420-0000	1	1	BATTERY 20.2V 1.25A-HR NI-CD H-FLX	20400	1420-0000
S0	3101-1100	0	1	SWITCH-TOL SUBMIN DPDT SA 115VAC	20400	3101-1100
	1450-0110	3	1	LAMPHOLDER AMB-TP .332-DIA	20400	1450-0110

See introduction to this section for ordering information  
\*Indicates factory selected value

Table 6-4. Option 001 Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
AS	05005-0000	9	1	FOR OPTION 001 ONLY MODULE ASSEMBLY, DIGITAL DIVIDER (SERIES 1000)	20400	05005-0000
ASJA	1250-0102	6	1	CONNECTOR-RF BNC FEM 8SL-HOLE-PR 50-OHM	20400	1250-0102
ASJR	3101-1100	1	1	SWITCH-PS SPDT NOM .25A BLK-GTN	02300	903
ASJZ	05005-0050	5	1	CABLE ASSEMBLY, 1 PPS	20400	05005-0050
	1250-0250	2	2	CONTACT-RF COAX SERIES BNC FEMALE	20400	31-2100
	1250-0251	0	3	CONNECTOR-RF SMB FEM UNMTD 50-OHM	20400	1250-0251
	0120-0220	0	5	CABLE-COAX 50-OHM 29PP/FT	20400	0120-0220
ASJZ	05005-0050	0	1	CABLE ASSEMBLY, CLOCK MOVEMENT	20400	05005-0050
	0120-0101	0	1	CABLE-SMLD 20AWG 3-CONDY J6X-JKY	20400	0120-0101
	0020-0170	0	1	INSULATOR FOR SNAP-ON PINS	20400	0020-0170
ASJZ	05005-0053	4	1	CABLE ASSEMBLY, DIGITAL DIVIDER	20400	05005-0053
	1250-0250	2	1	NUT-RF CONNECTER ENCL 502 LI 00010	02000	21-2125-2
	1250-0251	3	3	CONTACT-RF COAX SERIES BNC FEMALE	02000	31-2100
	1250-0250	3	4	CONNECTOR-RF SMB FEM UNMTD 50-OHM	20400	1250-0250
	1250-0200	0	4	CONT-RF COAX SUBMIN SERIES	20400	1250-0200
	1250-0201	7	4	INSULATOR-RF COAX SUBMIN; .040 ID	20400	1250-0201
	1250-0203	0	4	NASHER-RF COAX SUBMIN; .100 ID	20400	1250-0203
	1250-0204	0	4	NASHER-RF COAX SUBMIN; .112 ID	20400	1250-0204
	1250-0205	1	4	NUT-RF COAX SUBMIN; FOR 50 OHM	20400	1250-0205
	0120-0220	0	9	CABLE-COAX 50-OHM 29PP/FT	20400	0120-0220
ASJZ	05005-0052	2	1	CABLE ASSEMBLY, DIGITAL DIVIDER	20400	05005-0052
	1250-0250	3	3	CONTACT-RF COAX SERIES BNC FEMALE	20400	1250-0250
	1250-0200	0	3	CONT-RF COAX SUBMIN SERIES	20400	1250-0200
	1250-0201	7	4	INSULATOR-RF COAX SUBMIN; .040 ID	20400	1250-0201
	1250-0202	0	4	FERRULE-RF COAX SUBMIN; .065 ID	20400	1250-0202
	1250-0203	0	4	NASHER-RF COAX SUBMIN; .100 ID	20400	1250-0203
	1250-0204	0	4	NASHER-RF COAX SUBMIN; .112 ID	20400	1250-0204
	1250-0205	1	4	NUT-RF COAX SUBMIN; FOR 50 OHM	20400	1250-0205
	0120-0220	0	9	CABLE-COAX 50-OHM 29PP/FT	20400	0120-0220
ASJZ	05005-0050	0	1	CABLE ASSEMBLY, DIGITAL DIVIDER	20400	05005-0050
	1250-0250	3	3	CONTACT-RF COAX SERIES BNC FEMALE	20400	1250-0250
	1250-0200	0	3	CONT-RF COAX SUBMIN SERIES	20400	1250-0200
	1250-0201	7	4	INSULATOR-RF COAX SUBMIN; .040 ID	20400	1250-0201
	1250-0202	0	4	FERRULE-RF COAX SUBMIN; .065 ID	20400	1250-0202
	1250-0203	0	4	NASHER-RF COAX SUBMIN; .100 ID	20400	1250-0203
	1250-0204	0	4	NASHER-RF COAX SUBMIN; .112 ID	20400	1250-0204
	1250-0205	1	4	NUT-RF COAX SUBMIN; FOR 50 OHM	20400	1250-0205
	0120-0220	0	9	CABLE-COAX 50-OHM 29PP/FT	20400	0120-0220
ASJZ	05005-0053	5	1	CABLE ASSEMBLY, DIGITAL DIVIDER	20400	05005-0053
	1250-0250	3	3	CONTACT-RF COAX SERIES BNC FEMALE	20400	1250-0250
	1250-0200	0	3	CONT-RF COAX SUBMIN SERIES	20400	1250-0200
	1250-0201	7	4	INSULATOR-RF COAX SUBMIN; .040 ID	20400	1250-0201
	1250-0202	0	4	FERRULE-RF COAX SUBMIN; .065 ID	20400	1250-0202
	1250-0203	0	4	NASHER-RF COAX SUBMIN; .100 ID	20400	1250-0203
	1250-0204	0	4	NASHER-RF COAX SUBMIN; .112 ID	20400	1250-0204
	1250-0205	1	4	NUT-RF COAX SUBMIN; FOR 50 OHM	20400	1250-0205
	0120-0220	0	9	CABLE-COAX 50-OHM 29PP/FT	20400	0120-0220
AS MISCELLANEOUS PARTS						
	05001-0022	0	1	PANEL, CENTER	20400	05001-0022
	05001-0013	0	1	BRACKET, DIGITAL DIVIDER	20400	05001-0013
	05005-0020	5	1	BRACKET, SWITCH MOUNTING	20400	05005-0020
	05005-0040	7	1	CHASSIS, DIGITAL DIVIDER	20400	05005-0040
	05005-0030	0	1	COVER, DIGITAL DIVIDER	20400	05005-0030
	05005-2000	1	1	PLATE, END, DIGITAL DIVIDER	20400	05005-2000
AS41	05005-0027	0	1	BOARD ASSEMBLY, ADAPTER	20400	05005-0027
	05005-0020	7	1	BOARD ASSEMBLY, INTERCONNECTING	20400	05005-0020
AS41J1	1250-0257	1	0	CONNECTOR-RF SMB M PC 50-OHM	20400	1250-0257
AS41J2	1250-0257	1	0	CONNECTOR-RF SMB M PC 50-OHM	20400	1250-0257
AS41J3	1250-0257	1	0	CONNECTOR-RF SMB M PC 50-OHM	20400	1250-0257
AS41J4	1250-0257	1	0	CONNECTOR-RF SMB M PC 50-OHM	20400	1250-0257
AS4Z	05001-0014	0	1	BOARD ASSEMBLY, MASTER CLOCK (SERIES 1040)	20400	05001-0014
AS4ZC1	0150-0121	5	2	CAPACITOR-FXD .1UF +50-20% 50VDC CER	20400	0150-0121
AS4ZC2	0150-0093	0	2	CAPACITOR-FXD .01UF +50-20% 100VDC CER	20400	0150-0093
AS4ZC3	0150-0127	2	1	CAPACITOR-FXD .1UF +20% 25VDC CER	20400	0150-0127
AS4ZC4	0150-0100	5	1	CAPACITOR-FXD 2000PF +25% 300VDC MICA	72130	0M15F0250300VDC
AS4ZC5	0150-0121	5	1	CAPACITOR-FXD .1UF +50-20% 50VDC CER	20400	0150-0121
AS4ZC6	0150-0230	0	2	CAPACITOR-FXD 500PF +1% 300VDC MICA	72130	0M15F01F0300VDC
AS4ZC7	0150-0170	5	1	CAPACITOR-FXD 200PF +5% 300VDC MICA	20400	0150-0170
AS4ZC8	0150-0230	0	1	CAPACITOR-FXD 500PF +1% 300VDC MICA	72130	0M15F01F0300VDC
AS4ZC9	0121-0105	4	1	CAPACITOR-V TRMR-CER 9-35PF 200V PC-MTB	52703	304320 9/35PF N650
AS4ZC10	0150-0200	0	1	CAPACITOR-FXD 680PF +5% 300VDC MICA	72130	0M15F01J0300VDC

See introduction to this section for ordering information  
\*Indicates factory selected value





Table 6-4. Option 001 Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
AA2R36	0757-0931	1		RESISTOR 2K 2% .125W P TC00+-100	24540	C0-1/8-T0-2001-6
AA2R37	0757-0931	1		RESISTOR 2K 2% .125W P TC00+-100	24540	C0-1/8-T0-2001-6
AA2R38	0757-0931	1		RESISTOR 2K 2% .125W P TC00+-100	24540	C0-1/8-T0-2001-6
AA2R39	0757-0931	1		RESISTOR 2K 2% .125W P TC00+-100	24540	C0-1/8-T0-2001-6
AA2R40	0757-0931	1		RESISTOR 2K 2% .125W P TC00+-100	24540	C0-1/8-T0-2001-6
AA2R41	0757-0931	1		RESISTOR 2K 2% .125W P TC00+-100	24540	C0-1/8-T0-2001-6
AA2R42	0757-0931	1		RESISTOR 2K 2% .125W P TC00+-100	24540	C0-1/8-T0-2001-6
AA2R43	0757-0931	1		RESISTOR 2K 2% .125W P TC00+-100	24540	C0-1/8-T0-2001-6
AA2R44	0757-0931	1		RESISTOR 2K 2% .125W P TC00+-100	24540	C0-1/8-T0-2001-6
AA2R45	0757-0931	1		RESISTOR 2K 2% .125W P TC00+-100	24540	C0-1/8-T0-2001-6
AA2R46	0757-0931	1		RESISTOR 2K 2% .125W P TC00+-100	24540	C0-1/8-T0-2001-6
AA2T1	05001-0005	1	1	TRANSFORMER, 1 MHZ - 6 MHZ	20400	05001-0005
AA2T2	05001-0009	1	1	TRANSFORMER, SYNC	20400	05001-0009
AA2Y1	1200-0159	7	1	SOCKET-XTAL 2-COMT MC-6/U DIP-8LGR	20400	1200-0159
AA2Y1	0010-0012	5	1	CRYSTAL-QUARTZ 1.00000 MHZ	20400	0010-0012
AA3	05001-0013	0	1	BOARD ASSEMBLY, PRESET-CLOCK	20400	05001-0013
AA3C1	0140-0190	3	1	CAPACITOR-FXD 150PF +-5% 300VDC MICA	72130	DM15F151J0300NVICR
AA3C2	0140-0191	0	1	CAPACITOR-FXD 50PF +-5% 300VDC MICA	72130	DM15F050J0300NVICR
AA3C3	0140-0190	3	1	CAPACITOR-FXD 150PF +-5% 300VDC MICA	72130	DM15F151J0300NVICR
AA3CR1	1910-0010	0	20	DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR2	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR3	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR4	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR5	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR6	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR7	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR8	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR9	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR10	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR11	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR12	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR13	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR14	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR15	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR16	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR17	1901-0000	1		DIODE-SWITCHING 30V 50MA 2ND DO-35	20400	1901-0000
AA3CR18	1901-0000	1		DIODE-SWITCHING 30V 50MA 2ND DO-35	20400	1901-0000
AA3CR19	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR20	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR21	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR22	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR23	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR24	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR25	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3CR26	1910-0010	0		DIODE-GE 60V 60MA 1US DO-7	20400	1910-0010
AA3IC1	1020-0329	3		IC GATE DTL NAND QUAD 2-INP	01295	8415806H
AA3IC2	1020-0329	3		IC GATE DTL NAND QUAD 2-INP	01295	8415806H
AA3IC3	1020-0329	7		IC CNTR TTL DECD	20400	1020-0329
AA3IC4	1020-0329	7		IC CNTR TTL DECD	20400	1020-0329
AA3IC5	1020-0329	7		IC CNTR TTL DECD	20400	1020-0329
AA3IC6	1020-0329	7		IC CNTR TTL DECD	20400	1020-0329
AA3IC7	1020-0329	7		IC CNTR TTL DECD	20400	1020-0329
AA3IC8	1020-0329	7		IC CNTR TTL DECD	20400	1020-0329
AA3IC9	1020-0000	7	4	IC GATE RTL NOR DUAL 2-INP	00713	MC010G
AA3IC10	1020-0000	7		IC GATE RTL NOR DUAL 2-INP	00713	MC010G
AA3IC11	1020-0000	7		IC GATE RTL NOR DUAL 2-INP	00713	MC010G
AA3IC12	1020-0000	3		IC GATE DTL NAND DUAL 6-INP	01295	8415830H
AA3IC13	1020-0315	1		IC MV DTL MONOSTBL	07203	951MC
AA3IC14	1020-0315	1		IC MV DTL MONOSTBL	07203	951MC
AA3IC15	1020-0315	1		IC MV DTL MONOSTBL	07203	951MC
AA3IC16	1020-0315	1		IC MV DTL MONOSTBL	07203	951MC
AA3IC17	1020-0000	7		IC GATE RTL NOR DUAL 2-INP	00713	MC010G
AA301	1050-0009	1		TRANSISTOR NPN 5I PD=300mW FT=600MHz	00713	24709
AA302	1050-0009	1		TRANSISTOR NPN 5I PD=300mW FT=600MHz	00713	24709
AA303	1050-0009	1		TRANSISTOR NPN 5I PD=300mW FT=600MHz	00713	24709
AA304	1050-0009	1		TRANSISTOR NPN 5I PD=300mW FT=600MHz	00713	24709
AA305	1050-0009	1		TRANSISTOR NPN 5I PD=300mW FT=600MHz	00713	24709
AA306	1050-0009	1		TRANSISTOR NPN 5I PD=300mW FT=600MHz	00713	24709
AA307	1050-0009	1		TRANSISTOR NPN 5I PD=300mW FT=600MHz	00713	24709
AA308	1050-0010	2		TRANSISTOR NPN 5I TC=10 PD=300mW	20400	1050-0010
AA309	1050-0009	1	3	TRANSISTOR NPN 5I PD=300mW FT=600MHz	00713	24709
AA3010	1050-0010	2		TRANSISTOR NPN 5I TC=10 PD=300mW	20400	1050-0010

See Introduction to this section for ordering information  
\*Indicates factory selected value

Table 6-4. Option 001 Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
AS3011	1854-0009	1		TRANSISTOR NPN 2N PD=300mV FT=600MHZ	04713	2N709
AS3012	1854-0010	2		TRANSISTOR NPN 2N TC=10 PD=300mV	28480	1854-0010
AS3013	1854-0003	1		TRANSISTOR NPN 2N PD=300mV FT=600MHZ	04713	2N709
AS3014	1854-0003	5	1	TRANSISTOR NPN 2N TC=10 PD=300mV	28480	1854-0003
AS3015	1854-0009	1		TRANSISTOR NPN 2N PD=300mV FT=600MHZ	04713	2N709
AS3021	0757-0931	1		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3022	0757-0931	1		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3023	0757-0928	6	12	RESISTOR 1.5K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1501-G
AS3024	0757-0928	6		RESISTOR 1.5K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1501-G
AS3025	0757-0935	5	5	RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3026	0757-0931	1		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3027	0757-0931	1		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3028	0757-0931	1		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3029	0757-0928	6		RESISTOR 1.5K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1501-G
AS3030	0757-0928	6		RESISTOR 1.5K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1501-G
AS3031	0757-0935	7		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3032	0757-0931	1		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3033	0757-0931	1		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3034	0757-0931	1		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3035	0757-0928	6		RESISTOR 1.5K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1501-G
AS3036	0757-0928	6		RESISTOR 1.5K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1501-G
AS3037	0757-0935	5		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3038	0757-0931	1		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3039	0757-0931	1		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3040	0757-0931	1		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3041	0757-0928	6		RESISTOR 1.5K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1501-G
AS3042	0757-0928	6		RESISTOR 1.5K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1501-G
AS3043	0757-0935	5		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3044	0757-0931	1		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3045	0757-0931	1		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3046	0757-0931	1		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3047	0757-0931	1		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3048	0757-0928	6		RESISTOR 1.5K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1501-G
AS3049	0757-0928	6		RESISTOR 1.5K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1501-G
AS3050	0757-0931	1		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3051	0757-0931	1		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3052	0757-0917	3		RESISTOR 510 2% .125W F TC=0+-100	24546	C4-1/8-T0-511-G
AS3053	0757-0948	0		RESISTOR 10K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1002-G
AS3054	0757-0928	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1001-G
AS3055	0757-0928	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1001-G
AS3056	0757-0948	0		RESISTOR 10K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1002-G
AS3057	0757-0928	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1001-G
AS3058	0757-0928	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1001-G
AS3059	0757-0928	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1001-G
AS3060	0757-0917	3		RESISTOR 510 2% .125W F TC=0+-100	24546	C4-1/8-T0-511-G
AS3061	0757-0928	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1001-G
AS3062	0757-0928	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1001-G
AS3063	0757-0928	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1001-G
AS3064	0757-0928	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1001-G
AS3065	0757-0917	3		RESISTOR 510 2% .125W F TC=0+-100	24546	C4-1/8-T0-511-G
AS3066	0757-0928	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1001-G
AS3067	0757-0948	0		RESISTOR 10K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1002-G
AS3068	0757-0928	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1001-G
AS3069	0757-0928	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1001-G
AS3070	0757-0917	3		RESISTOR 510 2% .125W F TC=0+-100	24546	C4-1/8-T0-511-G
AS3071	0757-0928	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1001-G
AS3072	0757-0928	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1001-G
AS3073	0757-0928	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1001-G
AS3074	0757-0917	3		RESISTOR 510 2% .125W F TC=0+-100	24546	C4-1/8-T0-511-G
AS3075	0757-0928	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1001-G
AS3076	0757-0948	0		RESISTOR 10K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1002-G
AS3077	0757-0928	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1001-G
AS3078	0757-0928	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1001-G
AS3079	0757-0935	5		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3080	0757-0931	1		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-T0-2001-G
AS3081	0757-0928	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1001-G
AS3082	0757-0928	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-T0-1001-G
AS301	3100-2001	4	1	SWITCH-TUMBLER HZL MOD; BCD WITH ONE	26480	3100-2001
AS44	05061-6152	0	1	BOARD ASSEMBLY, SWITCH CIRCUIT (SERIES 1904)	28480	05061-6152
AS44C1*	0140-0196	3	3	CAPACITOR-FXD 150PF +-5% 300VDC MICA	72136	0M15F151J0200V1CR
AS44Q1	1854-0005	7		TRANSISTOR NPN 2N708 SI TO-18 PD=300mV	04713	2N708
AS44R1	0757-0280	3	1	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
AS44R2	0757-0283	6	1	RESISTOR 2K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2001-F
AS44R3	0757-0442	9	1	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
AS44R4	2100-0896	0	1	RESISTOR-TMR 15K 5% WW TOP-ADJ 1-TRN	28480	2100-0896
AS44UC1	1820-1437	0	1	IC MV TTL LS MONOSTBL DUAL	01295	SN74LS221N

See introduction to this section for ordering information  
\*Indicates factory selected value

Table 6-5. Options 001, 003 Only Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
FOR OPTIONS 001, 003 ONLY						
A10	05065-0005	1	1	MODULE ASSEMBLY, CLOCK POWER SUPPLY (SERIES 1912)	20400	05065-0005
	05065-0055	0	1	CABLE ASSEMBLY, 1 PFB	20400	05065-0055
A10J1	1250-0901	2	2	CONNECTOR-RF 8MB M 8SL-HOLE-PR 50-OMM	20400	1250-0901
A10J2	1250-0901	2	2	CONNECTOR-RF 8MB M 8SL-HOLE-PR 50-OMM	20400	1250-0901
A10J3	1250-0250	2	2	CONNECTOR-RF 8MB M 8SL-HOLE-PR 50-OMM	20400	1250-0250
A10J4	1250-0250	2	2	CONNECTOR-RF 8MB M 8SL-HOLE-PR 50-OMM	20400	1250-0250
A10 MISCELLANEOUS PARTS						
	05009-0119	0	1	TERMINAL-STUD 8SL-PIN PRESS-PTS	20400	05009-0119
	05009-0030	0	1	COVER, POWER SUPPLY	20400	05009-0030
	05009-0040	1	1	CHASSIS, POWER SUPPLY	20400	05009-0040
	05009-2030	0	1	PLATE, POWER SUPPLY	20400	05009-2030
A10A1	05009-0002	0	1	BOARD ASSEMBLY, POWER SUPPLY (NOT FOR REPLACEMENT) FOR REPLACEMENT ORDER NEXT HIGHER ASSY	20400	05009-0002
A10A1C1	0100-0113	0	1	CAPACITOR-FXD 100UF±20-15% 35VDC TA	00001	09F3557
A10A1C2	0100-0007	7	1	CAPACITOR-FXD 07UF±10% 35VDC TA	50200	150D7XK002002
A10A1C3	0100-0102	0	1	CAPACITOR-FXD .022UF ±10% 200VDC POLYE	20400	0100-0102
A10A1C4	0100-0006	3	2	CAPACITOR-FXD .035UF ±10-20% 100VDC CER	20400	0100-0006
A10A1C5	0100-0005	3	3	CAPACITOR-FXD .035UF ±10-20% 100VDC CER	20400	0100-0005
A10A1C6	0100-0008	0	2	CAPACITOR-FXD 100UF±20% 20VDC TA	50200	150D107X002002
A10A1C7	0100-0008	0	2	CAPACITOR-FXD 100UF±20% 20VDC TA	50200	150D107X002002
A10A1C8	0100-0117	2	2	CAPACITOR-FXD 2.7UF±10% 35VDC TA	50200	150D27X002002
A10A1C9	0100-0117	2	2	CAPACITOR-FXD 2.7UF±10% 35VDC TA	50200	150D27X002002
A10A1C10	0100-0003	0	2	CAPACITOR-FXD .01UF ±10-20% 100VDC CER	20400	0100-0003
A10A1C11	0100-0117	2	2	CAPACITOR-FXD 2.7UF±10% 35VDC TA	50200	150D27X002002
A10A1C12	0100-0203	3	1	CAPACITOR-FXD 30PF ±5% 500VDC MICA	72130	015E300J500MVICR
A10A1C13	0100-0127	2	1	CAPACITOR-FXD 1UF ±20% 25VDC CER	20400	0100-0127
A10A1C14	0100-0117	2	2	CAPACITOR-FXD 2.7UF±10% 35VDC TA	50200	150D27X002002
A10A1C15	0100-0170	0	1	CAPACITOR-FXD .07UF ±10-20% 25VDC CER	20400	0100-0170
A10A1C16	0100-0116	1	2	CAPACITOR-FXD 0.1UF±10% 35VDC TA	50200	150D003X003002
A10A1C17	0100-0003	0	0	CAPACITOR-FXD .01UF ±10-20% 100VDC CER	20400	0100-0003
A10A1C18	0100-0003	0	0	CAPACITOR-FXD .01UF±20% 20VDC TA	50200	150D107X002002
A10A1C19	0100-0116	1	1	CAPACITOR-FXD 0.1UF±10% 35VDC TA	50200	150D003X003002
A10A1CR1	1901-0040	1	4	DIODE-SWITCHING 30V 50MA 2MS DC-35	20400	1901-0040
A10A1CR2	1901-0040	0	2	DIODE-PWR RECT 1N4720 100V 1.5A	00713	1N4720
A10A1CR3	1901-0040	0	9	DIODE-PWR RECT 1N4720 100V 1.5A	00713	1N4720
A10A1CR4	1901-0049	0	4	DIODE-PWR RECT 50V 750MA DC-20	20400	1901-0049
A10A1CR5	1901-0049	0	0	DIODE-PWR RECT 50V 750MA DC-20	20400	1901-0049
A10A1CR6	1901-0049	0	0	DIODE-PWR RECT 50V 750MA DC-20	20400	1901-0049
A10A1CR7	1901-0049	0	0	DIODE-PWR RECT 50V 750MA DC-20	20400	1901-0049
A10A1CR8	1902-0330	3	1	DIODE-ZNR 13.3V 5% DC-7 PDM 4m TC±.050%	20400	1902-0330
A10A1CR9	1901-0040	1	1	DIODE-SWITCHING 30V 50MA 2MS DC-35	20400	1901-0040
A10A1CR10	1901-0040	1	1	DIODE-SWITCHING 30V 50MA 2MS DC-35	20400	1901-0040
A10A1CR11	1902-0330	0	2	DIODE-ZNR 10V 5% DC-15 PDM1N TC±.06%	20400	1902-0330
A10A1CR12	1902-0330	0	0	DIODE-ZNR 10V 5% DC-15 PDM1N TC±.06%	20400	1902-0330
A10A1CR13				DELETED		
A10A1CR14				DELETED		
A10A1CR15	1901-0040	1	1	DIODE-SWITCHING 30V 50MA 2MS DC-35	20400	1901-0040
A10A1L2	9140-0150	2	1	COIL-MLD 53.0UM 1% 0.55 .150X.375LG-NOM	20400	9140-0150
A10A1L3	9140-0029	0	1	COIL-MLD 100UM 10% 0.39 .250X.315LG-NOM	20400	9140-0029
A10A1S1	1050-0020	0	3	TRANSISTOR NPN 8I TC-8 PD=25W	20400	1050-0020
A10A1S2	1050-0020	0	0	TRANSISTOR NPN 8I TC-8 PD=25W	20400	1050-0020
A10A1S3	1050-0001	1	1	TRANSISTOR PNP 8I TC-39 PD=600mW	20400	1050-0001
A10A1S4	1050-0023	0	1	TRANSISTOR NPN 8I TC-18 PD=300mW	20400	1050-0023
A10A1S5	1050-0020	0	0	TRANSISTOR NPN 8I TC-8 PD=25W	20400	1050-0020
A10A1S6	1050-0003	5	1	TRANSISTOR NPN 8I TC-39 PD=600mW	20400	1050-0003
A10A1S7	1050-0003	7	1	TRANSISTOR NPN 2N708 8I TC-18 PD=300mW	00713	2N708
A10A1S8	1050-0007	2	1	TRANSISTOR NPN 2N1725 8I TC-5 PD=800mW	01295	2N1725
A10A1S9	1050-0039	7	2	TRANSISTOR NPN 2N1053B 8I TC-39 PDM1N	01920	2N1053B
A10A1S10	1050-0039	7	2	TRANSISTOR NPN 2N1053B 8I TC-39 PDM1N	01920	2N1053B
A10A1S11				DELETED		
A10A1S12				DELETED		
A10A1R1	0757-0942	0	1	RESISTOR 5.0K 2% .125W P TC0±100	20400	C4-1/8-T0-5001-0
A10A1R2	0757-0940	0	0	RESISTOR 100 2% .125W P TC0±100	20400	C4-1/8-T0-101-0
A10A1R3	0757-0940	0	0	RESISTOR 100 2% .125W P TC0±100	20400	C4-1/8-T0-101-0
A10A1R4	0757-0944	5	1	RESISTOR 50 1% .125W P TC0±100	20400	C4-1/8-T0-5000-0
A10A1R5	0757-0929	7	1	RESISTOR 1.0K 2% .125W P TC0±100	20400	C4-1/8-T0-1001-0

See introduction to this section for ordering information  
\*Indicates factory selected value

Model 5065A  
Circuit Diagrams, Theory, and Maintenance

Table 6-5. Options 001, 003 Only Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A10A1R6	0757-0910	0	2	RESISTOR 390 2K .125W F TC00-100	2450b	CA-1/8-T0-201-G
A10A1R7	0757-0900	0	2	RESISTOR 100 2K .125W F TC00-100	2450b	CA-1/8-T0-101-G
A10A1R8	0757-0900	0	2	RESISTOR 100 2K .125W F TC00-100	2450b	CA-1/8-T0-101-G
A10A1R9	0757-0340	0	2	RESISTOR 10 1K .125W F TC00-100	2450b	CA-1/8-T0-10R0-F
A10A1R10	0757-0923	0	1	RESISTOR 10K 2K .125W F TC00-100	2450b	CA-1/8-T0-100Z-G
A10A1R11	0757-0910	0	2	RESISTOR 390 2K .125W F TC00-100	2450b	CA-1/8-T0-201-G
A10A1R12	0757-0900	0	2	RESISTOR 100 2K .125W F TC00-100	2450b	CA-1/8-T0-101-G
A10A1R13	2100-1773	2	1	RESISTOR-TRM 1K 5K 2W TOP-ADJ 1-TRM	28400	2100-1773
A10A1R14	0757-0340	0	2	RESISTOR 10 1K .125W F TC00-100	2450b	CA-1/8-T0-10R0-F
A10A1R15	0757-0907	1	3	RESISTOR 200 2K .125W F TC00-100	2450b	CA-1/8-T0-201-G
A10A1R16	0757-0920	0	2	RESISTOR 680 2K .125W F TC00-100	2450b	CA-1/8-T0-081-G
A10A1R17	0757-0920	0	2	RESISTOR 680 2K .125W F TC00-100	2450b	CA-1/8-T0-081-G
A10A1R18	0757-0920	0	2	RESISTOR 100 2K .125W F TC00-100	2450b	CA-1/8-T0-101-G
A10A1R19	0757-0907	1	1	RESISTOR 200 2K .125W F TC00-100	2450b	CA-1/8-T0-201-G
A10A1R20	0757-0907	1	1	RESISTOR 200 2K .125W F TC00-100	2450b	CA-1/8-T0-201-G
A10A1T1	9100-2440	7	1	TRANSFORMER TRANSFORMER, EP=10VCT	28400	9100-2440
A10A1T2	05061-0010	2	1	TRANSFORMER	28400	05061-0010

See introduction to this section for ordering information  
\*Indicates factory selected value

Table 6-5. Options 001, 003 Only Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A10	05001-0125	3	1	CLOCK DISPLAY ASSEMBLY (OPT 001 ONLY) (SERIES 1740)	20400	05001-0125
A10	05001-0130	6	1	CLOCK DISPLAY ASSEMBLY (OPT 003 ONLY) (SERIES 1740)	20400	05001-0130
	05001-0137	8	1	CABLE ASSEMBLY, CLOCK DISPLAY	20400	05001-0137
	1200-0063	2	2	CONNECTOR-SSL CONT SMT .04-IN-08C-02 4ND	20400	1200-0063
	1250-0102	3	1	CONNECTOR-RF SMC FEM 06L-HOLE-FR 50-OMN	20400	1250-0102
A10B1	3101-0052	1	1	SWITCH-PS SPST-NO NOM .25A 250VAC BLK-07H	02109	061
	5020-0170	2	2	INSULATOR FOR SNAP-ON PINS	20400	5020-0170
	05001-2110	4	1	PANFL, CENTER (OPT. 001 ONLY)	20400	05001-2110
	05001-2119	4	1	PANFL, CENTER (OPT. 003 ONLY)	20400	05001-2119
	05001-2120	6	1	PLATE, CENTER	20400	05001-2120
	05002-20102	7	1	WINDOW, DISPLAY	20400	05002-20102
A10A1	05001-0140	7	1	REGULATOR/DRIVE (SERIES 1740)	20400	05001-0140
A10A1C1	0100-2027	5	4	CAPACITOR-FXD 47UF+100-10K 40VDC AL	20400	0100-2027
A10A1C2	0100-2027	5	5	CAPACITOR-FXD 47UF+100-10K 40VDC AL	20400	0100-2027
A10A1C3	0100-0570	5	6	CAPACITOR-FXD .1UF +-20% 50VDC CER	20400	0100-0570
A10A1C4	0100-0570	5	1	CAPACITOR-FXD 3.3UF+-20% 15VDC TA	50100	150D33X0015A2
A10A1C5	0100-0570	7	3	CAPACITOR-FXD .01UF +-20% 100VDC CER	20400	0100-0570
A10A1C6	0100-0570	5	1	CAPACITOR-FXD .1UF +-20% 50VDC CER	20400	0100-0570
A10A1C7	0100-0570	2	1	CAPACITOR-FXD 4700PF +-20% 100VDC CER	20400	0100-0570
A10A1C8	0100-0291	3	1	CAPACITOR-FXD 1UF+-10K 35VDC TA	50209	150D10X0035A2
A10A1C9	0100-0570	5	1	CAPACITOR-FXD .1UF +-20% 50VDC CER	20400	0100-0570
A10A1C10	0100-2027	5	1	CAPACITOR-FXD 47UF+100-10K 40VDC AL	20400	0100-2027
A10A1C11	0100-0570	5	1	CAPACITOR-FXD .1UF +-20% 50VDC CER	20400	0100-0570
A10A1C12	0100-0570	7	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	20400	0100-0570
A10A1C13	0100-0570	5	1	CAPACITOR-FXD .1UF +-20% 50VDC CER	20400	0100-0570
A10A1C14	0100-2027	5	1	CAPACITOR-FXD 47UF+100-10K 40VDC AL	20400	0100-2027
A10A1C15	0100-0570	5	1	CAPACITOR-FXD .1UF +-20% 50VDC CER	20400	0100-0570
A10A1C16	1002-2230	3	1	DIODE-ZNR 10.0V 5K DO-7 POW.4W TC=+073E	20400	1002-2230
A10A1C17	1001-0040	1	2	DIODE-SWITCHING 30V 30MA 2MS DO-35	20400	1001-0040
A10A1C18	1002-1000	1	1	DIODE-ZNR 1W3000 0.5V 5K POW.05W TC=+200E	04713	1002-1000
A10A1C19	1001-0040	1	1	DIODE-SWITCHING 30V 30MA 2MS DO-35	20400	1001-0040
A10A1C20	1001-0040	0	1	DIODE-PWR RECT 1N4734 100V 1A 200MS	04713	1N4734
A10A1F1	2110-0099	4	2	FUSE 1A 125V FAST-BLD .201X.093	20400	2110-0099
A10A1F2	2110-0099	4	2	FUSE 1A 125V FAST-BLD .201X.093	20400	2110-0099
A10A1L1	09100-0237	2	1	COIL 400UM 10K 1.120-NOM 8RF01MHZ	20400	09100-0237
A10A1L2	0100-0237	1	1	COIL 400UM 10K 1.120-NOM 8RF01MHZ	20400	0100-0237
A10A101	1050-0215	1	2	TRANSISTOR NPN 01 PD=350mW FT=300MHZ	04713	2N3904
A10A102	1050-0215	1	1	TRANSISTOR NPN 01 PD=350mW FT=300MHZ	04713	2N3904
A10A103	1050-0210	0	1	TRANSISTOR PNP 2N2905A 01 TO-18 PD=400mW	04713	2N2905A
A10A104	1050-0030	2	1	TRANSISTOR PNP 01 PD=310mW FT=250MHZ	20400	1050-0030
A10A105	0757-0442	0	10	RESISTOR 10K 1% .125W F TC=0+-100	24500	C0-1/8-T0-1002-F
A10A106	0757-0200	3	2	RESISTOR 1K 1% .125W F TC=0+-100	24500	C0-1/8-T0-1001-F
A10A107	0757-0442	0	2	RESISTOR 100K 1% .125W F TC=0+-100	24500	C0-1/8-T0-1003-F
A10A108	0757-0442	0	0	RESISTOR 10K 1% .125W F TC=0+-100	24500	C0-1/8-T0-1002-F
A10A109	0757-0442	0	0	RESISTOR 10K 1% .125W F TC=0+-100	24500	C0-1/8-T0-1002-F
A10A110	0757-0442	0	0	RESISTOR 10K 1% .125W F TC=0+-100	24500	C0-1/8-T0-1002-F
A10A111	0757-0442	0	1	RESISTOR 1.5K 1% .125W F TC=0+-100	24500	C0-1/8-T0-1001-F
A10A112	0757-0442	0	1	RESISTOR 100K 1% .125W F TC=0+-100	24500	C0-1/8-T0-1003-F
A10A113	0757-0442	0	1	RESISTOR 10K 1% .125W F TC=0+-100	24500	C0-1/8-T0-1002-F
A10A114	0757-0442	0	1	RESISTOR 10K 1% .125W F TC=0+-100	24500	C0-1/8-T0-1002-F
A10A115	0757-0330	2	1	RESISTOR 1K 1% .25W F TC=0+-100	24500	C0-1/4-T0-1001-F
A10A116	0757-0200	5	1	RESISTOR 1K 1% .125W F TC=0+-100	24500	C0-1/8-T0-1001-F
A10A117	0757-0200	3	1	RESISTOR 1K 1% .125W F TC=0+-100	24500	C0-1/8-T0-1001-F
A10A118	0090-0012	7	1	RESISTOR 1 1% .125W F TC=0+-100	20400	0090-0012
A10A101	3101-0070	0	1	SWITCH-TGL SUBMIN SPDT 2A 250VAC	20400	3101-0070
A10A102	3101-0057	1	2	SWITCH-PS SPST-NO NOM .5A 120VAC	20400	3101-0057
A10A103	3101-0057	1	2	SWITCH-PS SPST-NO NOM .5A 120VAC	20400	3101-0057
A10A104	1020-0100	0	1	IC TIMER TTL MONO/ASTBL	04713	MC1455P1
A10A105	1020-0420	0	1	IC 3524 MODULATOR 10-DIP-C	01295	003224J
				A10A1 MISCELLANEOUS PARTS		
	1251-3955	0	1	WASHER-FL MTLG NO. 6 .150-IN-ID	20400	1251-3955
	3050-0107	0	1	BRACKET, SWITCH	20400	3050-0107
	05001-2005	1	1	SPACER, RIVET-04	20400	05001-2005
	05001-2037	2	1	SPACER, RIVET-04	20400	05001-2037

See Introduction to this section for ordering information  
\*Indicates factory selected value

Table 6-5. Options 001, 003 Only Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A19A2	05061-0145	5	1	BOARD ASSEMBLY, DISPLAY (SERIES 1740)	20400	05061-0145
A19A3C1	0100-3079	7		CAPACITOR-720 .01UF +-20% 100VDC CER	20400	0100-3079
A19A3D01	1990-0452	0	0	DISPLAY-NUM-BEG 1-CHAR .3-IN	20400	5002-7731, CAT C-E
A19A3D02	1990-0452	0	0	DISPLAY-NUM-BEG 1-CHAR .3-IN	20400	5002-7731, CAT C-E
A19A3D03	1990-0452	0	0	DISPLAY-NUM-BEG 1-CHAR .3-IN	20400	5002-7731, CAT C-E
A19A3D04	1990-0452	0	0	DISPLAY-NUM-BEG 1-CHAR .3-IN	20400	5002-7731, CAT C-E
A19A3D05	1990-0452	0	0	DISPLAY-NUM-BEG 1-CHAR .3-IN	20400	5002-7731, CAT C-E
A19A3D06	1990-0452	0		DISPLAY-NUM-BEG 1-CHAR .3-IN	20400	5002-7731, CAT C-E
A19A3E1	1053-0050	0	0	TRANSISTOR PNP SI PD=300MHZ FT=200MHZ	07203	032240
A19A3E2	1053-0050	0	0	TRANSISTOR PNP SI PD=300MHZ FT=200MHZ	07203	032240
A19A3E3	1053-0050	0	0	TRANSISTOR PNP SI PD=300MHZ FT=200MHZ	07203	032240
A19A3E4	1053-0050	0	0	TRANSISTOR PNP SI PD=300MHZ FT=200MHZ	07203	032240
A19A3E5	1053-0050	0	0	TRANSISTOR PNP SI PD=300MHZ FT=200MHZ	07203	032240
A19A3E6	1053-0050	0		TRANSISTOR PNP SI PD=300MHZ FT=200MHZ	07203	032240
A19A3F1	0090-7200	5	1	RESISTOR 100K 1% .05W P TC00+-100	20540	C3-1/8-70-1003-G
A19A3F2	0090-7204	7	7	RESISTOR 2.15K 1% .05W P TC00+-100	20540	C3-1/8-70-2151-G
A19A3F3	0090-7204	7		RESISTOR 2.15K 1% .05W P TC00+-100	20540	C3-1/8-70-2151-G
A19A3F4	0090-7204	7		RESISTOR 2.15K 1% .05W P TC00+-100	20540	C3-1/8-70-2151-G
A19A3F5	0090-7204	7		RESISTOR 2.15K 1% .05W P TC00+-100	20540	C3-1/8-70-2151-G
A19A3F6	0090-7204	7		RESISTOR 2.15K 1% .05W P TC00+-100	20540	C3-1/8-70-2151-G
A19A3G6	0090-7204	7		RESISTOR 2.15K 1% .05W P TC00+-100	20540	C3-1/8-70-2151-G
A19A3G7	0090-7204	7		RESISTOR 2.15K 1% .05W P TC00+-100	20540	C3-1/8-70-2151-G
A19A3G8	0090-7204	7		RESISTOR 2.15K 1% .05W P TC00+-100	20540	C3-1/8-70-2151-G
A19A3G9	0090-7202	7	7	RESISTOR 30.3 1% .05W P TC00+-100	20540	C3-1/8-700-3033-G
A19A3R10	0090-7202	7		RESISTOR 30.3 1% .05W P TC00+-100	20540	C3-1/8-700-3033-G
A19A3R11	0090-7202	7		RESISTOR 30.3 1% .05W P TC00+-100	20540	C3-1/8-700-3033-G
A19A3R12	0090-7202	7		RESISTOR 30.3 1% .05W P TC00+-100	20540	C3-1/8-700-3033-G
A19A3R13	0090-7202	7		RESISTOR 30.3 1% .05W P TC00+-100	20540	C3-1/8-700-3033-G
A19A3R14	0090-7202	7		RESISTOR 30.3 1% .05W P TC00+-100	20540	C3-1/8-700-3033-G
A19A3R15	0090-7202	7		RESISTOR 30.3 1% .05W P TC00+-100	20540	C3-1/8-700-3033-G
A19A3R16	1010-0055	5	1	NETWORK-RES 4-21P10.0K OHM X 0	20400	1010-0055
A19A3R17	1010-0101	2	1	NETWORK-RES 7-21P10.0K OHM X 0	01037	C0P07C07-103J
A19A3U1	1020-0120	0	1	IC MISC PMOS	27014	MM53134(70+)
A19A3U2	1020-0023	7	1	TRANSISTOR ARRAY	01920	CA1001E
A19A3U3	1020-1100	0	1	IC SFR CMOS NON-INV HEX	01920	CD4050AF
	1200-0490	5	1	SOCKET, IC 16-PIN	20400	1200-0490

See introduction to this section for ordering information.  
\*Indicates factory selected value

Table 6-6. Manufacturers Code List

Mfr No.	Manufacturer Name	Address	Zip Code
H9027	SCHURTER A G H	LUZERN, SW	
01002	GE CO INDUSTRIAL & POWER CAP DEPT	HUDSON FALLS, NY	12839
01221	ALLEN-BRADLEY CO	MILWAUKEE, WI	53204
01295	TEXAS INSTR INC SEMICOND CMPNT DIV	DALLAS, TX	75222
0192B	RCA CORP SOLID STATE DIV	SOMERVILLE, NJ	08876
02660	AMPHENOL SALES DIV OF BUNKER-RAMO	BROADVIEW, IL	60153
03508	GE CO SEMICONDUCTOR PROD DEPT	SYRACUSE, NY	13201
03888	KDI PYROFILM CORP	WHIPPANY, NJ	07981
04713	MOTOROLA SEMICONDUCTOR PRODUCTS	PHOENIX, AZ	85062
06001	GE CO ELEK CAP & BAT PROD DEPT	IRMO, SC	29063
07263	FAIRCHILD SEMICONDUCTOR DIV	MOUNTAIN VIEW, CA	94042
18324	SIGNETICS CORP	SUNNYVALE, CA	94086
19701	MEPCO/ELECTRA CORP	MINERAL WELLS, TX	76067
20940	MICRO-OHM CORP	EL MONTE, CA	91731
24546	CORNING GLASS WORKS (BRADFORD)	BRADFORD, PA	16701
27014	NATIONAL SEMICONDUCTOR CORP	SANTA CLARA, CA	95051
28480	HEWLETT-PACKARD CO CORPORATE HQ	PALO ALTO, CA	94304
32997	BOURNS INC TRIMPOT PROD DIV	RIVERSIDE, CA	92507
33095	SPECTRUM CONTROL INC	FAIRVIEW, PA	16415
52763	STETTNER-TRUSH INC	CAZENOVIA, NY	13035
53021	SANGAMO ELECTRIC CO	SPRINGFIELD, IL	62702
56289	SPRAGUE ELECTRIC CO	NORTH ADAMS, MA	01247
72136	ELECTRO MOTIVE CORP SUB IEC	WILLIMANTIC, CT	06226
75042	TRW INC PHILADELPHIA DIV	PHILADELPHIA, PA	19108
82389	SWITCHCRAFT INC	CHICAGO, IL	60630
84411	TRW CAPACITOR DIV	OGALLALA, NE	69153
91637	DALE ELECTRONICS INC	COLUMBUS, NE	68601



**BACK DATING  
MANUAL  
CHANGES**

**SECTION VII**  
**MANUAL CHANGES AND OPTIONS**

**7-1. MANUAL CHANGES**

7-2. This manual applies directly to Model 5065A Rubidium Vapor Frequency Standard having serial number prefix 1104.

**7-3. NEWER INSTRUMENTS**

7-4. As changes are made, newer instruments may have serial prefix numbers not listed in this manual. The manuals for these instruments will be supplied with an additional "manual changes" sheet containing the required information; contact the nearest Hewlett-Packard Sales and Service Office for information if this sheet is missing.

**7-5. OLDER INSTRUMENTS**

7-6. This manual with changes listed in Table 7-1 applies to Model 5065A Rubidium Vapor Frequency Standard having serial number prefix 968 and below.

**7-7. OPTIONS**

7-8. There is one option available; Option 001 Time Standard. Some instruments were Option 002 or Option 003.

a. Option 002: (Standby Power Supply) Add Figure 7-1 and Table 7-2 to manual. Perform manual changes listed in Paragraph 7-5. Applicable to instrument serial prefix 916 and below.

b. Option 003: (Combines Option 001, 002) Add Figure 7-1, and Table 7-2 to manual. Perform manual changes listed in Paragraph 7-5.

**7-9. Option 001 Time Standard**

7-10. For Option 001, see Figures 8-13 to 8-15.

7-11. Three changes that alter a particular assembly series number but not the instrument series number are located at the end of this section. They are:

Change A: (Option 001 A16 Series 1532 Only)

Change B: (Option 001 A5 Series 1840 Only)

Change C: (Option 001 A5 Series 723 Only)

**CHANGE 1 (820-):**

Figure 8-18, A8 Phase Detector Assembly:  
Delete R50 10K resistor. Make appropriate changes to Section VI tables

Table 7-1. Manual Changes

Serial Prefix No.	Make Manual Changes
820	1 through 24
836	2 through 24
840	3 through 24
848	4 through 24
852	5 through 24
902	6 through 24
916	7 through 24
928	8 through 24
940	9 through 24
956	10 through 24
956	11 through 24
964	12 through 24
968	13 through 24
1104	14 through 24
1220	15 through 24
1320	16 through 24
1340	17 through 24
1416	18 through 24
1420	19 through 24
1532A00631 and Below	20 through 24
1532A00632 through	
1532A00790	21 through 24
1736	22 through 24
1820	23 through 24
1840	24 only.

Figure 8-16, A6 1 MHz Divider Assembly:  
Change L2 to 17  $\mu$ h 9140-0107. Make appropriate changes to Section VI tables

Figure 8-25, A13 Buffer Amplifier Assembly:  
Change A13A1R12 to 910 ohm 0757-0923.  
Change A13A1Q1, Q2, Q3 to 1854-0092 (2N3563). Make appropriate changes to Section VI tables.

Figure 7-2, A2 Battery Charger Assembly (Option 002):  
Change CR7 to 31.6 V 1902-3290. Make appropriate changes to Section VII tables.

Figure 8-27, A15 Voltage Regulator Assembly:  
Change R16 to 100 ohms 0757-0900. Make appropriate changes to Section VI tables.

Figure 8-6, (Wiring Diagram 2 of 3):  
Delete R7 from A17(6) and ground  
Make appropriate changes to Section VI tables.  
Delete R4. Make appropriate changes to Section VI tables.

Figure 8-11, A3 Multiplier Assembly:  
Delete L1, 2, 4, 3 from J1, J2, J3, J5 BNC's.  
Add jumper wires in place of deleted coils.  
Make appropriate changes to Section VI tables.

Figure 7-2, A2 Battery Charger (Option 002):  
Change BT1 to 24.0 V, 1420-0009.  
Make appropriate changes to Section VII tables.

**CHANGES 2 (838-):**

Figure 8-17, A7 AC Amplifier Assembly:  
Change A7A1C9 to 1.0 mf 0160-0127.  
Change A7A1R17 to 11K-0757-0949.  
Change A7A1R18 to 10K-0757-0948.  
Make appropriate changes to Section VI tables.

Figure 8-8, A1 Synthesizer Assembly:  
Delete C47, CR41.  
Add R96, 1K-0757-0924 in place of CR41.  
Change Q17, Q19 to 1854-0005 (2N708).  
Make appropriate changes to Section VI tables.

**CHANGE 3 (840-):**

Table 6-2, A3 60 MHz Multiplier Assembly:  
Change A3A1T1 to 00105-8003.

Table 6-2, A13 Buffer Amplifier Assembly:  
Change A13A1T1 to 00105-8003.

Figure 7-1, A2 Battery Charger Assembly (Option 002):  
Change Q5, Q6 to 1854-0003.  
Change CR11 to 1902-3224 (17.8 V).  
Change CR15 to 1902-3104 (5.62 V).  
Add CR14 between CR15-R27 junction and Q11 base (anode to A11).  
Make appropriate changes to Table 7-2.

**CHANGE 4 (848-):**

Figure 8-11, A3 Multiplier Assembly:  
Change Q1 to 1854-0092.  
Change Q2, Q5, Q6, Q8 to 1855-0081.  
Change Q4 to 1854-0060.  
Change Q7 to 1853-0015.  
Change C3 to 91 pf.  
Make appropriate changes to Section VI tables.

Figure 8-25, A13 Buffer Amplifier:  
Change C7 to 100 pf. Make appropriate changes to Section VI tables.

Figure 8-9, A1 Synthesizer Assembly:  
Delete R97, 98, 99. Make appropriate changes to Section VI tables.

**CHANGE 5 (852-):**

Figure 8-27, A15 Voltage Regulator Assembly:  
Delete C12.  
Make appropriate changes to Section VI tables.

**CHANGE 6 (902-):**

Figure 8-9, A1 Synthesizer Assembly:  
Change R19 to R:Fixed:2K. Make appropriate changes to Section VI tables

Table 6-2, A14 Logic Assembly:  
Change CR13 to 1884-0003.

Table 7-2, A2 Battery Charger Assembly (Option 002):  
Change CR8 to 1884-0003.

**CHANGE 7 (916-):**

Page 6-7, 6-8, Table 6-2, A4:  
Replace A4 portion of Table 6-1 with Table 7-3.

Page 8-18, 8-19, Figure 8-12:  
Replace A4 related text, Component locator and Figure 8-12 with A4, 100 kHz text in Section VII and with Figures 7-3, 7-4, and 7-5.

Page 7-4, Table 7-2:  
Change for A2 Battery Charger, Option 002 Board Assembly only (Series No. 916 to 904).

Page 7-4, Table 7-2:  
Change A2R12 to 0811-2586, R:Fxd w.w. 910 OHMS, 3%, 2W.  
Change A2R13 to 0811-2587, R:Fxd w.w. 4.1 OHMS, 3%, 2W.  
Change A2R18 to 0757-0948, R:Fxd met film, 10K OHM, 2%, 1/4W.



Page 6-23, Table 6-3, A12:  
Change 05065-6074 to 5065-6030.

Page 6-9, Table 6-2, A7:  
Change A7J1 to 1250-0258.

Page 6-5, Table 6-2, A3:  
Change A3, 0565-6078 to 05065-6008.  
Change A3J4 to 1250-0258.  
Change A3J7 to 1250-0258.  
Change A3J8 to 1250-0258.

Page 6-16, Table 6-2:  
Change W4 to 05065-6035.

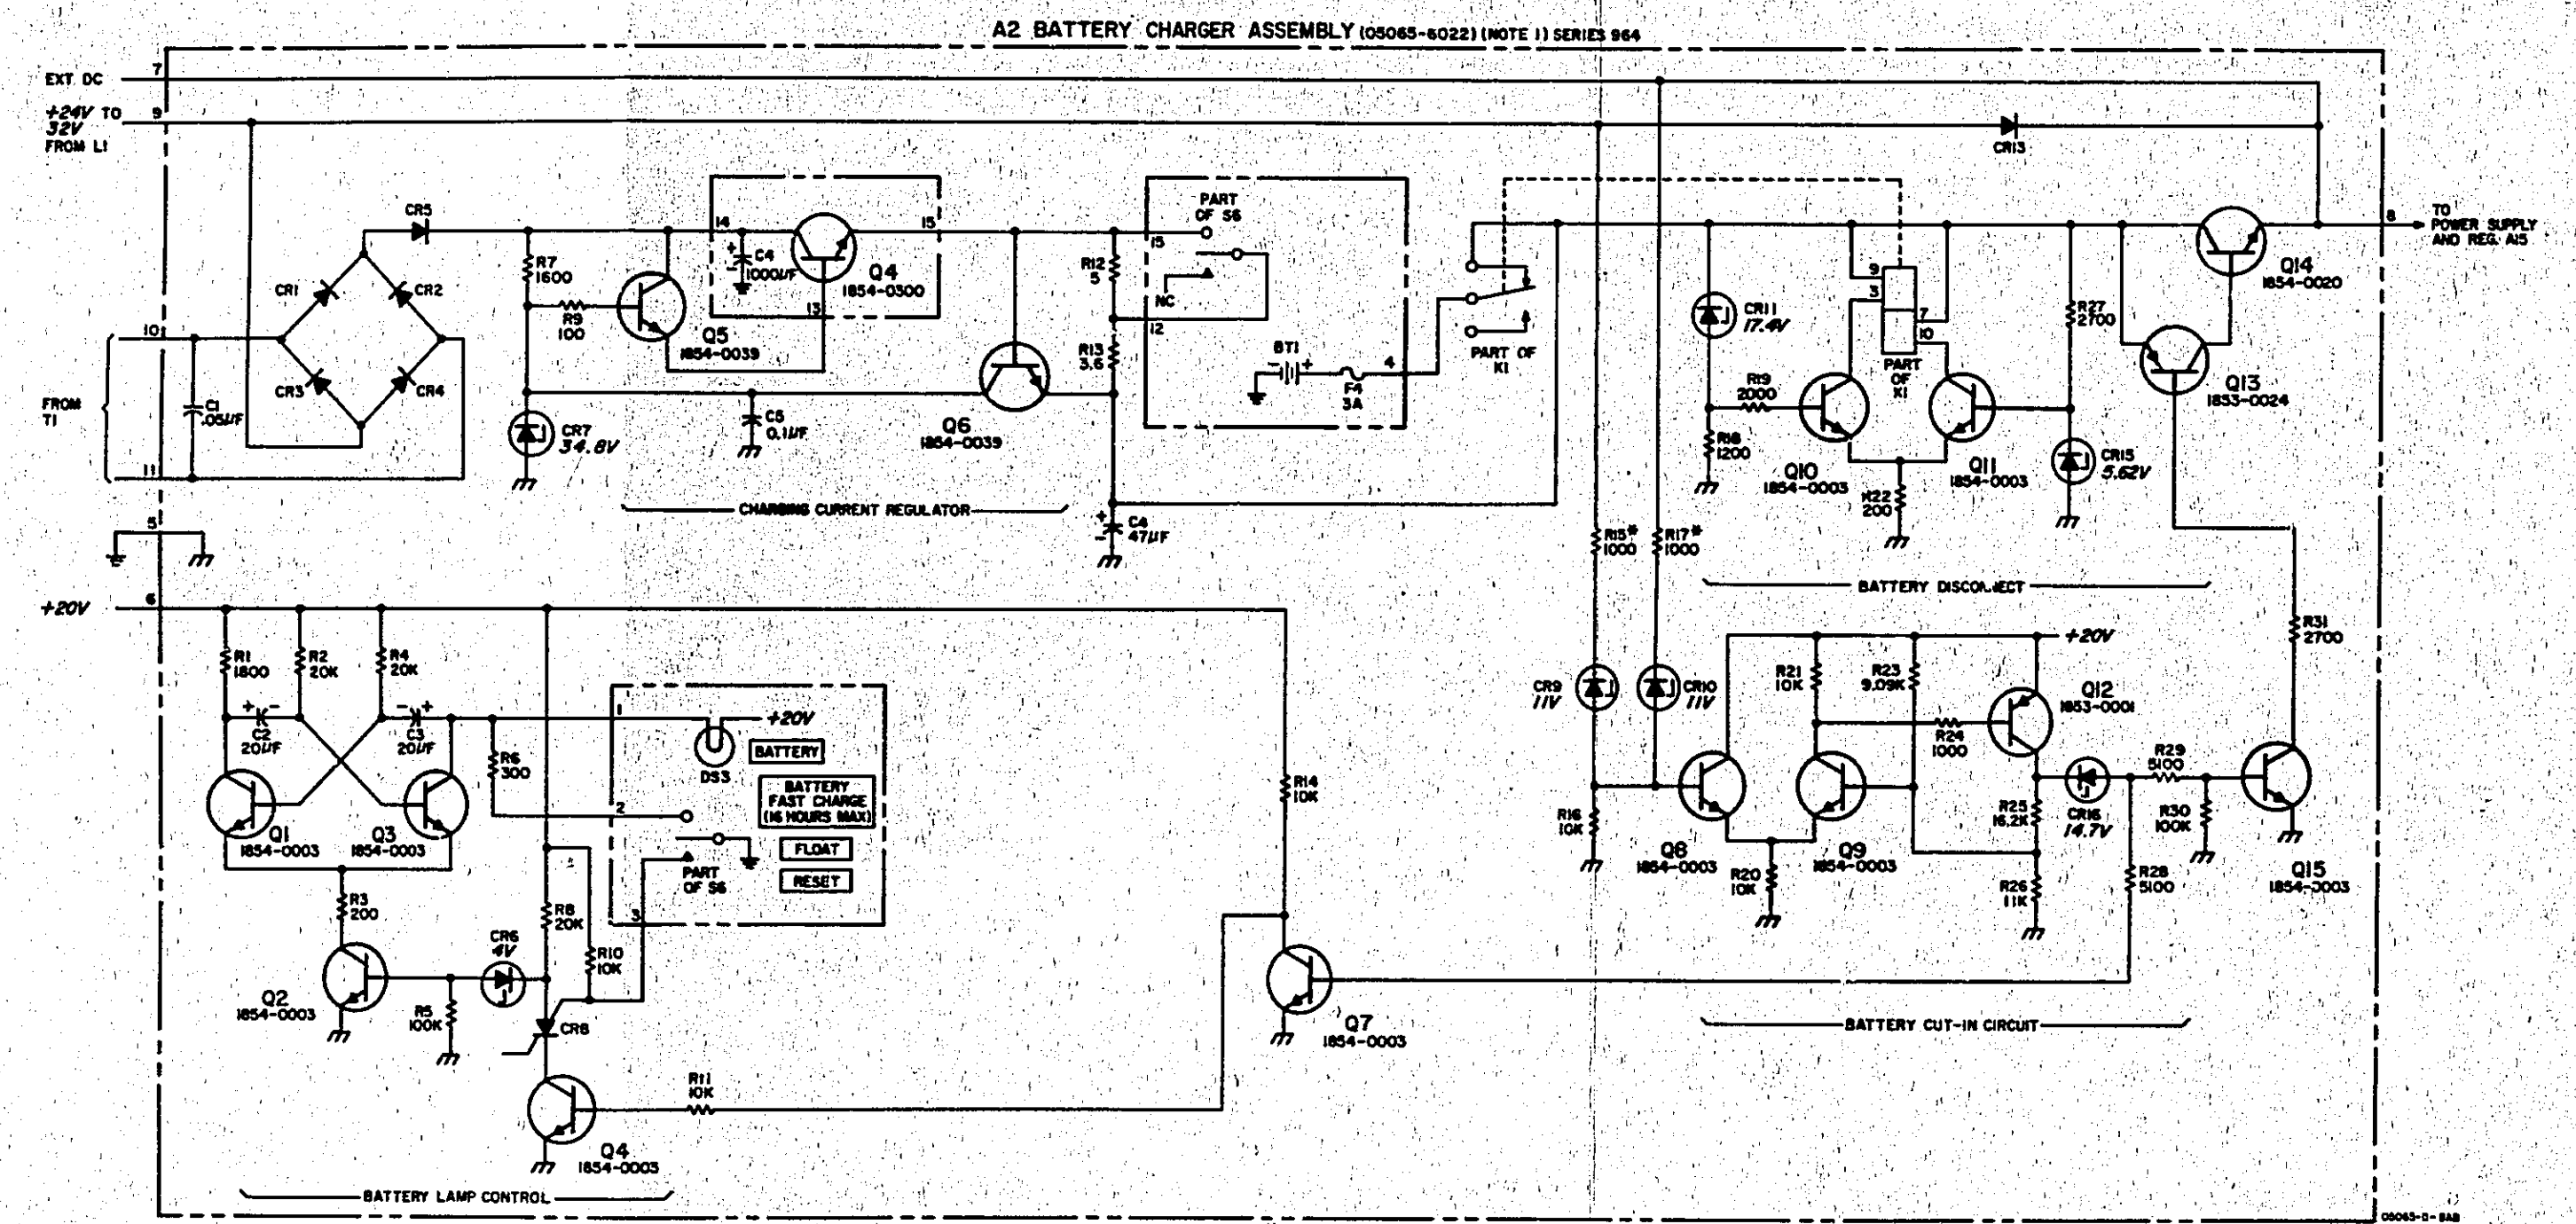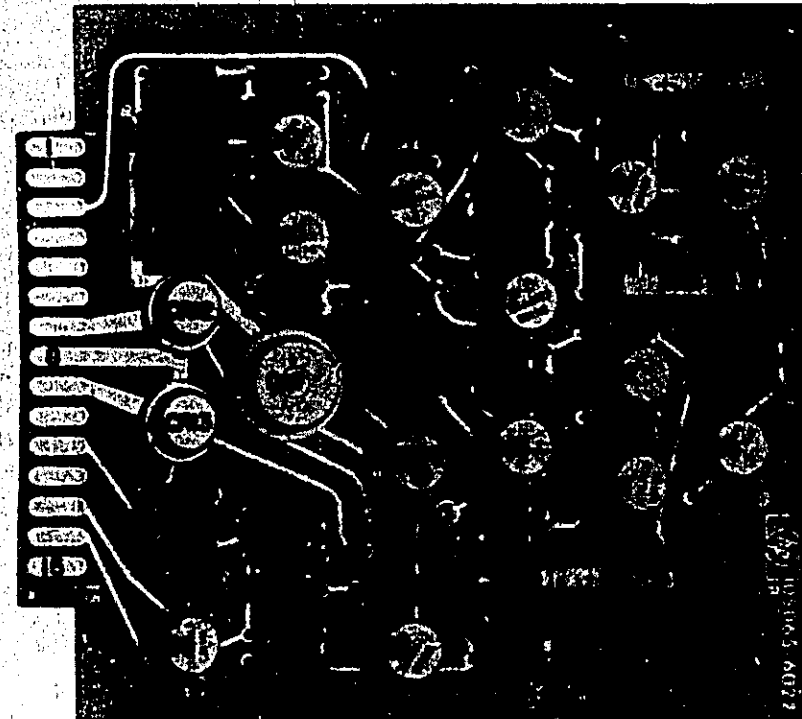Figure 7-1. Battery Charger Assy A2 Option 002



**NOTES**

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS; CAPACITANCE IN PICOFARADS;
3. ASTERISK (\*) INDICATES SELECTED COMPONENT, AVERAGE VALUES SHOWN

**REFERENCE DESIGNATIONS**

NO PREFIX	A2
BT1	C1-5
C4	CR-16
DS3	K1
F4	Q1-15
Q4	R1-31
S6	S1

DELETED:  
CR12,14

Figure 7-2. A2 Battery Charger Assembly

**CHANGE 8 (928-):**

- Page 8-5, Figure 8-4:  
Delete T.E.D device and P17/J17 of A12 and connections going to Q1, A15(5).
- Page 8-7, Figure 8-6:  
Delete CR3, P17/J17 and T.E.D. device.  
Connect Q1 emitter directly to A15(5) and label wire WHT-BLK-BLU.
- Page 8-10, UNIT THEORY OF OPERATION:  
Replace "PRESET DIVIDER TEXT" and "POWER SUPPLY" text with Paragraph 7-11 through 7-16, and Synthesizer Timing Diagram and Thumbwheel Switch Section.
- Page 8-11, Figure 8-8:  
Replace Figure 8-8 with Figure 7-6.
- Page 8-13, Figure 8-9:  
Replace Figure 8-9, component locator and waveforms with Figures 7-7, 7-8, and 7-9.
- Page 8-15, Figure 8-10:  
Replace Figure 8-10 and component locator with Figure 7-10 and 7-11.
- Page 8-43, Figure 8-14:  
Delete T.E.D device and P17/J17 Information from A12 R.V.F.R.
- Pages 6-3, 6-4, 6-5, Table 6-2:  
Replace A1 portion of Table 6-2 with Table 7-4.
- Page 5-15:  
Add Tables 7-5, 7-6, 7-7, and 7-8.
- Page 6-15, Table 6-2:  
Delete CR3, J17.

**CHANGE 9 (940):**

- Page 8-45, Figure 8-25, A12 RVFR Assembly:  
Change A12A1C3 to 10 pf.  
Change A12A1C4 to 5.6 pf.
- Page 6-23, Table 6-3, A12 Parts List:  
Change A12A1C3 to 0160-2199, C:Fxd Mica 10 pf 5%.  
Change A12A1C4 to 0160-2251, C:Fxd Cer. 5.6 -.25 pf Vdc w.

**CHANGE 10 (956):**

- Page 8-29, Figure 8-17, A7 Assembly:  
Replace Figure 8-17 with Figure 7-13, Page 7-31.  
Replace A7 text on Page 8-28 with Page 7-27.  
Replace text and component locator on Page 8-29 with Page 7-29 (includes Figure 7-12).
- Pages 6-9, 6-10, Table 6-2, A7 Parts List:  
Replace A7 parts list on those pages with contents of Table 7-9, Pages 7-33 and 7-35.

**CHANGE 11 (960):**

- Page 1-2, Table 1-1:  
Change AC POWER CABLE to HP Part No. 05061-6091.
- Page 1-2, Table 1-2:  
Change Standby Power Supply description test line to 115/230 Vac  $\pm 10\%$  50-400 Hz.
- Page 2-2, Table 2-2:  
Add CLOCK, 4 pin male (J7); Connector HP Part 1251-0128; Mating Connector HP Part No. 1251-0127; Mating Connector Description 4-pin Male plug.  
Change AC LINE, 3-pin make jack (J8) Connector HP Part No. to 1251-0146 and Mating Connector HP Part No. to 1251-0257.
- Page 6-15, Table 6-2:  
Change C5A, B to 0160-3043, C:Fxd CER 2 x .005 UF 250V  
Add J6, 1250-0140, Connector BNC.  
Add J7, 1251-0128, Connector female 4 contact.  
Change J8 to 1251-0146, Connector 3-pin male.  
Add F3, Fuse 2110-0001, Fuse: 1A, 250V.  
F3, Fuseholder 1400-0084, Extractor Post-type.  
Change F1 to 2110-0001.  
Change DS1 to 1450-0113, Lampholder: Red Lens.  
Change S1 to 3101-0033.
- Page 6-16, Table 6-2:  
Add W8 05065-6039, Cable Assy: Rear Panel to A4.  
Add W8 1250-0050, Nut: Clamp.  
Add W8 1250-0051, Pin: Connector.  
Add W8 8120-0229, Cable: Coax 50-OHM, RG-188A/U.  
Change ac power cable (under misc.) to 114B-16A.
- Page 7-5, Table 7-2:  
Change A3DS3 to 1450-0113, Lampholder: Red Lens.
- Page 8-3, Figure 8-2, Block Diagram:  
Change DS1, Integrator Limit color to Red.  
Change DS3, Battery Lamp color to Red.  
Change DS2, Continuous Operation Lamp color to Amber.  
Add Following J6 Figure to A4 Block:




Table 7-2. Battery Charger Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A2	05065-6068	1	STANDBY POWER SUPPLY	28480	05065-6068
A2			FOR OPTION 02 ONLY		
A2	05065-0026	1	HOLDER: BATTERY	28480	05065-0026
A2	05065-6062	1	CABLE ASSY: BATTERY	28480	05065-6062
A2	05065-6022	1	BOARD ASSY: CHARGER	28480	05065-6022
A2	05065-2034	1	BOARD: BLANK PC	28480	05065-2034
A2B1	1420-0066	1	BATTERY: RECHARGEABLE 25.2VOLTS	28480	1420-0066
A2C1	0150-0052	3	CIFXD CER 0.05 UF +80-20% 50VDCM	56289	33C17A
A2C2	0180-0049	2	CIFXD ELECT 20 UF +75-10% 50VDCM	56289	300206G050CC2-DSM
A2C3	0180-0049	1	CIFXD ELECT 20 UF +75-10% 50VDCM	56289	300206G050CC2-DSM
A2C4	0180-0097	1	CIFXD TANT. 47 UF 10% 35VDCM	56289	1500476X903552-DYS
A2C5	0130-0121	1	CIFXD CER 0.1 UF +80-20% 50VDCM	56289	5C50815-CML
A2CR1	1901-0026	5	DIODE: SILICON 0.75A 200PIV	04713	5R1358-8
A2CR2	1901-0026	1	DIODE: SILICON 0.75A 200PIV	04713	5R1358-8
A2CR3	1901-0026	1	DIODE: SILICON 0.75A 200PIV	04713	5R1358-8
A2CR4	1901-0026	1	DIODE: SILICON 0.75A 200PIV	04713	5R1358-8
A2CR5	1901-0026	1	DIODE: SILICON 0.75A 200PIV	04713	5R1358-8
A2CR6	1902-3070	1	DIODE: BREAKDOWN 4.22V 5% DIODE BREAKDOWN: SILICON 31.4V 5%	04713	5Z10939-74
A2CR7	1902-3290	1	DIODE BREAKDOWN: SILICON 31.4V 5%	28480	1902-3290
A2CR8	1884-0003	1	SWITCH: SILICON CONTROLLED	03508	3N58
A2CR9	1902-3172	2	DIODE BREAKDOWN: 11.0V 2%	28480	1902-3172
A2CR10	1902-3172	2	DIODE BREAKDOWN: 11.0V 2%	28480	1902-3172
A2CR11	1902-3224	1	DIODE: BREAKDOWN 17.0V 5% 400MM	28480	1902-3224
A2CR12	1901-0200	2	DIODE: SILICON 100 PIV 3A	02735	1M4998
A2CR13	1901-0200	2	DIODE: SILICON 100 PIV 3A	02735	1M4998
A2CR14	1901-0025	1	DIODE: SILICON 100MA/1V	07263	FD 2387
A2CR15	1902-3104	1	DIODE: BREAKDOWN 5.62V 5%	04713	5Z10939-110
A2CR16	1902-3203	1	DIODE BREAKDOWN: SILICON 14.7V 5%	28480	1902-3203
A2D53	2140-0025	1	LAMP: INCANDESCENT 28.0V 0.04 AMPS	08806	327
A2D53	1450-0114	1	LAMP HOLDER: TAMPER LENS	07137	ROL-83-F3-000
A2K1	0490-0475	1	RELAY: DPDT 28V 2A	99928	LSA-2C-248
A2Q1	1854-0003	12	TSTR: ISI NPN (SELECTED FROM 2N1711)	28480	1854-0003
A2Q2	1854-0003	1	TSTR: ISI NPN (SELECTED FROM 2N1711)	28480	1854-0003
A2Q3	1854-0003	1	TSTR: ISI NPN (SELECTED FROM 2N1711)	28480	1854-0003
A2Q4	1854-0003	1	TSTR: ISI NPN (SELECTED FROM 2N1711)	28480	1854-0003
A2Q5	1854-0003	1	TSTR: ISI NPN (SELECTED FROM 2N1711)	28480	1854-0003
A2Q6	1854-0003	1	TSTR: ISI NPN (SELECTED FROM 2N1711)	28480	1854-0003
A2Q7	1854-0003	1	TSTR: ISI NPN (SELECTED FROM 2N1711)	28480	1854-0003
A2Q8	1854-0003	1	TSTR: ISI NPN (SELECTED FROM 2N1711)	28480	1854-0003
A2Q9	1854-0003	1	TSTR: ISI NPN (SELECTED FROM 2N1711)	28480	1854-0003
A2Q10	1854-0003	1	TSTR: ISI NPN (SELECTED FROM 2N1711)	28480	1854-0003
A2Q11	1854-0003	1	TSTR: ISI NPN (SELECTED FROM 2N1711)	28480	1854-0003
A2Q12	1853-0001	1	TSTR: ISI PNP (SELECTED FROM 2N1132)	28480	1853-0001
A2Q13	1853-0024	1	TSTR: ISI PNP	80131	2N3778
A2Q14	1854-0020	1	TSTR: ISI NPN	28480	1854-0020
A2Q15	1854-0003	1	TSTR: ISI NPN (SELECTED FROM 2N1711)	28480	1854-0003
A2R1	0757-0930	1	RIFXD FLM 1.0K OHM 2% 1/8W	28480	0757-0930
A2R2	0757-0955	3	RIFXD FLM 20K OHM 2% 1/8W	28480	0757-0955
A2R3	0757-0907	2	RIFXD FLM 200 OHM 2% 1/8W	28480	0757-0907
A2R4	0757-0955	1	RIFXD FLM 20K OHM 2% 1/8W	28480	0757-0955
A2R5	0757-0972	2	RIFXD FLM 100K OHM 2% 1/8W	28480	0757-0972
A2R6	0757-0911	1	RIFXD FLM 300 OHM 2% 1/8W	28480	0757-0911
A2R7	0757-0929	1	RIFXD FLM 1.4K OHM 2% 1/8W	28480	0757-0929
A2R8	0757-0955	1	RIFXD FLM 20K OHM 2% 1/8W	28480	0757-0955
A2R9	0757-0900	1	RIFXD MET FLM 100 OHM 2% 1/8W	28480	0757-0900
A2R10	0757-0948	7	RIFXD FLM 10K OHM 2% 1/8W	28480	0757-0948
A2R11	0757-0948	1	RIFXD FLM 10K OHM 2% 1/8W	28480	0757-0948
A2R12	0727-0004	1	RIFXD DEPC 5 OHM 1% 1/2W	28480	0727-0004
A2R13	0683-0365	1	RIFXD COMP 3.6 OHM 5% 1/4W	01121	CB-3665
A2R14	0757-0948	1	RIFXD FLM 10K OHM 2% 1/8W	28480	0757-0948
A2R15	0757-0924	3	RIFXD MET FLM 1K OHM 2% 1/8W	28480	0757-0924
A2R16	0757-0948	1	RIFXD FLM 10K OHM 2% 1/8W	28480	0757-0948
A2R17	0757-0924	1	RIFXD MET FLM 1K OHM 2% 1/8W	28480	0757-0924
A2R18	0757-0926	1	RIFXD FLM 1.2K OHM 2% 1/8W	28480	0757-0926
A2R19	0757-0931	1	RIFXD FLM 2K OHM 2% 1/8W	28480	0757-0931
A2R20	0757-0948	1	RIFXD FLM 10K OHM 2% 1/8W	28480	0757-0948
A2R21	0757-0948	1	RIFXD FLM 10K OHM 2% 1/8W	28480	0757-0948
A2R22	0757-0907	1	RIFXD FLM 200 OHM 2% 1/8W	28480	0757-0907
A2R23	0757-0288	1	RIFXD MET FLM 9.39K OHM 1% 1/8W	28480	0757-0288
A2R24	0757-0924	1	RIFXD MET FLM 1K OHM 2% 1/8W	28480	0757-0924
A2R25	0757-0447	1	RIFXD MET FLM 16.2K OHM 1% 1/8W	28480	0757-0447
A2R26	0757-0443	1	RIFXD MET FLM 11.0K OHM 1% 1/8W	28480	0757-0443
A2R27	0757-0948	1	RIFXD FLM 10K OHM 2% 1/8W	28480	0757-0948
A2R28	0757-0941	2	RIFXD FLM 5.1K OHM 2% 1/8W	28480	0757-0941
A2R29	0757-0941	1	RIFXD FLM 5.1K OHM 2% 1/8W	28480	0757-0941

See Introduction to this section for ordering information

Table 7-2. Battery Charger Replaceable Parts (Continued)


Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A2R30 A2R31 A2S6	0757-0972 0757-0934 3101-1164	1 1	RIFXD FLN 100K OHM 2E 1/8W RIFXD FLN 2.7K OHM 2E 1/8W SWITCH TOGGLE DPDT 5A 115V AC	28480 28480 28480	0757-0972 0757-0934 3101-1164

See introduction to this section for ordering information

Page 8-7, Figure 8-6:

Figure A

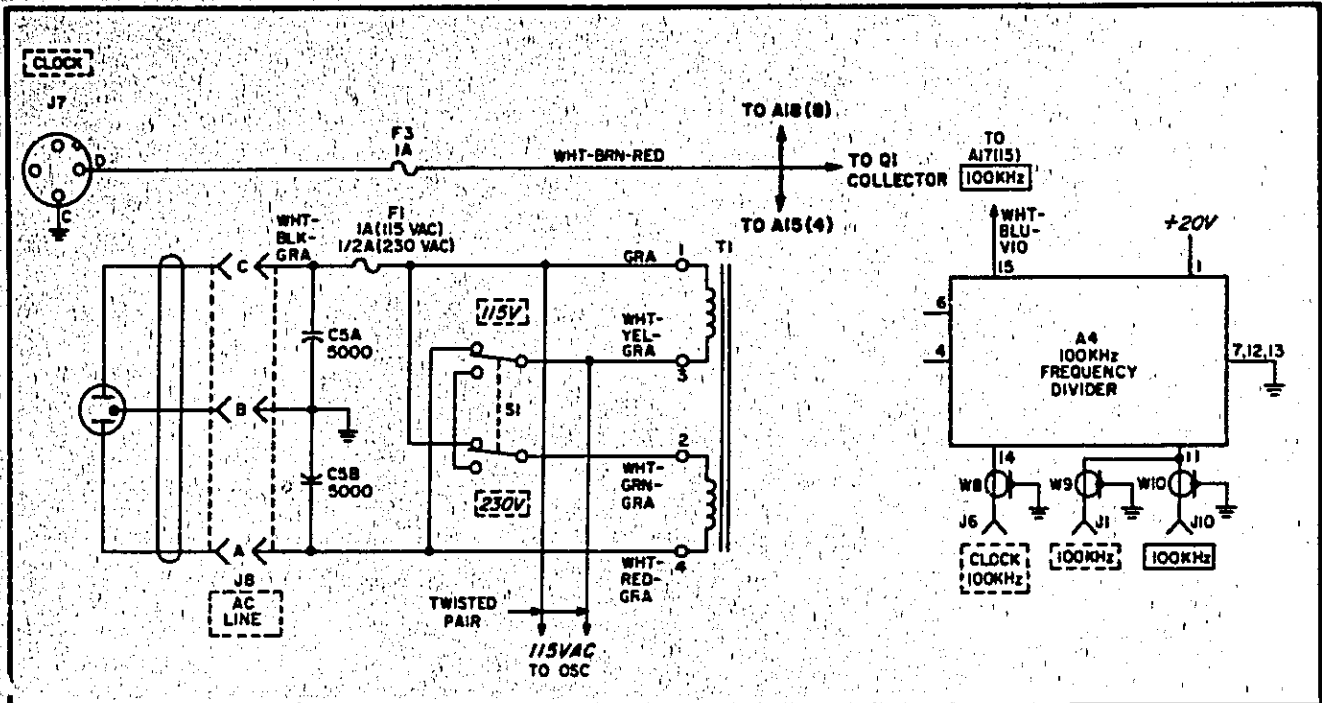Figure B



Change input ac wiring, C5A,B values as shown in Figure A.

Add J7, F3 and wire as shown in Figure A.

Add J6, W8 to A4(14) as shown in Figure B.

Page 8-9, Figure 8-7:

Change input ac wiring, C5A,B values as shown in Figure A.

Add J7, F3 and wire as shown in Figure A.

Add J6, W8 to A4(14) as shown in Figure B.

Page 6-3, Table 6-2:

Change A1A1C1 to 0140-0221, F:FXD MICA 220 PF 1% Factory select.

Page 6-4, Table 6-2:

Change A1A1R71 to 0757-0968, R:FXD Met Fim OHM 2%, 1/4W Factory Select.

Page 6-5, Table 6-2:

Change A1A1R85 to 0757-0943, R:Fxd Fim 6.2 Ohm, 2% 1/4W, Factory Select.

Page 8-13, Figure 8-9, A1 Assembly:

Change A1A1C2 to 220 pf.

Page 8-15, Figure 8-10, A1 Assembly:

Change A1A1R71 to 58K.

Change A1A1R85 to 6200.

Page 7-4, Table 7-2, Battery Charger Parts List:

Change A2R18 to 0757-0929, R:Fxd Met Fim 1600 Ohm 2% 1/4W.

Page 7-6, Figure 7-2, A2 Battery Charger:

Change A2R18 to 1600 Ohm.

Delete Series 964 reference at top of Schematic Diagram.

Page 6-10, Table 6-2, A7 Assembly:

Change A7A1C6 to 0160-0166.

Change A7A1C7, C8 to 0160-0163.

Change A7A1C18, to 0160-0166.

Change A7A1C19, 20 to 0161-0163.

**CHANGE 12 (964):**

Page 8-15, Figure 8-10, A1 Synthesizer Assembly:

Change R87 to 12K Ohm.

Change A1 Series to 964.

Page 6-5, Table 6-2:

Change A1R87 to 0757-0950 R:MET FLM 6200 Ohm 2% 1/4W.

Page 6-7, Table 6-2:

Change A4C3 to -160-2225.

Change A4C10 to 0160-2218.

Change A4C12 to 0140-0182.

Change A4C19 to 0140-0184.

Change A4C21 to 0140-0184.

Page 6-15, Table 6-2:

Change S5 to 3100-2402.



**CHANGE 13 (968):**

Page 8-31, Figure 8-18, A8 PHASE DETECTOR Assembly:


Change A1 to Q3, Q8 to Q11 to 1854-0003.

Page 6-11, Table 6-2:

Change A8Q1 to A8Q3 and A8Q8 to A8Q11 to 1854-0003.

The A4 Module uses regenerative division to divide 1 MHz to 100 kHz as shown. Operation is similar to that of A7 1 MHz Frequency Divider.

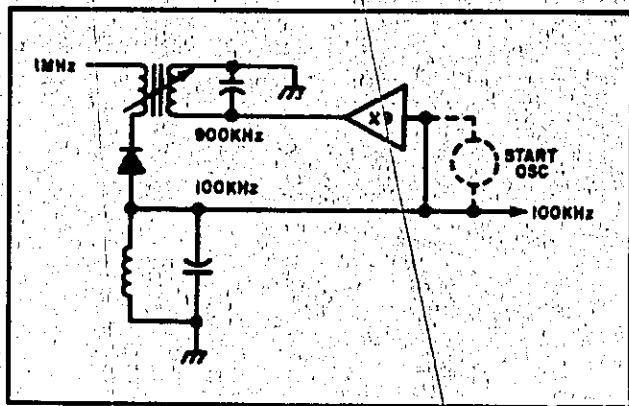Figure 7-3. 100 kHz Regenerative Divider



The 100 kHz divider is a regenerative divide-by-ten circuit followed by an amplifier stage. This assembly includes signal-sensing logic to control the divider-start circuit in response to both the 100 kHz output and the dc start signal that comes from A7 1 MHz Frequency Divider. Assume the 1 MHz signal is present at the divider circuit input, but the 100 kHz output has not started. Divider operation requires 100 kHz at the base of Q3, the X9 multiplier. This 100 kHz signal is derived from the output signal once the divider starts. During divider start, the required 100 kHz signal is obtained by converting tuned amplifier A6 into a 100 kHz oscillator by feeding a signal from its output back to its input through FET switch Q5.

The 1 MHz signal input to A4 is amplified by Q1. The input is also coupled through Q2 whose output connects through A4(2) to A5 Digital Divider. The start signal connects from A6 1 MHz Frequency Divider through A4(4) to Q4; Q4 biases Q5 "on" to complete the feedback path for Q7 which then oscillates at 100 kHz.

When the regenerative division process starts, the start circuit is no longer required. A small sample of the 100 kHz output connects to CR3 and CR5 to produce a negative bias to cut off Q7. The resulting increased voltage at Q4 emitter cuts this stage off, which in turn positively biases FET switch "off" to open the start oscillator path. The regenerative dividing process is maintained as long as there is continuity in the 1 MHz input.

Multiplier stage Q3 converts 100 kHz at its base to 900 kHz in its tuned collector circuit. The resulting 900 kHz mixes with the input 1 MHz from T1 in mixing diode CR2. The parallel resonance of L3 and C8, tuned to 100 kHz, traps all undesired frequencies in the mixing product. 100 kHz couples to Q7 to complete the regenerative path.

Q9 and Q10 feed the 100 kHz front and rear panel output jacks. Adjustable T3 tunes Q10 for optimum power out. A second 100 kHz output is supplied by clock amplifier Q8 through A4(14). Diode CR5 and C29 in T3 output provide a rectified and filtered dc output for the 100 kHz position of the CIRCUIT CHECK meter.

**A4 MAINTENANCE**

**NORMAL OPERATION**

The A4 circuits process the A6 1 MHz output by means of regenerative division to produce 100 kHz. The A4 Assembly starts dividing when both 1 MHz and the dc start signal from A6 are present at A4 inputs. A4 outputs are as follows:

- a. 100 kHz to front and rear-panel jacks from A4(11).
- b. A buffer amplifier 1 MHz output to A5 Digital Divider Assembly from A4(2).
- c. Rectified 100 kHz output to CIRCUIT CHECK meter from A4(15).
- d. A separate rear panel CLOCK 100 kHz output from A4(14).

**OPERATIONAL CHECK**

- a. A simple check of A4 operation can be made by observing the CIRCUIT CHECK 100 kHz indication and comparing it with the reference meter readings on the front-panel door. In addition, the rear-panel CLOCK 100 kHz output should be 1 volt rms into 1000 ohms; also, the 1 MHz buffer amplifier output at A4(2) should be .5 volts rms into 1000 ohms.

b. To check operation of the START AUTO-START switch, set this switch to the center position and momentarily disconnect J4 of A10 Oscillator. Note that with the top cover removed, A10J4 is accessible. Without a 5 MHz input to A6, there is no A6 1 MHz output and consequently no 100 kHz output. With A10J4 re-connected, there should be no 100 kHz output until the START AUTO-START switch is placed at either START or AUTO-START.

c. To check that the 1 MHz output (J1 and J10) outputs are within specifications, proceed as follows:

- 1) Using the 5065A 5 MHz output as an external time base input to a counter connect the 100 kHz front-panel jack to the counter input and check for 100 kHz  $\pm$  one count. Disconnect the counter.
- 2) Connect the front panel 100 kHz jack through a 50-ohm feedthrough to an RF voltmeter. Check for 1.0 to 1.5 volts rms. Disconnect the voltmeter and connect an oscilloscope in its place. Check that the 100 kHz output is a clean undistorted sinewave. Disconnect the oscilloscope.
- 3) If a distortion check of the 100 kHz output is desired, refer to steps 4 and 5 of Table 5-2, In-Cabinet Performance Check.

#### TROUBLESHOOTING

##### NOTE

For troubleshooting or tuning it will be necessary to mount the A4 circuit card on a HP 05065-6064 circuit board extender. Power should be disconnect before this assembly is removed and re-installed.

#### a. Signal Checks

- 1) To check Q1, monitor 1 MHz at CR2.
- 2) To check Q3, short the 1 MHz input at A4(6) and then inject 100 kHz at R15 and R16 (1.0 V rms). Check for 900 kHz (X9) at CR2. If this checks out, leave the 100 kHz connected, remove the short at A4(6), and check for 100 kHz at R17 and R18 junction. If there is no regenerative division, check start circuit of Q4 and Q5. In case the dc start circuits is not working, the start oscillator can be turned on by grounding TP1 to close Q5 switch.



#### b. Tuning Adjustments

- 1) Connect a 50-ohm termination to the rear panel 100 kHz output jack.
- 2) Connect a BNC tee to the front panel 100 kHz output jack. Then connect an electronic counter and RMS voltmeter to the VNC tee. Connect the 5065A 5 MHz output to counter EXT STD INPUT and set counter for external standard operation.
- 3) Set front panel START-AUTO-START switch to AUTO-START. Tune A4T1, T2, L6, and T3 for maximum indication on the RMS voltmeter. Counter should indicate 1 MHz  $\pm$  one count.
- 4) Retune A4T1, T2, L6, and T3 for maximum output. Output level should be between 1.0 and 1.5 volts. This complete the 100 kHz divider tuning.


#### MODULE REPLACEMENT

When replacing the A4 Assembly after repair or when a new A4 Assembly is installed, the circuit should be completely realigned per the preceding paragraphs.

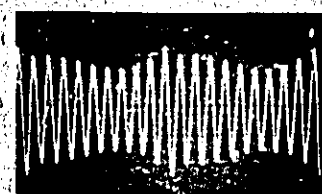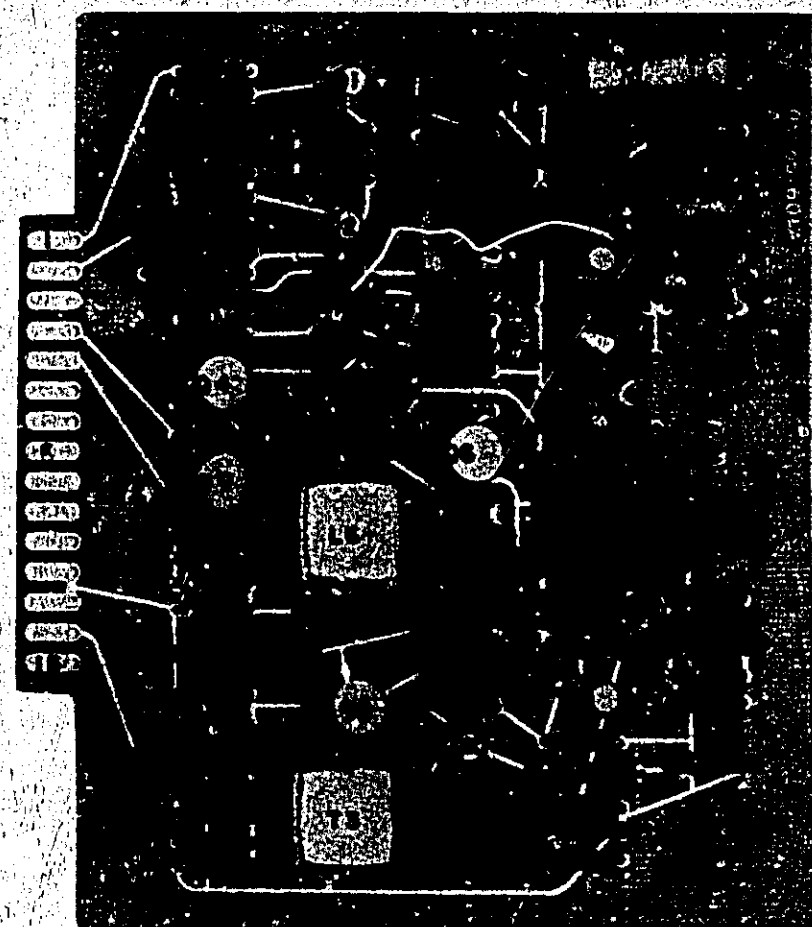Figure 7-4. A4 100 kHz Divider



● 2 V/cm, 1 μs/cm

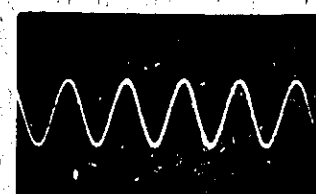

● 1 V/cm, 10 μs/cm

5065A: Normal operation unless noted.

Oscilloscope:  $\gamma$ C coupled.

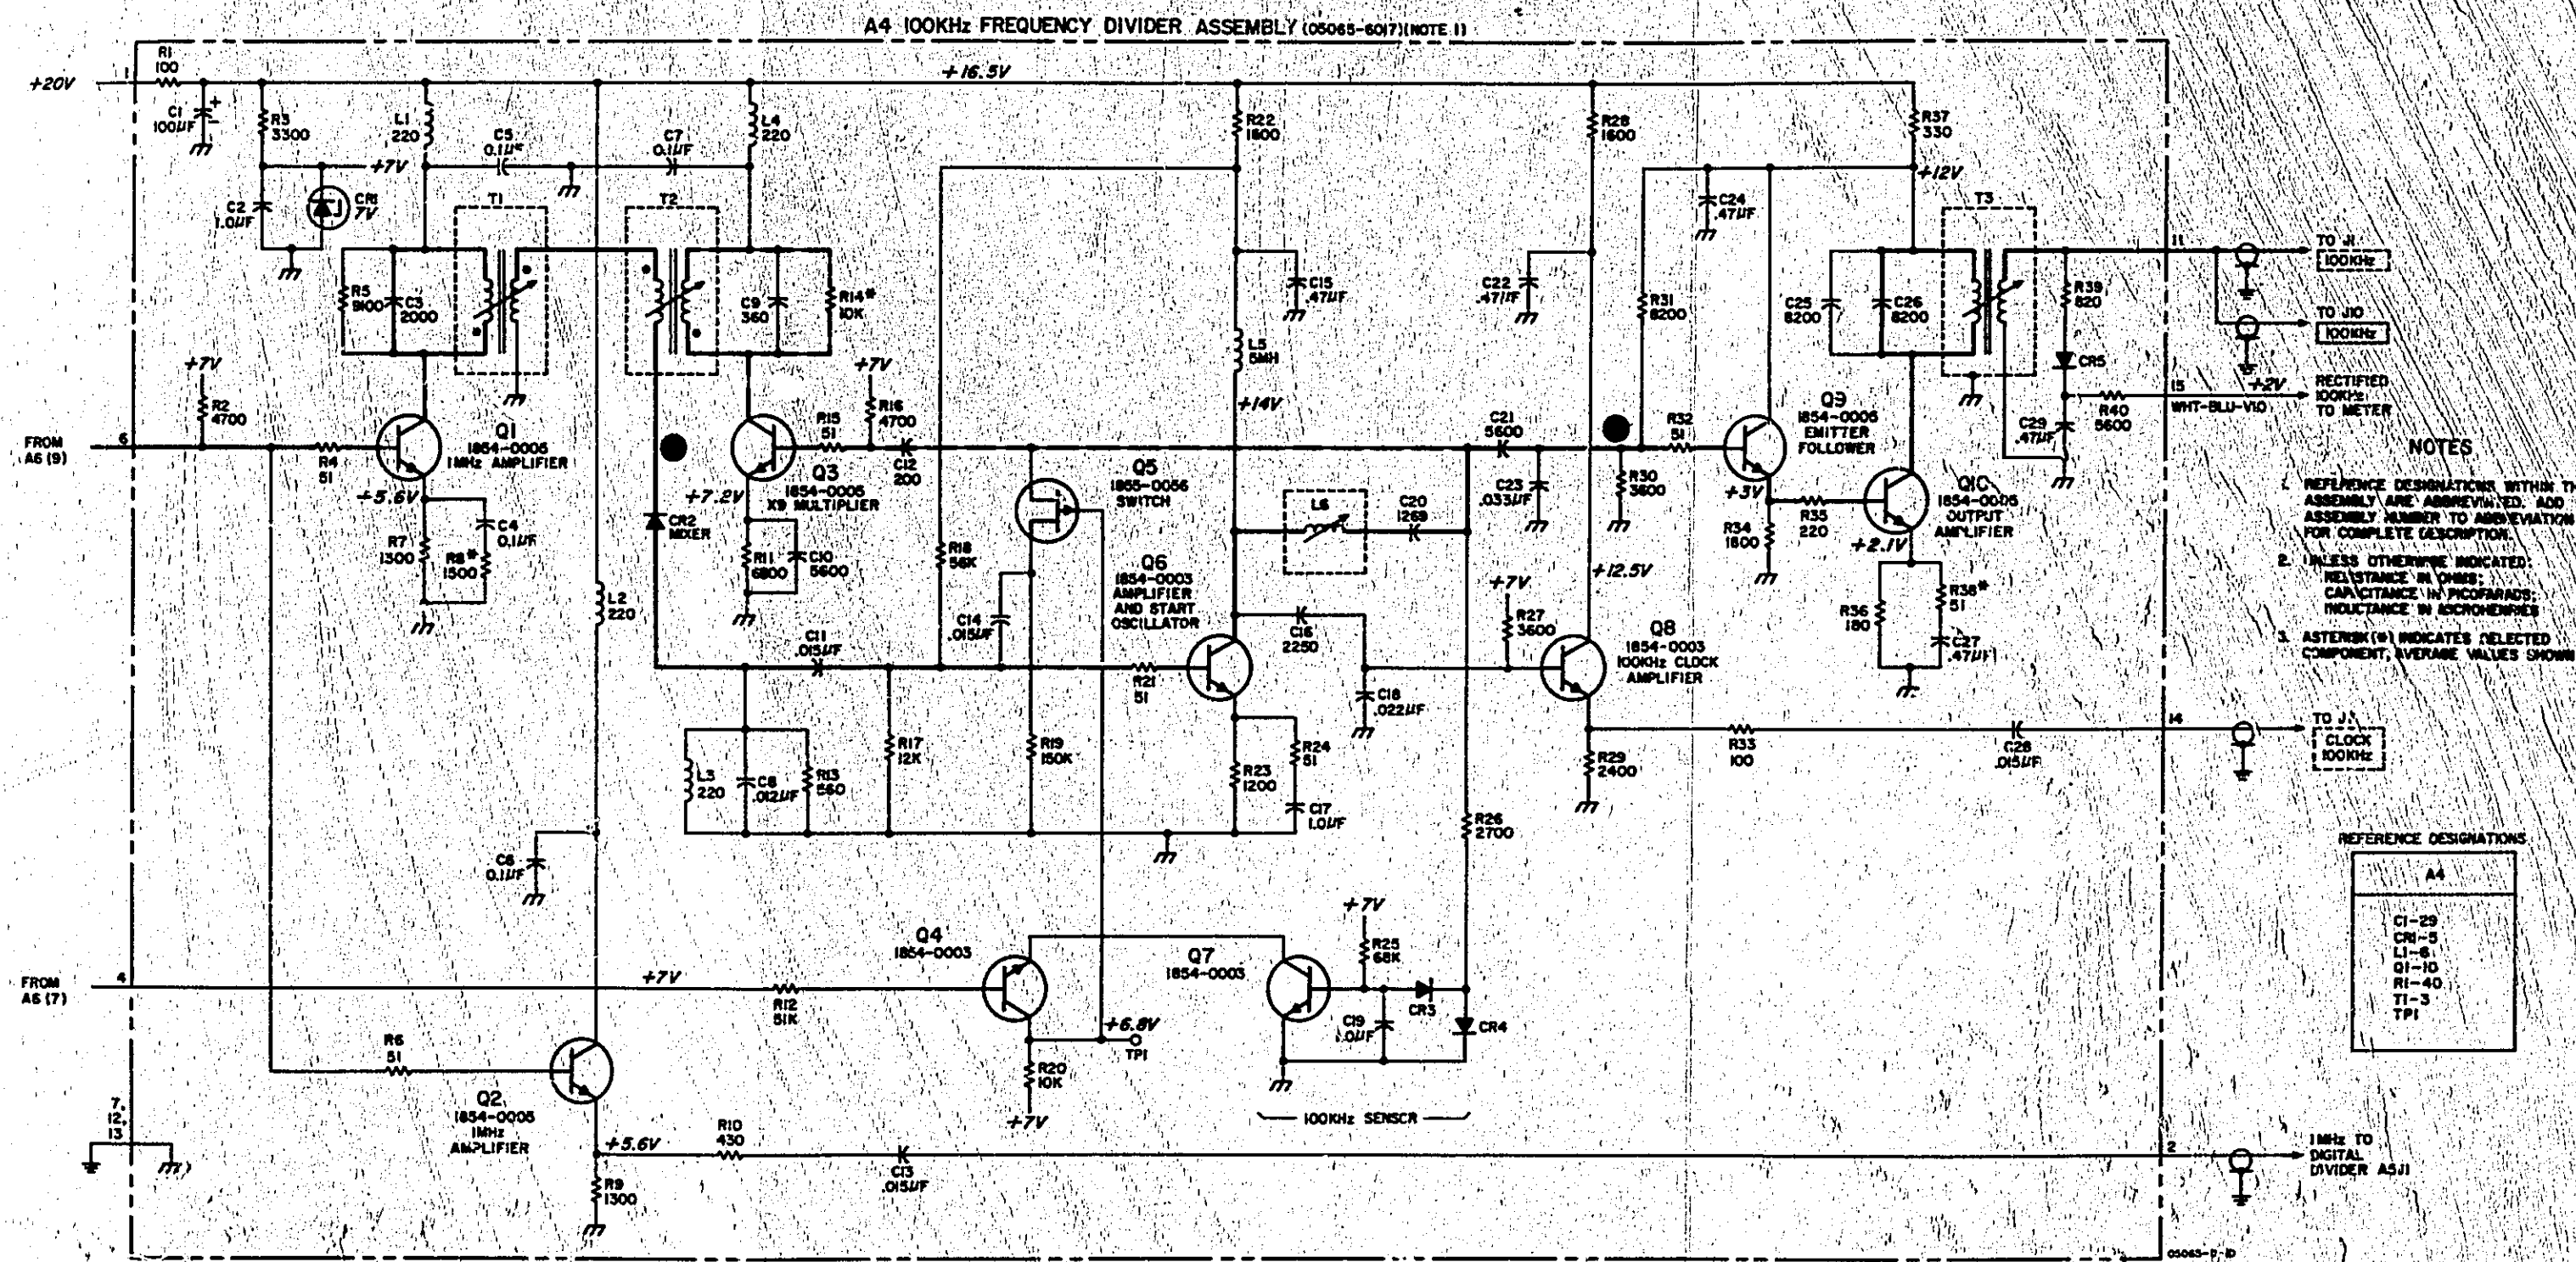


Figure 7-5. A4 100 kHz Frequency Divider Assembly

Table 7-3. A4 100 kHz Divider Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A4	05065-6017	1	BOARD ASSY:100KHZ DIVIDER	28480	05065-6017
A4	05065-2031	1	BOARD:BLANK PC	28480	05065-2031
A4C1	0180-0113	1	CIFXD ELECT TA 100UF +20-15% 30VDCM	56289	109D107C2030T2
A4C2	0160-0127	3	CIFXD CER 1.0 UF 20% 25VDCM	56289	5C13CS-CML
A4C3	0140-0180	1	CIFXD NICA 2000 PF 1% 300VDCM	28480	0140-0180
A4C4	0150-0121	4	CIFXD CER 0.1 UF +80-20% 50VDCM	56289	5C50B15-CML
A4C5	0150-0121		CIFXD CER 0.1 UF +80-20% 50VDCM	56289	5C50B15-CML
A4C6	0150-0121		CIFXD CER 0.1 UF +80-20% 50VDCM	56289	5C50B15-CML
A4C7	0150-0121		CIFXD CER 0.1 UF +80-20% 50VDCM	56289	5C50B15-CML
A4C8	0160-0301	1	CIFXD NY 0.012 UF 10% 200VDCM	56289	192P12392-PTS
A4C9	0140-0228	1	CIFXD NICA 300 PF 1% 300VDCM	28480	0140-0228
A4C10	0140-0170	2	CIFXD NICA 3600 PF 5% 300VDCM	28480	0140-0170
A4C11	0160-0194	4	CIFXD NY 0.015 UF 10%	56289	192P15392-PTS
A4C12	0140-0220	1	CIFXD NICA 200 PF 1% 300VDCM	28480	0140-0220
A4C13	0160-0194		CIFXD NY 0.015 UF 10%	56289	192P15392-PTS
A4C14	0160-0194		CIFXD NY 0.015 UF 10%	56289	192P15392-PTS
A4C15	0140-0174	5	CIFXD CER 0.47 UF +80-20% 25VDCM	56289	5C11875-CML
A4C16	0140-0233	1	CIFXD NICA 2250PF 1% 300VDCM	14655	R0M20F122500F3C
A4C17	0160-0127		CIFXD CER 1.0 UF 20% 25VDCM	56289	5C13CS-CML
A4C18	0160-0162	1	CIFXD NY 0.022 UF 10% 200VDCM	56289	192P22392-PTS
A4C19	0160-0127		CIFXD CER 1.0 UF 20% 25VDCM	56289	5C13CS-CML
A4C20	0160-0954	1	CIFXD NICA 3200 PF 1% 300VDCM	28480	0160-0954
A4C21	0140-0170		CIFXD NICA 3600 PF 5% 300VDCM	28480	0140-0170
A4C22	0160-0174		CIFXD CER 0.47 UF +80-20% 25VDCM	56289	5C11875-CML
A4C23	0160-0163	1	CIFXD NY 0.033 UF 10% 200VDCM	56289	192P33392-PTS
A4C24	0140-0174		CIFXD CER 0.47 UF +80-20% 25VDCM	56289	5C11875-CML
A4C25	0140-0184	2	CIFXD NICA 8200 PF 1% 100VDCM	28480	0140-0184
A4C26	0140-0184		CIFXD NICA 8200 PF 1% 100VDCM	28480	0140-0184
A4C27	0140-0174		CIFXD CER 0.47 UF +80-20% 25VDCM	56289	5C11875-CML
A4C28	0160-0194		CIFXD NY 0.015 UF 10%	56289	192P15392-PTS
A4C29	0140-0174		CIFXD CER 0.47 UF +80-20% 25VDCM	56289	5C11875-CML
A4C31	1902-3125	1	DIODE: BREAKDOWN 4.98V 2% 400MA	28480	1902-3125
A4C32	1907-0040	4	DIODE: SILICON 30MA 30MV	07263	FDG1088
A4C33	1901-0040		DIODE: SILICON 30MA 30MV	07263	FDG1088
A4C34	1901-0040		DIODE: SILICON 30MA 30MV	07263	FDG1088
A4C35	1901-0040		DIODE: SILICON 30MA 30MV	07263	FDG1088
A4C2	9140-0129		COIL: FMD RF 220 UH	28480	9140-0129
A4L3	9140-0129		COIL: FMD RF 220 UH	28480	9140-0129
A4L4	9140-0129		COIL: FMD RF 220 UH	28480	9140-0129
A4L5	107A-9F	1	COIL ASSY	28480	107A-9F
A4Q1	1854-0005	5	TSTR: SI NPN	80131	2N708
A4Q2	1854-0005		TSTR: SI NPN	80131	2N708
A4Q3	1854-0005		TSTR: SI NPN	80131	2N708
A4Q4	1854-0003	4	TSTR: SI NPN (SELECTED FROM 2N1711)	28480	1854-0003
A4Q5	1855-0056	1	TSTR: SI FET	80131	2N4342
A4Q6	1854-0003		TSTR: SI NPN (SELECTED FROM 2N1711)	28480	1854-0003
A4Q7	1854-0003		TSTR: SI NPN (SELECTED FROM 2N1711)	28480	1854-0003
A4Q8	1854-0003		TSTR: SI NPN (SELECTED FROM 2N1711)	28480	1854-0003
A4Q9	1854-0005		TSTR: SI NPN	80131	2N708
A4Q10	1854-0005		TSTR: SI NPN	80131	2N708
A4R1	0757-0900	2	RIFXD RES FLN 100 OHM 2% 1/8W	28480	0757-0900
A4R2	0757-0940	2	RIFXD FLN 4700 OHM 2% 1/8W	28480	0757-0940
A4R3	0757-0936	1	RIFXD FLN 3.3K OHM 2% 1/8W	28480	0757-0936
A4R4	0757-0893	7	RIFXD FLN 51 OHM 2% 1/8W	28480	0757-0893
A4R5	0757-0947	1	RIFXD FLN 9.1K OHM 2% 1/8W	28480	0757-0947
A4R6	0757-0893		RIFXD FLN 51 OHM 2% 1/8W	28480	0757-0893
A4R7	0757-0927	4	RIFXD FLN 1.3K OHM 2% 1/8W	28480	0757-0927
A4R8	0757-0927		RIFXD FLN 1.3K OHM 2% 1/8W	28480	0757-0927
A4R9	0757-0927		RIFXD FLN 1.3K OHM 2% 1/8W	28480	0757-0927
A4R10	0757-0915	1	RIFXD FLN 430 OHM 2% 1/8W	28480	0757-0915
A4R11	0757-0944	1	RIFXD FLN 6.8K OHM 2% 1/8W	28480	0757-0944
A4R12	0757-0965	1	RIFXD FLN 51K OHM 2% 1/8W	28480	0757-0965
A4R13	0757-0918	1	RIFXD FLN 560 OHM 2% 1/8W	28480	0757-0918
A4R14	0757-0948	2	RIFXD FLN 10K OHM 2% 1/8W	28480	0757-0948
A4R15	0757-0893		RIFXD FLN 51 OHM 2% 1/8W	28480	0757-0893
A4R16	0757-0940		RIFXD FLN 4700 OHM 2% 1/8W	28480	0757-0940
A4R17	0757-0950	1	RIFXD FLN 12K OHM 2% 1/8W	28480	0757-0950
A4R18	0757-0966	1	RIFXD FLN 56K OHM 2% 1/8W	28480	0757-0966
A4R19	0757-0976	1	RIFXD FLN 150K OHM 2% 1/8W	28480	0757-0976
A4R20	0757-0948		RIFXD FLN 10K OHM 2% 1/8W	28480	0757-0948
A4R21	0757-0893		RIFXD FLN 51 OHM 2% 1/8W	28480	0757-0893
A4R22	0757-0930	3	RIFXD FLN 1.8K OHM 2% 1/8W	28480	0757-0930
A4R23	0757-0926	1	RIFXD FLN 1.2K OHM 2% 1/8W	28480	0757-0926
A4R24	0757-0893		RIFXD FLN 51 OHM 2% 1/8W	28480	0757-0893
A4R25	0757-0948	1	RIFXD RES FLN 68K OHM 2% 1/8W	28480	0757-0948

See introduction to this section for ordering information

Table 7-3. A4 100 kHz Divider Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A4R26	0757-0934	1	RIFXD FLN 2.7K OHM 28 1/8W	28480	0757-0934
A4R27	0757-0937	2	RIFXD FLN 3.4K OHM 28 1/8W	28480	0757-0937
A4R28	0757-0929	1	RIFXD FLN 1.4K OHM 28 1/8W	28480	0757-0929
A4R29	0757-0933	1	RIFXD FLN 2.4K OHM 28 1/8W	28480	0757-0933
A4R30	0757-0937	1	RIFXD FLN 3.4K OHM 28 1/8W	28480	0757-0937
A4R31	0757-0946	1	RIFXD FLN 6.2K OHM 28 1/8W	28480	0757-0946
A4R32	0757-0893	1	RIFXD FLN 51 OHM 28 1/8W	28480	0757-0893
A4R33	0757-0900	1	RIFXD NET FLN 100 OHM 28 1/8W	28480	0757-0900
A4R34	0757-0930	1	RIFXD FLN 1.8K OHM 28 1/8W	28480	0757-0930
A4R35	0757-0908	1	RIFXD FLN 220 OHM 28 1/8W	28480	0757-0908
A4R36	0757-0906	1	RIFXD NET FLN 180 OHM 28 1/8W	28480	0757-0906
A4R37	0757-0912	1	RIFXD NET FLN 330 OHM 28 1/8W	28480	0757-0912
A4R38	0757-0893	1	RIFXD FLN 51 OHM 28 1/8W	28480	0757-0893
A4R39	0757-0922	1	RIFXD FLN 820 OHM 28 1/8W	28480	0757-0922
A4A40	0757-0942	1	RIFXD FLN 3.6K OHM 28 1/8W	28480	0757-0942
A4R41	0757-0927	1	RIFXD FLN 1.3K OHM 28 1/8W	28480	0757-0927
A4R42	0757-0930	1	RIFXD FLN 1.8K OHM 28 1/8W	28480	0757-0930
A4T1	05061-8005	1	TRANSFORMER:100KHZ-4MMZ	28480	05061-8005
A4T2	05061-8008	1	TRANSFORMER:90KHZ MULTIPLIER	28480	05061-8008
A4T3	107A-9C	1	TRANSFORMER ASSY:100KHZ	28480	107A-9C

See introduction to this section for ordering information

### THE PRESET DIVIDER


The preset divider is made up of four decades giving a total dividing capability of 10,000. With each 10,000 counts applied to the divider input, there will be one output pulse. With the addition of the preset capability this divider can be set to divide by any integer (except 1 through 12, due to reset and preset time). Since the divider can be set to divide by any predetermined integer, the system is considered a divide-by-n preset divider. For example: if the divider were to divide-by-2, and 8 would be preset into the decade before the counting sequence starts, and since an 8 count is already in the decade from the preset, it will take only 2 inputs to get 1 output. Conversely, to divide-by-8, 2 counts are preset into the decade prior to counting.

The preset divider delivers an "H" output to the sample circuit at the 9988 count (the sum of the input 5 MHz pulses and the preset information of the four decades). Output stage IC5 remains "on" with an "H" output during count 9989. Count 9990 turns off IC5 and starts a 1.5  $\mu$ sec reset period. Inhibit gate Q1 and Q2 closes to prevent 5 MHz pulses from entering the decades during the reset and preset period. During reset, the decades are restored to "0" count. Following the reset period is a 0.5  $\mu$ sec preset period. At this time, the thumbwheel switch preset information is fed to the four decades. At the end of the preset period, inhibit gate Q1 and Q2 opens and counting resumes. The counting cycle re-occurs at the 5 MHz/n rate determined by the thumbwheel setting.

The 5 MHz input signal is shaped by the negative-clamping action of Q1, the first half of inhibit gate Q1 and Q2. The 5 MHz pulse is then applied to first decade IC2(5) which responds to the positive-going transition of the input pulse. The four decades are series connected through inverting amplifiers in IC1, IC3, and IC6, and also through inverting amplifiers Q4 and Q9 as shown in the Synthesizer Timing Diagram on page 7-16. Each decade responds to the positive-going transition of the input pulse at pin 5. Connecting to the "1", "2", "4", and "8" inputs of each decade are the thumbwheel-switch connections through which the decades are preset as required for the desired Synthesizer frequency as derived from Table 3-9. The thumbwheel switch puts in binary information for the desired preset count as can be seen by the wiring diagram for one thumbwheel-switch section shown below. The decade count will therefore be the total of the preset information plus the number of input 5 MHz pulses.

When the count reaches 9000 (preset information plus the number of 5 MHz pulses), final decade IC10 delivers an "8" pulse from IC10(1) to IC9(3) and a "1" pulse from IC10(6) to IC9(5). These inputs activate a NOR

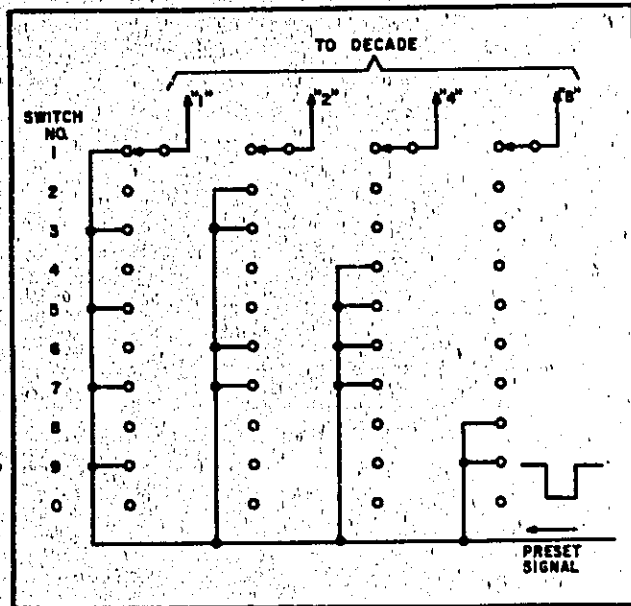Table 3-9. Typical Thumbwheel Switch Section



gate which delivers a coincidence "9" output (H) pulse at IC9(6). This "H" pulse is inverted by Q11 for the first "1" input to IC5(1).

When the count reaches 9900, third decade IC7 delivers an "8" pulse from IC7(1) to IC6(5) and a "1" pulse from IC7(6) to IC6(3). These items activate a NOR gate in IC6 which delivers a coincidence "9" output (H) at IC6(6), which is then inverted by Q8 for the second "L" input to IC5(2).

When the count reaches 9980, second decade IC4 delivers an "8" pulse from IC4(1) through an inverting amplifier in IC3 (IC3-5 to IC3-6) to Q6. Q6 inverts this pulse for the third "L" pulse at IC5(3).

When the count reaches 9988, first decade IC2 delivers an "8" pulse from IC2(1) to IC5(5) for the final "L" pulse which activates IC5. Since IC2 output remains unchanged during count 9989, IC5 remains activated until count 9990. At this count, IC2(1) output goes "H" and turns off NOR gate IC5. Thus, IC5 output pulse is two input counts wide or 0.4  $\mu$ sec.

Reset one-shot multivibrator IC11 is triggered when NOR gate IC5 closes and provides a 1.5  $\mu$ sec pulse to Q16, Q7, and preset one-shot multivibrator IC8(9). The signal through Q16 is amplified, inverted, sent to NOR gate (Q13, Q14) and then applied to amplifier Q3. When Q3 collector goes "H", the input gate closes for the 1.5  $\mu$ sec reset period. The reset signal through Q7 is amplified, inverted, and applied to decade IC4(2).

Decade IC2 count is "0" but IC4, IC7, and IC10 are at the count of "999". The reset pulse into IC4(2) cycles

**Model 5055A**  
**Circuit Diagrams, Theory, and Maintenance**

IC4 to "0" which then applies a count pulse to IC7(5), cycling it to "0". IC5 then applies a count pulse to IC10(5), cycling it to "0". The decades are all reset to "0" awaiting another counting sequence. However, the preset information has not been set into the decades.

The end of the 1.5  $\mu$ sec reset pulse triggers preset one-shot multivibrator IC8. IC8 output is a 0.5  $\mu$ sec pulse applied at S1A, Q5, Q10, Q15, and NOR gate Q13, Q14. This NOR gate signal continues to hold the input gate closed for the length of the 0.5  $\mu$ sec preset pulse. The total input gate close time is 2.0  $\mu$ sec. This is the total time required to reset and preset the decades. The 0.5  $\mu$ sec pulse at S1A, Q5, Q10, and Q15 is applied to the corresponding thumbwheel switch section. Dependent on switch setting, this pulse presets a count into the decades. At the end of the 0.5  $\mu$ sec preset pulse, input gate Q1, Q2 is open and the dividing function repeats.

**POWER SUPPLY CIRCUITS**

In addition to +20 V supplied to the Synthesizer, regulated 5.6 V is furnished by zener diode CR1. A special power supply arrangement is provided for the counting

decades in the preset divider. Positive supply voltages for decades IC2, IC4, IC7, and IC10 connect to pin 3 and the negative supply voltages to pin 4. Other voltages are applied as follows:

- a. Decade IC10 connects between +20 V at R44-R36 and +13.3 V at CR14.
- b. Decade IC7 connects between +13.3 V at CR14 and +9.1 V at CR7.
- c. Decade IC4 connects between +9.1 V at CR7 and +4.1 V at CR2.
- d. Decade IC2 connects between 4.2 V at CR2 and power ground.

This decade power supply arrangement creates different output drive levels. The drive levels are equalized by the biasing action of zener diodes CR8, CR20, and CR25 working with Q7, Q8, and Q11, respectively.

**Synthesizer Assembly A1 Timing Diagram**

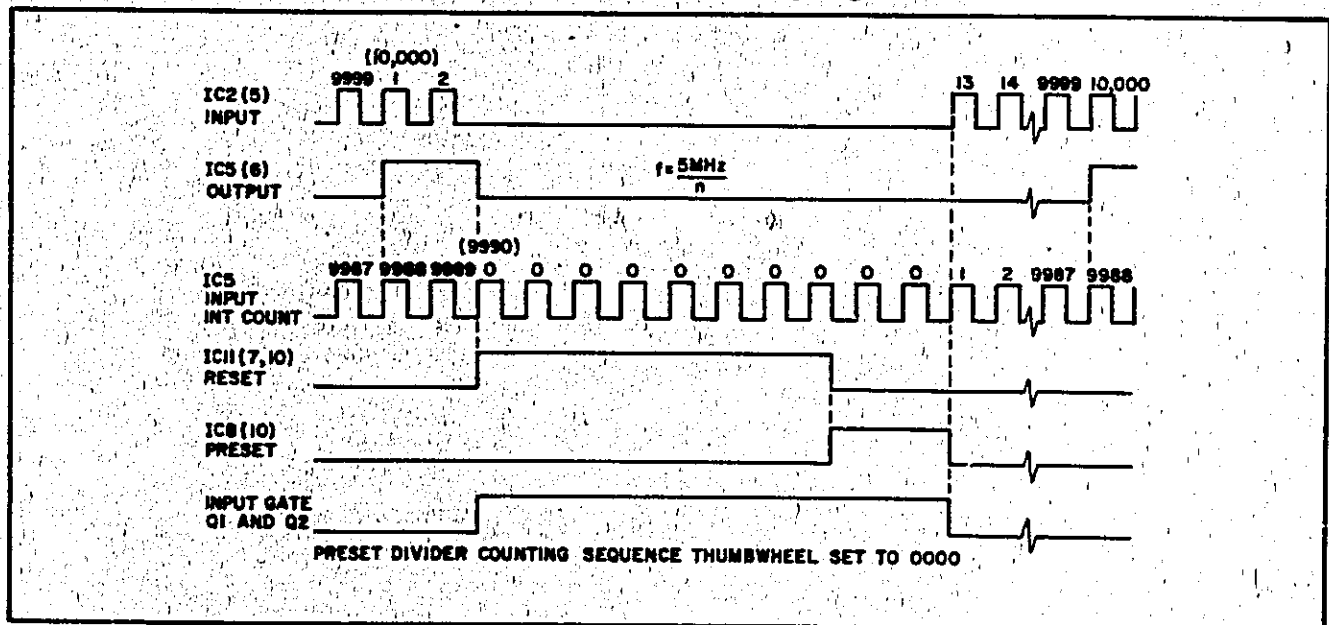


Table 7-4. A1 Synthesizer Assembly Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1	05065-6018	1	MODULE ASSY:SYNTHESIZER CONSISTS OF S1A THRU S1D	28480	05065-6018
A1S1	3100-2063	1	SWITCH:THUMBWHEEL	28480	3100-2063
A1S2	3101-0033	1	SWITCH:SLIDE DPDT 0.5A 125AC/DC	82389	11A-1009A
A1	0340-0119	1	INSULATED FEED THRU:TEFLON	98291	FT-SM-023-P20
A1	0510-0207	1	MUTICAPTIVE 4-40 X 0.188 LG	28480	0510-0207
A1	1250-0901	1	CONNECTOR:RF BULKHEAD	15358	1104/D
A1	05060-0007	1	BRACKET:EXTD	28480	05060-0007
A1	05065-0035	1	COVER:SYNTHESIZER	28480	05065-0035
A1	05065-0036	1	CHASSIS:SYNTHESIZER	28480	05065-0036
A1	05065-2032	1	PLATE:END	28480	05065-2032
A1	05065-2043	1	PLATE:END	28480	05065-2043
AI A1	05065-6019	1	BOARD ASSY:SYNTHESIZER	28480	05065-6019
AI A1	05065-2033	1	BOARD:BLANK PC	28480	05065-2033
AI A1 C1	0180-0291	4	CIFXD ELECT 1.0 UF +80-208 35VDCM	56289	1500105X9035A2-DYS
AI A1 C2	0180-0291	10	CIFXD ELECT 1.0 UF 108 35VDCM	56289	1500105X9035A2-DYS
AI A1 C3	0150-0121	10	CIFXD CER 0.1 UF +80-208 50VDCM	56289	5C50815-CML
AI A1 C4	0150-0093	10	CIFXD CER 0.01 UF +80-208 100VDCM	72982	801-K800011
AI A1 C5	0180-0116	4	CIFXD ELECT 8.8 UF 108 35VDCM	56289	1500685X903582-DYS
AI A1 C6	0150-0121	4	CIFXD CER 0.2 UF +80-208 50VDCM	56289	5C50815-CML
AI A1 C7	0150-0121		CIFXD CER 0.1 UF +80-208 50VDCM	56289	5C50815-CML
AI A1 C8	0150-0093		CIFXD CER 0.01 UF +80-208 100VDCM	72982	801-K800011
AI A1 C9	0180-0116		CIFXD ELECT 8.8 UF 108 35VDCM	56289	1500685X903582-DYS
AI A1 C10	0140-0192	1	CIFXD NICA 68 PF 58	28480	0140-0192
AI A1 C11	0160-0127	5	CIFXD CER 1.0 UF 208 25VDCM	56289	5C13C5-CML
AI A1 C12	0150-0093		CIFXD CER 0.01 UF +80-208 100VDCM	72982	801-K800011
AI A1 C13	0180-0116		CIFXD ELECT 8.8 UF 108 35VDCM	56289	1500685X903582-DYS
AI A1 C14	0140-0221	1	CIFXD NICA 220 PF 18	28480	0140-0221
AI A1 C15	0160-0127		CIFXD CER 1.0 UF 208 25VDCM	56289	5C13C5-CML
AI A1 C16	0150-0121		CIFXD CER 0.1 UF +80-208 50VDCM	56289	5C50815-CML
AI A1 C17	0150-0121		CIFXD CER 0.1 UF +80-208 50VDCM	56289	5C50815-CML
AI A1 C18	0140-0160	1	CIFXD NICA 3400 PF 53 500VDCM	28480	0140-0160
AI A1 C19	0140-0194	1	CIFXD NICA 150 PF 58	72136	PDML5F151J3C
AI A1 C20	0140-0225	1	CIFXD NICA 300 PF 18	28480	0140-0225
AI A1 C21	0140-0174	3	CIFXD CER 0.47 UF +80-208 25VDCM	56289	5C11875-CML
AI A1 C22	0180-0291		CIFXD ELECT 1.0 UF 108 35VDCM	56289	1500105X9035A2-DYS
AI A1 C23	0150-0121		CIFXD CER 0.1 UF +80-208 50VDCM	56289	5C50815-CML
AI A1 C24	0180-0291		CIFXD ELECT 1.0 UF 108 35VDCM	56289	1500105X9035A2-DYS
AI A1 C25	0140-0174		CIFXD CER 0.47 UF +80-208 25VDCM	56289	5C11875-CML
AI A1 C26	0150-0093		CIFXD CER 0.01 UF +80-208 100VDCM	72982	801-K800011
AI A1 C27	0150-0121		CIFXD CER 0.1 UF +80-208 50VDCM	56289	5C50815-CML
AI A1 C28	0140-0174		CIFXD CER 0.47 UF +80-208 25VDCM	56289	5C11875-CML
AI A1 C29	0150-0093		CIFXD CER 0.01 UF +80-208 100VDCM	72982	801-K800011
AI A1 C30	0160-0127		CIFXD CER 1.0 UF 208 25VDCM	56289	5C13C5-CML
AI A1 C31	0160-0127		CIFXD CER 1.0 UF 208 25VDCM	56289	5C13C5-CML
AI A1 C32	0150-0121		CIFXD CER 0.1 UF +80-208 50VDCM	56289	5C50815-CML
AI A1 C33	0140-0234	3	CIFXD NICA 500 PF 18	28480	0140-0234
AI A1 C34	0140-0234		CIFXD NICA 500 PF 18	28480	0140-0234
AI A1 C35	0150-0093		CIFXD CER 0.01 UF +80-208 100VDCM	72982	801-K800011
AI A1 C36	0250-0093		CIFXD CER 0.01 UF +80-208 100VDCM	72982	801-K800011
AI A1 C37	0160-0127		CIFXD CER 1.0 UF 208 25VDCM	56289	5C13C5-CML
AI A1 C38	0150-0093		CIFXD CER 0.01 UF +80-208 100VDCM	72982	801-K800011
AI A1 C39	0150-0093		CIFXD CER 0.01 UF +80-208 100VDCM	72982	801-K800011
AI A1 C40	0180-0106	1	CIFXD ELECT 60 UF 208 4VDCM	28480	0180-0106
AI A1 C41	0180-0155	1	CIFXD ELECT 2.2 UF 208 20VDCM	56289	1500225X0020A2-DYS
AI A1 C42	0150-0121		CIFXD CER 0.1 UF +80-208 50VDCM	56289	5C50815-CML
AI A1 C43	0140-0234		CIFXD NICA 500 PF 18	28480	0140-0234
AI A1 C44	0180-0116		CIFXD ELECT 8.8 UF 108 35VDCM	56289	1500685X903582-DYS
AI A1 C45	0150-0093		CIFXD CER 0.01 UF +80-208 100VDCM	72982	801-K800011
AI A1 C46	0150-0121		CIFXD CER 0.1 UF +80-208 50VDCM	56289	5C50815-CML
AI A1 C47	0160-0340	1	CIFXD NICA 600 PF 18	28480	0160-0340
AI A1 CR1	1902-3104	1	DIODE:BREAKDOWN 5.82V 58	04713	SZ10939-110
AI A1 CR2	1902-3070	1	DIODE:BREAKDOWN 4.22V 58	04713	SZ10939-74
AI A1 CR3	1910-0016	16	DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
AI A1 CR4	1910-0016		DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
AI A1 CR5	1910-0016		DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
AI A1 CR6	1910-0016		DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
AI A1 CR7	1902-3149	1	DIODE BREAKDOWN:9.09V 58	28480	1902-3149
AI A1 CR8	1902-0048	1	DIODE:BREAKDOWN 6.81V 58	04713	SZ10939-134
AI A1 CR9	1901-0040	13	DIODE:SILICON 30MA 30V	07263	FDG1088
AI A1 CR10	1910-0016		DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
AI A1 CR11	1910-0016		DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
AI A1 CR12	1910-0016		DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
AI A1 CR13	1910-0016		DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
AI A1 CR14	1902-3139	1	DIODE:BREAKDOWN 8.25V 58	04713	SZ10939-158

See Introduction to this section for ordering information



Table 7-4. A1 Synthesizer Assembly Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1A1CR15	1910-0016		DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
A1A1CR16	1910-0016		DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
A1A1CR17	1910-0016		DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
A1A1CR18	1910-0016		DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
A1A1CR19	1901-0040		DIODE:SILICON 30MA 30MV	07263	FDG1088
A1A1CR20	1902-0025	1	DIODE: BREAKDOWN:10.0V 5% 400 MW	28480	1902-0025
A1A1CR21	1910-0016		DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
A1A1CR22	1910-0016		DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
A1A1CR23	1910-0016		DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
A1A1CR24	1910-0016		DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
A1A1CR25	1902-3203	1	DIODE BREAKDOWN:SILICON 14.7V 5%	28480	1902-3203
A1A1CR26	1901-0040		DIODE:SILICON 30MA 30MV	07263	FDG1088
A1A1CR27	0122-0013	5	C:VOLTAGE VAR 3V PF 30VDCM	28480	0122-0013
A1A1CR28	1902-3024	1	DIODE: BREAKDOWN 2.87V 5%	04713	S210939-26
A1A1CR29	1902-3125	1	DIODE: BREAKDOWN 6.98V 2% 400MW	28480	1902-3125
A1A1CR30	1901-0040		DIODE:SILICON 30MA 30MV	07263	FDG1088
A1A1CR31	1901-0040		DIODE:SILICON 30MA 30MV	07263	FDG1088
A1A1CR32	1901-0050	2	DIODE:SI 200 MA AT 1V	07263	FDA 6308
A1A1CR33	1901-0050		DIODE:SI 200 MA AT 1V	07263	FDA 6308
A1A1CR34	1901-0040		DIODE:SILICON 30MA 30MV	07263	FDG1088
A1A1CR35	1901-0040		DIODE:SILICON 30MA 30MV	07263	FDG1088
A1A1CR36	1901-0040		DIODE:SILICON 30MA 30MV	07263	FDG1088
A1A1CR37	1901-0040		DIODE:SILICON 30MA 30MV	07263	FDG1088
A1A1CR38	1901-0040		DIODE:SILICON 30MA 30MV	07263	FDG1088
A1A1CR39	1901-0040		DIODE:SILICON 30MA 30MV	07263	FDG1088
A1A1CR40	1901-0040		DIODE:SILICON 30MA 30MV	07263	FDG1088
A1A1CR41	1901-0040		DIODE:SILICON 30MA 30MV	07263	FDG1088
A1A1IC1	1820-0080	4	IC:RTL GATE QUAD 2-IMPY	28480	1820-0080
A1A1IC2	1820-0079	1	INTEGRATED CIRCUIT:DECADE COUNTER(5MHZ)	28480	1820-0079
A1A1IC3	1820-0080		IC:RTL GATE QUAD 2-IMPY	28480	1820-0080
A1A1IC4	1820-0329	3	IC:TTL DECADE COUNTER 5 MHZ MIN.	28480	1820-0329
A1A1IC5	1820-0081	1	INTEGRATED CIRCUIT:DIGITAL 4-INPUT	07263	US8991129X
A1A1IC6	1820-0080		IC:RTL GATE QUAD 2-IMPY	28480	1820-0080
A1A1IC7	1820-0329		IC:TTL DECADE COUNTER 5 MHZ MIN.	28480	1820-0329
A1A1IC8	1820-0315	2	INTEGRATED CIRCUIT	28480	1820-0315
A1A1IC9	1820-0080		IC:RTL GATE QUAD 2-IMPY	28480	1820-0080
A1A1IC10	1820-0329		IC:TTL DECADE COUNTER 5 MHZ MIN.	28480	1820-0329
A1A1IC11	1820-0315		INTEGRATED CIRCUIT	28480	1820-0315
A1A1L1	9100-1618	1	COIL:MOLDED CHOKE 5.60 UH	28480	9100-1618
A1A1L2	9140-0112	1	COIL:FXD RF 4.7 UH	28480	9140-0112
A1A1L3	9140-0029	1	COIL/CHOKE:FXD 100 UH	99848	3100-15-101
A1A1L4	9140-0114	1	COIL:FXD RF 10 UH	28480	9140-0114
A1A1L5	9140-0237	1	COIL:FXD 200 UH 5%	28480	9140-0237
A1A1L6	9140-0137	1	COIL:FXD RF 1000 UH 5%	28480	9140-0137
A1A1L7	9140-0096	1	COIL/CHOKE 1.00 UH 10%	99800	1537-12
A1A1O1	1854-0009	16	TSTR:SI NPN	80131	2N709
A1A1O2	1854-0009		TSTR:SI NPN	80131	2N709
A1A1O3	1854-0009		TSTR:SI NPN	80131	2N709
A1A1O4	1854-0009		TSTR:SI NPN	80131	2N709
A1A1O5	1854-0009		TSTR:SI NPN	80131	2N709
A1A1O6	1854-0009		TSTR:SI NPN	80131	2N709
A1A1O7	1854-0009		TSTR:SI NPN	80131	2N709
A1A1O8	1854-0009		TSTR:SI NPN	80131	2N709
A1A1O9	1854-0009		TSTR:SI NPN	80131	2N709
A1A1O10	1854-0009		TSTR:SI NPN	80131	2N709
A1A1O11	1854-0009		TSTR:SI NPN	80131	2N709
A1A1O12	1854-0009		TSTR:SI NPN	80131	2N709
A1A1O13	1854-0009		TSTR:SI NPN	80131	2N709
A1A1O14	1854-0009		TSTR:SI NPN	80131	2N709
A1A1O15	1854-0009		TSTR:SI NPN	80131	2N709
A1A1O16	1854-0009		TSTR:SI NPN	80131	2N709
A1A1O17	1854-0013	2	TSTR:SI NPN	80131	2N2218A
A1A1O18	1854-0092	4	TSTR:SI NPN	80131	2N3563
A1A1O19	1854-0013		TSTR:SI NPN	80131	2N2218A
A1A1O20	1854-0035	1	TSTR:SI NPN	28480	1854-0035
A1A1O21	1854-0092		TSTR:SI NPN	80131	2N3563
A1A1O22	1854-0092		TSTR:SI NPN	80131	2N3563
A1A1O23	1854-0023	2	TSTR:SI NPN(SELECTED FROM 2N2484)	28480	1854-0023
A1A1O24	1854-0003	2	TSTR:SI NPN(SELECTED FROM 2N1711)	28480	1854-0003
A1A1O25	1854-0003		TSTR:SI NPN(SELECTED FROM 2N1711)	28480	1854-0003
A1A1O26	1854-0082		TSTR:SI NPN	80131	2N3563
A1A1O27	1854-0023		TSTR:SI NPN(SELECTED FROM 2N2484)	28480	1854-0023
A1A1R1	0757-0900	3	R:FXD NET FLM 100 OHM 2% 1/8W	28480	0757-0900
A1A1R2	0698-3633	1	R:FXD NET GR 390 OHM 5% 2W	28480	0698-3633
A1A1R3	0757-0924	23	R:FXD NET FLM 1K OHM 2% 1/8W	28480	0757-0924

See introduction to this section for ordering information

Table 7-4. A1 Synthesizer Assembly Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
AI1A14	0757-0924		RIFXD NET FLM 1K OHM 2% 1/8W	28480	0757-0924
AI1A15	0757-0924		RIFXD NET FLM 1K OHM 2% 1/8W	28480	0757-0924
AI1A16	0757-0924		RIFXD NET FLM 1K OHM 2% 1/8W	28480	0757-0924
AI1A17	0757-0928	8	RIFXD FLM 1.5K OHM 2% 1/8W	28480	0757-0928
AI1A18	0757-0928		RIFXD FLM 1.5K OHM 2% 1/8W	28480	0757-0928
AI1A19	0757-0935	6	RIFXD FLM 3K OHM 2% 1/8W	28480	0757-0935
AI1A110	0757-0938	6	RIFXD FLM 3.9K OHM 2% 1/8W	28480	0757-0938
AI1A111	0757-0972	4	RIFXD FLM 100K OHM 2% 1/8W	28480	0757-0972
AI1A112	0757-0935		RIFXD FLM 3K OHM 2% 1/8W	28480	0757-0935
AI1A113	0757-0924		RIFXD NET FLM 1K OHM 2% 1/8W	28480	0757-0924
AI1A114	0757-0928		RIFXD FLM 1.5K OHM 2% 1/8W	28480	0757-0928
AI1A115	0757-0935		RIFXD FLM 3K OHM 2% 1/8W	28480	0757-0935
AI1A116	0757-0924		RIFXD NET FLM 1K OHM 2% 1/8W	28480	0757-0924
AI1A117	0757-0928		RIFXD FLM 1.5K OHM 2% 1/8W	28480	0757-0928
AI1A118	0757-0938		RIFXD FLM 3.9K OHM 2% 1/8W	28480	0757-0938
AI1A119	0757-0931	6	RIFXD FLM 2K OHM 2% 1/8W	28480	0757-0931
AI1A120	0757-0931		RIFXD FLM 2K OHM 2% 1/8W	28480	0757-0931
AI1A121	0757-0924		RIFXD NET FLM 1K OHM 2% 1/8W	28480	0757-0924
AI1A122	0757-0938		RIFXD FLM 3.9K OHM 2% 1/8W	28480	0757-0938
AI1A123	0757-0938		RIFXD FLM 3.9K OHM 2% 1/8W	28480	0757-0938
AI1A124	0757-0972		RIFXD FLM 100K OHM 2% 1/8W	28480	0757-0972
AI1A125	0757-0924		RIFXD NET FLM 1K OHM 2% 1/8W	28480	0757-0924
AI1A126	0757-0935		RIFXD FLM 3K OHM 2% 1/8W	28480	0757-0935
AI1A127	0757-0941	1	RIFXD FLM 5.1K OHM 2% 1/8W	28480	0757-0941
AI1A128	0757-0924		RIFXD NET FLM 1K OHM 2% 1/8W	28480	0757-0924
AI1A129	0757-0948	6	RIFXD FLM 10K OHM 2% 1/8W	28480	0757-0948
AI1A130	0757-0924		RIFXD NET FLM 1K OHM 2% 1/8W	28480	0757-0924
AI1A131	0757-0928		RIFXD FLM 1.5K OHM 2% 1/8W	28480	0757-0928
AI1A132	0757-0928		RIFXD FLM 1.5K OHM 2% 1/8W	28480	0757-0928
AI1A133	0757-0924		RIFXD NET FLM 1K OHM 2% 1/8W	28480	0757-0924
AI1A134	0757-0931		RIFXD FLM 2K OHM 2% 1/8W	28480	0757-0931
AI1A135	0757-0924		RIFXD NET FLM 1K OHM 2% 1/8W	28480	0757-0924
AI1A136	0757-0938		RIFXD FLM 3.9K OHM 2% 1/8W	28480	0757-0938
AI1A137	0757-0938		RIFXD FLM 3.9K OHM 2% 1/8W	28480	0757-0938
AI1A138	0757-0924		RIFXD NET FLM 1K OHM 2% 1/8W	28480	0757-0924
AI1A139	0757-0972		RIFXD FLM 100K OHM 2% 1/8W	28480	0757-0972
AI1A140	0757-0924		RIFXD NET FLM 1K OHM 2% 1/8W	28480	0757-0924
AI1A141	0757-0935		RIFXD FLM 3K OHM 2% 1/8W	28480	0757-0935
AI1A142	0757-0924		RIFXD NET FLM 1K OHM 2% 1/8W	28480	0757-0924
AI1A143	0757-0948		RIFXD FLM 10K OHM 2% 1/8W	28480	0757-0948
AI1A144	0757-0900		RIFXD NET FLM 100 OHM 2% 1/8W	28480	0757-0900
AI1A145	0757-0924		RIFXD NET FLM 1K OHM 2% 1/8W	28480	0757-0924
AI1A146	0757-0928		RIFXD FLM 1.5K OHM 2% 1/8W	28480	0757-0928
AI1A147	0757-0924		RIFXD NET FLM 1K OHM 2% 1/8W	28480	0757-0924
AI1A148	0757-0928		RIFXD FLM 1.5K OHM 2% 1/8W	28480	0757-0928
AI1A149	0757-0931		RIFXD FLM 2K OHM 2% 1/8W	28480	0757-0931
AI1A150	0757-0924		RIFXD NET FLM 1K OHM 2% 1/8W	28480	0757-0924
AI1A151	0757-0948		RIFXD FLM 10K OHM 2% 1/8W	28480	0757-0948
AI1A152	0757-0924		RIFXD NET FLM 1K OHM 2% 1/8W	28480	0757-0924
AI1A153	0757-0931		RIFXD FLM 2K OHM 2% 1/8W	28480	0757-0931
AI1A154	0757-0967	1	RIFXD FLM 62K OHM 2% 1/8W	28480	0757-0967
AI1A155	0757-0962	2	RIFXD FLM 39K OHM 2% 1/8W	28480	0757-0962
AI1A156	0757-0948		RIFXD FLM 10K OHM 2% 1/8W	28480	0757-0948
AI1A157	0757-0893	4	RIFXD FLM 51 OHM 2% 1/8W	28480	0757-0893
AI1A158	0757-0916	1	RIFXD NET FLM 470 OHM 2% 1/8W	28480	0757-0916
AI1A159	0757-0948		RIFXD FLM 10K OHM 2% 1/8W	28480	0757-0948
AI1A160	0757-0933	1	RIFXD FLM 2.4K OHM 2% 1/8W	28480	0757-0933
AI1A161	0757-0907	1	RIFXD FLM 200 OHM 2% 1/8W	28480	0757-0907
AI1A162	0721-0011	2	RIFXD DEPC 500K OHM 1% 1/8W	28480	0721-0011
AI1A163	0757-0910	1	RIFXD NET FLM 270 OHM 2% 1/8W	28480	0757-0910
AI1A164	0757-0931		RIFXD FLM 2K OHM 2% 1/8W	28480	0757-0931
AI1A165	0757-0969	1	RIFXD FLM 75K OHM 2% 1/8W	28480	0757-0969
AI1A166	0757-0957	1	RIFXD FLM 24K OHM 2% 1/8W	28480	0757-0957
AI1A167	0757-0893	1	RIFXD FLM 51 OHM 2% 1/8W	28480	0757-0893
AI1A168	0757-0893		RIFXD FLM 51 OHM 2% 1/8W	28480	0757-0893
AI1A169	0757-0929	3	RIFXD FLM 1.6K OHM 2% 1/8W	28480	0757-0929
AI1A170	0757-0936	1	RIFXD FLM 3.3K OHM 2% 1/8W	28480	0757-0936
AI1A171	0757-0965	1	RIFXD FLM 51K OHM 2% 1/8W	28480	0757-0965
AI1A172	0757-0972	1	RIFXD FLM 100K OHM 2% 1/8W	28480	0757-0972
AI1A173	0698-3130	3	RIFXD NET FLM 2.70 MEGOHM 1% 1/8W	28480	0698-3130
AI1A174	0698-3130		RIFXD NET FLM 2.70 MEGOHM 1% 1/8W	28480	0698-3130
AI1A175	0757-0924		RIFXD NET FLM 1K OHM 2% 1/8W	28480	0757-0924
AI1A176	0757-0929		RIFXD FLM 1.6K OHM 2% 1/8W	28480	0757-0929
AI1A177	0757-0902	1	RIFXD NET FLM 120 OHM 2% 1/8W	28480	0757-0902
AI1A178	0757-0935		RIFXD FLM 3K OHM 2% 1/8W	28480	0757-0935

See introduction to this section for ordering information.

Model 5065A  
Circuit Diagrams, Theory, and Maintenance

Table 7-4. A1 Synthesizer Assembly Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
AI1R79	0698-3129	1	R:FXD DEPC 1.00 MEGOHM 1S 1/8W	28480	0698-3129
AI1R80	0721-0011	1	R:FXD DEPC 500K OHM 1S 1/8W	28480	0721-0011
AI1R81	0757-0940	1	R:FXD FLN 33K OHM 2S 1/8W	28480	0757-0940
AI1R82	0698-3126	1	R:FXD DEPC 2.21 MEGOHM 1S 1/8W	28480	0698-3126
AI1R83	0698-3127	1	R:FXD DEPC 6.75 MEGOHM 2S 1/8W	28480	0698-3127
AI1R84	0757-0948	1	R:FXD FLN 10K OHM 2S 1/8W	28480	0757-0948
AI1R85	0757-0943	1	R:FXD FLN 6.2K OHM 2S 1/8W	28480	0757-0943
AI1R86	0698-3130	1	R:FXD NET FLN 2.70 MEGOHM 1S 1/8W	28480	0698-3130
AI1R87	0757-0950	1	R:FXD FLN 12K OHM 2S 1/8W	28480	0757-0950
AI1R88	0757-0924	1	R:FXD NET FLN 1K OHM 2S 1/8W	28480	0757-0924
AI1R89	0757-0924	1	R:FXD NET FLN 1K OHM 2S 1/8W	28480	0757-0924
AI1R90	0757-0942	1	R:FXD FLN 5.4K OHM 2S 1/8W	28480	0757-0942
AI1R91	0757-0929	1	R:FXD FLN 1.4K OHM 2S 1/8W	28480	0757-0929
AI1R92	0757-0893	1	R:FXD FLN 51 OHM 2S 1/8W	28480	0757-0893
AI1R93	0757-0934	1	R:FXD FLN 2.7K OHM 2S 1/8W	28480	0757-0934
AI1R94	0757-0962	1	R:FXD FLN 30K OHM 2S 1/8W	28480	0757-0962
AI1R95	0757-0900	1	R:FXD NET FLN 100 OHM 2S 1/8W	28480	0757-0900
AI1R96	0757-0924	1	R:FXD NET FLN 1K OHM 2S 1/8W	28480	0757-0924
AI1T1	05065-8012	1	TRANSFORMER:BLOCKING OSCILLATOR	28480	05065-8012
AI1T2	05065-8011	2	TRANSFORMER:5.3MHZ	28480	05065-8011
AI1T3	05065-8011	1	TRANSFORMER:5.3MHZ	28480	05065-8011
AI1XY1	1200-0159	1	CRYSTAL HOLDER	28480	1200-0159
AI1Y1	0410-0162	1	CRYSTAL:5.315MHZ	28480	0410-0162

See introduction to this section for ordering information

Figure 7-8. A1 Waveforms

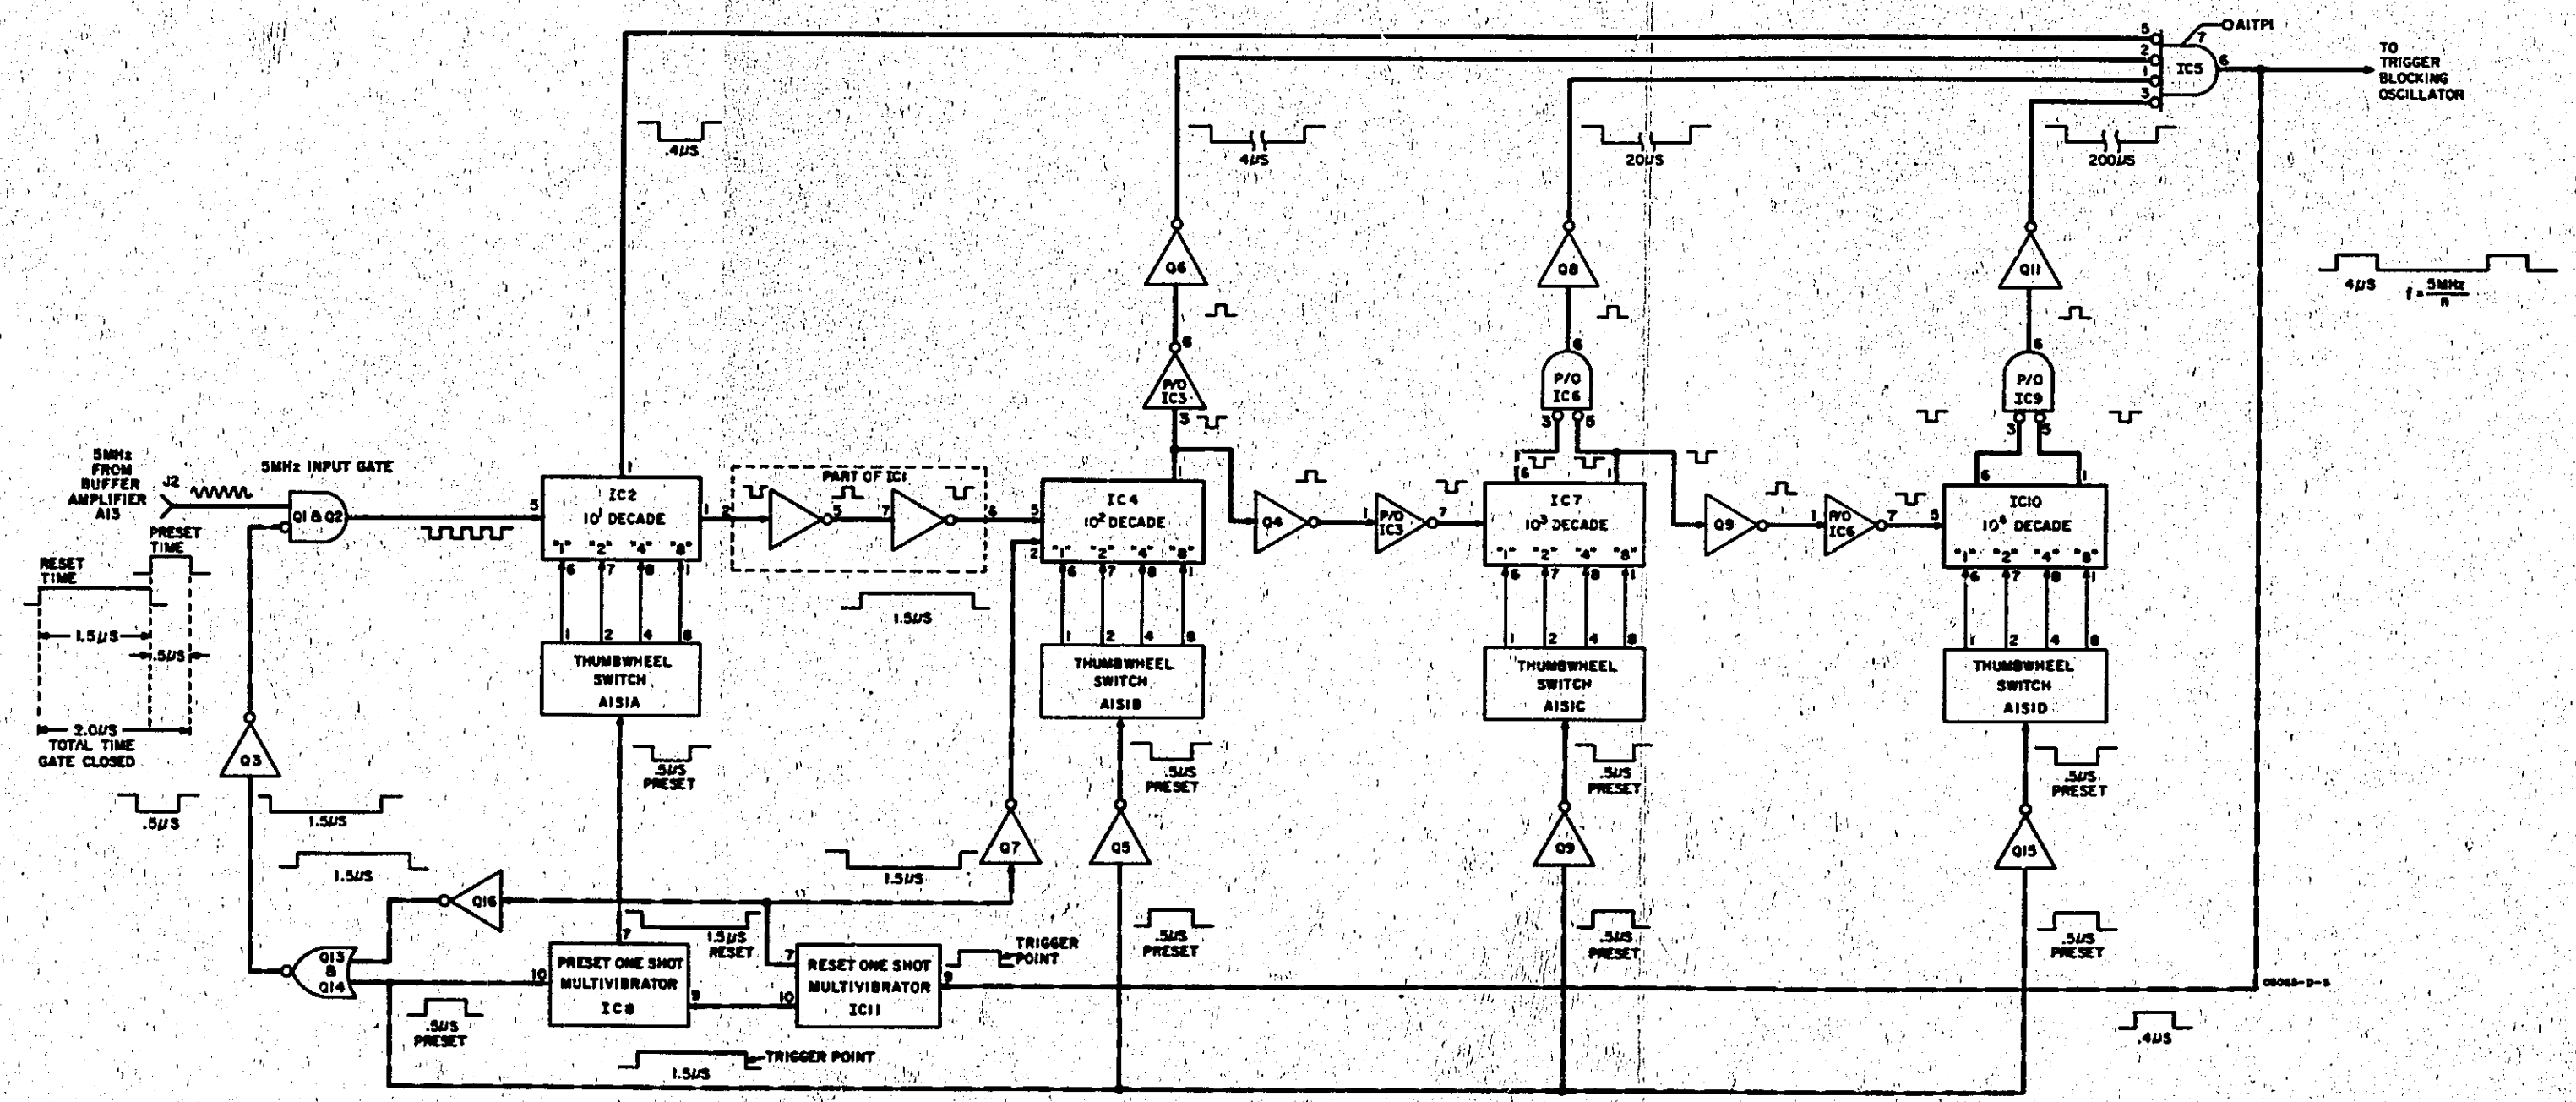
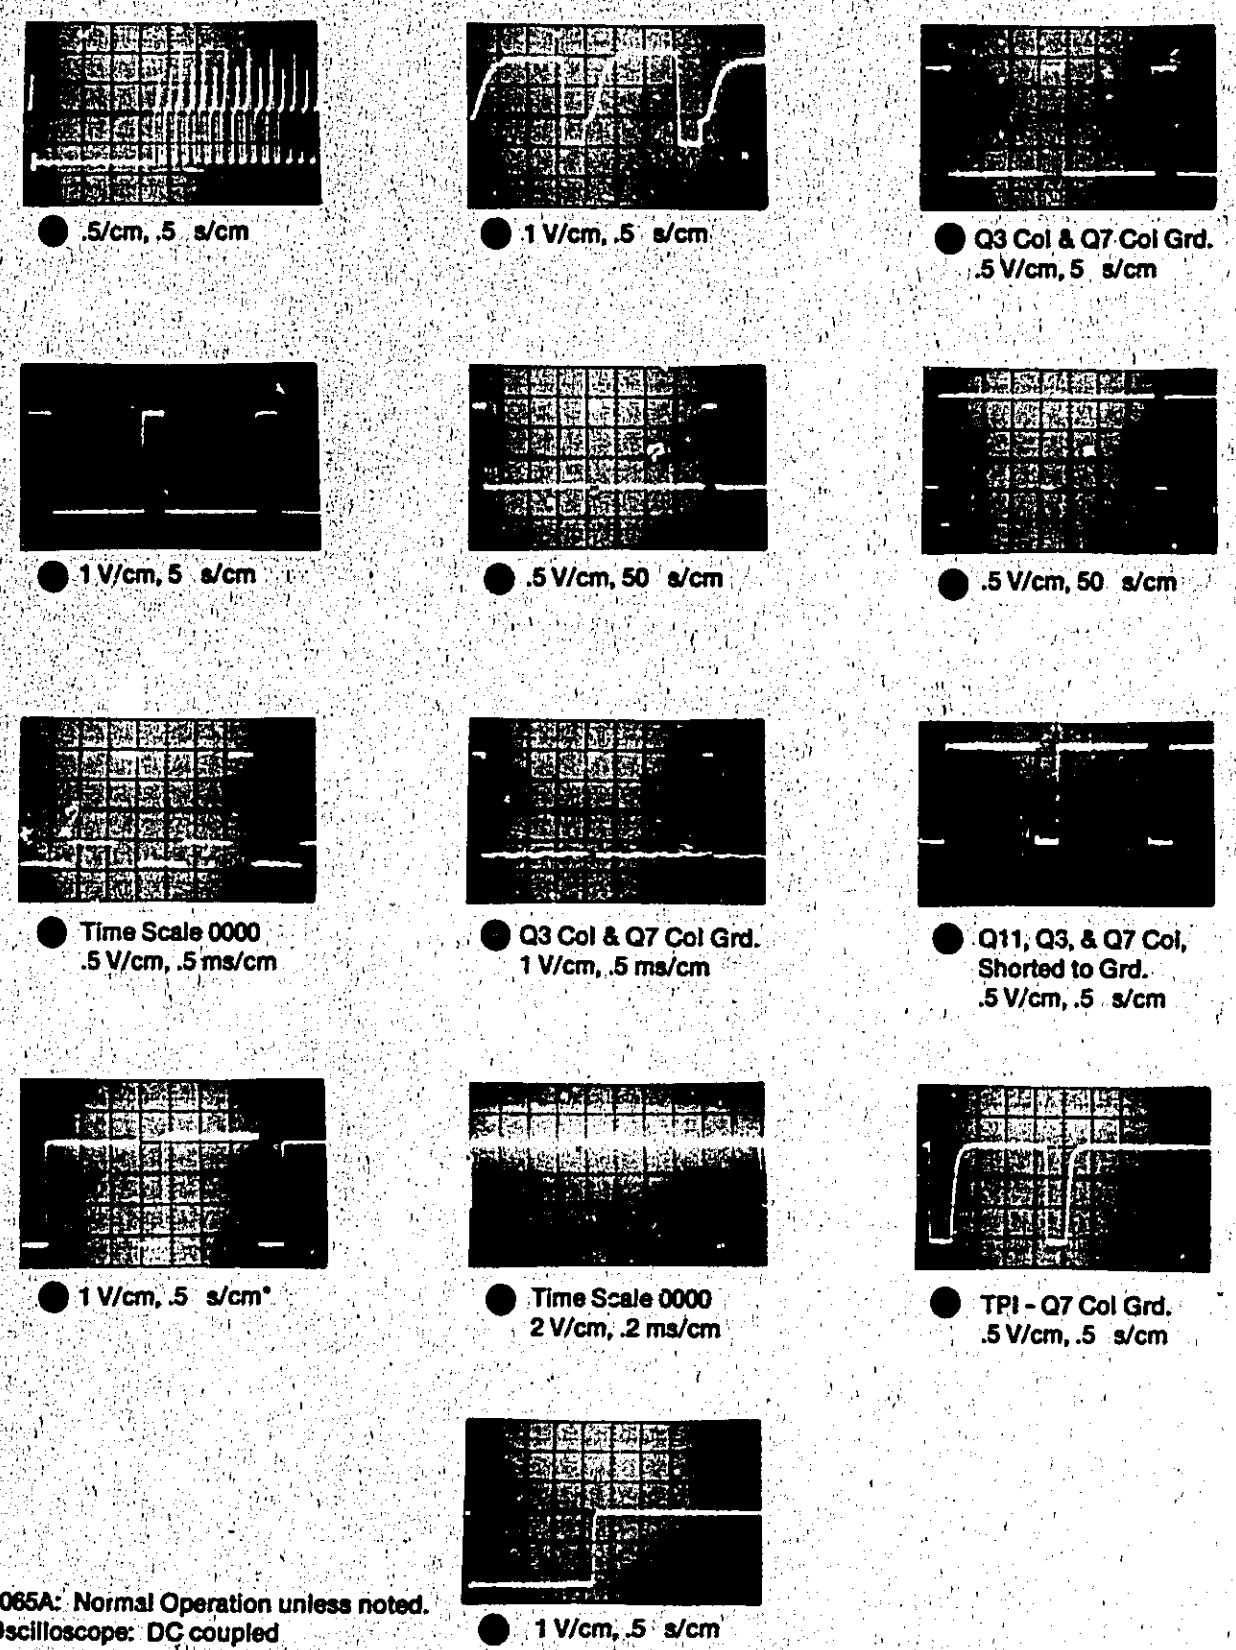


Figure 7-7. Synthesizer Assembly A1 Block Diagram

Figure 7-8. A1 Synthesizer Assembly



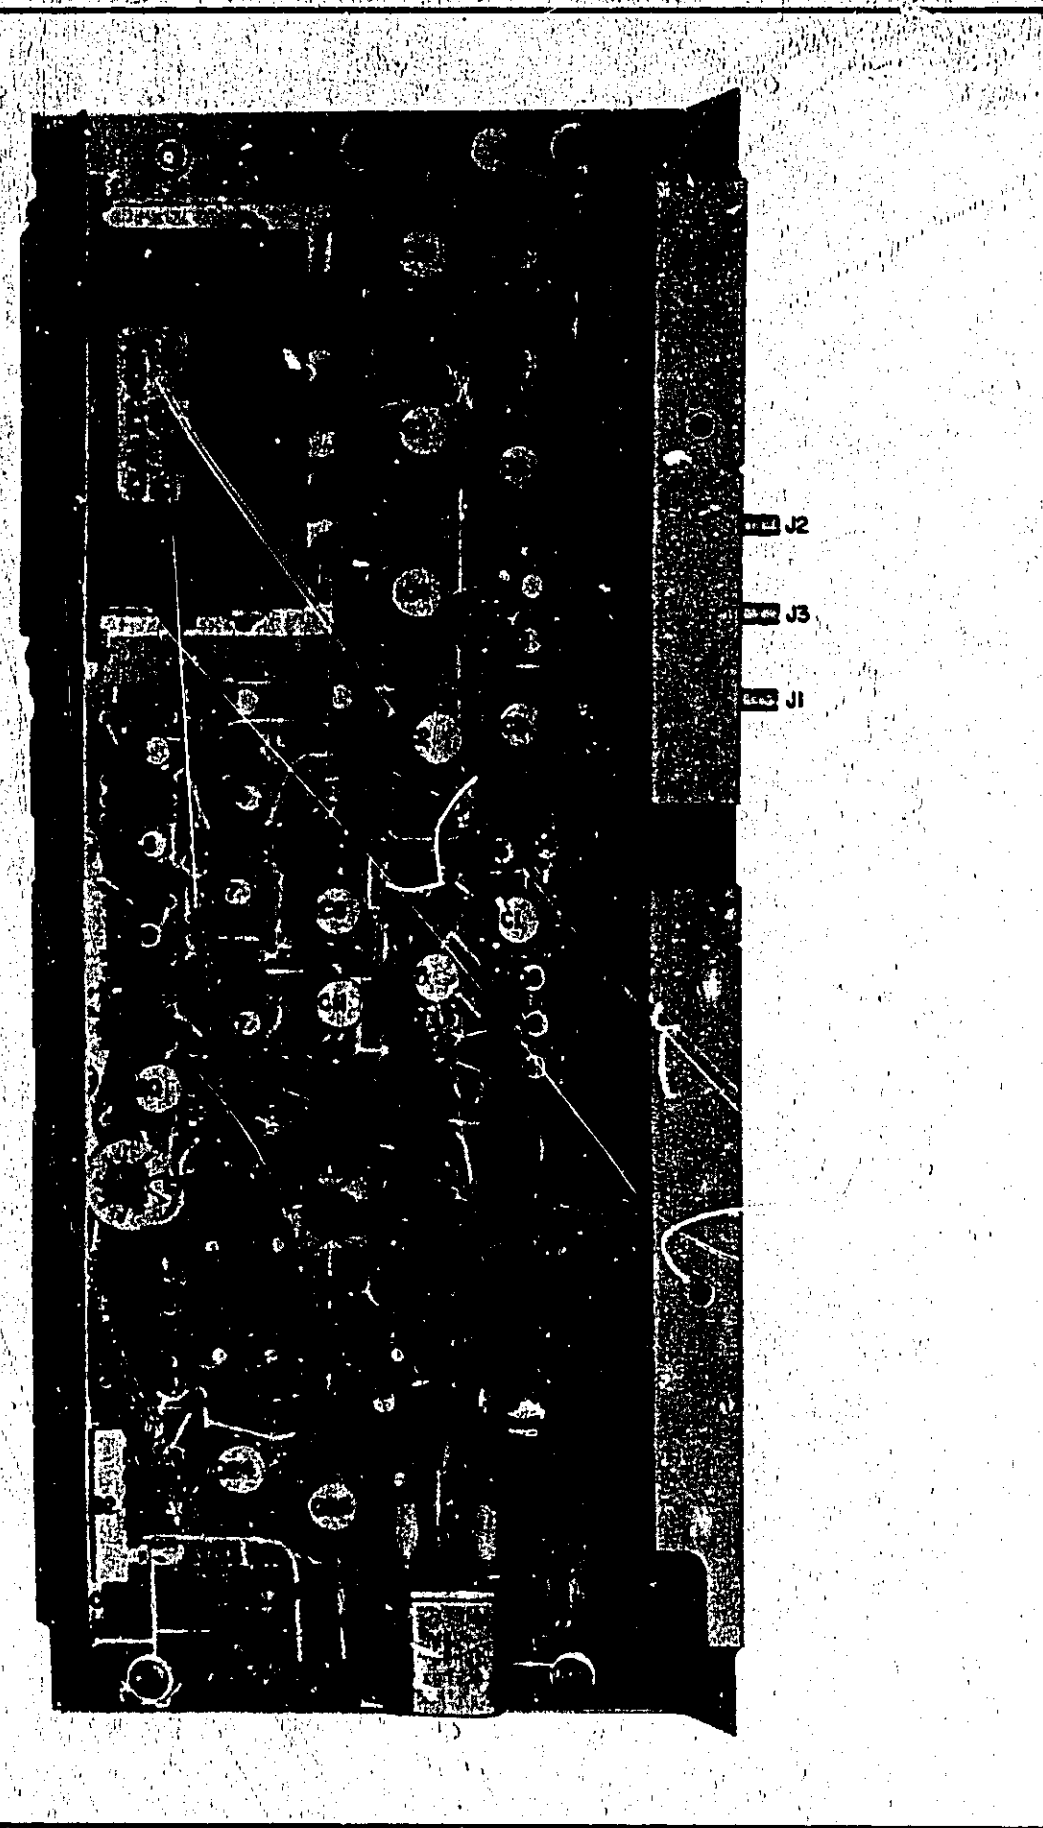


Figure 7-9. Part of A1 Synthesizer Assembly

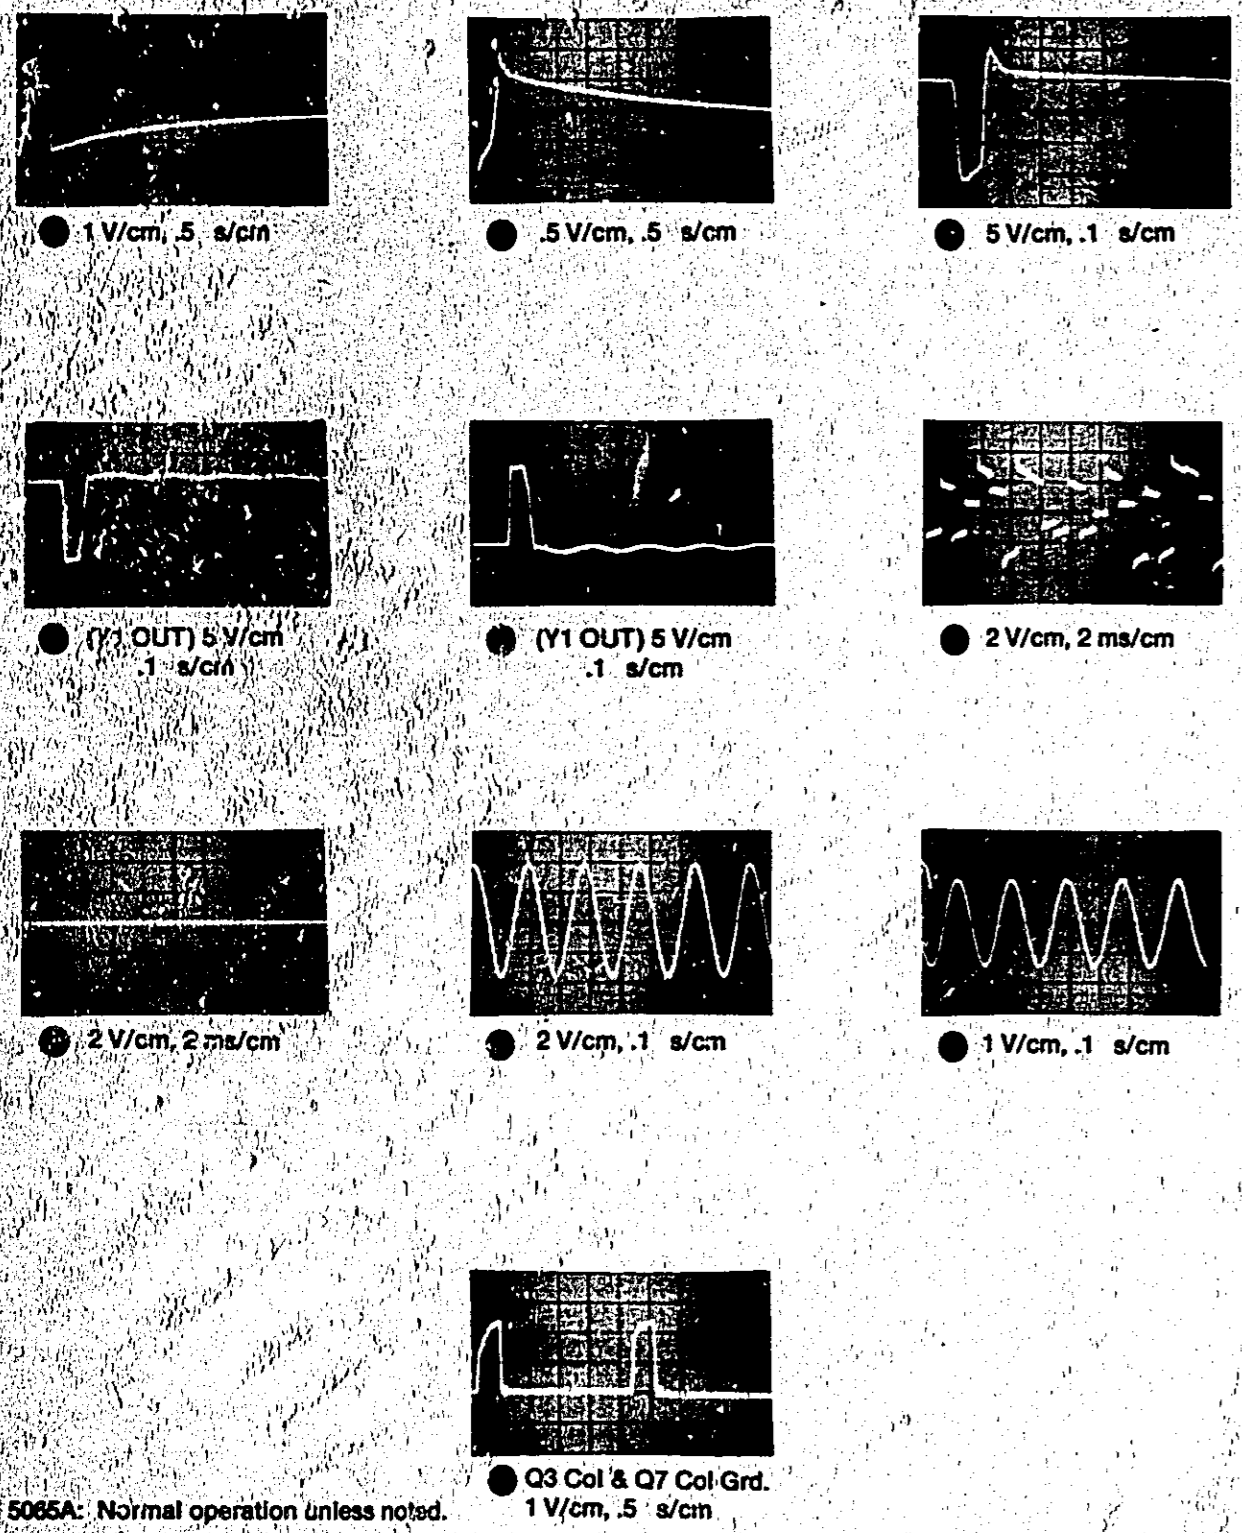Figure 7-10. A1 Waveforms



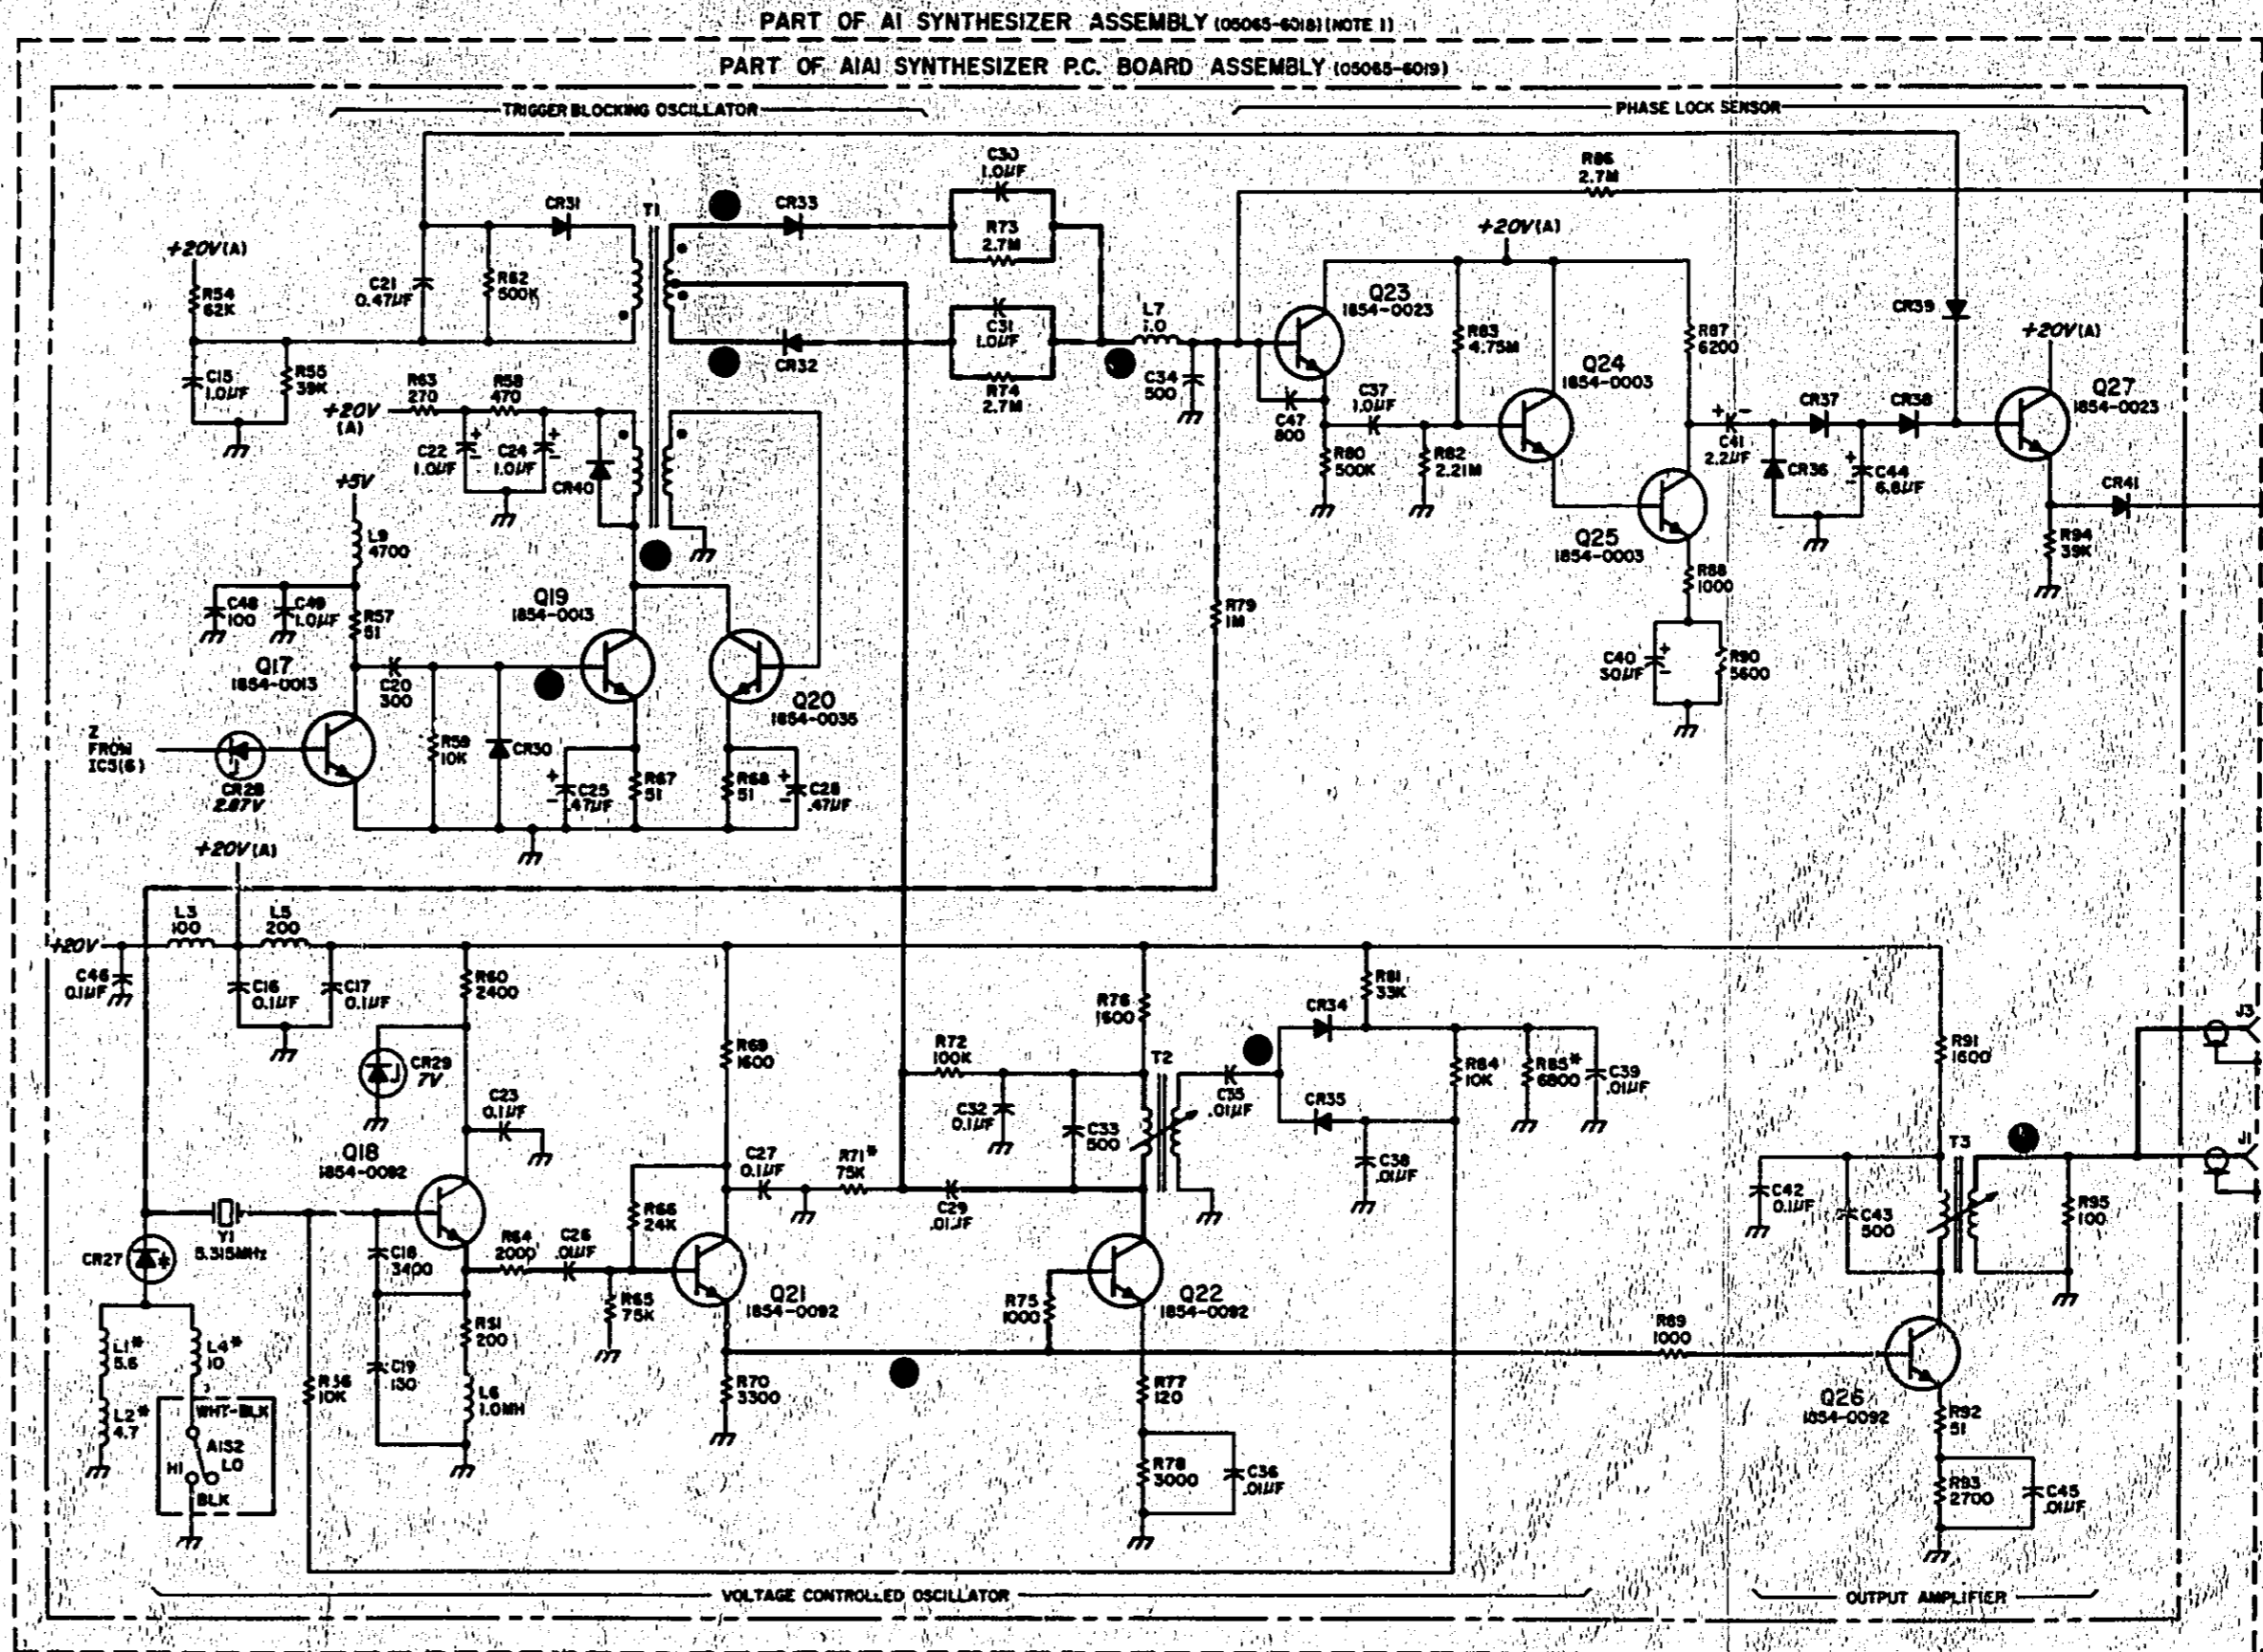5065A: Normal operation unless noted.  
Oscilloscope: DC coupled




- NOTES**
1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
  2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS; CAPACITANCE IN PICOFARADS; INDUCTANCE IN MICROHENRIES
  3. ASTERISK (\*) INDICATES SELECTED COMPONENT, AVERAGE VALUES SHOWN.
  4. SEE THUMBWHEEL SWITCH PAGE 8-10

REFERENCE DESIGNATIONS

NO PREFIX	A1	AIAI
		C1-3,15-45, 47-49
		CR1,2,27, 28-38,41
		IC1-6
	J1-3	L1-9
		Q1-4,17-27
		R1-26, 54-57, 59-95,100
	SI,2	T1-3
TPI		TPI
		V1

Figure 7-11. Synthesizer A1 Phase-Locked Oscillator Section

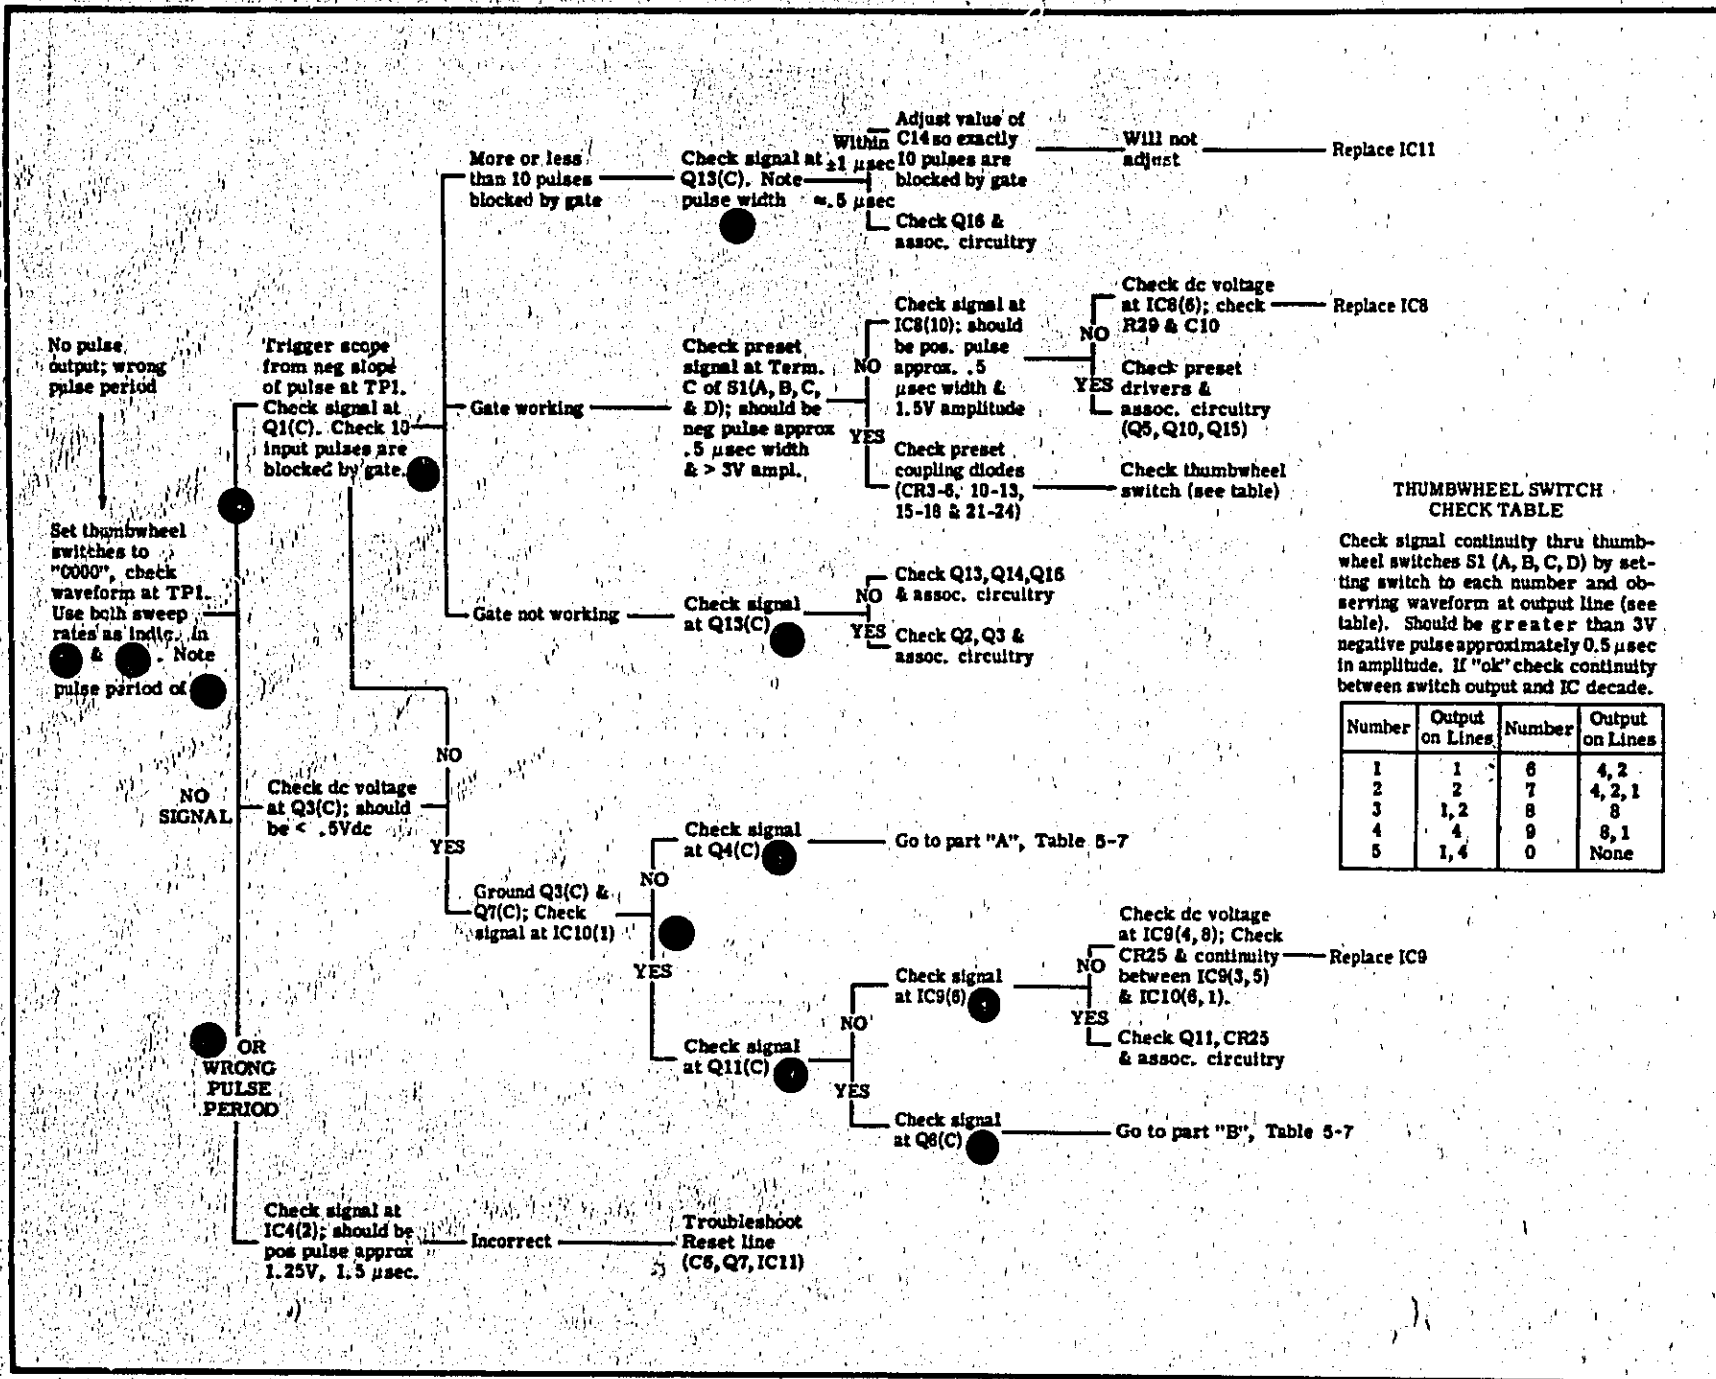Table 7-5. A1 Troubleshooting



**THUMBWHEEL SWITCH CHECK TABLE**

Check signal continuity thru thumbwheel switches S1 (A, B, C, D) by setting switch to each number and observing waveform at output line (see table). Should be greater than 3V negative pulse approximately  $0.5 \mu\text{sec}$  in amplitude. If "ok" check continuity between switch output and IC decade.

Number	Output on Lines	Number	Output on Lines
1	1	6	4, 2
2	2	7	4, 2, 1
3	1, 2	8	8
4	4	9	8, 1
5	1, 4	0	None

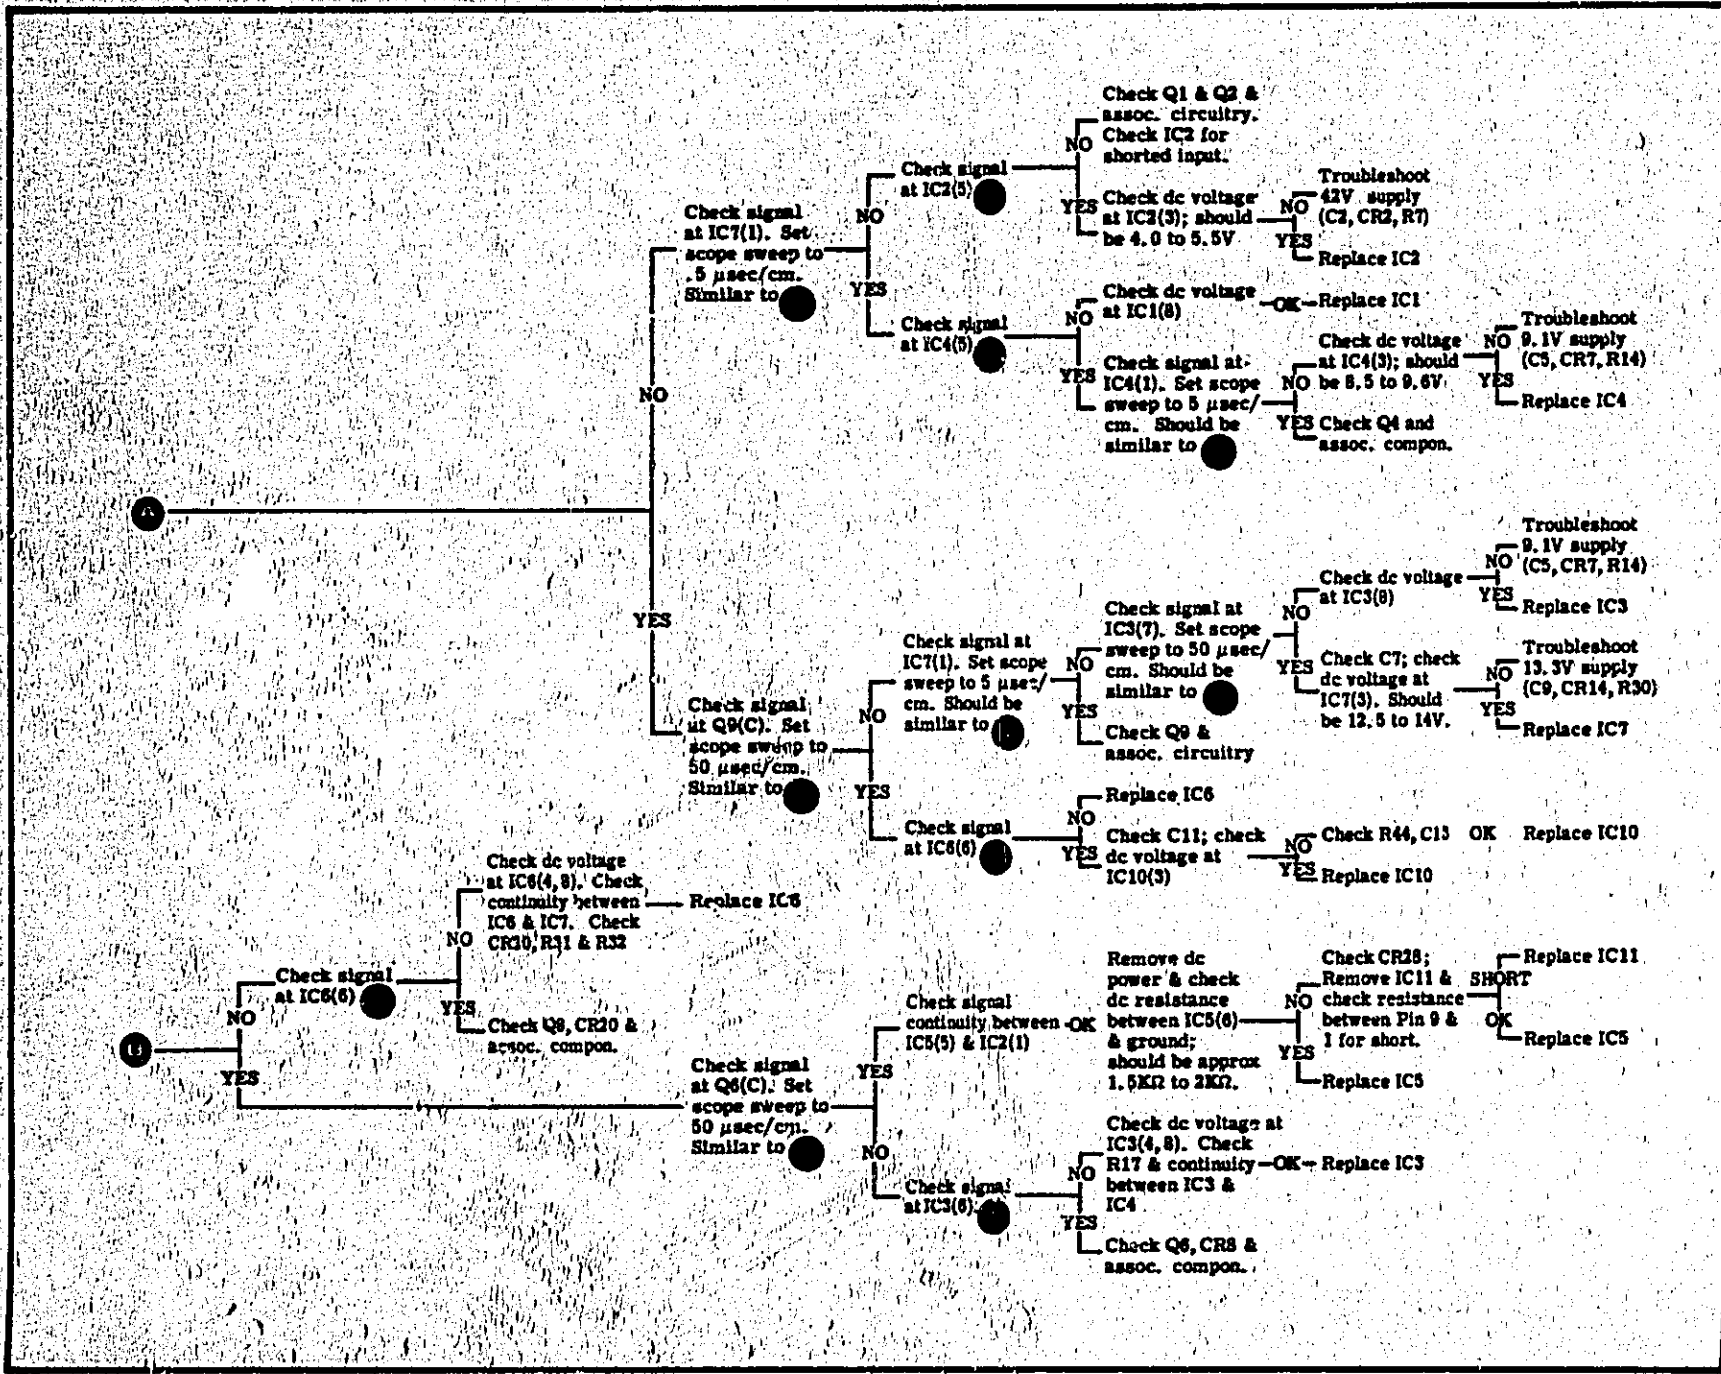


Table 7-6. A1 Troubleshooting



Table 7-7. A1 Troubleshooting


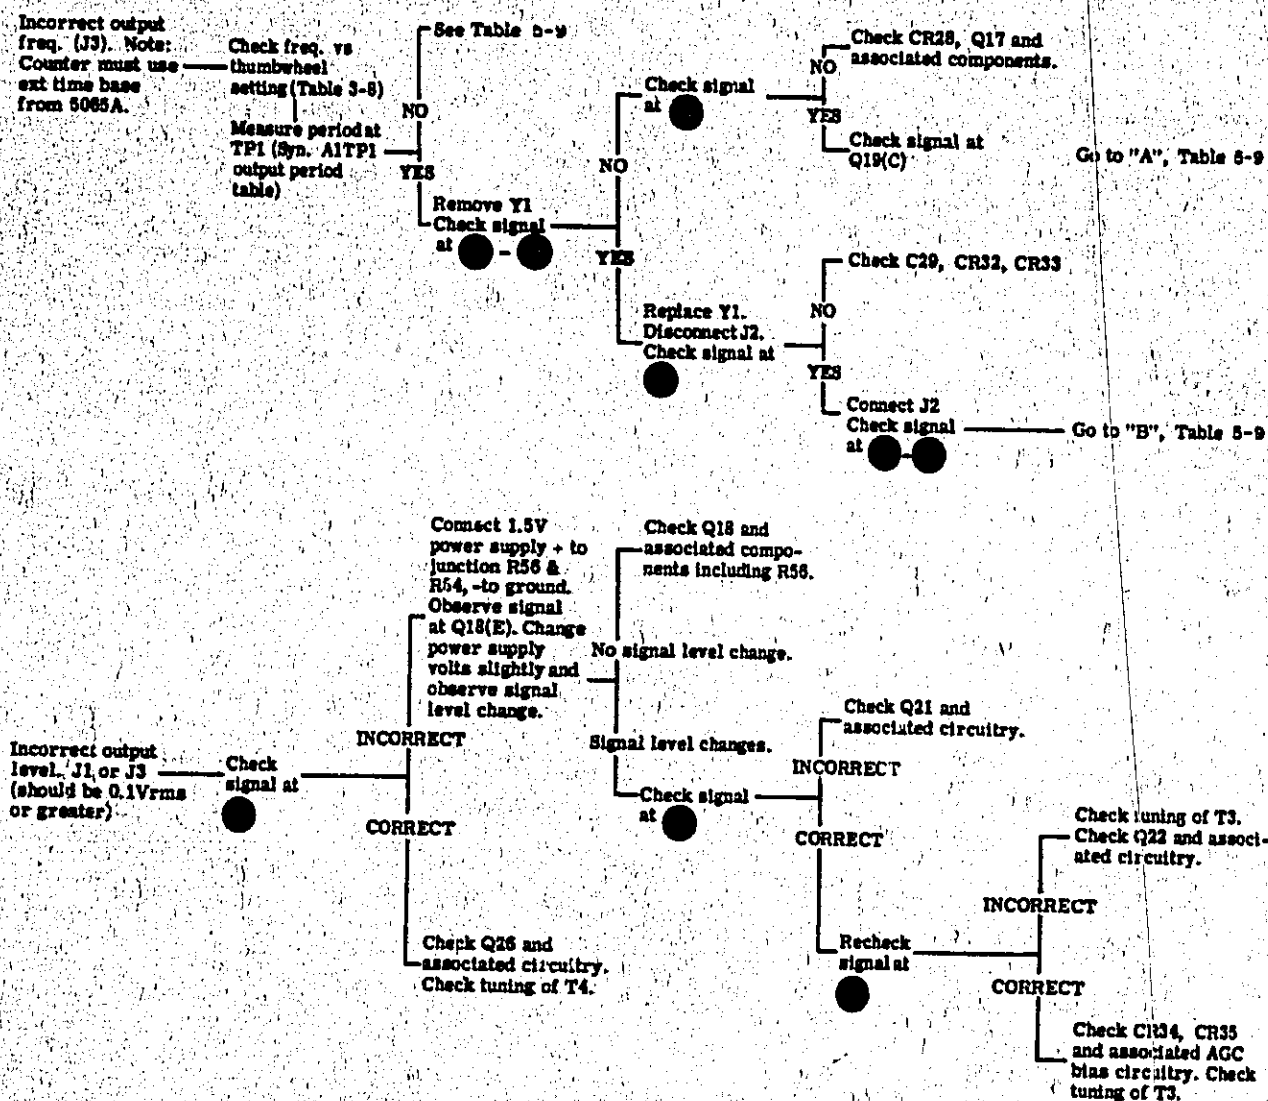


Table 7-8. A1 Troubleshooting

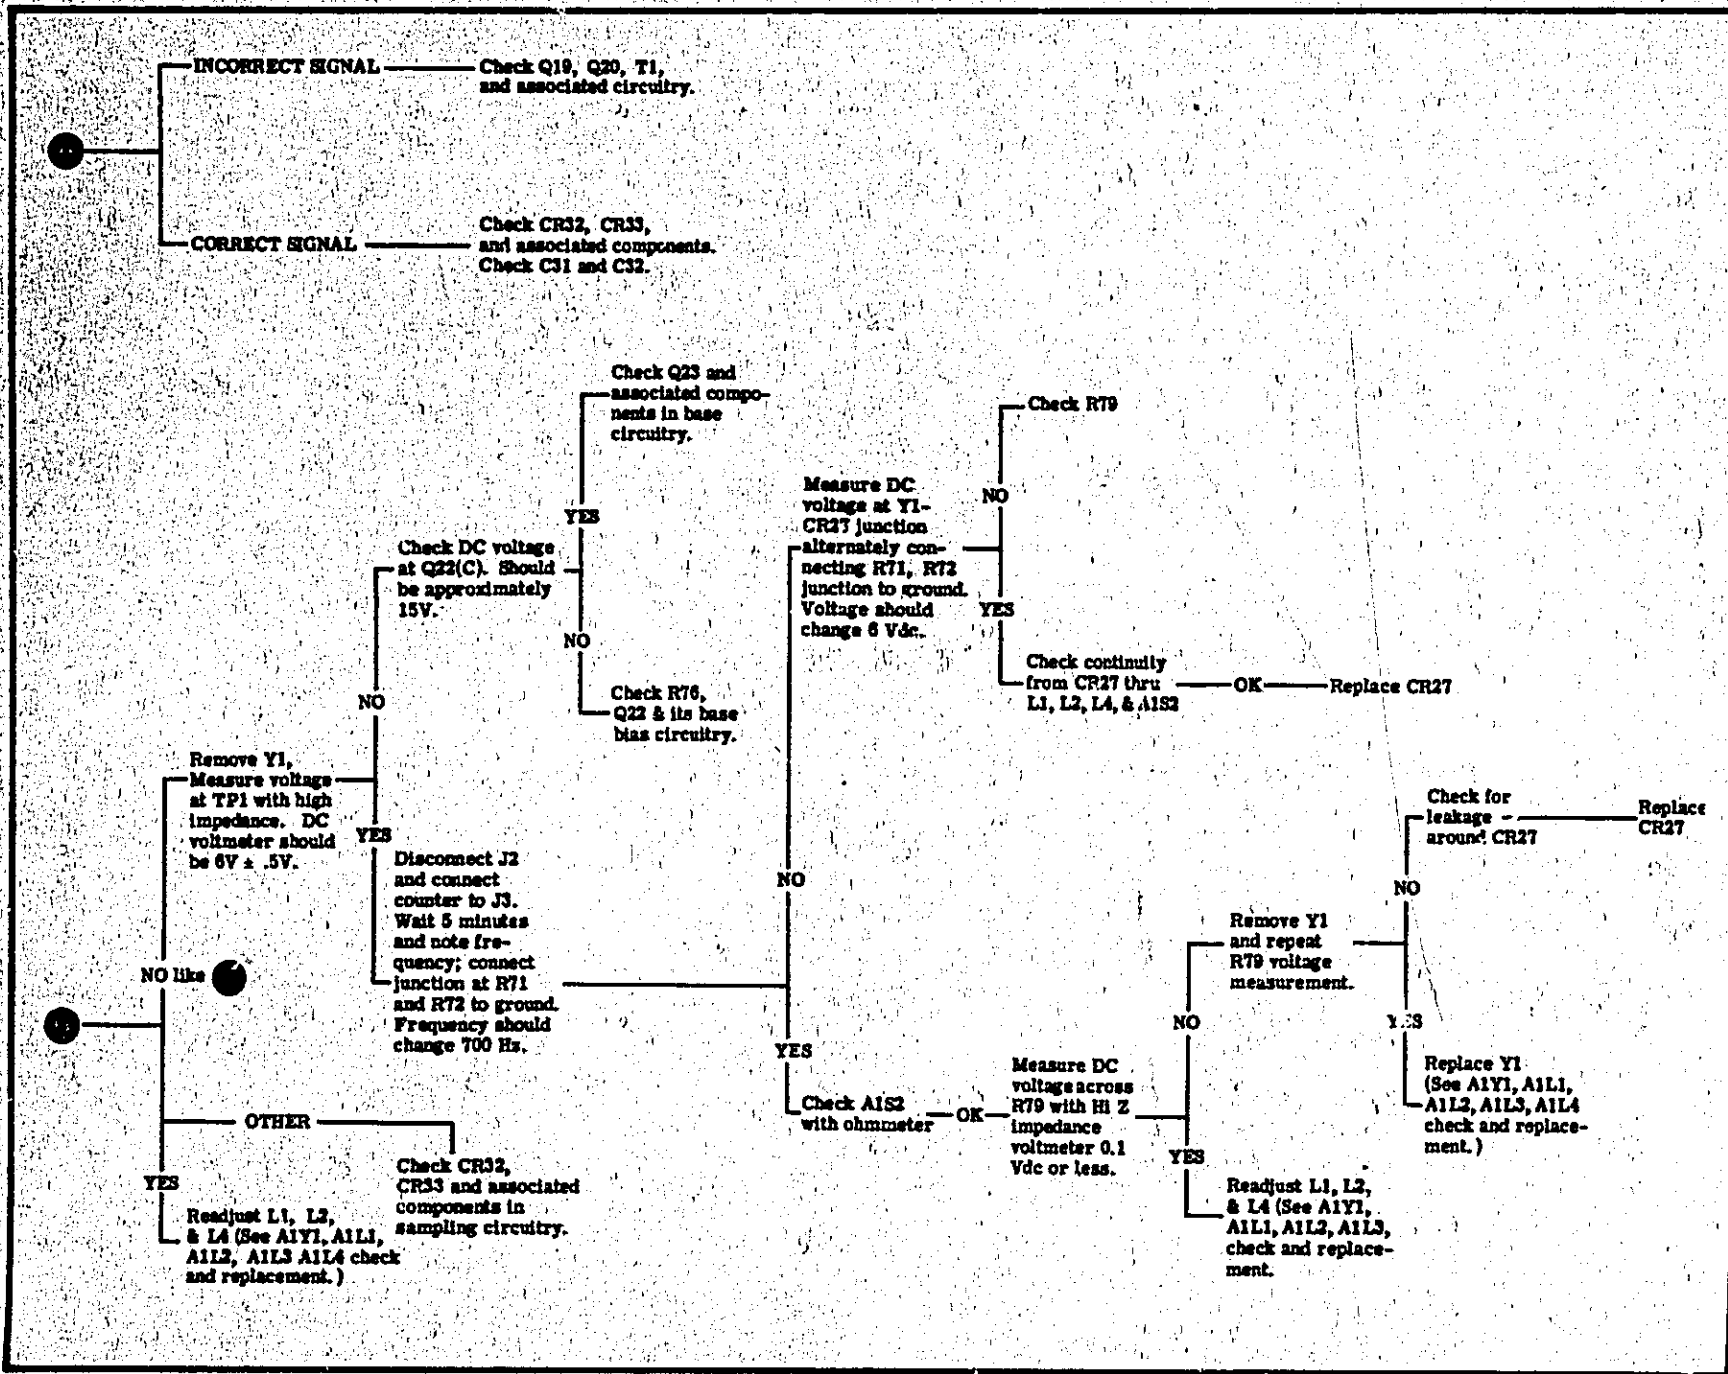

## Model 5065A

### Circuit Diagrams, Theory, and Maintenance

#### AC AMPLIFIER A7 THEORY

The Ac Amplifier is a low noise, high gain amplifier. This amplifier receives a low-level signal from A12 RVFR Assembly and provides an ac output proportional to amplitude and phase of the fundamental frequency of the input signal. At resonance, the input contains a large amount of 274 Hz second harmonic and a small amount of 137 Hz fundamental. The amplified 137 Hz fundamental is separated from the second harmonic, amplified, and applied to A8 Phase Detector Assembly. The 137 Hz output is also routed to A14 Logic Assembly as one logic input. The 274 Hz second harmonic is amplified, rectified, and routed to A14 Assembly as another logic input. These logic inputs are two of the signals which control the CONTINUOUS OPERATION lamp on the front panel. The Ac Amplifier also furnishes PHOTO 1 and 2ND HARMONIC inputs to the CIRCUIT CHECK meter.

The input signal, some 137 Hz but mostly 274 Hz at resonance, couples through J1. Input stage Q1 and Q2 form a low noise differential amplifier which feeds the push-pull inputs of IC1 that provides high gain. Note that the input at IC1(2) is ac-shunted to ground by C4. Thus the ac input to IC1 is single ended while the dc input is a balanced differential input. In addition, the feedback from IC1(8) to Q1 base treats ac and dc separately. This technique results in a preamplifier circuit that constitutes a transfer impedance; i.e., input is current and output is voltage. This impedance amounts to  $2 \times 10^7$  ohms for ac and  $10^8$  ohms for dc. Thus for a  $1 \mu$  a input signal, the output voltage is  $10^{-6} \times 2 \times 10^7 = 20$  volts. R3 adjusts the input to zero volts dc. Zeners CR1 and CR2 provide +14.7 volts for IC1. Feedback to Q1 base restricts frequency response to approximately 6 kHz.

There are three IC1 outputs: (1) the twin-T filter connecting to Q5 and Q6, (2) the 2nd harmonic adjustment R19 and, (3) TP2 and the connection through A17(6) to the PHOTO 1 position of the CIRCUIT CHECK meter. The twin-T filter circuit works with Q5 and Q6 to give sharp rejection to the 274 Hz component of the input signal. The filtered 137 Hz component is amplified in IC2 and routed to A8 Phase Detector Assembly. Q8 serves to impedance match the notch filter circuit to the loop gain control R32. With R32 properly set, the ac amplifier (Q8, R32, and IC2) gain is about 40 dB. Zeners Q6 and Q7 provide  $\pm 9.1$  volts for IC2. Dc feedback from IC2(8) to IC2(2) sets IC2 gain.

The signal at 2nd harmonic adjustment R19 (which is mostly 274 Hz at resonance) is amplified, rectified, and then dc amplified in the 2nd harmonic detector circuit for a logic output to A14 Logic Assembly. Q3 and Q7 act

as forward amplifiers, with Q4 functioning as a feedback amplifier. The RC components in Q7 collector circuit provide frequency compensation. Diodes CR4 and CR5 provide a rectified dc proportional to the input. Emitter follower Q9 feeds the 2nd harmonic output to the A14 Logic Assembly.

#### A7 MAINTENANCE

##### NORMAL OPERATION

a. Preamplifier A7Q1, Q2, and IC1 act as a transfer impedance, i.e. this circuit is designed to work from a current source and deliver a voltage output proportional to the current input. The equivalent transfer impedance of this preamplifier circuit is  $2 \times 10^7$  ohms for ac signals and  $10^8$  for dc signals.

b. The notch filter circuit is set to notch out the second harmonic content of the modulation frequency (274 Hz).

c. The ac amplifier circuit of Q8 and IC2 has a gain of 40 dB adjustable by R32.

d. The second harmonic detector circuit amplifies and detects the preamplifier output, which is mostly 274 Hz at resonance. The dc output of this circuit routes to A14 Logic Assembly and to the 2ND HARMONIC position of the CIRCUIT CHECK switch.

##### OPERATIONAL CHECK

###### NOTE

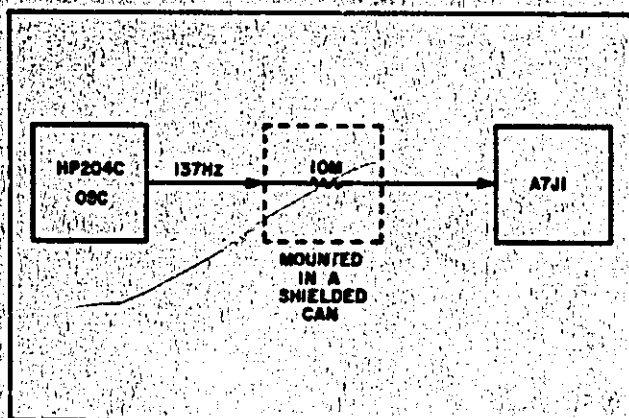
This check need only be performed if trouble is suspected in the A7 Assembly.

a. A quick check of the A7 Assembly can be made by monitoring the output (yellow lead) with an oscilloscope, removing the input cable from A7J1 and, using a small metal tool, touching the center conductor of A7J1. The hum signal thus induced will cause a saturated or clipped signal to appear on the oscilloscope. This maximum signal output will peg the CIRCUIT CHECK meter when switched to 2ND HARMONIC.

b. A more precise test can be made by use of the following procedure.

- 1) Set up equipment as shown in A7 Test Setup. Use Micoh-to-BNC test cable that is supplied, for the connection to A7J1.
- 2) Set oscillator frequency to 137 Hz and output level to .5 V peak-to-peak.

A7 Test Setup



- 3) Connect oscilloscope to A7TP2. Output should be about 1V peak-to-peak.
- 4) Connect oscilloscope to A7TP1. Signal should be about 0.5 V peak-to-peak.
- 5) Connect oscilloscope to A7 output (yellow lead). Signal gain at this point with respect to the signal level at A7TP1 can be varied from zero to approximately 100 by R32. With R32 set for proper loop gain, the A7 output signal will be roughly 10 to 40 times the signal at A7TP1.
- 6) Set CIRCUIT/CHECK meter switch to 2ND HARMONIC. Reduce oscillator output and allowing for a time lag, note the CIRCUIT CHECK meter response. Meter should follow oscillator level setting. This procedure checks the second harmonic detector circuit of the A7 Assembly.

- 7) Remove the test setup and oscilloscope connections. Using the Micon-to-BNC test cable provided, connect a dc voltmeter to A7J1. DC voltage at this point should not exceed  $\pm 5$  mV. Excessive dc voltage at this point will result in a noisy solar cell (A12 RVFR Assembly) output. Adjust A7R3 to bring this voltage below  $\pm 5$  mV if required.
- 8) Remove test cable and dc voltmeter. Reconnect cable from A12 Assembly to A7J1.

#### TROUBLESHOOTING AND REPAIR

- a. If any components in the preamplifier circuit are replaced, connect a voltmeter to A7Q1 base and adjust A7R3 for less than 0.5 mV at this point.
- b. After any repairs to A7 Assembly, adjust A7R32 as described in Section 5-30, LOOP GAIN ADJUSTMENT.

#### MODULE REPLACEMENT

If the A7 Assembly is replaced with either a repaired or new Assembly, set A7R3 as described in the preceding section TROUBLESHOOTING AND REPAIR. Also A7R32, the loop gain adjustment, should be adjusted as described in Section 5-30, LOOP GAIN ADJUSTMENT. Perform adjustments outlined in Paragraphs 5-27 to 5-31.

Table 7-9. A7 AC Amplifier Assembly Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A7	05065-6010	1	MODULAR ASSY: AC AMPLIFIER	28480	05065-6010
A7A1	1250-8829	1	CONNECTOR: RF 50-OMH SCREW ON TYPE	98291	50-045-4610
A7	0340-0119	1	INSULATED FEED THRU: TEFLON	98291	FT-SM-023-P20
A7	05065-0032	1	COVER: SIGNAL AMPLIFIER	28480	05065-0032
A7	05065-0033	1	CHASSIS: SIGNAL AMPLIFIER	28480	05065-0033
A7	05065-2024	1	PLATE: E1D	28480	05065-2024
ATA1	05045-6011	1	BOARD ASSY: SIGNAL AMPLIFIER	23480	05065-6011
ATA1C1	0180-0114	1	CIFXD ELECT 4.8 UF 10% 35VDCM	56289	1500685X9035B2-OYS
ATA1C2	0180-0168	4	CIFXD ELECT 80 UF 20% 6VDCM	28480	0180-0168
ATA1C3	0160-0340	2	CIFXD NICA 600 PF 1% CIFXD ELECT 1.0 UF 10% 35VDCM	28480	0160-0340
ATA1C4	0180-0291	1	CIFXD ELECT TA 100UF +20-15% 30VDCM	56289	1500105X9035A2-OYS
ATA1C5	0160-0340	1	CIFXD NICA 600 PF 1%	56289	1090107C2030T2
ATA1C6	0160-0158	1	CIFXD NY 0.0056 UF 10% 200VDCM	28480	0160-0340
ATA1C7	0140-0220	1	CIFXD NICA 5.0 PF 1% 10% 30VDCM	56289	192P54292-PTS
ATA1C8	0140-0220	1	CIFXD NICA 5.0 PF 1% 10% 30VDCM	28480	0140-0220
ATA1C9	0170-0086	1	CIFXD NY 0.22UF 20% 50VDCM	84411	601PE STYLE 3
ATA1C10	0130-0197	3	CIFXD ELECT 2.2 UF 10% 20VDCM	56289	1500225X9020A2-OYS
ATA1C11	0170-0091	2	CIFXD POLY 0.01213 UF 2% 50VDCM	56289	P146504 PYP
ATA1C12	0170-0090	1	CIFXD POLY 0.0292 UF 1% 50VDCM	56289	P246505 PYP
ATA1C13	0170-0091	1	CIFXD POLY 0.01213 UF 2% 50VDCM	56289	P146504 PYP
ATA1C14	0180-0160	1	CIFXD ELECT 22 UF 20% 35VDCM	28480	0180-0160
ATA1C15	0150-0093	1	CIFXD CER 0.01 UF +80-20% 100VDCM	72982	801-K800011
ATA1C16	0180-0197	1	CIFXD ELECT 2.2 UF 10% 20VDCM	56289	1500225X9020A2-OYS
ATA1C17	0160-0168	1	CIFXD NY 0.1 UF 10% 200VDCM	56289	192P10492-PTS
ATA1C18	0180-0098	1	CIFXD ELECT 100 UF 20% 20VDCM	56289	1500107X0020C2-OYS
ATA1C19	0180-0106	1	CIFXD ELECT 80 UF 20% 4VDCM	28430	0180-0106
ATA1C20	0180-0106	1	CIFXD ELECT 2.2 UF 10% 20VDCM	56289	1500225X9020A2-OYS
ATA1C21	0180-0106	1	CIFXD ELECT 80 UF 20% 6VDCM	28480	0180-0106
ATA1C22	0140-0176	1	CIFXD NICA 100 PF 2%	26480	0140-0176
ATA1C23	0140-0209	1	CIFXD NICA 5.0 PF 10%	28480	0140-0209
ATA1C24	0180-0106	1	CIFXD ELECT 60 UF 20% 6VDCM	28480	0180-0106
ATA1CR1	1902-3203	2	DIODE BREAKDOWN: SILICON 14.7V 5% DIODE BREAKDOWN: SILICON 14.7V 5%	28480	1902-3203
ATA1CR2	1902-3203	2	DIODE BREAKDOWN: SILICON 14.7V 5%	28480	1902-3203
ATA1CR3	1902-0025	1	DIODE BREAKDOWN: 10.0V 5% 400 MW	28480	1902-0025
ATA1CR4	1901-0025	1	DIODE: SILICON 100MA/1V	07263	FD 2387
ATA1CR5	1901-0025	1	DIODE: SILICON 100MA/1V	07263	FD 2387
ATA1CR6	1902-3149	2	DIODE BREAKDOWN: 9.09V 5%	28480	1902-3149
ATA1CR7	1902-3149	2	DIODE BREAKDOWN: 9.09V 5%	28480	1902-3149
ATA1IC1	1820-0058	2	IC: LIN. OP. AMP. 15K NIP. (TO-99)	07263	U58770939X
ATA1IC2	1820-0058	2	IC: LIN. OP. AMP. 15K NIP. (TO-99)	07263	U58770939X
ATA1Q1	1854-0023	5	TSTR: SI NPN: SELECTED FROM 2N2484	28480	1854-0023
ATA1Q2	1854-0023	2	TSTR: SI NPN: SELECTED FROM 2N2484	28480	1854-0023
ATA1Q3	1854-0023	2	TSTR: SI NPN: SELECTED FROM 2N2484	28480	1854-0023
ATA1Q4	1854-0023	2	TSTR: SI NPN: SELECTED FROM 2N2484	28480	1854-0023
ATA1Q5	1854-0003	3	TSTR: SI NPN: SELECTED FROM 2N1711	28480	1854-0003
ATA1Q6	1854-0003	1	TSTR: SI NPN: SELECTED FROM 2N1711	28480	1854-0003
ATA1Q7	1853-0001	1	TSTR: SI NPN: SELECTED FROM 2N1321	28480	1853-0001
ATA1Q8	1854-0003	1	TSTR: SI NPN: SELECTED FROM 2N1711	28480	1854-0003
ATA1Q9	1854-0023	1	TSTR: SI NPN: SELECTED FROM 2N2484	28480	1854-0023
ATA1R1	0757-0965	4	RIFXD FLM 51K OHM 2% 1/8W	28480	0757-0965
ATA1R2	0698-3459	2	RIFXD MET FLM 383K OHM 1% 1/8W	28480	0698-3459
ATA1R3	2100-1761	1	RVAR WM 5K OHM 10% TYPE P IM	28480	2100-1761
ATA1R4	0757-0965	1	RIFXD FLM 51K OHM 2% 1/8W	28480	0757-0965
ATA1R5	0698-3459	1	RIFXD MET FLM 383K OHM 1% 1/8W	28480	0698-3459
ATA1R6	0757-0965	1	RIFXD FLM 51K OHM 2% 1/8W	28480	0757-0965
ATA1R7	0757-0903	1	RIFXD MET FLM 130 OHM 2% 1/8W	28480	0757-0903
ATA1R8	0757-0915	2	RIFXD FLM 430 OHM 2% 1/8W	28480	0757-0915
ATA1R9	0757-0915	2	RIFXD FLM 430 OHM 2% 1/8W	28480	0757-0915
ATA1R10	0757-0965	1	RIFXD FLM 51K OHM 2% 1/8W	28480	0757-0965
ATA1R11	0757-0928	2	RIFXD FLM 1.5K OHM 2% 1/8W	28480	0757-0928
ATA1R12	0757-0893	2	RIFXD FLM 51 OHM 2% 1/8W	28480	0757-0893
ATA1R13	0757-0931	1	RIFXD FLM 2K OHM 2% 1/8W	28480	0757-0931
ATA1R14	0757-0199	1	RIFXD MET FLM 21.5K OHM 1% 1/8W	28480	0757-0199
ATA1R15	0757-0959	1	RIFXD FLM 30K OHM 2% 1/8W	28480	0757-0959
ATA1R16	0757-0457	2	RIFXD MET FLM 47.5K OHM 1% 1/8W	28480	0757-0457
ATA1R17	0757-0976	3	RIFXD FLM 150K OHM 2% 1/8W	28480	0757-0976
ATA1R18	0757-0976	3	RIFXD FLM 150K OHM 2% 1/8W	28480	0757-0976
ATA1R19	2100-1761	1	RVAR WM 10K OHM 5% TYPE V IM	28480	2100-1761
ATA1R20	0757-0928	1	RIFXD FLM 1.5K OHM 2% 1/8W	28480	0757-0928
ATA1R21	2100-1775	1	RVAR WM 5K OHM 5% TYPE H IM	28480	2100-1775
ATA1R22	0757-0948	3	RIFXD FLM 10K OHM 2% 1/8W	28480	0757-0948
ATA1R23	0757-0457	1	RIFXD MET FLM 47.5K OHM 1% 1/8W	28480	0757-0457
ATA1R24	0757-0939	1	RIFXD FLM 4.3K OHM 2% 1/8W	28480	0757-0939
ATA1R25	0757-0924	6	RIFXD MET FLM 1K OHM 2% 1/8W	28480	0757-0924
ATA1R26	0757-0976	1	RIFXD FLM 150K OHM 2% 1/8W	28480	0757-0976

See introduction to this section for ordering information

Table 7-9. A7 AC Amplifier Assembly Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr. Code	Mfr. Part Number
A7A1R27	0757-0924	1	R:FXD NET FLN 1K OHM 2% 1/8W	28480	0757-0924
A7A1R28	0757-0938	1	R:FXD FLN 5.9K OHM 2% 1/8W	28480	0757-0938
A7A1R29	0757-0948	1	R:FXD FLN 10K OHM 2% 1/8W	28480	0757-0948
A7A1R30	0757-0935	1	R:FXD FLN 3K OHM 2% 1/8W	28480	0757-0935
A7A1R31	0757-0900	2	R:FXD NET FLN 100 OHM 2% 1/8W	28480	0757-0900
A7A1R32	0757-0924	1	R:FXD NET FLN 1K OHM 2% 1/8W	28480	0757-0924
A7A1R33	0757-0924	1	R:FXD NET FLN 1K OHM 2% 1/8W	28480	0757-0924
A7A1R34	0698-3129	1	R:FXD DEPC 1.00 MEGOHM 1% 1/8W	28480	0698-3129
A7A1R35	0757-0949	1	R:FXD FLN 11K OHM 2% 1/8W	28480	0757-0949
A7A1R37	0757-0971	1	R:FXD FLN 91K OHM 2% 1/8W	28480	0757-0971
A7A1R38	0757-0921	1	R:FXD NET FLN 750 OHM 2% 1/8W	28480	0757-0921
A7A1R39	0757-0948	1	R:FXD FLN 10K OHM 2% 1/8W	28480	0757-0948
A7A1R40	0757-0900	1	R:FXD NET FLN 100 OHM 2% 1/8W	28480	0757-0900
A7A1R41	0757-0969	2	R:FXD FLN 75K OHM 2% 1/8W	28480	0757-0969
A7A1R42	0757-0924	1	R:FXD NET FLN 1K OHM 2% 1/8W	28480	0757-0924
A7A1R43	0757-0924	1	R:FXD NET FLN 1K OHM 2% 1/8W	28480	0757-0924
A7A1R44	0757-0941	2	R:FXD FLN 5.1K OHM 2% 1/8W	28480	0757-0941
A7A1R45	0757-0928	1	R:FXD FLN 1.5K OHM 2% 1/8W	28480	0757-0928
A7A1R46	0757-0941	1	R:FXD FLN 5.1K OHM 2% 1/8W	28480	0757-0941
A7A1R47	0757-0969	1	R:FXD FLN 75K OHM 2% 1/8W	28480	0757-0969
A7A1R48	0757-0893	1	R:FXD FLN 51 OHM 2% 1/8W	28480	0757-0893

See Introduction to this section for ordering information

Figure 7-12. A7 AC Amplifier

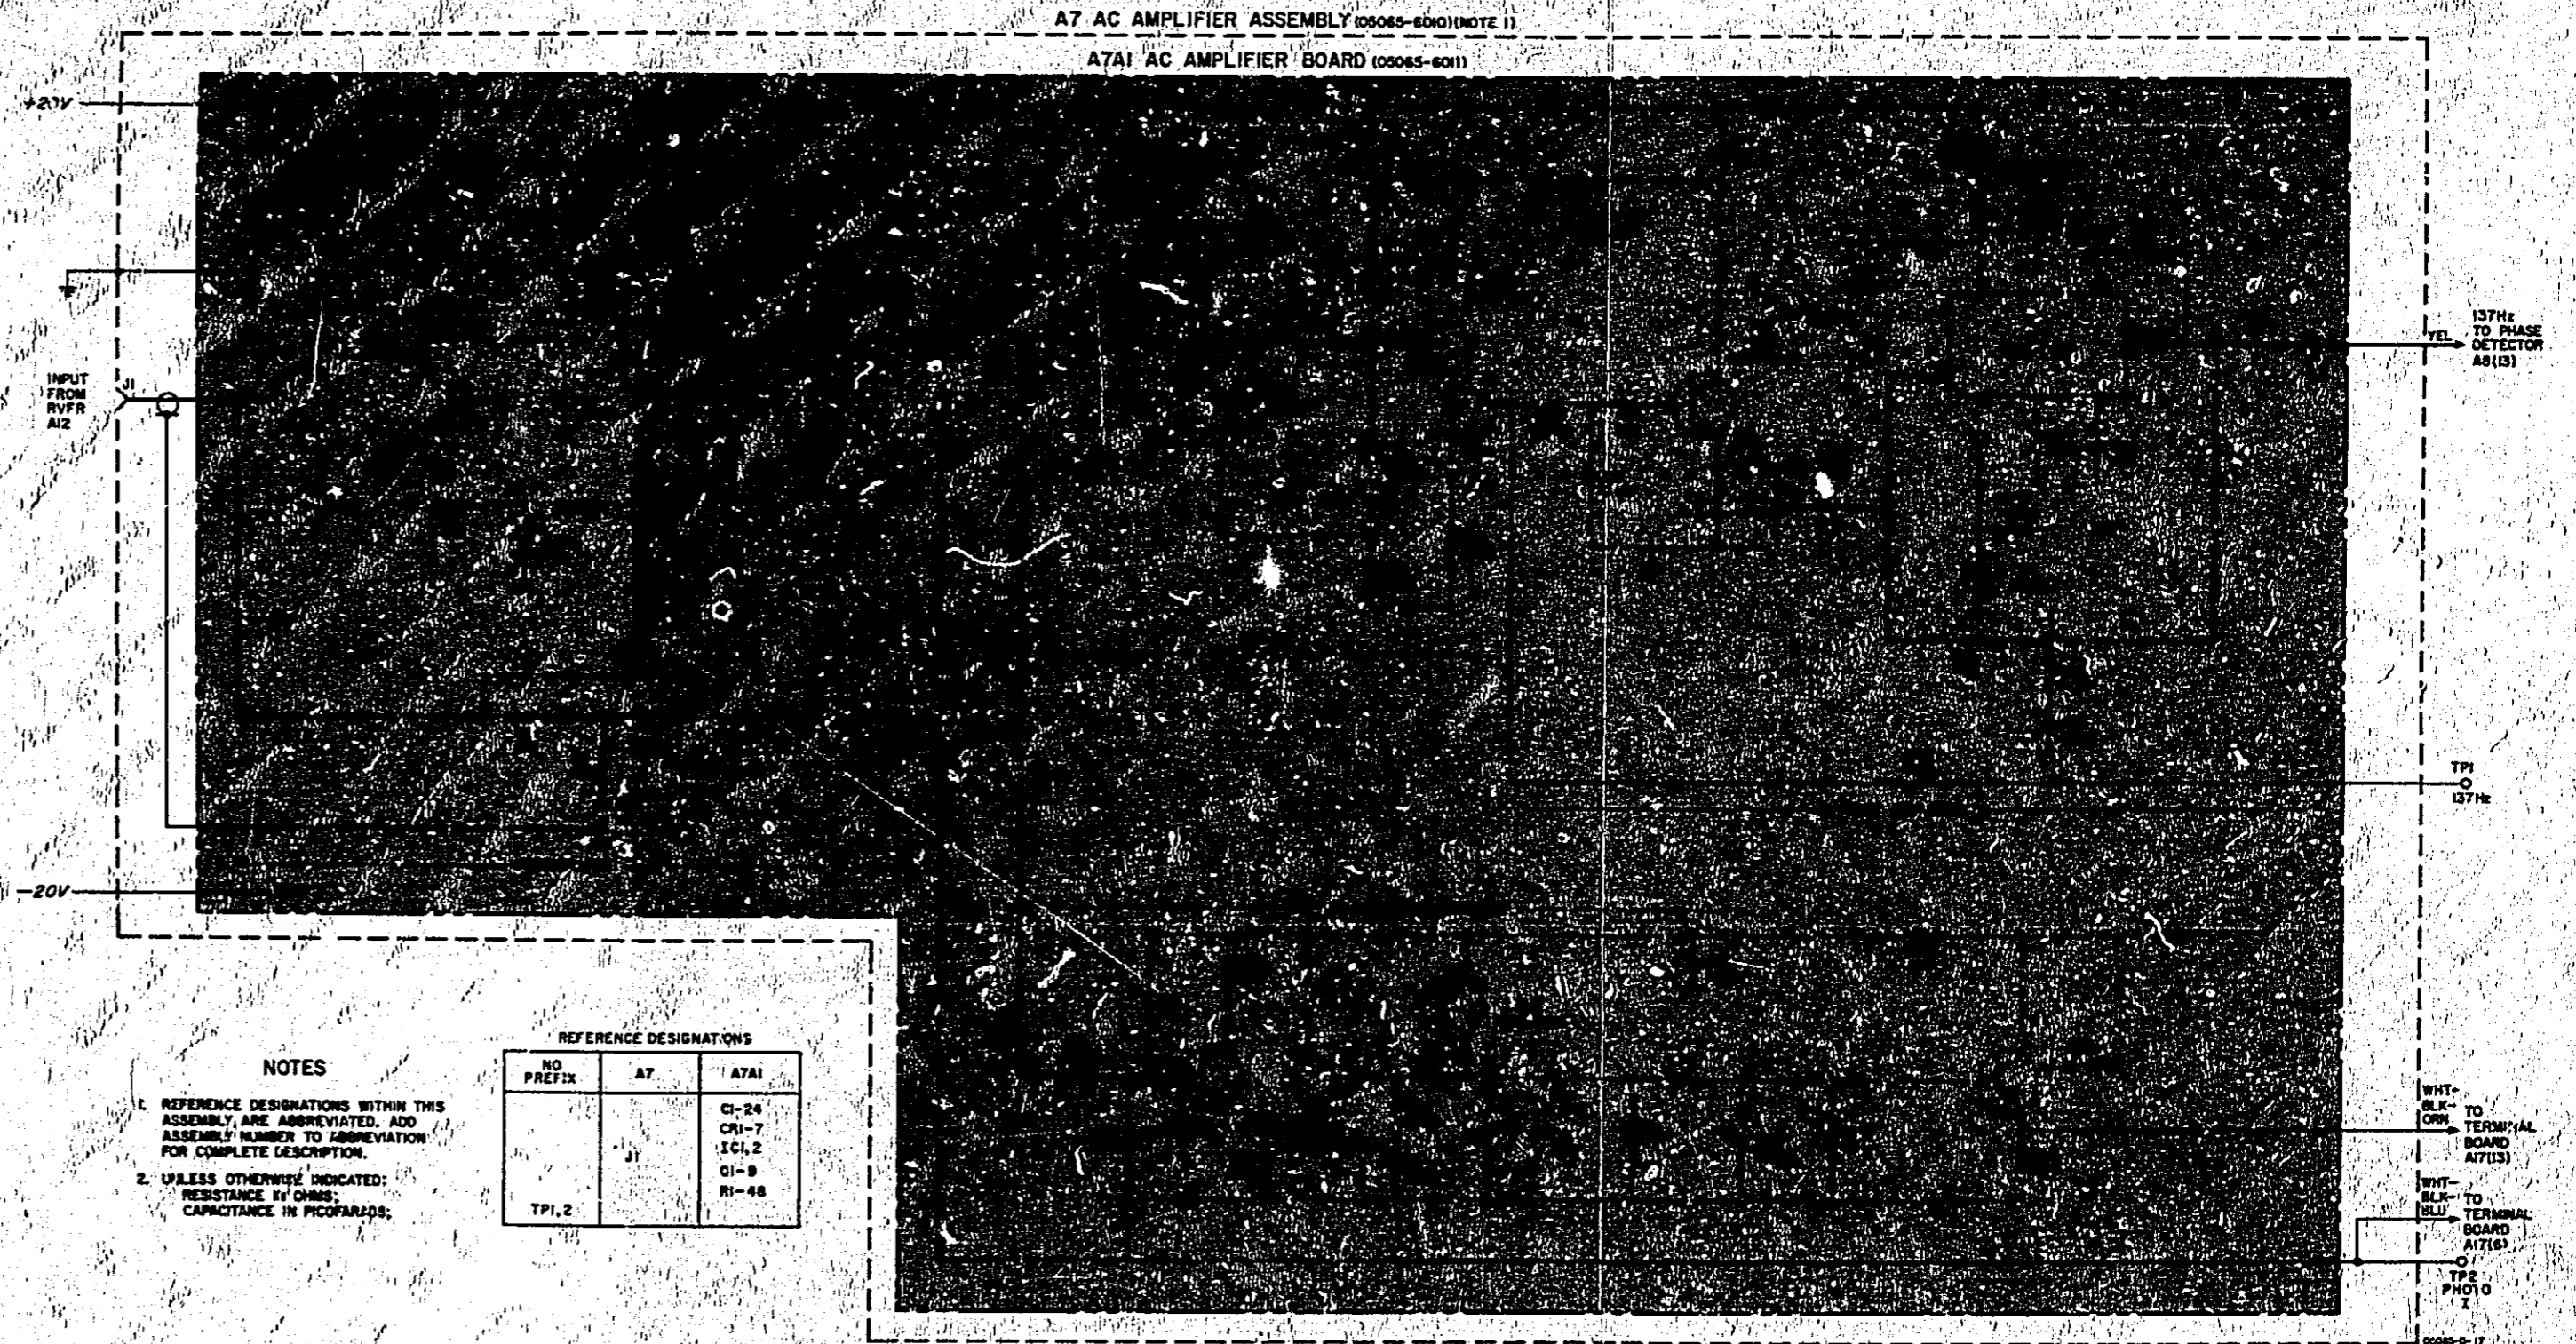
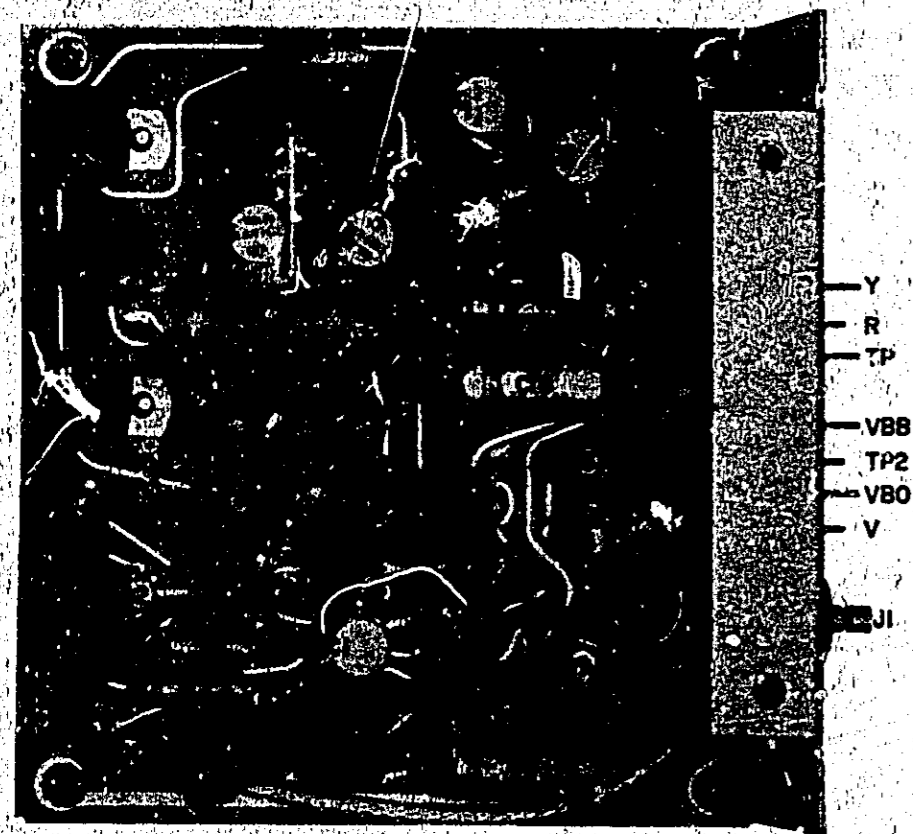


Figure 7-13. A7 AC Amplifier Schematic Diagram

**CHANGE 14 (1104):**

Page 6-3, Table 6-2 Replaceable Parts:  
Change A1A1C34 from 100pf to 500pf 0140-0234  
C:FXD MICA 500 PF 1%; 28480; 0140-0234.  
Page 8-19, Figure 8-9 Sheet 2 of 2 Schematic Diagram:  
Change the value of A1A1C34 from 100PF to 500PF  
Page 8-14, Table 6-2 Replaceable Parts:  
Change A11CF7 and CR6 to 1901-0049 DIODE  
SILICON 50PIV; 28480 1901-0049  
Page 6-18, Table 6-2 Replaceable Parts:  
Change F1 and F2 FUSEHOLDER part numbers  
from 1400-0085 to 1400-0084.

**CHANGE 15 (1220):**

Page 6-7, Table 6-2:  
Change ASA1R1 from 0757-0924 to 0757-0907  
R:FXD FLM 200 OHMS 2% 1/8W; 28480; 0757-0907.  
Page 8-25, Figure 8-11:  
Change A3A1R1 to 200 ohms.

**CHANGE 16 (1320):**

Page 6-19, Table 6-2:  
Change XA2 through XA15 from 1251-0160 to  
1251-0135.

**CHANGE 17 (1340):**

Page 6-18, Table 6-2:  
Change A15C3 from 0140-0196 to 0160-2204 C:FXD  
MICA 100PF 5%; 72136; RDM15F101-J3C.

Page 8-71, Figure 8-27:  
Change A15C3 from 150PF to 100PF.

**CHANGE 18 (1416):**

Page 1-4, Table 1-3:  
Change CLOCK MOVEMENT to read: 24-hour with  
sweep second hand.

Page 3-9, paragraph 3-21:  
Replace with the following:

3-21. The Time Standard Option includes a mechanical clock movement indicating time in hours, minutes, and seconds. FAST and STOP pushbuttons on the divider module (Figure 3-10) permit setting the clock movement to the nearest second. The hour and minute adjustment is the knob located on the back of the clock movement. To set, remove the top cover; then reach in and pull out knob to

engage and set the clock. Push this knob back in to release. The SYNC pushbutton allows the 5065A to be synchronized to an external clock pulse.

Page 3-9, paragraph 3-25(f):  
Replace with:

When the clock pulse is synchronized, the mechanical clock in the 5065A will run in step. The set knob at the rear of the clock provides coarse adjustment of hours and minutes. The FAST and SLOW switches on the A5 module provide a way to speed up or stop the clock for adjustment to the nearest second.

Page 3-12, paragraph 3-28:  
Replace "Setting the Clock" with:

**3-28. Setting the Mechanical Clock**

a. To mechanically set the clock, remove the top cover for access. Use the set knob at the rear of the clock; pull out to engage and set.

b. The FAST and STOP pushbuttons on A5 Assembly are accessible with the top cover removed.

10 PPS is routed to the clock with the FAST pushbutton depressed. The STOP pushbutton disconnects the clock drive.

Page 3-15, Figure 3-11:  
Replace Figure 3-1 with Figure 7-14.

Page 4-2, paragraph 4-17:  
Replace with the following paragraph:


4-17. Additional A5 controls are the Internal FAST, STOP, and SYNC switches. The FAST pushbutton speeds up clock movement by replacing the 1 PPS clock drive with 10 PPS. The STOP pushbutton shorts the 1 PPS clock drive to ground to stop the clock. To synchronize the 1 PPS output with a reference pulse, the SYNC pushbutton is depressed for at least 1-second and then released. If a sync pulse is connected to the rear SYNC INPUT jack, one reference pulse will enter the synchronizing circuits during the 1-second interval. This pulse will reset the digital divider. The output 1 PPS "tick" pulse from the 1 PPS front panel jack will then be in sync with the reference pulse.

Page 4-3, paragraph 4-18:

The sentence beginning  
"The other 1 PPS input "(normally 1 PPS but 10 PPS with  
A5 FAST pushbutton depressed)" . . .



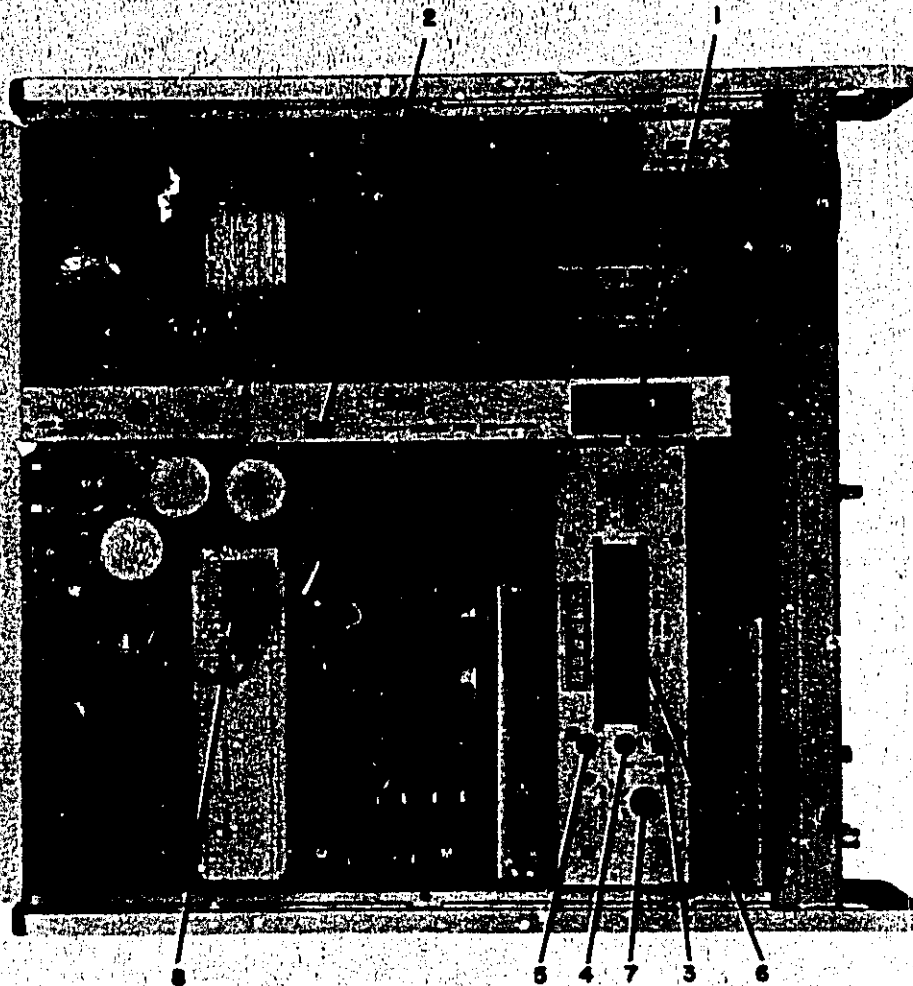Figure 7-14. Top Operating Controls



1. Synthesizer TIME CLOCK SELECTOR thumbwheel switch: selects synthesized frequency.
2. Synthesizer TIME SCALE SELECTOR HI-LO switch: used with thumbwheel switch to select synthesized frequency.
3. CLOCK SET STOP switch (Option 001 only): digital clock is stopped when switch is depressed, starts when released.
4. CLOCK SET FAST switch (Option 001 only): digital clock second hand is accelerated when switch is depressed, resumes normal operation when released.
5. Clock SYNC switch (Option 001 only): Synchronizes digital clock with an external clock when depressed; clock remains synchronized when released.
6. Clock TIME DELAY thumbwheel switch (Option 001 only): selects time delay between an external reference pulse and the internal 1 pulse-per-second clock pulse. Adjustable in decade steps from  $1\mu\text{s}$  to 1 sec.
7. 0-1  $\mu\text{SEC}$  TIME DELAY control (Option 001 only): Allows continuous adjustment of clock pulse delay over any  $\mu\text{sec}$  range.
8. Battery use: removed momentarily to disconnect optional standby battery from circuit for storage or shipment. Battery will remain disconnected after fuse is replaced.

**Model 5065A**  
**Circuit Diagrams, Theory, and Maintenance**

Page 6-2, Figure 6-1:  
 Change Panel Left Insert to 05065-0011. Door Panel; to 05065-0015. Standard Panel Insert; to 05065-0012. Panel Option 002 Insert; to 05065-0014.

Page 6-7, Table 6-2:  
 Change A3A1Q9 to 1854-0091 TSTR:SI NPN; 28480; 1854-0091.

**CHANGE 19 (1420):**

Page 6-26, Table 6-4:  
 Add A5B1, 05061-6085 Clock Assy. Opt. 001-003; 28480;05061-6085

Change 05065-0048 to Digital Divider 05065-0037.  
 Change A5,05065-6084 to Module Assy Digital Divider 05065-6025.

Add A5S1 and A5S3 SWITCH: PUSHBUTTON SPST; 82389;961 LESS HWD (both switches identical).

Page 6-27, Table 6-5:  
 Change A16 from 05065-6085 to 05065-6028.  
 Change A16A1 from 05065-6082 to 05065-6029.  
 Add the following components:  
 A16A1IC1; 1820-0313; IC; DTL RS/JK CLOCKED F/F; 28480; 1820-0313  
 A16A1Q11 and Q12; TSTR: SI NPN; 80131; 2N708.  
 A16A1CR13 and CR14; 1902-0554; DIODE BREAK-DOWN: 10V 1W; 28480; 1902-0554.

Page 6-28, Table 6-5:  
 Add Table 7-10 resistor parts list to A16 (R21 to R26):

Replace Digital Divider Assy A5 (sheet 1 of 3) with Figure 7-15.

Page 8-33, Figure 8-13:  
 Change A5, Digital Divider, Assy, from 05065-6084 to 05065-6025.

Page 8-35, Figure 8-15: Change A5 Digital Divider from 05065-6084 to 05065-6025.

Page 8-37, Figure 8-15: Change A5 Digital Divider Assy from 05065-6084 to 05065-6025.

Page 8-73, Figure 8-28:  
 Change A16 Digital Divider Assy from 05065-6085 to 05065-6029.  
 Change A16A1, 05065-6082 to 05065-6029  
 Replace A16A1 Schematic Diagram with Figure 7-16 A16A1 Digital Divider Schematic.

Page 8-69, Figure 8-26:  
 Add resistor A14R15 from the cathode of CR2 to ground (value of 5100 ohms). Change the value of A14R12 to 1000 ohms and A14R16 to 150K ohms.

Page 6-16, Table 6-2:  
 Add A14R15 0757-0941; R:FXD FLM 5.1K OHMS 2% 1/8W; 28480; 0757-0341.  
 Change A14R12 to 0757-0924 R:FXD MET FLM OHM 2% 1/8W; 28480; 0757-0924.  
 Change A14R16 to 0757-0976 R:FXD FLM 150K OHM 2% 1/8; 28480; 0757-0976.

Add the following Digital Clock text for LED Clock Series 1532A:

**DIGITAL CLOCK THEORY OF OPERATION**

**General**




The digital clock is a solid-state 24 hour clock with a seven segment LED (light emitting diode) display. It indicates time in hours, minutes and seconds in synchronism with the 5065A generated 1 PPS signal. Time may be set and synchronized using the HOLD/SLOW/FAST pushbuttons of the LED clock.

The required inputs which enable the clock to operate are connected to the clock by five wires. These are:


1. Unregulated +28 Vdc from the 5065A used to generate a regulated +5 Vdc and used exclusively to drive the display.

**Table 7-10. A16 Resistor Parts List**

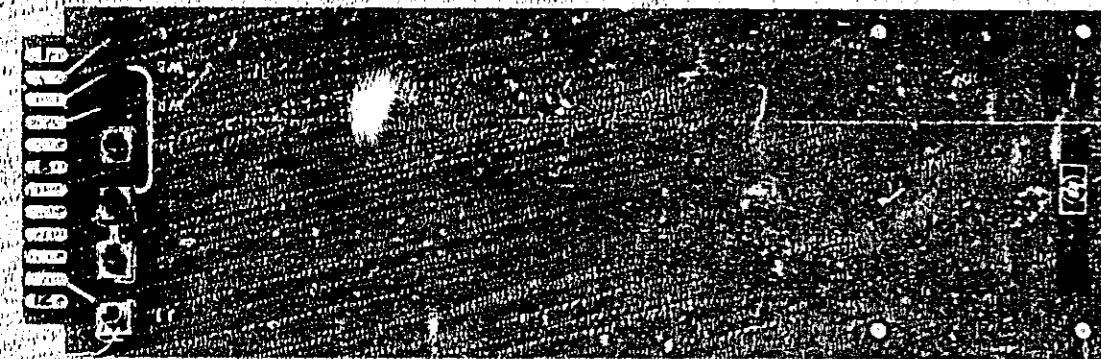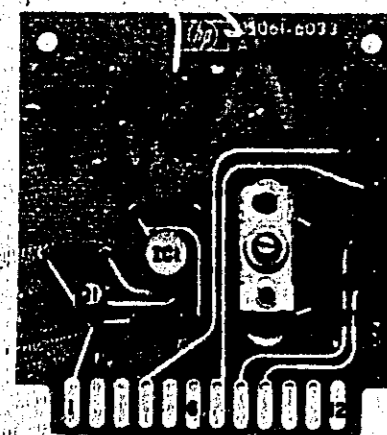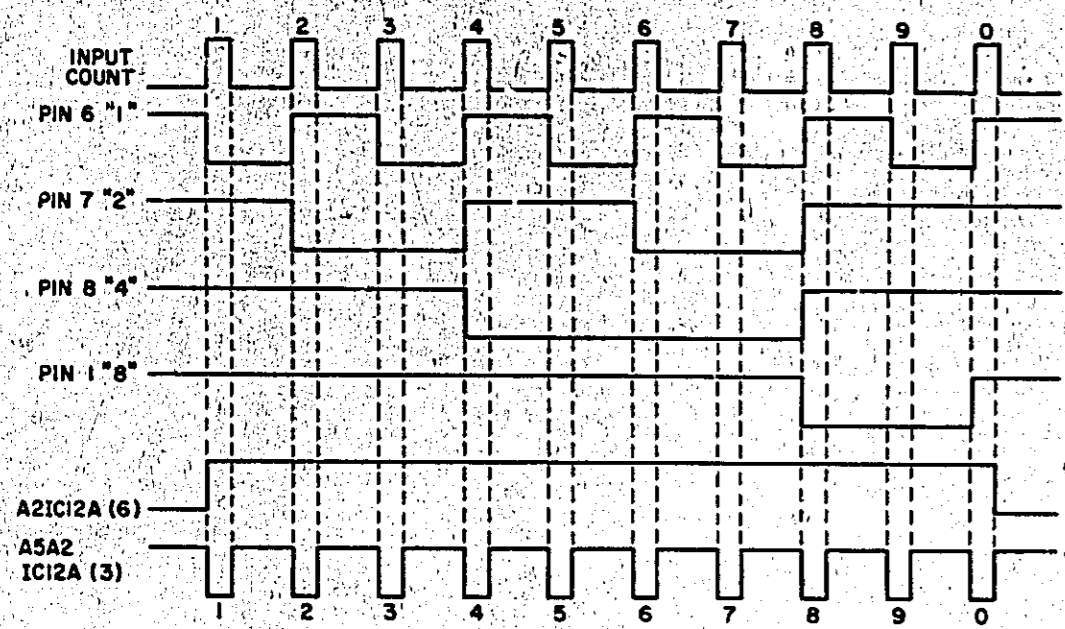Reference Designation	HP Part Number	Qty	Description	Mfr Code	Part Number
A16A1R21	0757-0931	2	R: FXD FLM 2K OHM 2% 1/8W	28480	0757-0931
A16A1R22	0757-0931		R: FXD FLM 2K OHM 2% 1/8W	28480	0757-0931
A16A1R23	0757-0924	2	R: FXD MET FLM 1K OHM 2% 1/8W	28480	0757-0924
A16A1R24	0757-0924		R: FXD MET FLM 1K OHM 2% 1/8W	28480	0757-0924
A16A1R25	0757-0920		R: FXD FLM 680 OHM 2% 1/8W	28480	0757-0920
A16A1R26	0757-0920		R: FXD FLM 680 OHM 2% 1/8W	28430	0757-0920



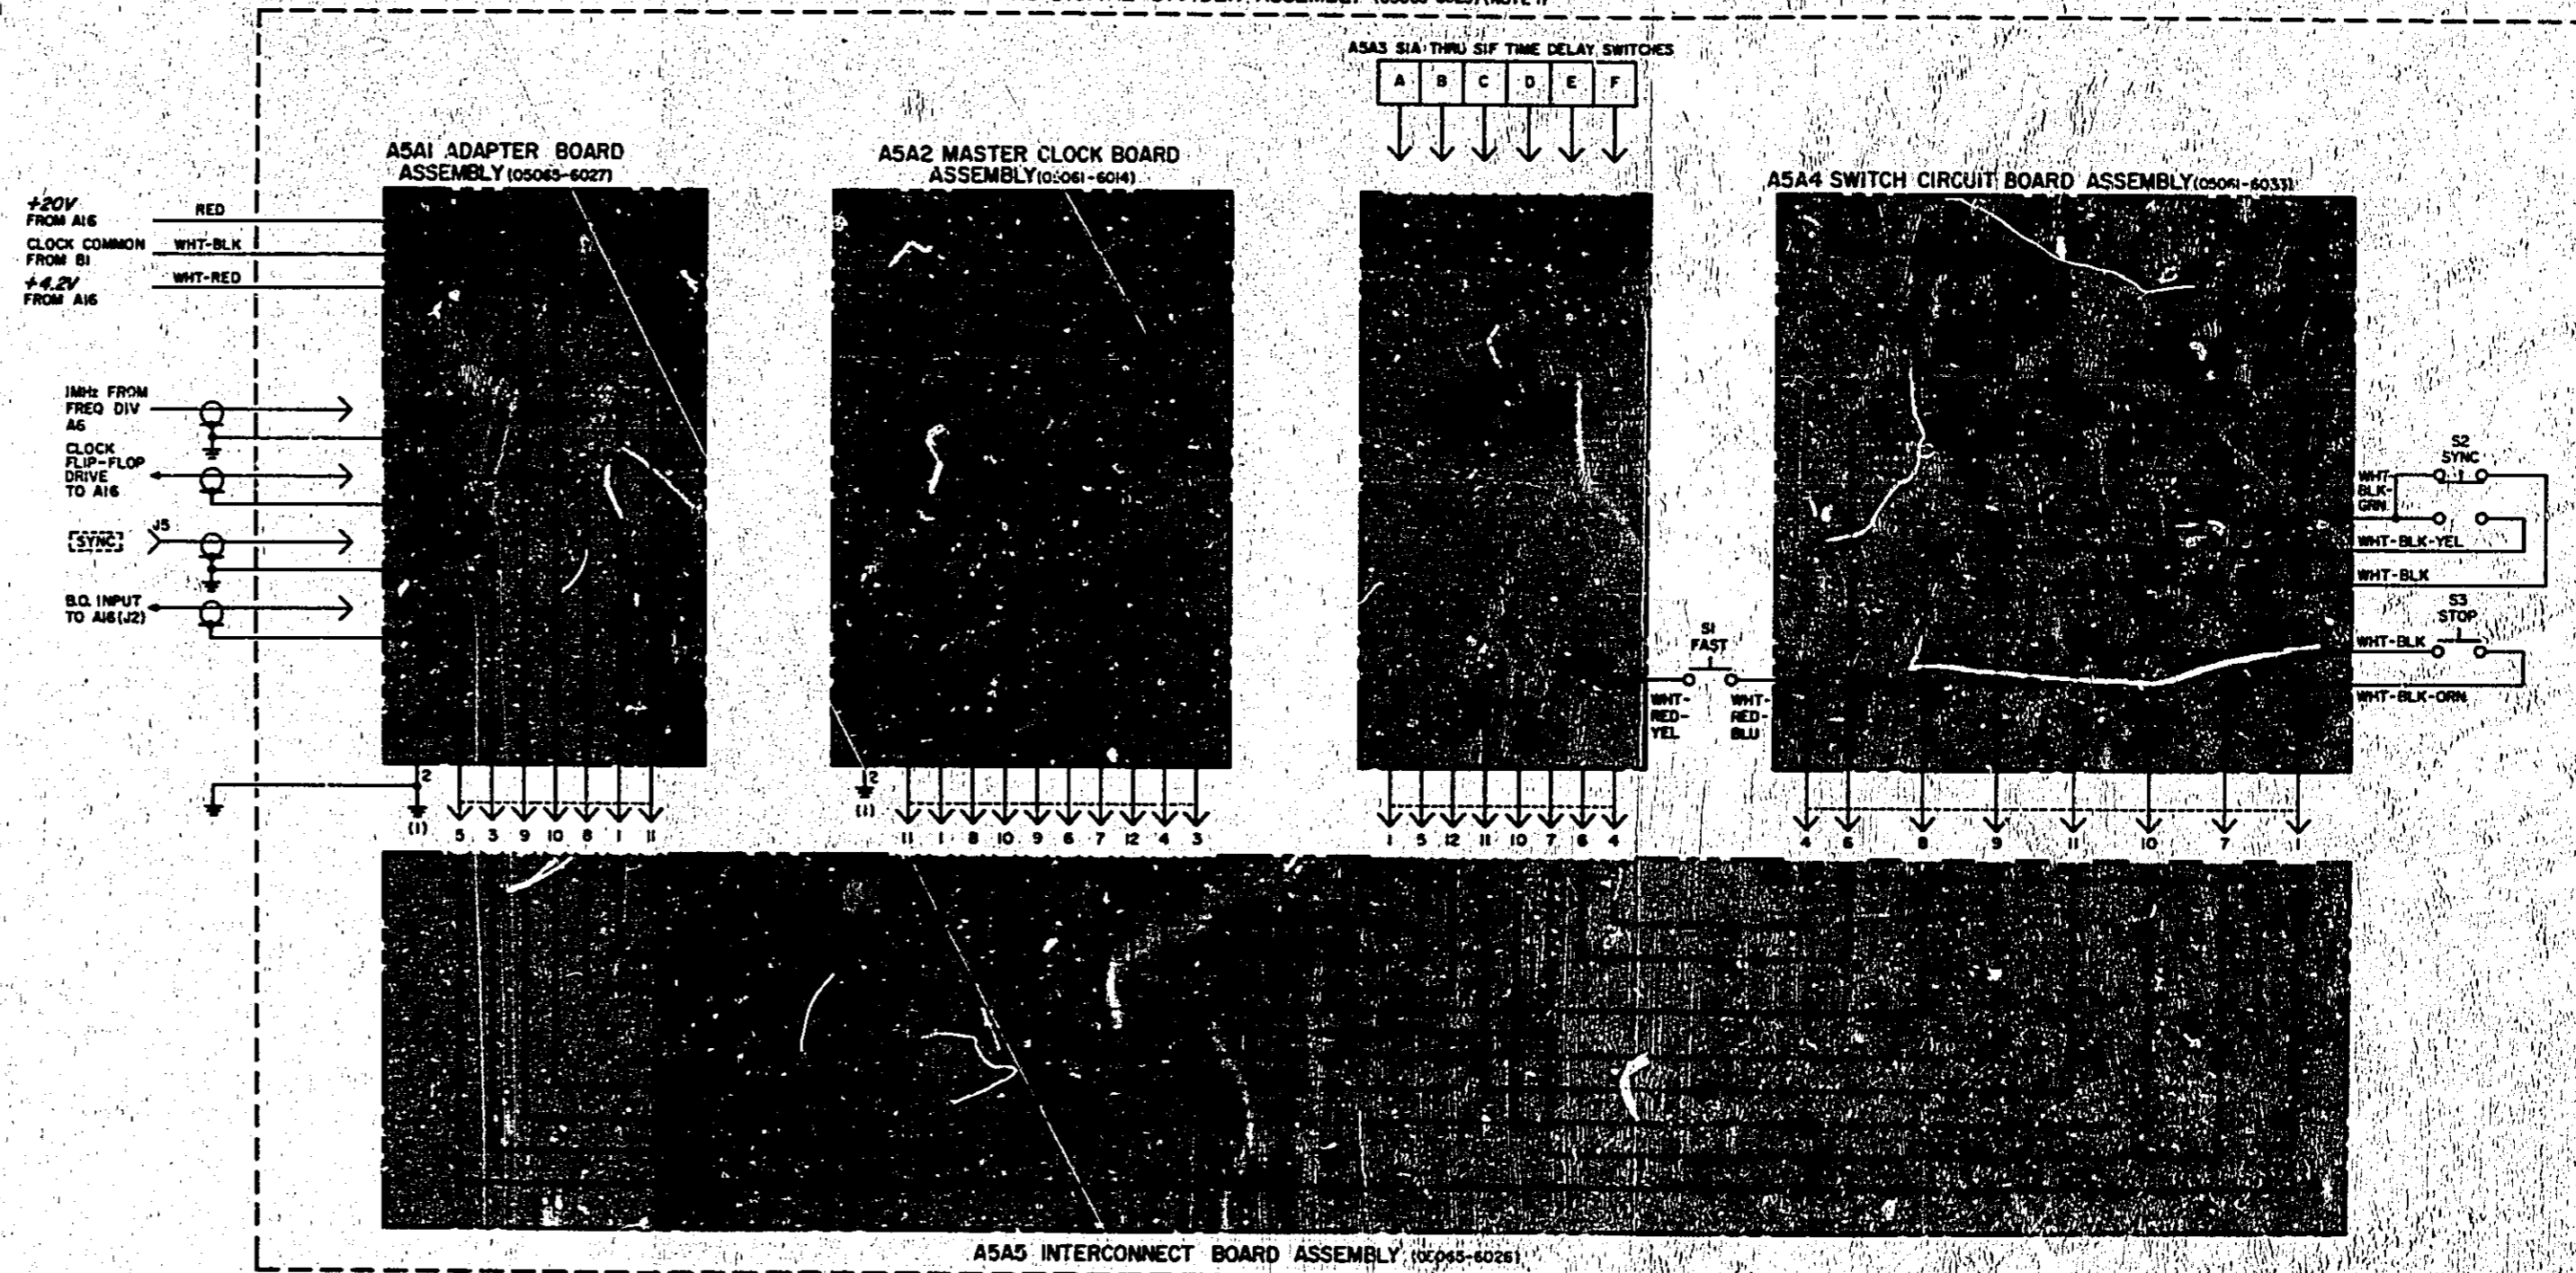A5 DIGITAL DIVIDER ASSEMBLY (05065-6023) (NOTE 1)



NOTES

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS; CAPACITANCE IN PICOFARADS.
3. ASTERISK (\*) INDICATES SELECTED COMPONENT, AVERAGE VALUES SHOWN.

REFERENCE DESIGNATIONS

NO PREFIX	AS	ASA1	ASA3	ASA4
J5	SI-3	J1-4	SI	CI, 2 CI 1 CI 1 RI-3

Figure 7-15. A5 Digital Divider Assembly (Option 001)

**SERVICE  
INFORMATION**

**CON'T**

## AC AMPLIFIER A7 THEORY

### THEORY

A low-level signal from A12 RVFR assembly is applied to A7J1. The input signal to A7J1 contains the ac and dc components from the photo-detector inside the RVFR. The fundamental ac signal is 137 Hz and is proportional to the frequency error. A second-harmonic signal to 274 Hz is also present at A7J1 input.

The preamplifier consisting of Q1, Q2, and IC1 is a low noise dc amplifier with a zero bias adjustment (A7R3) A7R3 is adjusted for 0 Vdc bias at A7Q1(B) to minimize noise on the A7J1 input.

The signal at IC1(6) is sent through a 274 Hz notch-filter to emitter-follower Q5. The 274 Hz notch-filter, filters out the second harmonic component, and allows the 137 Hz fundamental signal to pass through to Q5 and IC2.

The amplified output from IC2(6) is routed to A8 Phase Detector. A portion of the IC2 output is sent through a 137 Hz notch-filter to Q6 and used as feedback to IC2.

A second output from IC1(6) is sent through level adjustment A7R29 to IC3. The output from IC3 goes through the rectifier network and emitter-follower Q9 to A17 terminal board where it may be monitored when M1 meter is in 2ND HARMONIC position.

Feedback around the 2ND HARMONIC amplifier is through the 274 Hz Notch-filter and Q7. Since the filter feeds back all frequencies but 274 Hz. The amplifier's gain is high at 274 Hz and low at all other frequencies.

### OPERATIONAL CHECK

#### NOTE

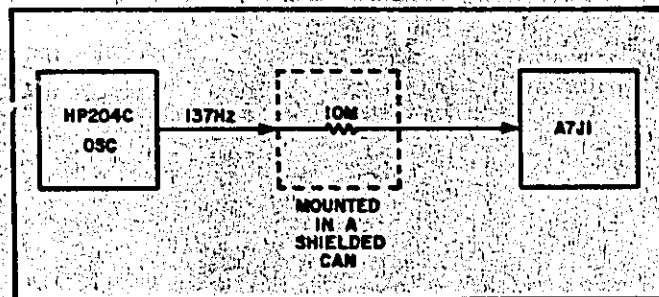
This check need only be performed if trouble is suspected in the A7 Assembly.

a. A quick check of the A7 Assembly can be made by monitoring the output (yellow lead) with an oscilloscope. Remove the input cable from A7J1 and, using a small metal tool, touch the center conductor of A7J1. The "hum signal" thus induced will cause a saturated signal to appear on the oscilloscope. This maximum signal output will peg the CIRCUIT CHECK meter when switched to 2ND HARMONIC.

b. A more precise test can be made using the following procedure.

- 1) Set up equipment as shown in A7 Test Setup. Use Micon-to-BNC test cable that is supplied, for the connection to A7J1.
- 2) Set oscillator frequency to 137 Hz and output level to .5 V peak-to-peak.

### A7 Test Setup



- 3) Connect oscilloscope to A7TP2 or A7WBB. Output should be about .9 V peak-to-peak.
- 4) Connect oscilloscope to A7 output (Yellow lead). Signal gain can be varied from zero to the point where the amplifier clips at about 16 V peak-to-peak by varying R17. With R17 set for proper loop gain, the A7 output signal will be roughly 6-7 times the signal at A7TP2.
- 5) Set CIRCUIT CHECK meter switch to 2ND HARMONIC. Reduce oscillator output and allowing for a time lag, note the CIRCUIT CHECK meter response. Meter should follow oscillator level setting. This procedure checks the second harmonic detector circuit of the A7 Assembly.
- 6) Remove the test setup and oscilloscope connections. Using the Micon-to-BNC test cable provided, connect a dc voltmeter to A7J1. Dc voltage at this point should not exceed  $\pm 5$  mV. Excessive dc voltage at this point will result in a noisy solar cell (A12 RVFR Assembly) output. Adjust A7R3 to bring this voltage below  $\pm 5$  mV if required.
- 7) Remove test cable and dc voltmeter. Reconnect cable from A12 Assembly to A7J1.



### TROUBLESHOOTING AND REPAIR

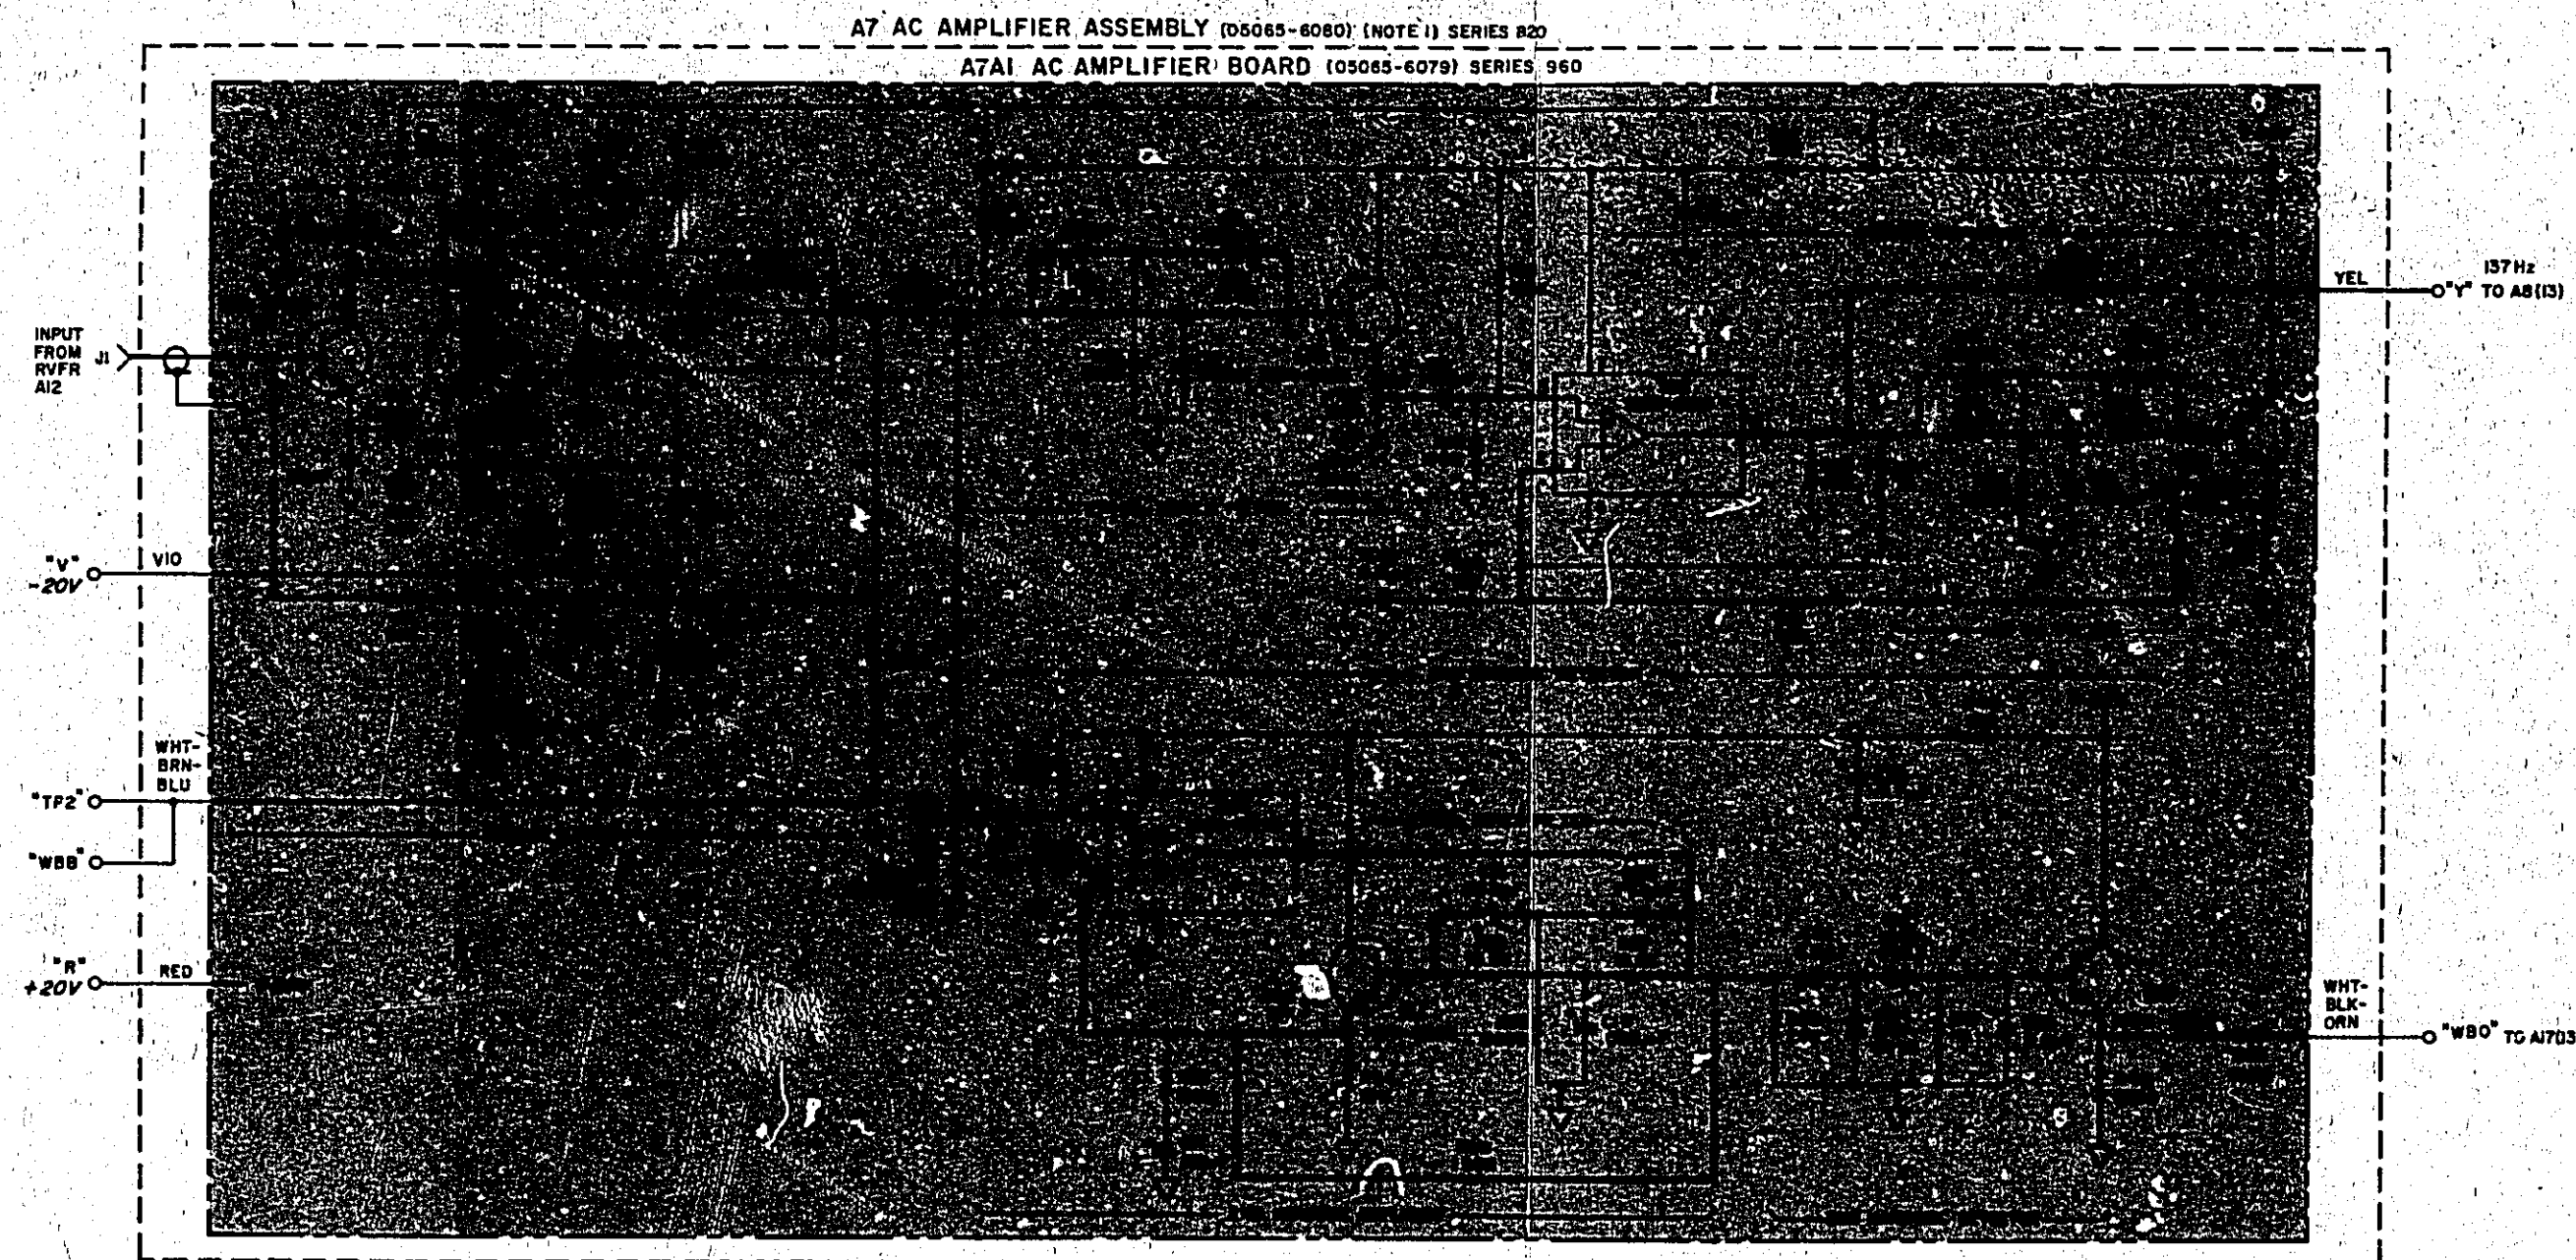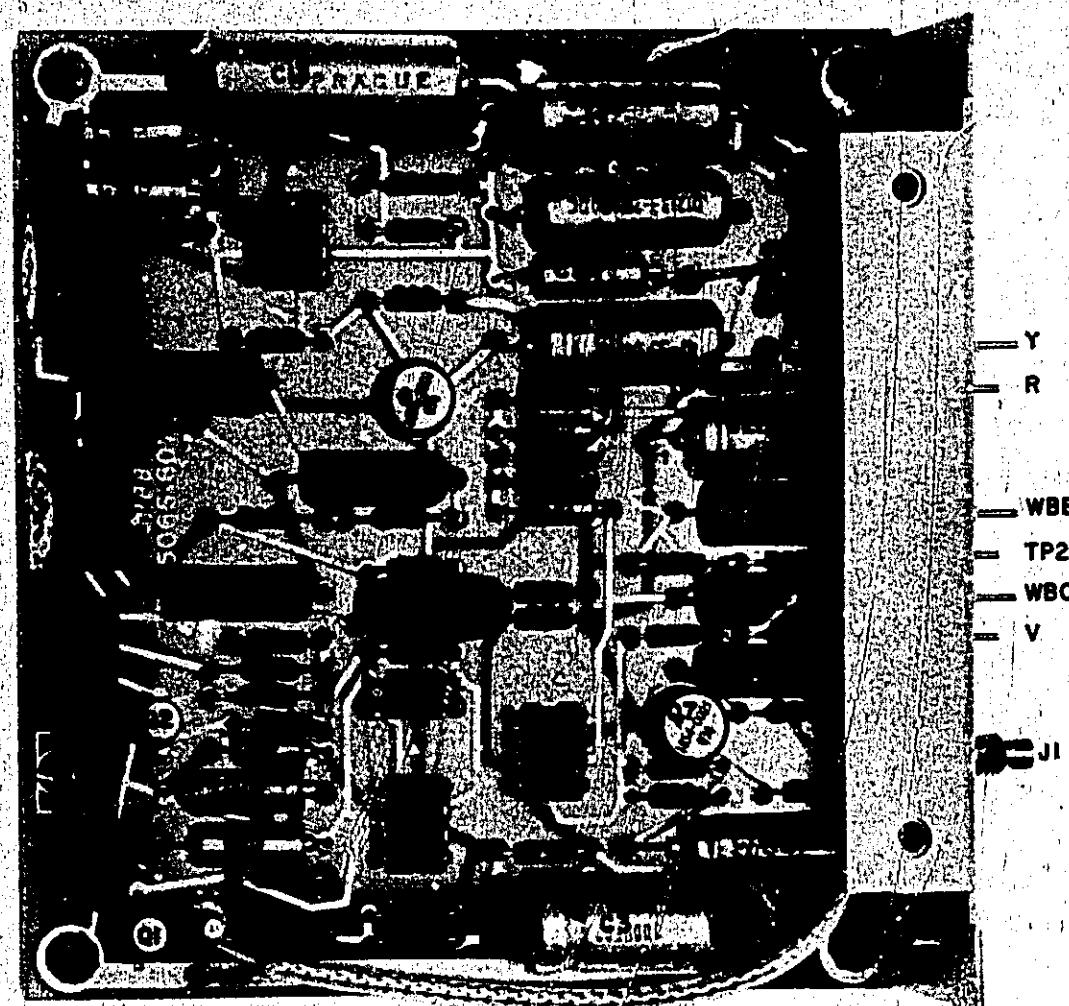a. If any components in the preamplifier circuit are replaced, connect a voltmeter to A7Q1 base and adjust A7R3 for less than 0.5 mV at this point.

b. After any repairs to A7 Assembly, adjust A7R17 as described in Section 5-30, LOOP GAIN ADJUSTMENT.

### MODULE REPLACEMENT

If the A7 Assembly is replaced with either a repaired or new Assembly, set A7R3 as described in the preceding section TROUBLESHOOTING AND REPAIR. Also perform adjustments outlined in Paragraphs 5-27 to 5-31.



**NOTES**

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED:  
RESISTANCE IN OHMS;  
CAPACITANCE IN PICOFARADS.

**REFERENCE DESIGNATIONS**

A7	A7A1
	C1-23 C12,4,5 IC1-3
J1	Q1,2,5-7,9 R1-43

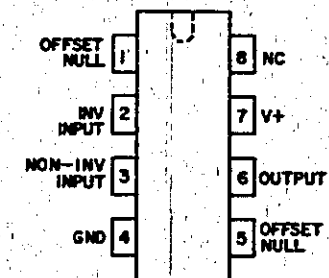


Figure 8-17. A7 AC Amplifier Assembly

### PHASE DETECTOR ASSEMBLY A8 THEORY

Separate functions in A8 Phase Detector Assembly are shown in the A8 block diagram. The two basic circuits in this assembly are the modulation reference oscillator and the 137 Hz phase detector.

The reference oscillator is a phase shift oscillator producing a 274 Hz sine wave output. This signal is shaped in a Schmitt trigger for driving a frequency divider. The frequency divider output is a 137 Hz square wave applied to a phase shifter and phase detector. The phase shifter filters the square wave and provides a 137 Hz signal with very low 2nd Harmonic content to A3 Multiplier Assembly to modulate the 5 MHz quartz oscillator signal.

The phase detector produces a dc voltage proportional to the error signal received from Ac Amplifier Assembly A7. This dc output is applied to A9 Operational Amplifier.

Reference oscillator Q1, Q2, Q3 is a phase shift oscillator which operates at 274 Hz. The frequency is determined by C1, C3, R4, R7, and R8 with R8 providing a fine frequency adjustment. These components complete the positive feedback loop from Q3 to Q1 to maintain oscillation. A second feedback loop through CR1, CR2, R5, R6, and C2 provides negative feedback for amplitude limiting.

The 274 Hz signal at Q3 emitter is fed to a Schmitt trigger circuit Q4, Q5, and associated components. This circuit is a shaping circuit with very fast rise and fall times. Capacitor C7 bypasses R14 to couple fast voltage changes from Q4 collector to Q5 base. Either Q4 or Q5 conducts, the negative-going transition at its collector is supplied to the frequency divider ( $\div 2$ ) circuit. The network composed of C8, CR3, C11, R18, and R20 ensures that only negative pulses are fed to the frequency divider.

Frequency divider Q6, Q7 is a binary divider producing an output pulse after receiving two input pulses from Q5. A negative pulse from Q5 is applied to Q6 or Q7 base through gating diodes CR4 or CR5. This negative pulse turns off the conducting transistor. Capacitor C13 provides filtering for Q6, Q7 emitters and R25 establishes a small voltage at the common emitter junction to ensure that one of the two transistors is cut off.

The phase shift network includes Q8, Q9, and associated components, and allows phase adjustment of the 137 Hz sine wave. This phase shift is necessary to establish the correct relationship between the modulating 137 Hz and the 137 Hz reference sent to the phase detector. Phase adjustment control R43 provides the phase adjustment. Because the signals driving transistors Q8 and Q9 are symmetrical square waves, second harmonic content is very low (zero for perfect symmetry).

Components R45, C24, R47, and C25 provide low pass filtering. The signal output is a 137 Hz sine wave with second harmonic distortion at least 80 dB below the signal level.

Phase detector Q12A, B, and associated components receive two inputs: (1) the 137 Hz reference square wave through Q10 and Q11 and, (2) the error signal from Ac Amplifier Assembly A7. The output is a dc error signal supplied to Operational Amplifier A9. Emitter followers Q10 and Q11 drive the phase detector. Transistors Q12A, B are alternately turned on and off by the 137 Hz reference square wave. The ac error signal is applied to T1 secondary. The phase detector output at T1 primary center tap is the dc error signal which goes to A9 Operational Amplifier. Potentiometer R35 is a dc zero adjustment.

Q11 output is integrated to a triangular wave by R42 and C21 for an oscilloscope signal at TP2. This signal can be used to check Q11 square wave output.

### A8 MAINTENANCE

#### NORMAL OPERATION

Phase detector circuits provide the following outputs:

- a. 130 to 142 Hz, 80 to 250 mV peak-to-peak sine wave to A3J1. This is phase modulation to A3 Multiplier Assembly.
- b. 130 to 142 Hz, 1.5 to 2.1 V peak-to-peak triangular wave at A8TP2.
- c. Dc error signal outputs at A8(11), A8(14), and A8TP3 which are used by A17 and A9.

#### NOTE

When 5065A is operating normally (Atomic loop closed) the error signal at A8(14) is very small (mostly noise).

#### OPERATIONAL CHECK

To determine if Phase Detector Assembly is operating normally perform the following checks:

- a. Operation mode of 5065A is not important for this check. Connect an oscilloscope vertical input to A8(9). Waveform should be as in 8.
- b. Set FUNCTION switch to OPER. Connect a frequency counter to A8TP2. Frequency should be between 130 to 142 Hz. Do not adjust frequency if these limits are met. If frequency is outside 130 to 142 Hz adjust A8R8 for 137 Hz.

c. Set unit controls:

- 1) FUNCTION to LOOP OPEN OSC FREQ ADJ FINE to 250. Connect oscilloscope vertical input to A8TP3. Connect oscilloscope horizontal input to sweep test output A8TP2. Set horizontal gain for a 5 cm sweep. Set vertical gain to .5 V/cm.
- 2) Adjust OSC FREQ ADJ COARSE until oscilloscope pattern is similar to the unadjusted A8TP2 Output. Display is indication that unit is tuned near resonance.

d. When unit is tuned through resonance, oscilloscope pattern changes from positive hump to a line (at resonance center) then to a negative hump. Unit should be adjusted for straight-line resonance indication between humps.

e. Set OSC FREQ ADJ FINE to 200 ( $50 \times 10^{10}$  frequency offset). Oscilloscope pattern should be similar to the Optimized A8TP3 Output.

f. Remove yellow wire from A7 Assembly. Check phase detector zero with voltmeter at A8TP3. Reading should be  $0 \text{ V} \pm 1 \text{ mV}$ . If not, adjust A8R35.

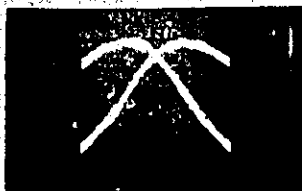
### TROUBLESHOOTING AND REPAIR

When any components are repaired or replaced the assembly should be adjusted. If Rubidium vapor assembly is replaced, phase detector circuits should be readjusted. For complete adjustment perform paragraphs 5-25, 5-27 through 5-30.


### MODULE REPLACEMENT

Phase detector module may be replaced with power on. After replacement new module should be adjusted per paragraph 5-29.


Unadjusted A8TP3 Output



Optimized A8TP3 Output


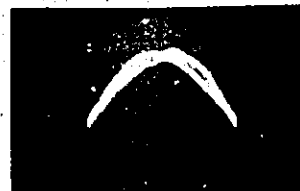


Phase Detector Block Diagram

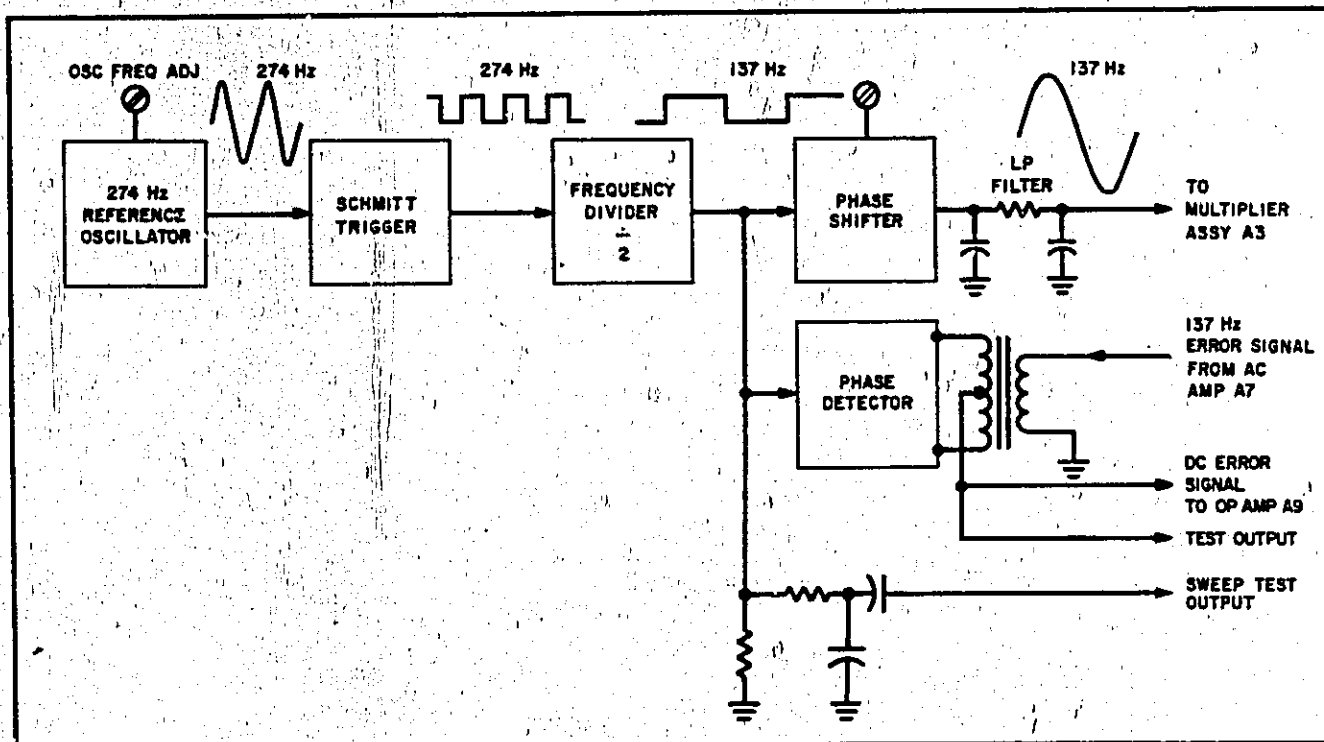




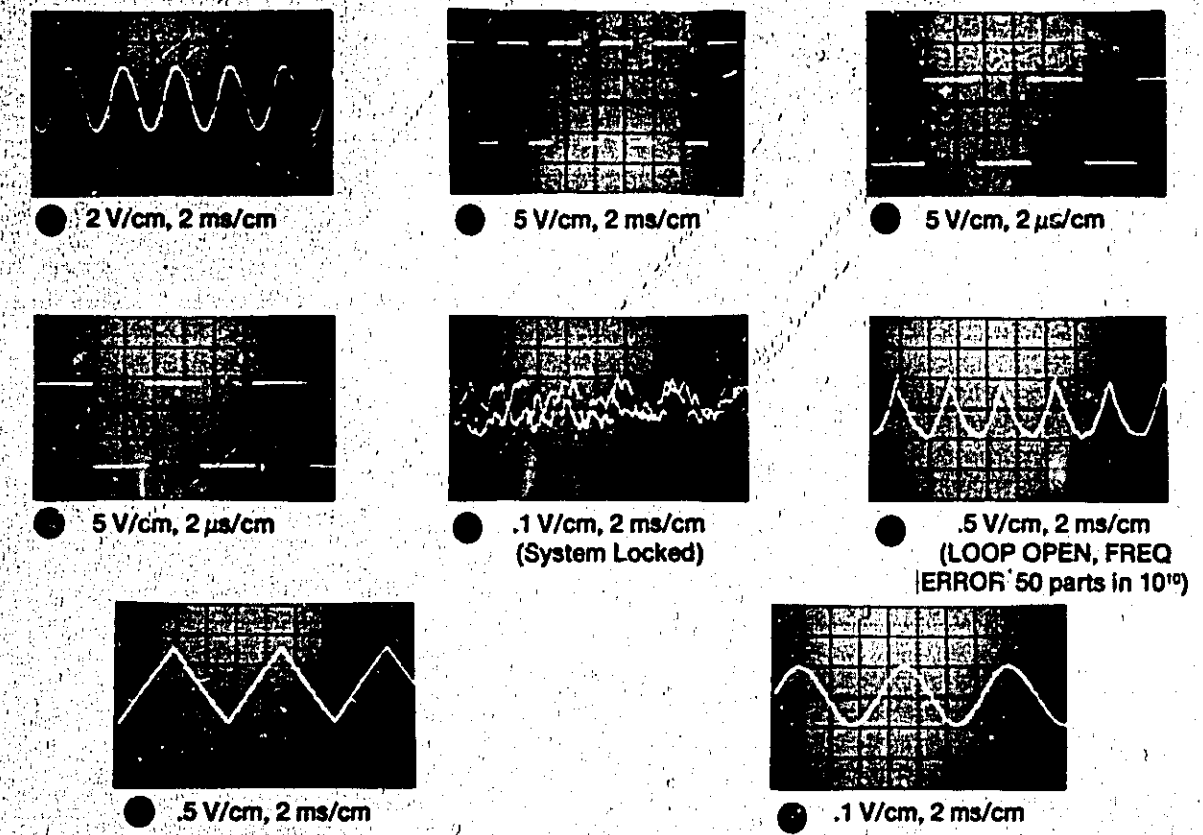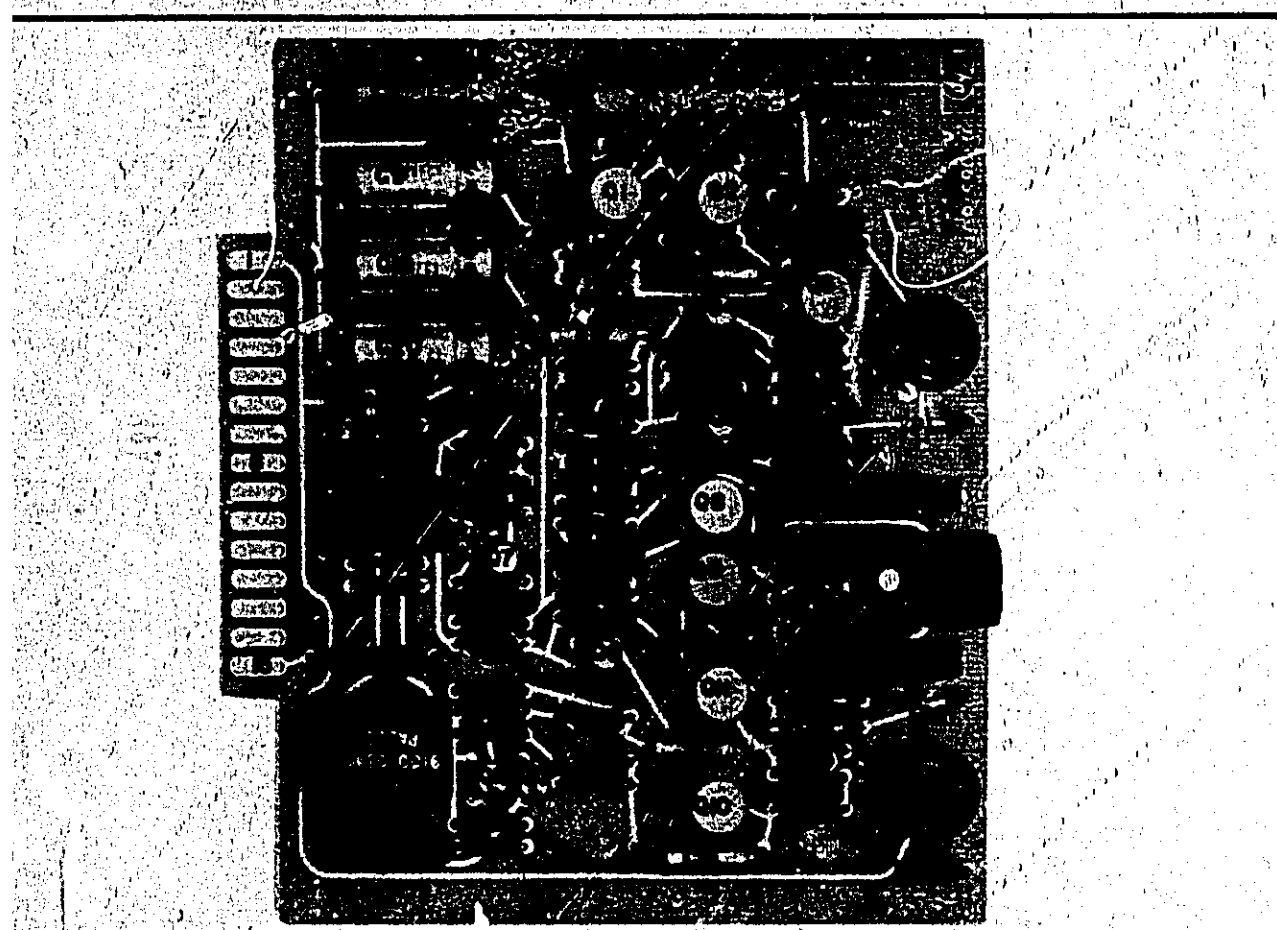A8 PHASE DETECTOR ASSEMBLY (05065-6013) (NOTE 1) SERIES 1104



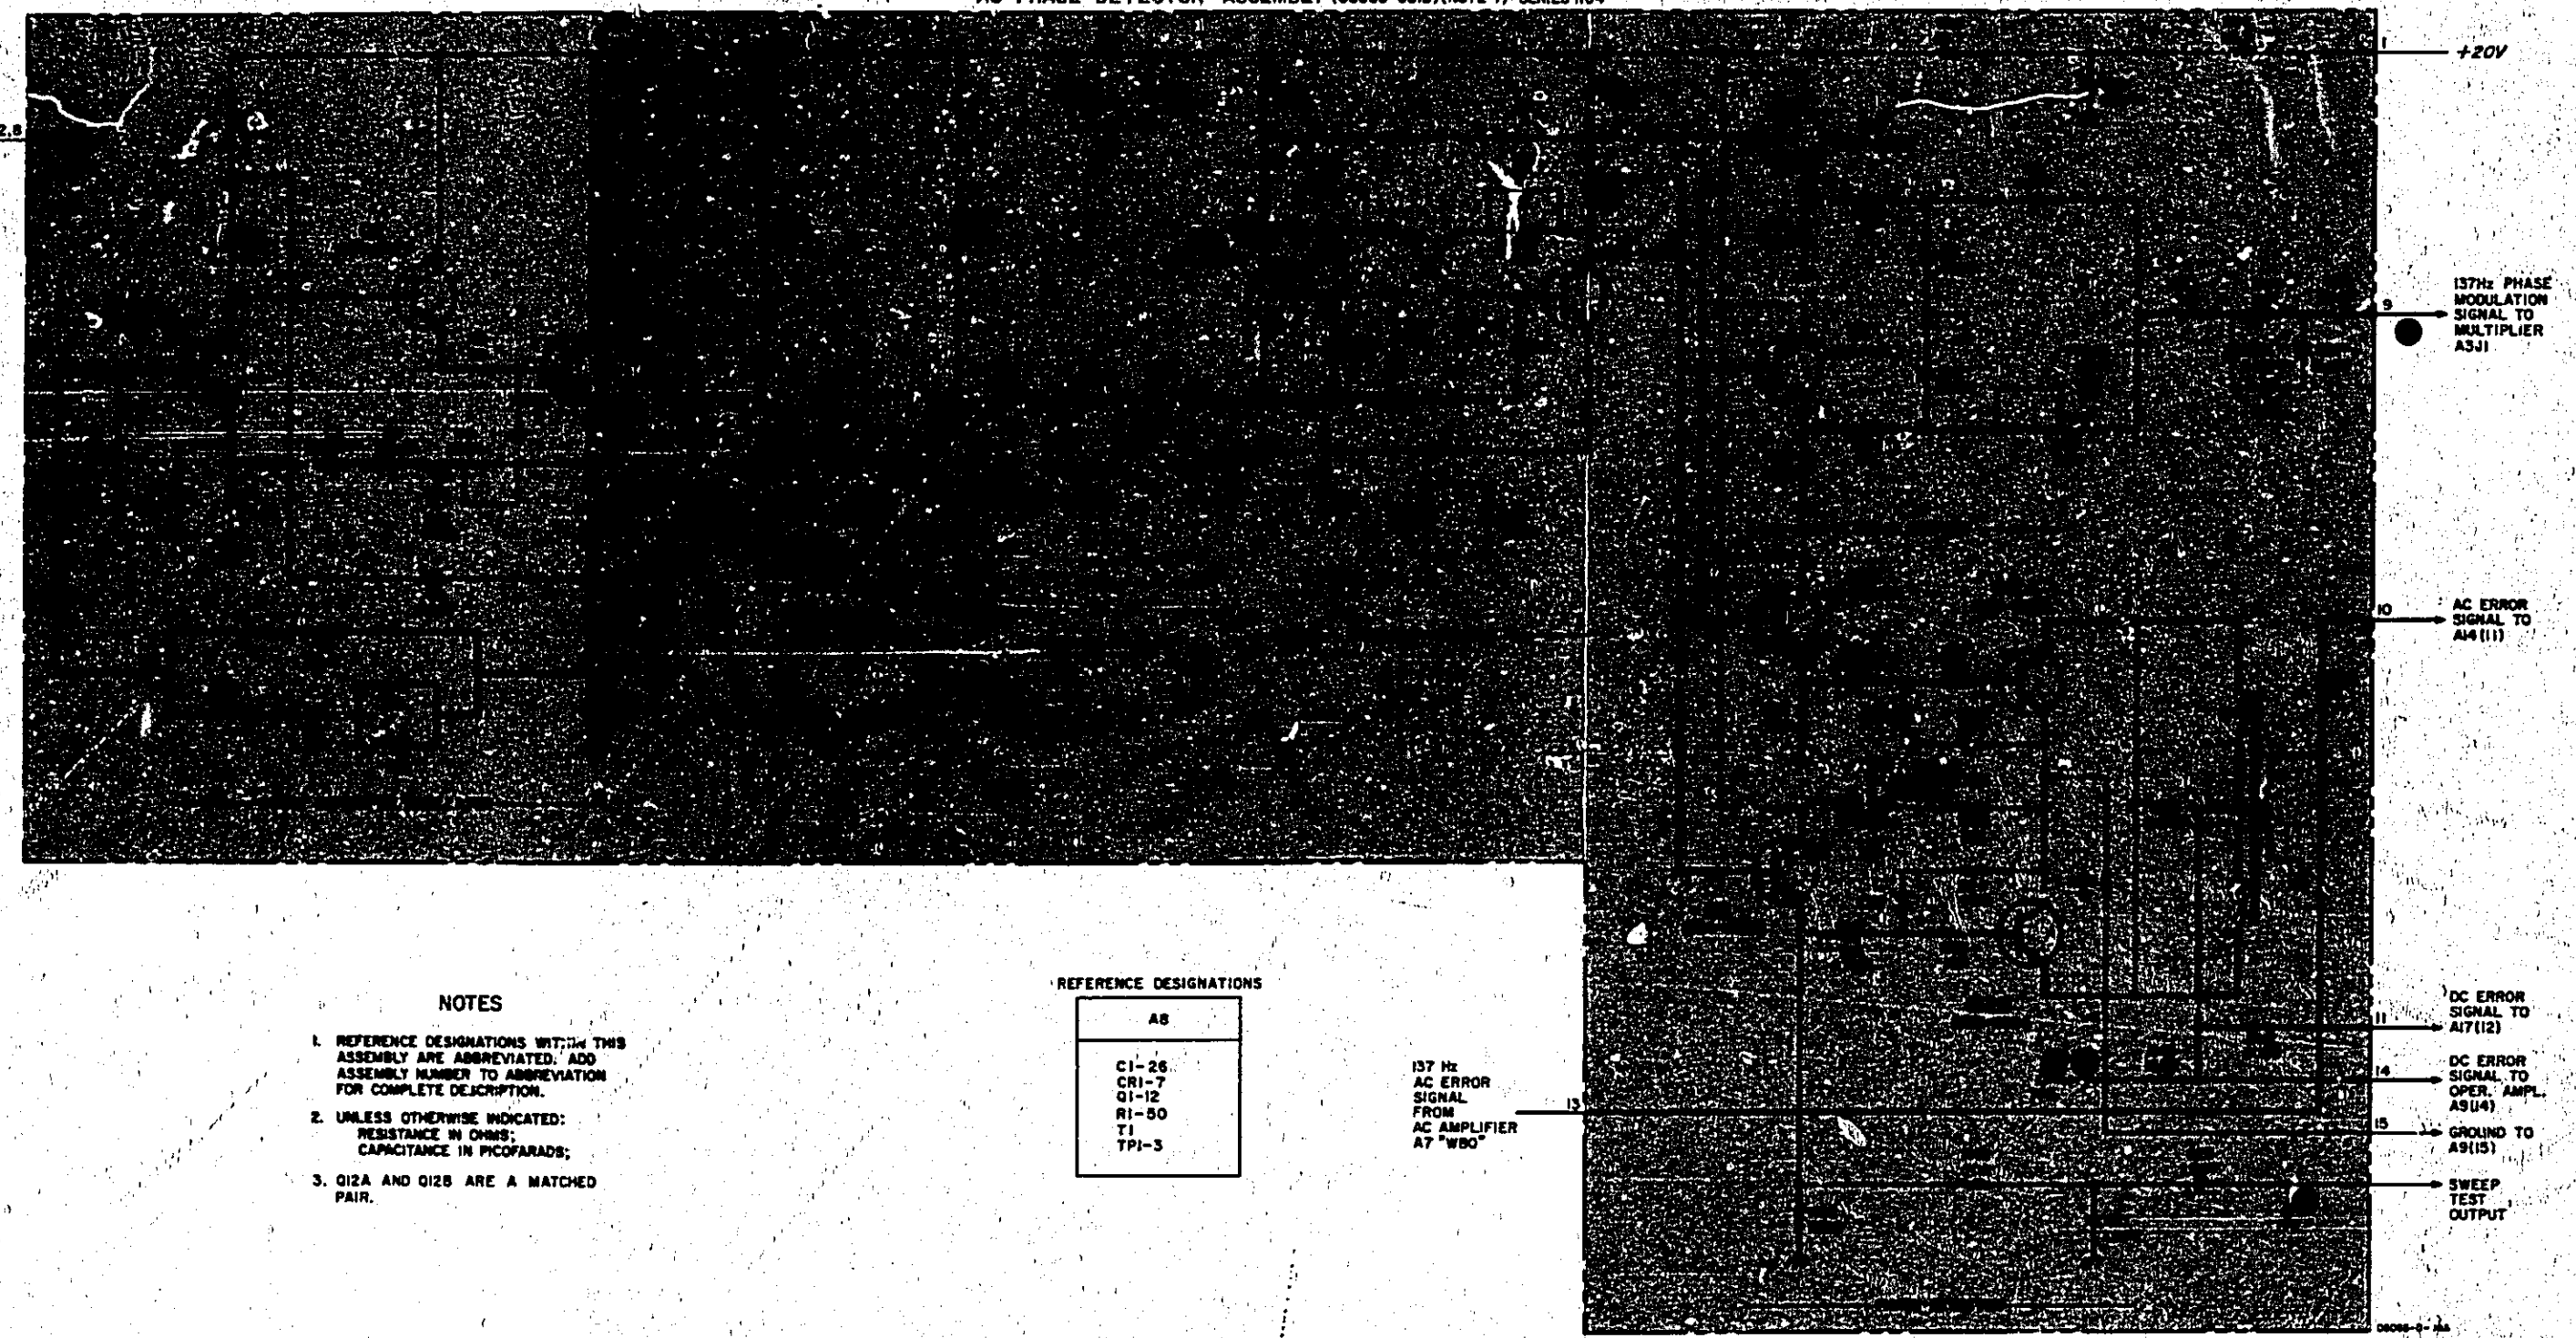5065A: Normal operation unless noted. Oscilloscope: DC coupled



NOTES

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS; CAPACITANCE IN PICOFARADS;
3. Q12A AND Q12B ARE A MATCHED PAIR.

REFERENCE DESIGNATIONS

A8
C1-26
CR1-7
Q1-12
R1-50
T1
TPI-3

137 Hz AC ERROR SIGNAL FROM AC AMPLIFIER A7 "WBO"

Figure 8-18. A8 Phase Detector Assembly

Model 5065A  
Circuit Diagrams, Theory, and Maintenance

### OPERATIONAL AMPLIFIER A9 THEORY

The A9 Assembly amplifies and integrates the output of A8 Phase Detector and provides a dc error signal for controlling the quartz oscillator in A10 Assembly. The FUNCTION switch provides a means of opening the control loop by shorting the A9 output to its input and placing a large resistance in series with the output. In addition to the integrating feedback, an amplitude-limiting feedback signal prevents saturation of A9 amplifier circuits.

Dc error signals from A8 Phase Detector connect through pin 14 to Q1A, B input amplifier. This FET amplifier stage provides a high-impedance input and push-pull outputs to differential amplifier AMPL1. Balancing adjustments are: Integrator Zero Coarse Adjustor R3 and Integrator Zero Fine Adjustor R10. Zener diode CR1 provides regulated 10 volts for AMPL1. Further dc amplification is handled by Q2 and Q3. Diodes CR6 and 7 provide the proper operating voltage for Q3. The integrating function is provided by C3 (Q3 output connects through C3 to Q1A input). Output signals in excess of  $\pm 14$  volts feed back through reverse connected clamping Zener diodes CR8 and CR9. That portion of the signal in excess of  $\pm 14$  volts is fed back to the input at Q1 base to limit signal amplitudes in the A9 circuits, thus providing the A9 circuits with fast overload recovery. The feedback signal routes through the diode network of CR2, 3, 4, 5. These diodes, series connected for each polarity, give isolation between input and output when no overload signal is present.

Q3 output connects to the A14 Logic Assembly as one logic input and to the CONTROL position of the CIRCUIT CHECK switch. The FUNCTION switch does two things:

a. In the OPEN LOOP position, Q3 output is shorted to Q1A input for unity gain and R5 (100K) is inserted between Q3 output and A10 input to further attenuate the signal.

b. In the OPER position, Q3 output feeds through R23 and CR10 which limits positive signals to the range of zero to +7 volts. This signal routes through the FUNCTION switch to the quartz oscillator control circuit in A10 Assembly. This output also connects to the rear-panel CONTROL jack.

### A9 MAINTENANCE

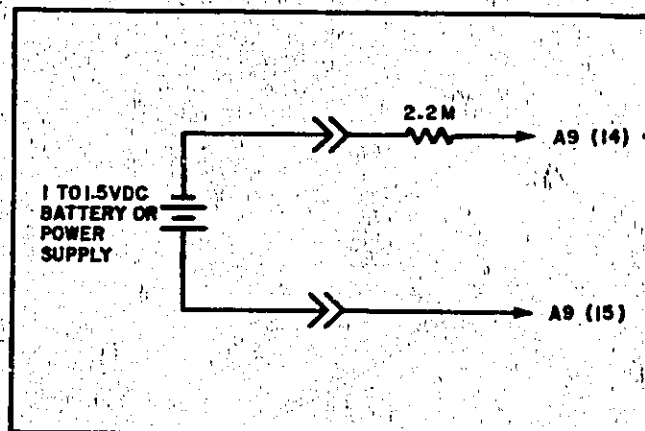
#### NORMAL OPERATION

The integrating amplifier uses the error signal from the phase detector as an input and provides the control voltage for the Quartz Oscillator Assembly A10. The output voltage swing is clamped between -14 Vdc and +7 Vdc.

### OPERATIONAL CHECK

- Remove A8 circuit board from its socket.
- Short pins 14 and 15 of A9 Assembly and connect a dc voltmeter to rear panel CONTROL jack.
- Set FUNCTION switch to LOOP OPEN and then to OPER. Measure voltage on dc meter. This voltage may be drifting, caused by the Integrating Amplifier integrating its internal zero offset. If voltage drift exceeds 20 mV/minute, A9R3 and R10 should be adjusted for minimum drift.
- Remove short from pins 14 and 15. Set FUNCTION switch to LOOP OPEN and connect circuit as shown:

A9 Test Setup



e. Set dc voltmeter to 30 V range. Observing dc voltmeter set FUNCTION switch to OPER. The voltage will increase at the rate of about 1 V/second to about -14 V.


f. Set FUNCTION switch to LOOP OPEN. The voltage will go to ZERO. Now reverse the battery or power supply connections so that the negative terminal is connected to the 2.2 megohm resistor.

g. Set voltmeter to read positive voltages. Set FUNCTION switch to OPER and observe voltmeter reading. Reading should increase at a rate of about 1 V per second to a final reading of approximately +7 V.


h. Remove connection to A9, pins 14 and 15. Remove dc voltmeter. Reinstall A8 Circuit board. This completes the check.

### ASSEMBLY REPAIR AND REPLACEMENT

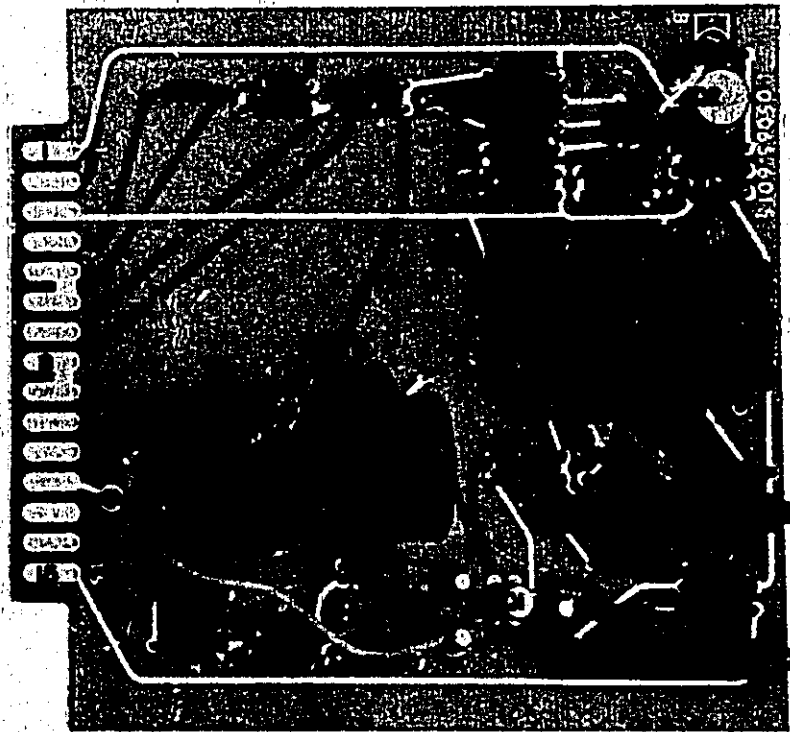After repair or replacement of A9 Assembly, A9R3 and A9R10 should be adjusted as described in Operational Checks a, b, and c.




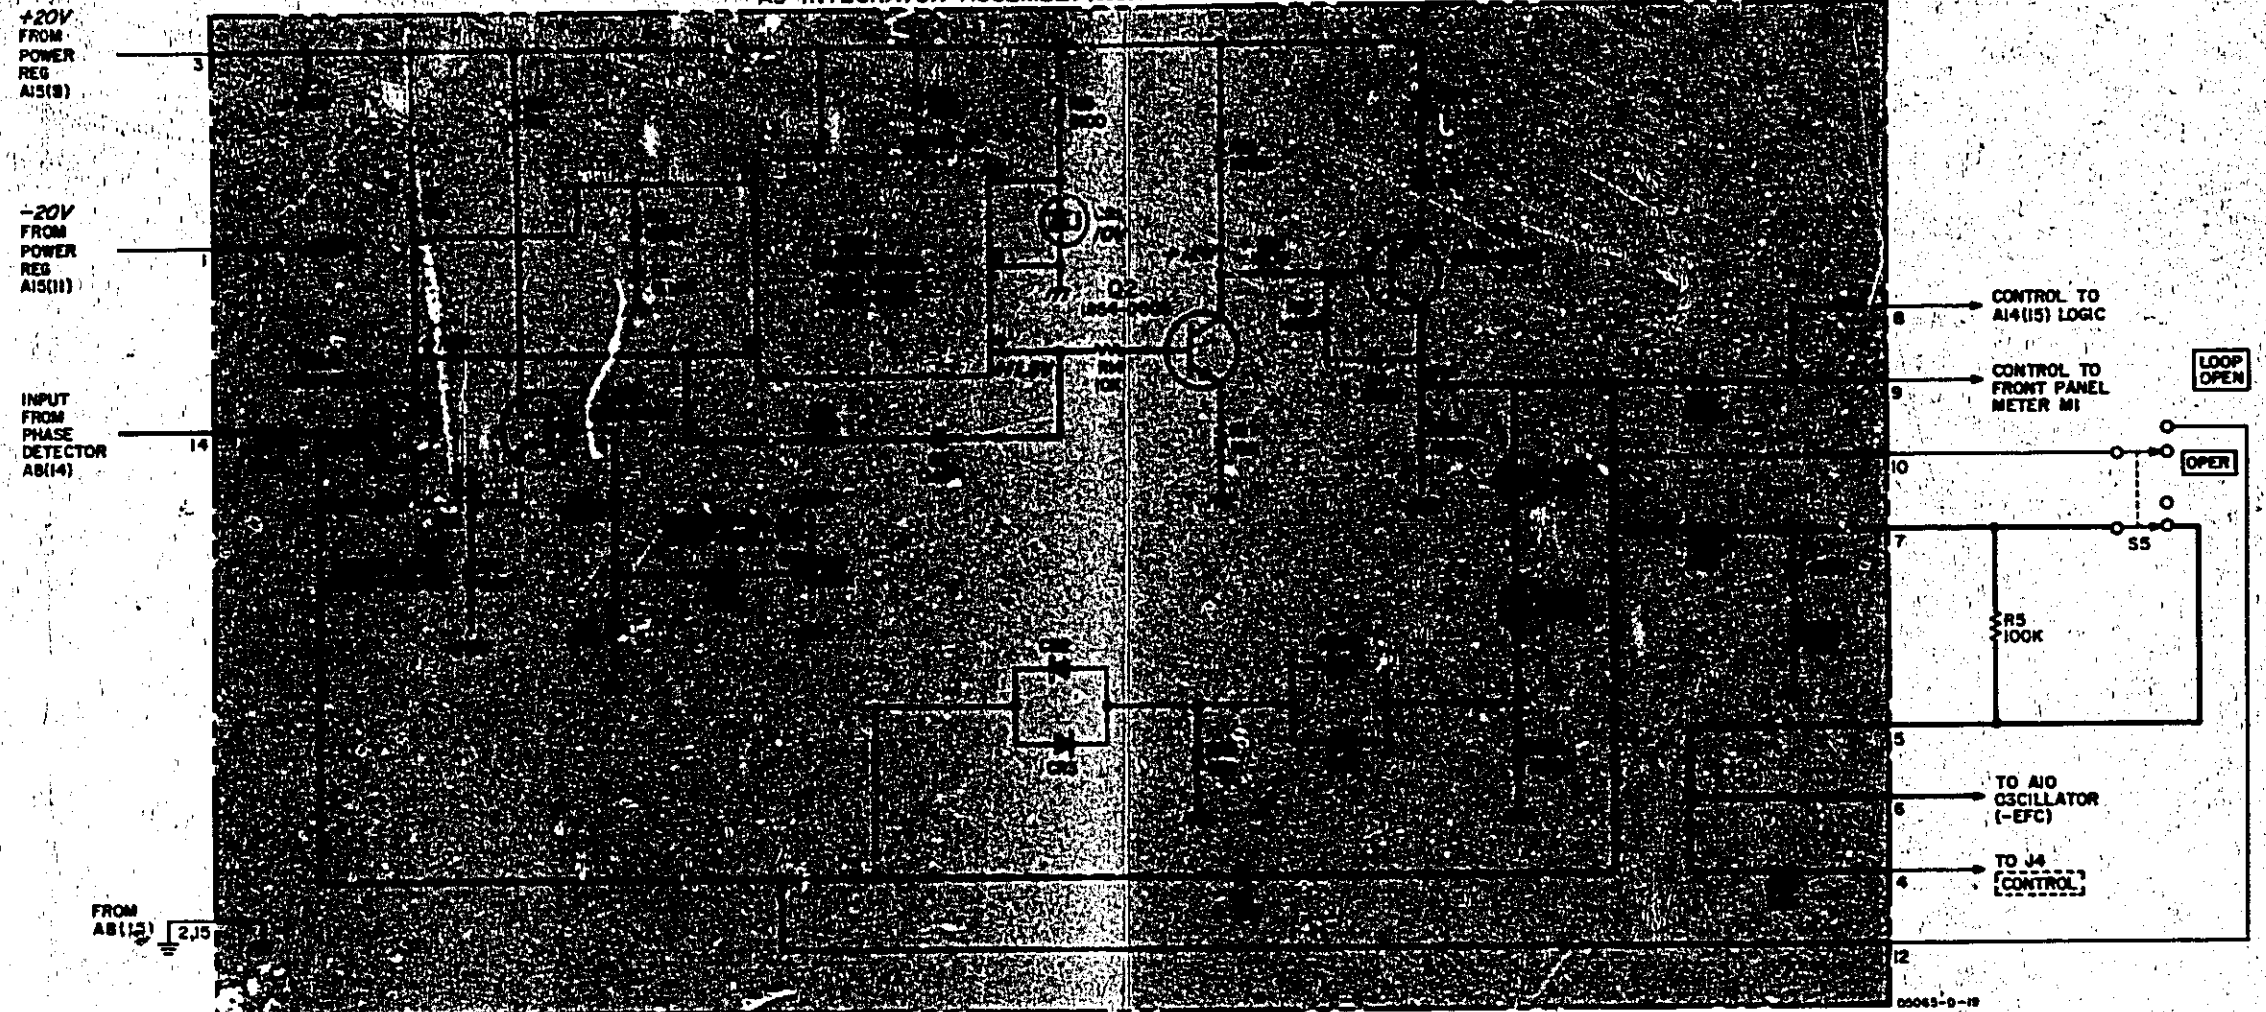A9 INTEGRATOR ASSEMBLY (00045-6015) (NOTE 1)



NOTES

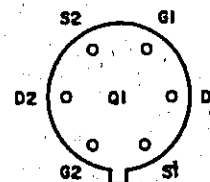1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED:  
RESISTANCE IN OHMS;  
CAPACITANCE IN PICOFARADS;
3. ASTERISK(\*) INDICATES SELECTED COMPONENT, AVERAGE VALUES SHOWN
4. DC VOLTAGES WITH FUNCTION SWITCH AT LOOP END.



06	AMP 1	10
		20
		30
		40
07		50

REFERENCE DESIGNATIONS

NO PREFIX	A9
	AMP 1
	C1-4
	CRI-10
	Q1-3
R5	R1-25
S5	

Figure 8-19. A9 Integrator Assembly

## QUARTZ CRYSTAL OSCILLATOR ASSEMBLY A10 THEORY

### GENERAL

The voltage controlled 5 MHz signal is generated by the circuits in Quartz Oscillator Assembly A10. This assembly is composed of 4 major sections:

- a. Temperature control circuits.
- b. 5 MHz quartz oscillator circuits.
- c. Automatic gain control circuits.
- d. Power amplifier circuits.

The quartz oscillator generates the 5 MHz signal. The AGC amplifier provides feedback to stabilize oscillator crystal current. Power amplifier circuits and a crystal filter isolate the quartz oscillator from external variations and supply the buffered 5 MHz to Frequency Divider Assembly A6 and Multiplier Assembly A3. Oven control circuits maintain the factory set temperature through proportional control of the internal heater.

The oven temperature is set at the factory to operate the crystal at a temperature where changes in crystal temperature have the smallest effect on oscillator frequency. Placing the quartz oscillator and AGC components inside the oven further improves the oscillator temperature-vs-frequency stability. Shielding and decoupling networks in all leads, except the 5 MHz output, reduce the Radio Frequency Interference radiated or received by the oscillator assembly. The assembly is sealed at the factory; the only adjustments accessible are the Oscillator Frequency FINE knob adjustment, the Oscillator Frequency COARSE screwdriver adjustment, and the Filter crystal adjustment.

### TEMPERATURE CONTROL CIRCUITS

**PROPORTIONAL CONTROL.** Two heaters maintain oven temperature: HR1, which is proportionally controlled to provide continuous oven temperature control; and HR2, which is thermostatically controlled, and provides fast warm-up. The heater current in a proportional control circuit is a continuous function of oven temperature. The heater current in a thermostat control circuit is either "on" or "off", depending on oven temperature setting. Both control circuits contain a thermal fuse to prevent damage to components within the oven, if the assembly overheats.

### NOTE

Reference designators in the following paragraphs are abbreviated; for complete reference designators, add prefix "A10" to reference designators used.

**PROPORTIONAL TEMPERATURE CONTROL CIRCUITS**  
Ac Controller A1 is a Wien bridge oscillator with emitter follower and detector providing a dc signal voltage,

proportional to oven temperature, for the dc controller. The Wien bridge oscillator frequency (about 3 kHz) is determined by a phase-shifting network in the bridge A1R1, A1R2, A1C1, and A1C2.

The oscillator amplitude is determined by the degenerative feedback through A1R3, A1R4, and RT1 (inside the oven). Since thermistor RT1 is within the oven, Wien bridge oscillator output level is determined by the oven temperature. The thermistor has a negative temperature coefficient so a decrease in oven temperature causes thermistor resistance to increase, increasing oscillator amplitude. Diodes A1CR1, A1CR2, and capacitor A1C10 translate this to a negative dc level applied to the dc controller circuit in A3.

Dc Controller A3Q2, A3Q3, A3Q4, and associated components receives the dc signal (proportional to Wien bridge oscillator amplitude) from ac controller circuits and controls current through HR1. The HR1 heater current is controlled by A3Q4 which is driven through A3Q3 by amplifier A3Q2. Diodes A3CR1 and A3CR2 develop 1.2 volts. The voltage across A3R8 depends on heater current through it, and is added to the voltage across the diodes. This forms a degenerative bias signal for A3Q2. Thus, an increase in current through A3Q3 increases A3Q2 current, decreases A3Q4 current and decreases current through A3R8 and HR1.

### 5 MHz OSCILLATOR AND AGC CIRCUITS

**GENERAL.** The 5 MHz signal is generated by an electrically controlled quartz crystal oscillator within the oven. An AGC circuit, also in the oven, provides some amplification for the 5 MHz signal and AGC feedback to prevent mechanical vibrations from causing crystal damage. The oscillator frequency is coarse tuned by A2A1C7 which is connected to the front panel Oscillator Frequency COARSE adjustment knob and fine tuned by R3 (front panel Oscillator Frequency FINE adjustment). The only other adjustment that can be performed in the field is the 5 MHz Filter adjustment, A3C10. For access to A3C10, A10 Assembly must be detached from the main chassis. In operation, with the FUNCTION switch at OPER, the oscillator frequency is electrically tuned by the dc error signal from A9 Integrator Amplifier Assembly. This dc error signal connects through A10J1, marked (-EFC) to frequency-controlling Varactor A1A1CR1 to correct the 5 MHz output frequency.

In the oscillator circuit, oscillator stage A1A1Q1 drives resonant circuit A2A1L2, A2A1C6, A2A1C7, A2A1C9, and A2A1CR1. Oscillator feedback is through A1A1C10, A2A1C11, A2A1C12, and A2A1L3 to A2A1Q1 base. Capacitor A2A1C8 serves to bypass A2A1Q1 emitter resistance; A2A1R2. Bias control for oscillator stage A2A1Q1 is provided by the AGC circuit in A2A2 subassembly; as the oscillator output level increases, the AGC circuit decreases A2A1Q1 bias, and decreases oscillator output amplitude.

Varactor A2A1CR1 capacitance decreases as the biasing voltage applied from A9 Assembly through J1 (-EFC) increases positively producing an oscillator frequency increase. In this manner, oscillator frequency is corrected by the dc error voltage to maintain frequency stability with respect to the  $Rb^{cr}$  resonance. The other input to Varactor A2A1CR1 is the FINE Oscillator Frequency input through J2 (+EFC) from the front-panel FINE knob. This control is normally used only for testing and with the instrument operating, is set at 250.

The A2A2 AGC Assembly contains two tuned 5 MHz amplifiers, the AGC circuit, and the 6 and 15 volt power supplies. The +6 volt supply is used as A2A1Q1 collector supply and as A2A2Q1 and A2A2Q2 bias supply. The +15 volt supply is the reference voltage for R3, the front panel Oscillator Frequency FINE adjustment.

The open-loop gain of tuned amplifier A2A2Q1 is adjusted by A2A2R3; the closed-loop gain of A2A2Q1 and A2A2Q2 is determined by feedback resistor A2A2R9. A2A2C5 tunes A2A2Q1 collector resonance. Second tuned amplifier stage A2A2Q2 provides output power at 5 MHz to A10A3. One secondary winding from output transformer A2A2T2 provides a feedback signal that is in phase with the input signal at A2A2Q1 base; this signal is fed back to A2A2Q1 emitter through A2A2R9 for gain stabilization of the amplifier pairs; to A2A2Q2 base through A2A2C3 for neutralization; and through A2A2C13 to AGC detecting diodes A2A2CR3 and A2A2CR4. A2A2C11 tunes A2A2T2 for resonance.

Diodes A2A2CR3 and A2A2CR4 provide a dc voltage proportional to the 5 MHz output voltage level this voltage is algebraically added to the bias voltage established by A2A2R11 and AGC gain adjustment A2A2R12. The resultant voltage is fed back to the base of A2A1Q1 oscillator stage for bias control to regulate oscillator drive level to the quartz crystal.

#### A10A3 POWER AMPLIFIER

The A10A3 assembly contains the 5 MHz output amplifiers and the dc controller circuit which supplies dc current for the oscillator oven heater. For a discussion of the dc controller, see "Proportional Temperature Control Circuit" at the beginning of this section.

5 MHz from A2A2 couples through A3C1 to buffer amplifier A3Q1. Selected resistor A3R9 sets A3Q1 gain for the correct output at J4 (factory adjustment). This stage feeds adjustable crystal filter network of A3Y1 A3E12, A3C9, 5 MHz crystal filter adjustment A3C10, A3C11, A3C6, and A3C8. Capacitor A3C6 and A3C8 provide ac voltage division for the 5 MHz output to the A4 Frequency Divider Assembly.

Emitter follower A3Q5 couples the filter network to output amplifier A3Q6. The gain of A3Q6 stage is adjusted by A3R19 and collector resonance is tuned with A3C12. Output transformer A3T1 feeds the A3 Multiplier Assembly through A3J3.

Supply voltage filtering is supplied by A3L1 and A3C5 for A3Q1 and by A3R11 and A3C15 for A3Q5 and A3Q6. Additional RF decoupling for A3Q1 is supplied by A3R5 and A3C3.

#### A10 MAINTENANCE

The oscillator assembly is not recommended for field repair. Instrument warranty is void if repair or adjustment is attempted inside the assembly. Adjustments other than those available on instrument front panel will also void the warranty. If it is established that a defective component or circuit trouble exists within the oscillator assembly, contact the nearest Hewlett-Packard Sales and Service Office for shipping instructions (see paragraph 2-10 for packing information).

#### OPERATIONAL CHECK

The following procedures may be used to determine proper operation and should be used if the assembly is replaced.

**CIRCUIT CHECKS.** The following circuit checks involve checking oscillator inputs and outputs.

a. Set instrument to normal operation with front panel MODE switch set to LOOP OPEN.

b. Disconnect the +20 red wire from the oscillator assembly. Connect a high impedance dc voltmeter positive lead (+) to the disconnected red wire. Connect common (-) voltmeter lead to instrument chassis. Voltmeter should indicate +20 V. Disconnect voltmeter and connect red wire back to +20 terminal on oscillator assembly.

c. Disconnect the +24 white-red-blue wire from oscillator assembly. Connect a high impedance dc voltmeter positive lead (+) to the disconnected white-red-blue wire. Connect common (-) voltmeter lead to instrument chassis. Voltmeter should indicate between +22 and +33 volts. Disconnect voltmeter and connect white-red-blue wire back to +24 terminal on oscillator assembly.

d. Connect high impedance dc voltmeter to white wire on OSC FREQUENCY X10<sup>-10</sup> control. Connect common (-) lead to chassis ground. Voltmeter should indicate between +14 and +16 volts. Disconnect voltmeter.

e. Connect dc voltmeter to OSC OVEN pin on Terminal Board Assembly A17(5). Connect common (-) lead to chassis ground. Voltmeter should indicate about +16 volts. Disconnect voltmeter.

f. Connect an oscilloscope vertical channel through a 50-ohm feedthru to A10P3. Oscilloscope display should be 5 MHz, 3 V peak-to-peak. Remove oscilloscope and replace A10P3.

**Model 5065A**  
**Circuit Diagrams, Theory, and Maintenance**

g. Connect oscilloscope vertical channel through a 50-ohm feedthru to A10P4. Oscilloscope display should be 5 MHz, 2 V peak-to-peak. Remove oscilloscope and reconnect A10P4.

h. Set CIRCUIT CHECK switch to 2ND HARMONIC. Adjust OSC FREQUENCY X10<sup>-10</sup> control maximum clockwise, maximum counterclockwise, and return to 250. CIRCUIT CHECK meter should track with control movement.

i. Disconnect cable from -EFC on oscillator assembly. Connect dc power supply common lead (-) to -EFC on oscillator assembly. Connect positive lead (+) to chassis ground. Slowly adjust dc power supply to -5 volts. CIRCUIT CHECK meter should track with power supply. Disconnect power supply and reconnect -EFC cable.

j. Set CIRCUIT CHECK switch to OSC OVEN, 5 MHz, SUPPLY, and observe CIRCUIT CHECK meter indication at each position. Meter indications should agree with Table 3-1. This completes the oscillator circuit checks.

**OUTPUT VOLTAGE AND WAVEFORMS.** In addition to the circuit checks, the following checks can be performed, using equipment listed in Table 5-5. To observe 5 MHz output voltage and waveforms:

a. Terminate rear panel 5 MHz output jack with 50-ohm termination and connect an RMS voltmeter to front panel 5 MHz output jack. Output level should be at least 1 V rms. If it is not, use adapter cable provided with instrument and connect ac voltmeter with 50  $\Omega$  load to A10J3 ("1 V"). Signal should be 1 V rms. If this signal level is ok, troubleshoot 5 MHz signal path from A10 oscillator assembly to front (or rear) panel. If signal level is less than 1 V rms at A10J3, realign output crystal filter as described below.

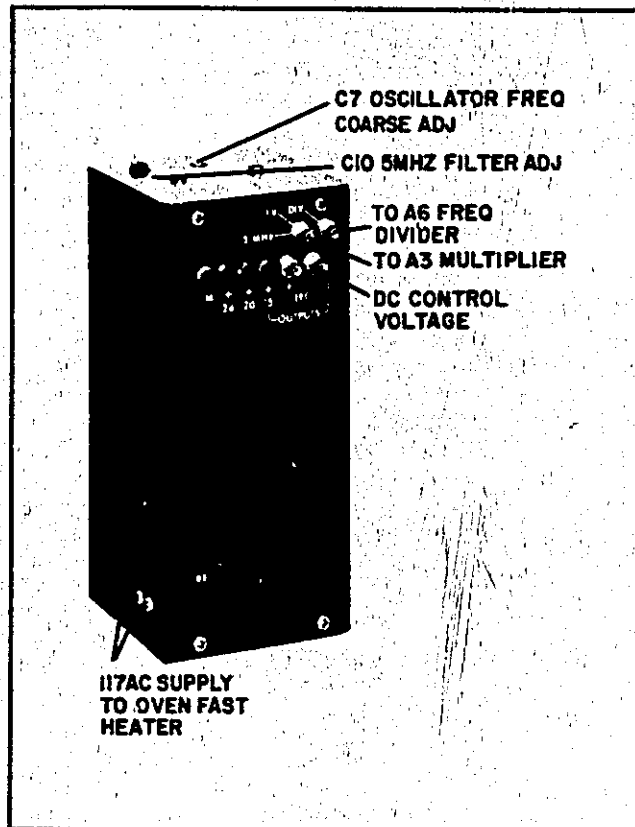
b. Remove 50  $\Omega$  load and, using the adapter cable connect ac voltmeter to A10J4 ("DIV"). Voltage here should be greater than 60 mV. If output from A10J3 ("1 V") as measured above is 1 V rms and output from A10J4 ("DIV") is less than 60 mV rms A10 assembly is probably defective and should be replaced.

**Realignment of Output Crystal Filter.**

- Remove ac and dc power from instrument.
- On bottom deck unsolder 115 Vac connection to A10 assembly. See adjacent Figure for location of these terminals.
- Tape the ends of these wires so they cannot short or make contact with the chassis.
- Remove the 4 screws which secure the A10 assembly to the instrument chassis.
- Check to see that the wires removed in step 2 are properly insulated.
- Reconnect ac power, allow instrument to warm up.
- Connect ac voltmeter with 50  $\Omega$  load to A10J3.

h. Lift A10 assembly up so that holes on front are accessible. Then, using a non-conductive screwdriver, adjust "5 MHz filter ADJ" (see adjacent Figure) for maximum on meter. This should be 1V rms or greater. If it is not, replace A10 Assembly with restored unit 00105-6034.

i. Remove ac and dc power and reconnect 110 V leads to bottom terminals. Replace protective cover on 110 V terminals, replace 4 hold-down screws, and cable on J3.




**NOTE**

If Standby Battery Option 002 is installed, remove instrument top cover. Remove ac power and fuse F4 located on instrument deck.

**MODULE REPLACEMENT**

To remove Oscillator Assembly A10, proceed as follows:

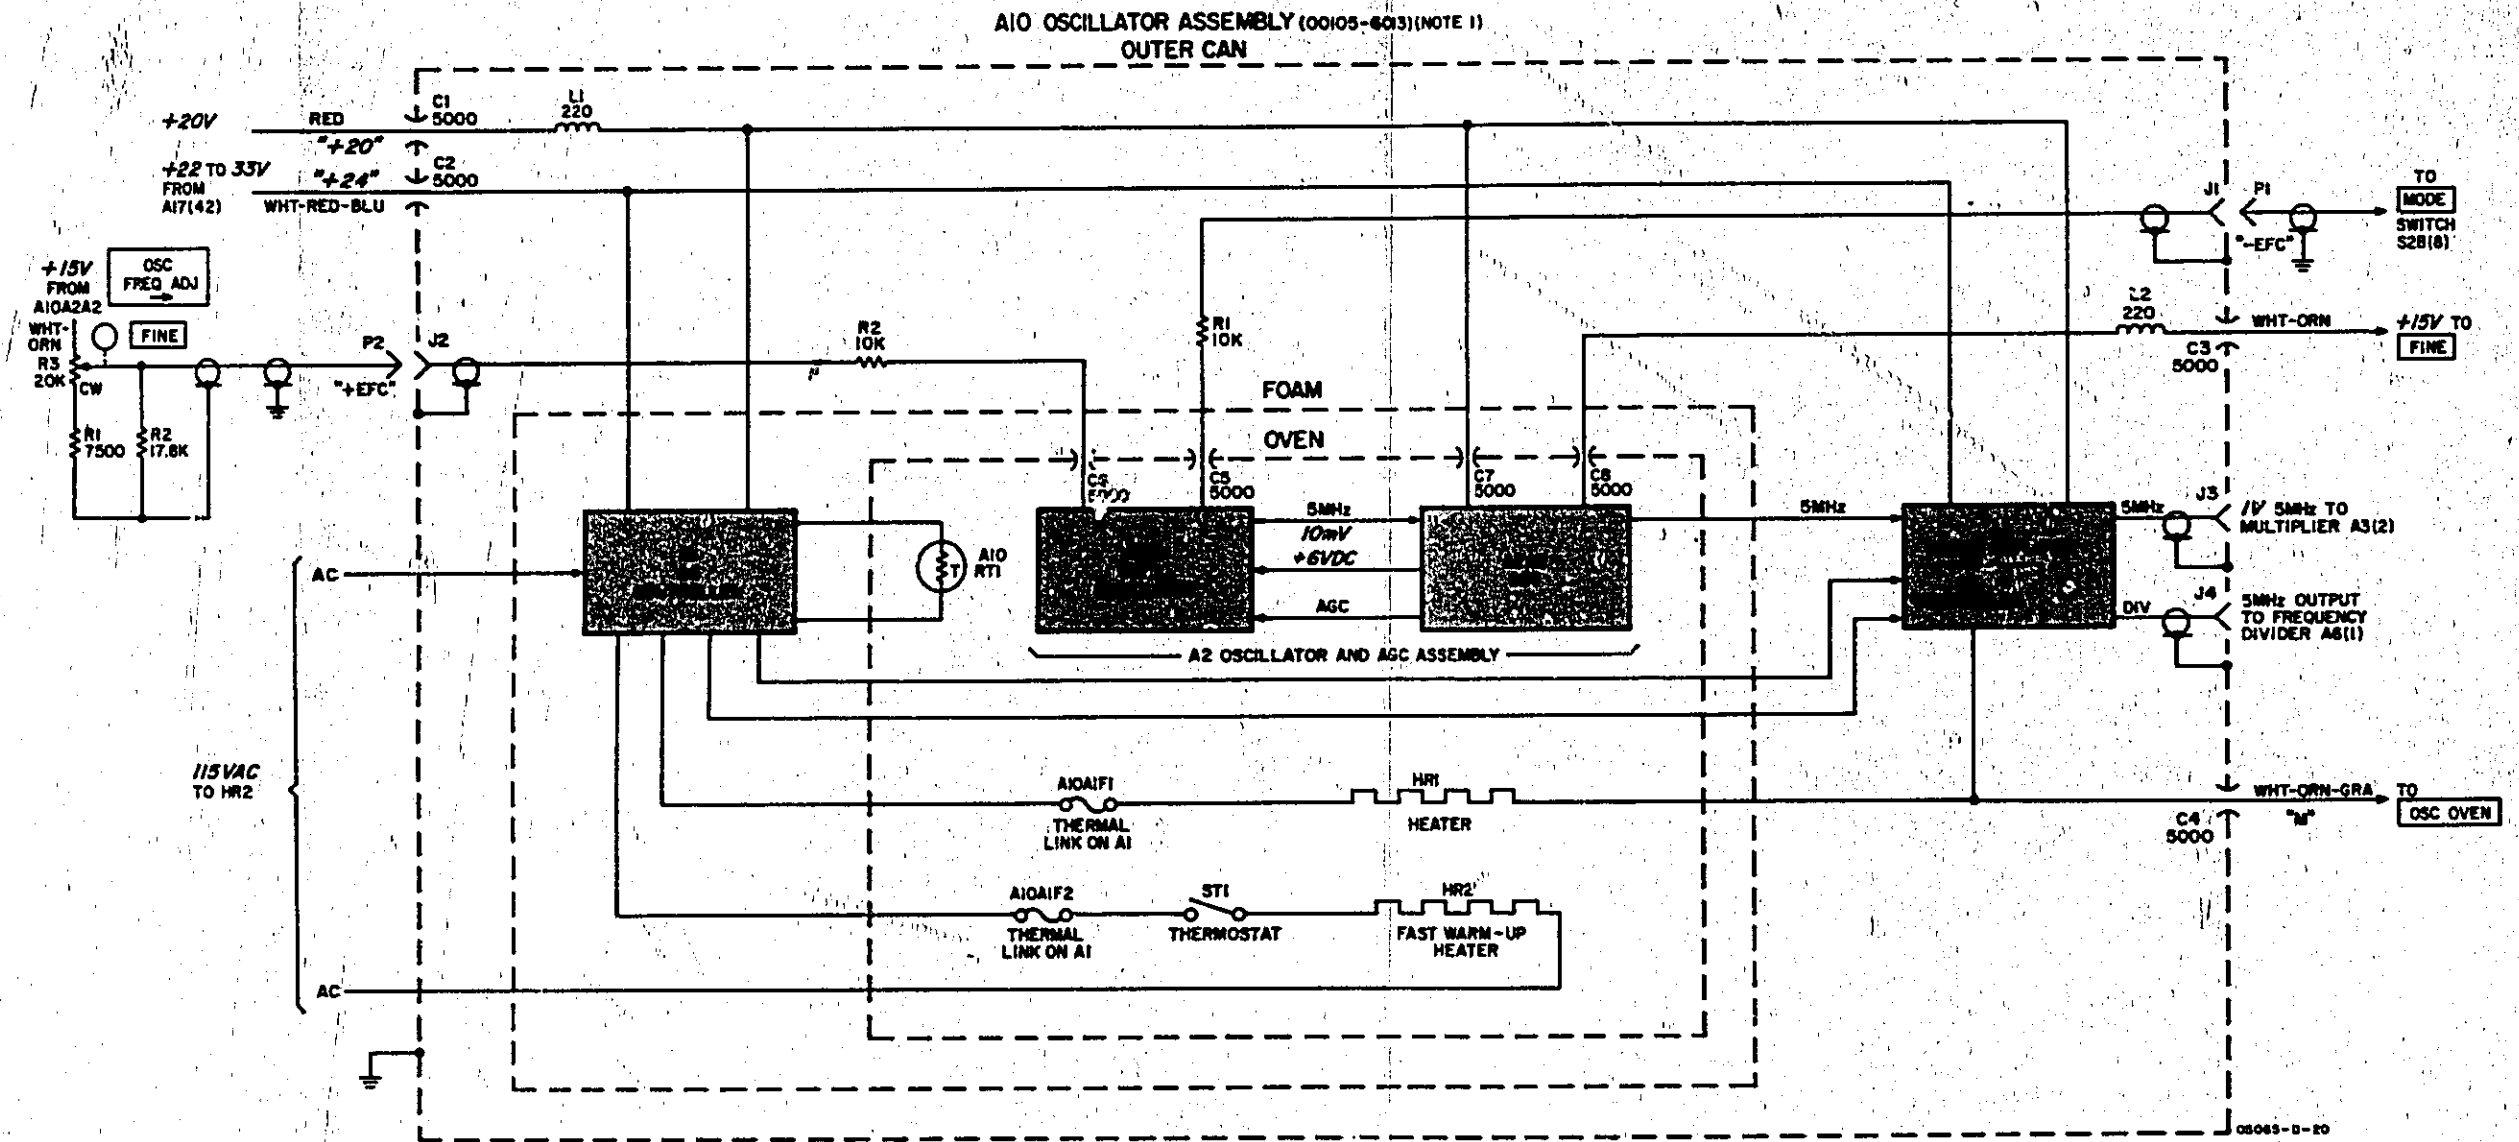- Remove ALL operating power.
- Remove bottom cover and disconnect all electrical connections.
- Remove 4 screws holding oven assembly in place.
- Remove oscillator assembly from instrument.
- Replace oscillator by reversing the above procedure.
- After replacing the new oscillator assembly, perform turn-on and operational check.



**NOTES**

- REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
- UNLESS OTHERWISE INDICATED:  
RESISTANCE IN OHMS;  
CAPACITANCE IN PICOFARADS;  
INDUCTANCE IN MICROHENRIES

**REFERENCE DESIGNATIONS**

NO PREFIX	A10	A10A1
	C1-8	F1,2
	HR1,2	
	J1-4	
	L1,2	
P1,2	R1,2	
R1-3	RT1	
	ST1	

Figure 8-20. A10 Oscillator Assembly Block Diagram



### TEMPERATURE CONTROLLER A11 THEORY

The A11 Assembly incorporates two temperature controller circuits that work with the sensing and heating elements in A12 RVFR Assembly for temperature control of the Rb<sup>87</sup> cell, and the Rb<sup>87</sup> lamp.

The two regulator circuits are nearly identical so discussion will be confined to the upper regulator circuit on A11 schematic (which feeds the cell heater).

Q1 and Q2 comprise a Wein bridge oscillator with emitter follower and detector providing a dc signal voltage representing the required correction for the dc controller section. Oscillator frequency (about 3 kHz) is determined by a phase-shifting network connecting to Q1 base through C8, R1, R3, C1, and C2. Amplitude is determined by the required heater power necessary to maintain proper operating temperature of the cell oven. Information on cell oven temperature is conveyed to the resistive leg of the Wein bridge by A12TR1 in the cell oven. Temperature setting of this heater control circuit is done by selecting A11R5. The cell oven thermistor has a negative temperature coefficient, so a decrease in oven temperature causes thermistor resistance to increase, thereby increasing oscillator amplitude. Diodes CR1 and CR3, and C21 translate oscillator output to a negative dc level applied to Q5.

The negative signal at Q5 base reduces Q5 collector current; which in turn increases Q7 collector current and the heater current output of chassis-mounted Q3. In this manner, heater current is increased to compensate for a temperature drop. When equilibrium is established (oven at required temperature), the Wein bridge is balanced with oscillator amplitude at a level corresponding to the required heater current. Diode CR7 provides temperature stabilization for Q5. Diode CR5 protects Q1 base-to-emitter junction from reverse voltage.

### A11 MAINTENANCE

#### NORMAL OPERATION

The A11 Assembly contains two oven controller circuits. These circuits control the temperature of the spectral lamp and the Rubidium Absorption cell inside the RVFR Assembly A12.

Proper temperatures are maintained by controlling dc current in the oven windings.

The output of the A11 Assembly are at pins 2 and 14. Nominal output voltage is approximately 18 V at these terminals.

#### OPERATIONAL CHECK

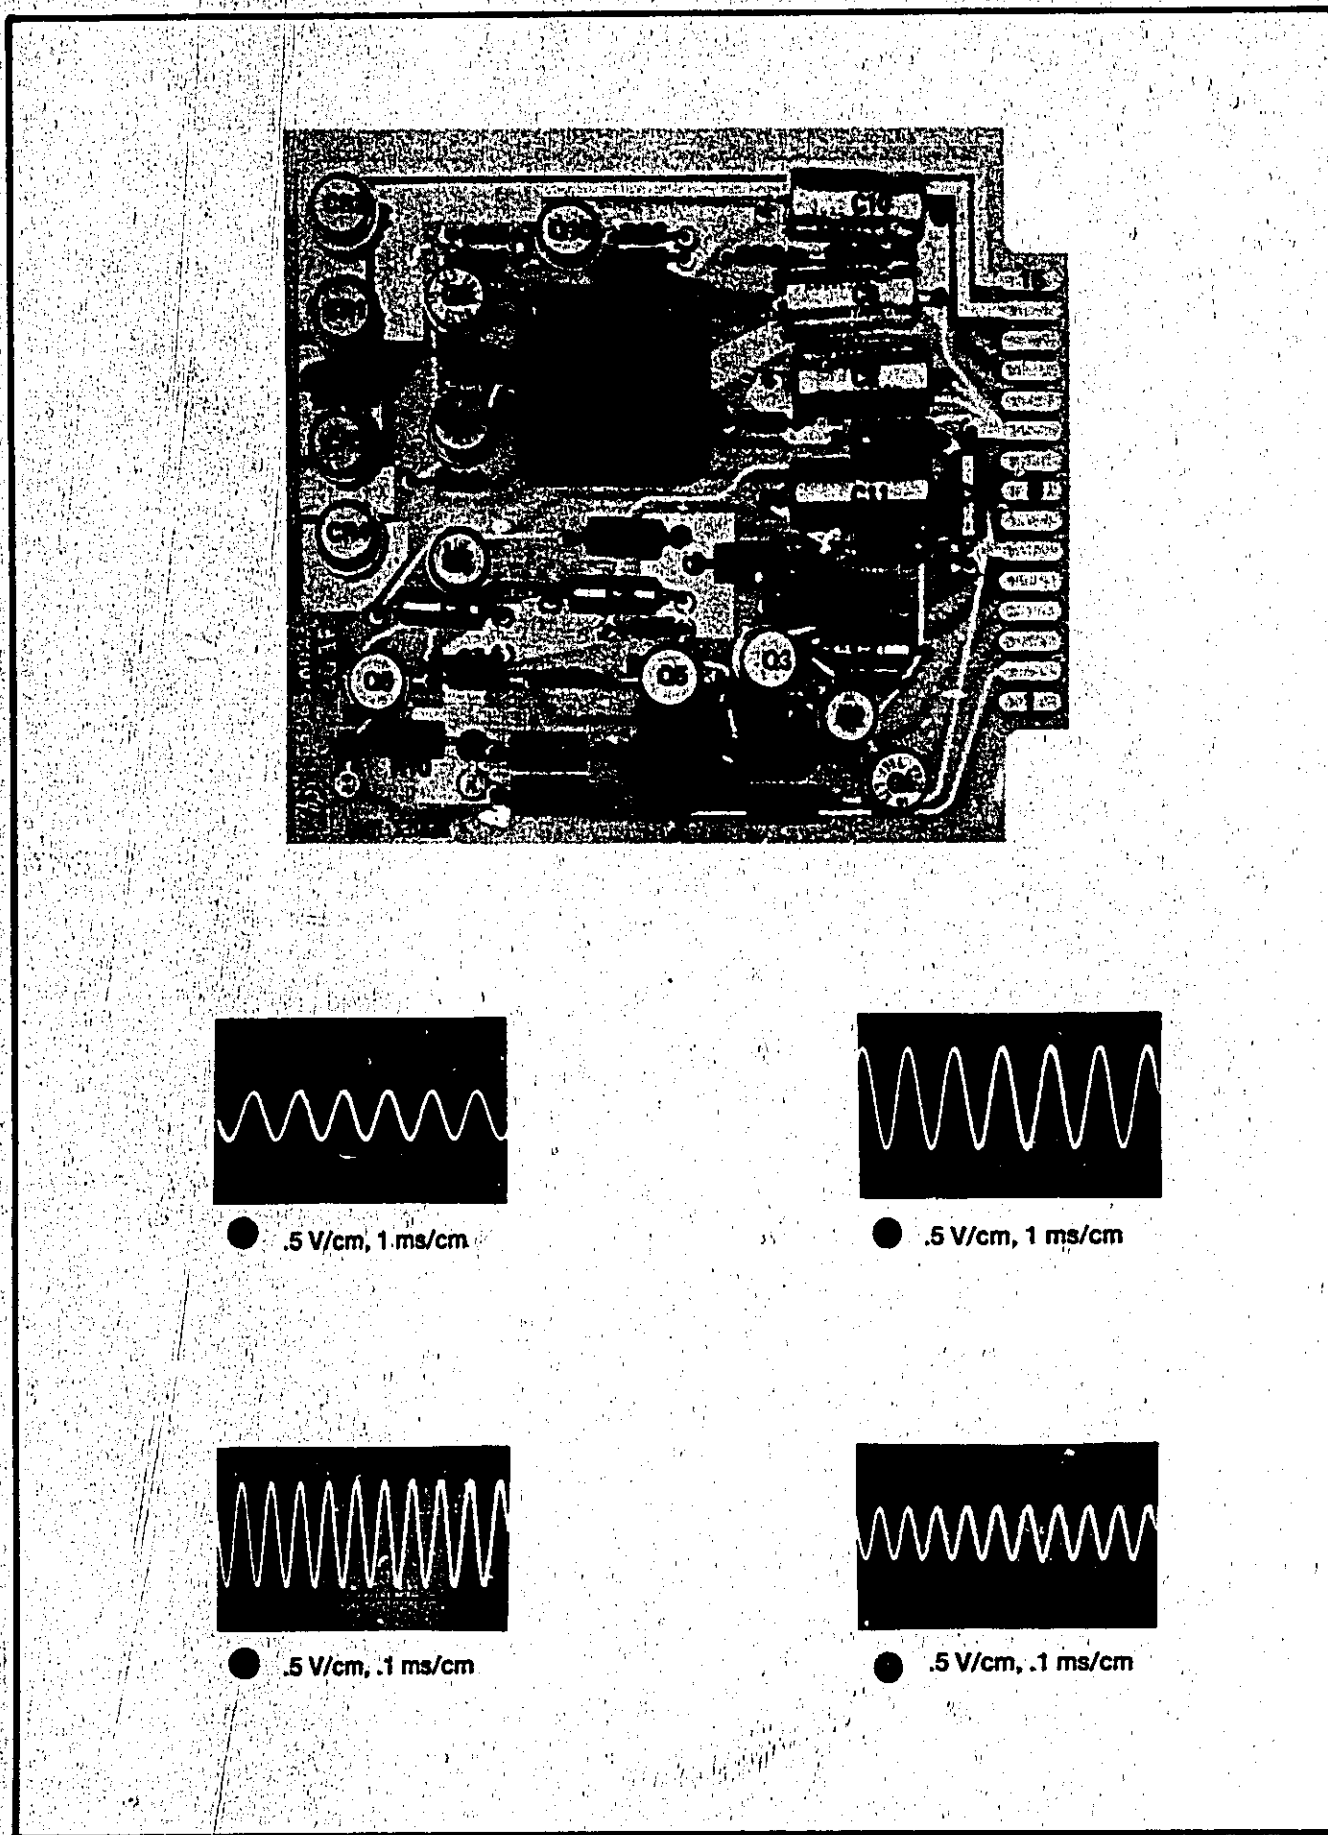
Proper operation of this assembly can be easily checked by: (1) placing your hand on the RVFR Assembly and noting that it is warm to the touch and, (2) checking front panel meter indications in the CELL OVEN and LAMP OVEN positions. The meter should read between 15 and 35. (NOTE: These readings will change with ambient temperature.)

#### TROUBLESHOOTING AND REPAIR


Disconnect ac and dc power before removing A11 Assembly.

#### ASSEMBLY REPLACEMENT

- a. Disconnect ac and dc power (Battery fuse or Option 002).
- b. Remove A11 Assembly. Remove A11R5 and install it on the new circuit board.
- c. Remove A11R6 from the old board and install it on the new one.
- d. Install new board and restore power.



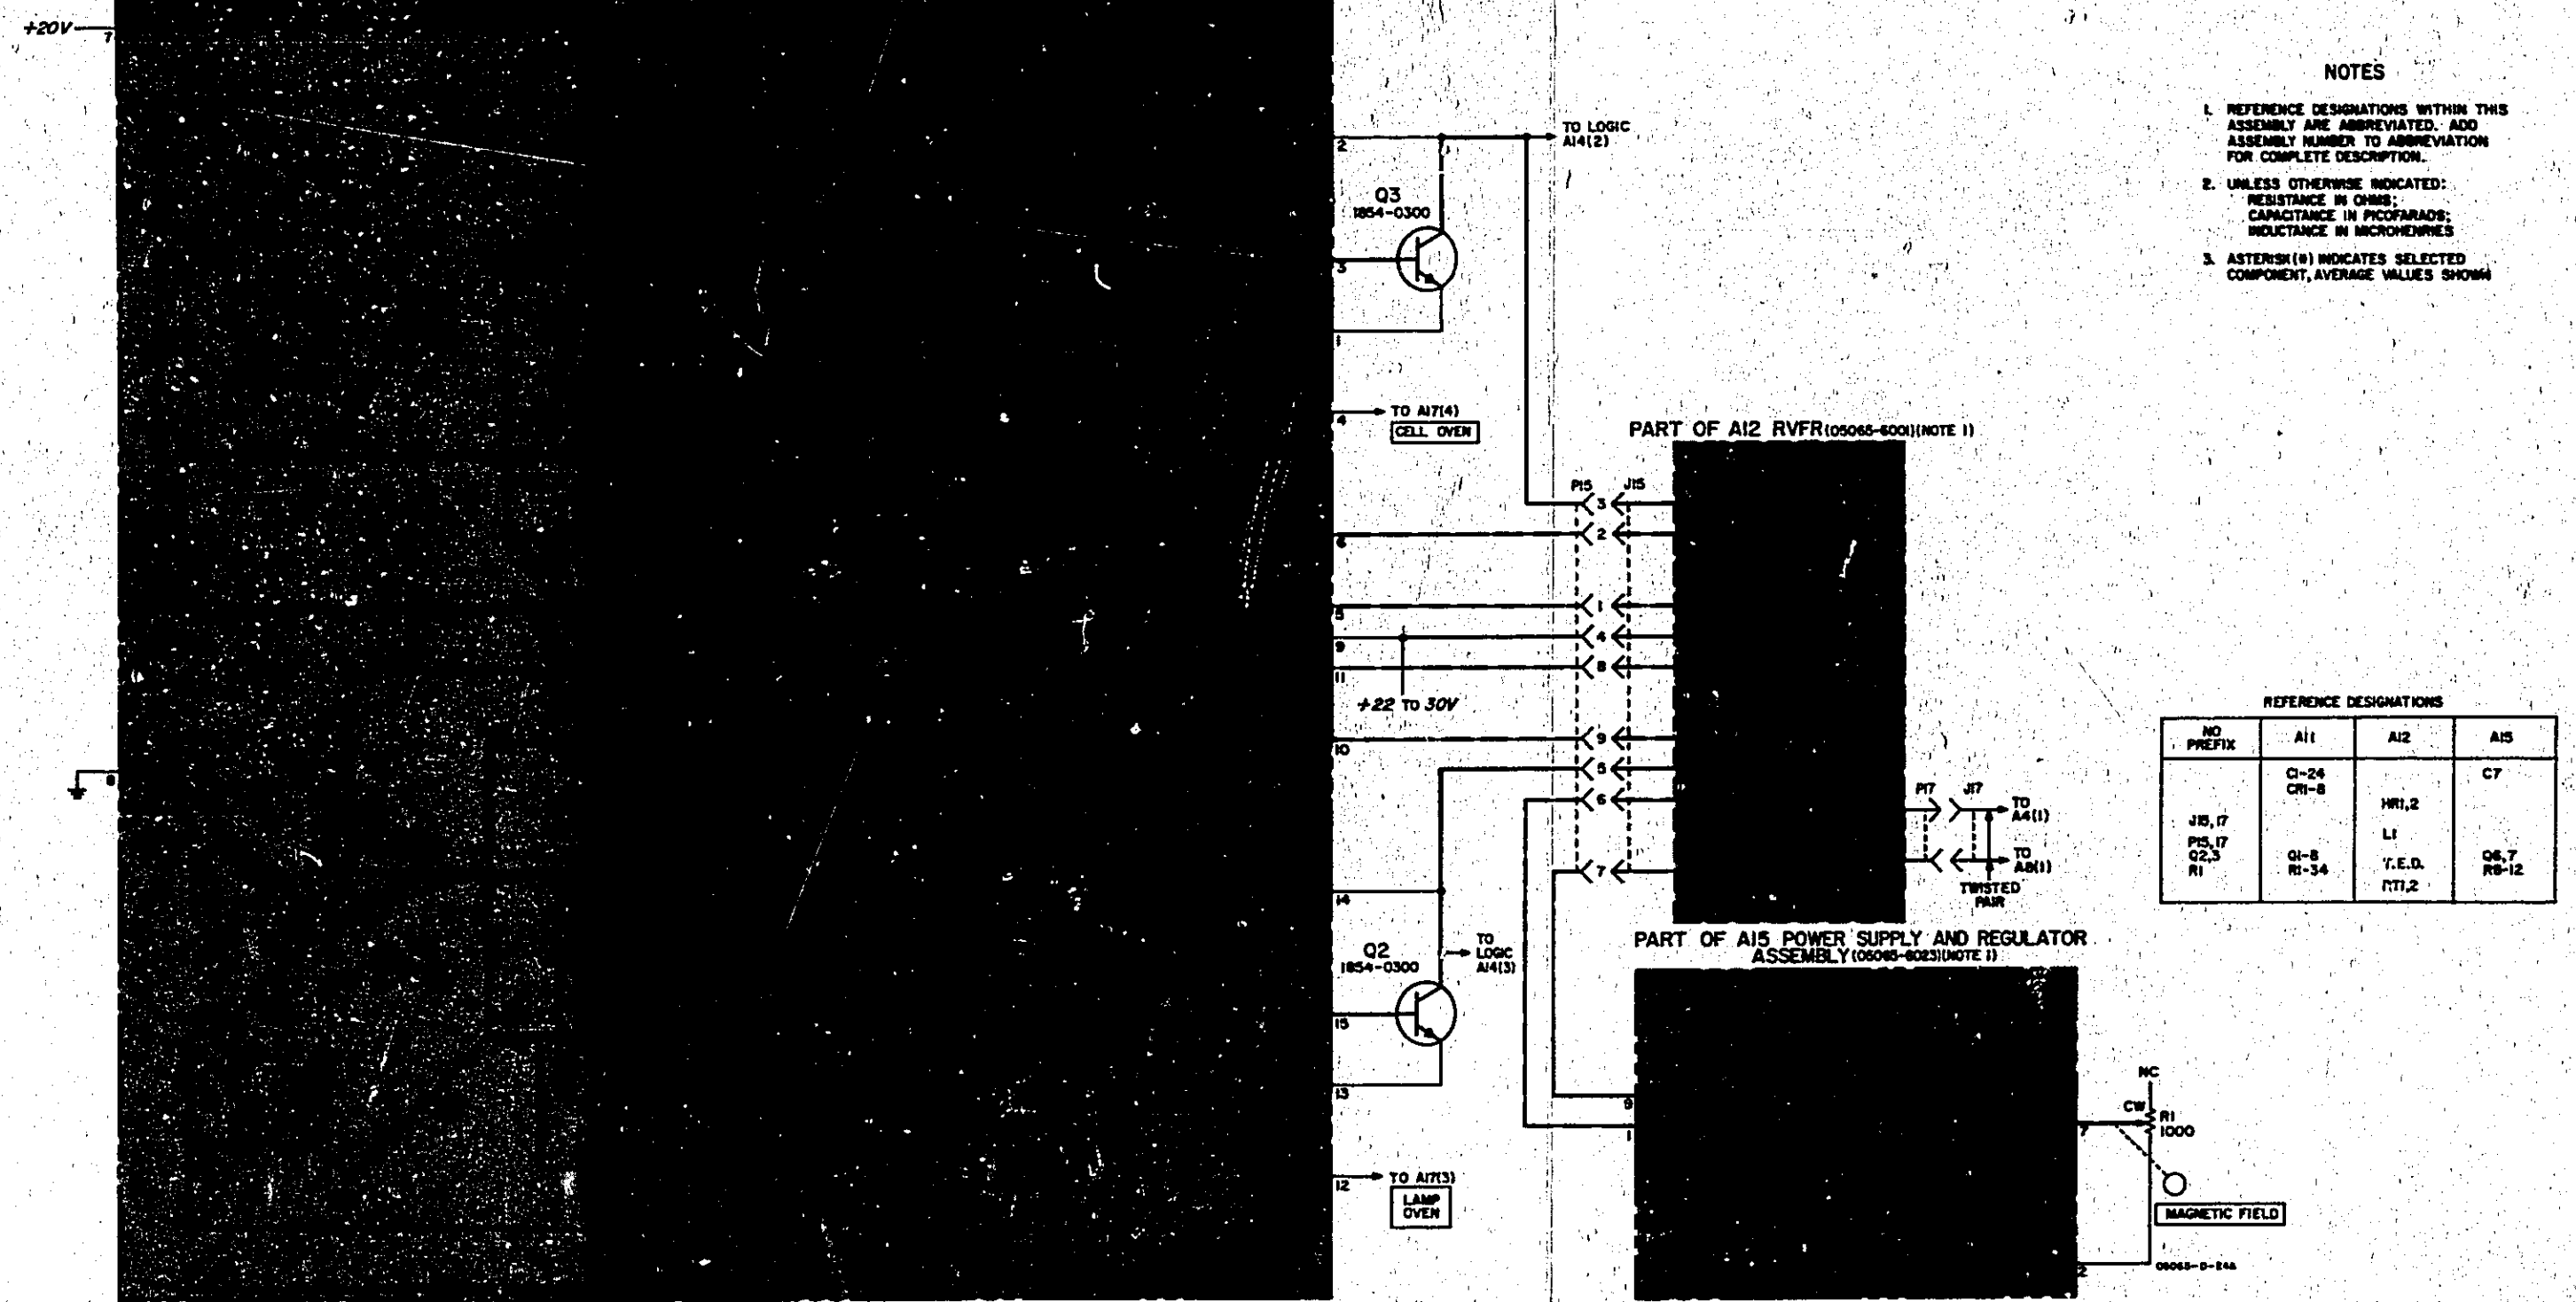A11 RVFR TEMPERATURE CONTROLLER ASSEMBLY (05065-8024) (NOTE 1)



NOTES

- REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
- UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS; CAPACITANCE IN PICOFARADS; INDUCTANCE IN MICROHENRIES.
- ASTERISK (\*) INDICATES SELECTED COMPONENT, AVERAGE VALUES SHOWN.

REFERENCE DESIGNATIONS

NO PREFIX	A11	A12	A15
Q1-24	C1-24	HR1,2	C7
J15, 17	CR1-8	LI	Q5, 7
P15, 17	Q1-8	Y.E.D.	R8-12
Q2, 3	R1-34	RT1,2	
R1			

Figure 8-21. A11 RVFR Temperature Controller Assembly

**RVFR (RUBIDIUM VAPOR FREQUENCY REFERENCE) ASSEMBLY A12 THEORY**

The A12 RVFR Assembly is a sealed package which should only be serviced at the factory. To remove, see removal instructions. For a detailed discussion of the frequency standardizing process, see Section 4-1, Theory.

The A12 RVFR Assembly which produces the frequency reference is housed in a triple magnetic shield to prevent frequency shifts by external magnetic fields. Isolation from ambient temperature is provided by two separate ovens which provide regulated temperature for: (1) the Rb<sup>87</sup> lamp and lamp oscillator and, (2) the Rb<sup>87</sup> filter cell and the Rb<sup>87</sup> absorption cell. Oven currents for the LAMP OVEN and CELL OVEN can be monitored with the CIRCUIT CHECK switch.

The main components of A12 Assembly are as follows:

- a. The magnetic shields.
- b. The temperature ovens each with a temperature sensor and heater.
- c. The Rb<sup>87</sup> lamp and oscillator circuit which produces 90 MHz to excite the lamp.
- d. The microwave cavity housing the Rb<sup>87</sup> absorption cell, the solar cell which detects the light output of the Rb<sup>87</sup> absorption cell, and the coupler which couples the 6.834685...GHz excitation into the microwave cavity.
- e. The step-recovery diode which produces the 114th harmonic of 60 MHz -5.315...MHz (6.834685... GHz) to excite the microwave cavity.

**A12 MAINTENANCE**

**NORMAL OPERATION**

a. Inputs:

- 1) 60 MHz at approximately 1 V or greater from A3 Assembly. Also 5.315...MHz at approximately 20 mV on same cable.
- 2) Approximately 18 Vdc at J15 (3 and 5) from A11 Temperature Controller Assembly for cell and lamp heaters.
- 3) Approximately 2½ to 6 mA at J15(6) from A15 Power Regulator Assembly. This current creates the magnetic field inside the RVFR to control its frequency.

b. Outputs: Under normal operation with sufficient RF power applied, the output of A7P1 will be:

- 1) At resonance, 274 Hz at a signal level of approximately 3 nanoamperes.

- 2) Slightly off resonance, 137 Hz at a signal level of approximately 5 milliamperes.
- 3) Completely off resonance, nothing.
- 4) Dc photo induced current of approximately 50µa.

**OPERATIONAL CHECK**

a. Because of the extremely low signal level outputs from the RVFR and, because of the specialized nature of the drive signals, the operational check of the RVFR requires that the driving and amplifying circuits associated with the RVFR work properly. Thus, the operational check for the RVFR may include operational checks of several other assemblies.

b. Procedure:

- 1) Check lamp and cell ovens by placing a hand on the RVFR Assembly. It should be warm to the touch. Also check CIRCUIT CHECK meter in the CELL OVEN and LAMP OVEN positions. Meter should read between 15 and 35 for both positions.
- 2) Set CIRCUIT CHECK meter to PHOTO 1. Meter should read 25 to 50. If it does, go to Step 3. If not proceed as described in the Circuit Checks, Table 5-3.
- 3) Magnetic field current check. Use clip-on milliammeter, such as HP 428B and measure output current at A15(9). It should be between 2½ and 6 mA and be controllable from the front panel MAGNETIC FIELD control.

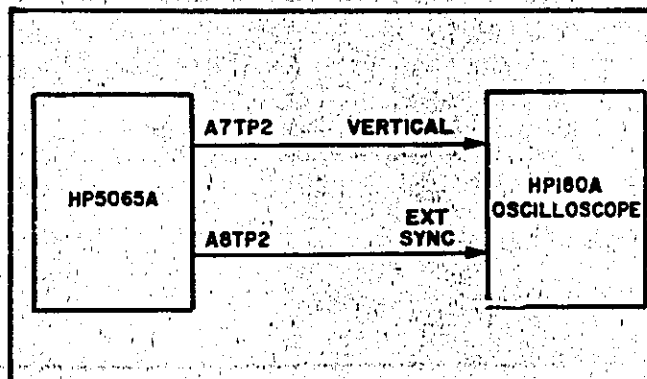
**NOTE**

Lack of magnetic field current will not affect the signal output of the RVFR. This current controls only the resonant frequency of the RVFR.

c. RVFR signal test:

- 1) Connect test setup as shown in the following figure:

**RVFR Test Setup**



- 2) Set scope sweep to 2 msec/cm and vertical sensitivity for 50 mV/cm. Adjust scope for external sync from signal at A8TP2.
- 3) Tune OSC FREQ ADJ COARSE for a signal indication on scope. The normal indication as the oscillator is tuned through the RVFR resonance is the appearance of a 137 Hz sine wave; it will increase and then decrease in amplitude, and become 274 Hz at a lower amplitude. It will then become 137 Hz which will again increase and then decrease in amplitude and disappear. If there is no signal go to step 5. Tune the oscillator for maximum undistorted 274 Hz signal, and set CIRCUIT CHECK meter to 2ND HARMONIC. If reading on meter is significantly below that which is normal for the instrument, the instrument should be completely realigned as described in LOOP ALIGNMENT PROCEDURE of Section 5-19.
- 4) If signal on scope as noted above (or 2ND HARMONIC as noted on front panel meter) is excessively noisy, the signal-to-noise ratio of RVFR should be rechecked as described in Section 5-26 of the instrument alignment procedure. If signal-to-noise ratio is not above 250, the RF alignment should be checked per Section 5-25 of the instrument alignment procedure. The signal-to-noise ratio should then be rechecked. If the signal-to-noise ratio is still less than 250, the RVFR should be replaced. Even with a signal-to-noise ratio of less than 250, the instrument will remain on frequency; however, the short term stability of the instrument will be out of specifications.
- 5) If no signal was observed in step 3, it indicates trouble in one of several places:
  - (a) Preamplifier in A7 Assembly not working.
  - (b) RF output from A3 Assembly low in amplitude or pi-matching network mistuned.
  - (c) A1 Synthesizer output off frequency or too low in amplitude.
  - (d) No 137 Hz modulation from A8 Assembly.
  - (e) Defective RVFR.
- 6) Items (a) through (d) can be easily checked by referring to the individual maintenance sections. If these circuits are OK, it indicates that the RVFR is probably defective and should be replaced. To check these circuits proceed as follows:
  - (a) With the instrument set up as shown in the RVFR test setup illustration and oscilloscope setup per preceding step c(2), remove plug A7P1. Touch the center conductor of A7J1 with a small piece of metal such

as a piece of solder. A large signal should appear on the scope. This indicates the preamplifier is OK.

- (b) Check RF output of A3 Multiplier Assembly by following procedure in the A3 Operational Check.
- (c) Check amplitude and frequency of synthesizer output at end of cable at A3P5. Amplitude should be approximately 100 mV and the correct frequency can be found in Table 3-6 after noting Thumbwheel and slide switch settings on the A1 Assembly.
- (d) Remove A3P1 and measure the 137 Hz modulation signal present at the end of the cable at A3P1. If signal OK at this point remove and disassembly A3 Assembly. Check diodes A3CR3, 4, 5, and 6. Reconnect cable to A3J1 and +20 V(R). Check signal at CR3 (anode).
- 7) If all tests to this point are OK, the RVFR is probably defective and should be replaced.

#### A12 RVFR ASSEMBLY REMOVAL AND REPLACEMENT

- a. Disconnect all external power sources including batteries.
- b. Remove top and bottom instrument covers.
- c. Disconnect RVFR cable from A3J4 on Multiplier Assembly A3.
- d. Disconnect RVFR cable from A7J1 on AC Amplifier Assembly A7.
- e. Locate the twisted pair of black and red wires from the RVFR Assembly. Disconnect the red wire at socket XA4 pin 1 and the black wire at XA8 pin 1.

#### NOTE

DO NOT disconnect the diode connected between XA4(1) and XA8(1).

- f. Disconnect A12J15 and A12J16 from chassis plugs.
- g. Remove four nuts and lockwashers holding the RVFR unit in place and withdraw the assembly from the top of the instrument.

#### NOTE

When packing for return to the factory, pack carefully for maximum shock cushioning and label shipping package "FRAGILE". If possible, use packing from replacement RVFR unit.

- h. Handle replacement RVFR assembly carefully while unpacking and installing. Note two resistors packaged with this Assembly. These are the calibration resistors for the A11 Temperature Regulator Assembly and are required to provide proper operating temperatures for cell and lamp areas of the replacement A12 RVFR Assembly. Install the A12 Assembly in the reverse order of the above removal steps, making sure the four lock washers are in place.

i. Remove the A11 Temperature Regulator circuit board and replace A11R5 and A11R6 with the new R5 and R6 calibration resistors.

j. Install new Power Supply Regulator Assembly supplied with replacement RVFR Assembly.

k. Locate the twisted pair of black and red wires from the RVFR Assembly. Solder the black wire to pin 1 of socket XA8 and the red wire to pin 1 of socket XA4.

l. After the A12 RVFR Assembly has been replaced the instrument should be turned on and warmed up for at least four hours before following the LOOP ALIGNMENT PROCEDURE in paragraphs 5-19 through 5-31.

#### NOTE

If the A1 synthesizer thumbwheel setting are changed or service is performed on A14, allow 1 minute of recovery time before attempting to place in the continuous operation mode.

#### BUFFER AMPLIFIER ASSEMBLY A13 THEORY

This assembly has two buffer amplifier circuits which deliver 1 volt (into 50 ohms), 5 MHz outputs. One output goes to A1 Synthesizer Assembly and the other output to front and rear 5 MHz output jacks.

R1 provides a 50-ohm input at J1. Buffer amplifier stage Q2 amplifies the input 5 MHz signal for a 1-volt, 5 MHz output at J3. Buffer Amplifier stages Q1 and Q2 provide a

1-volt, 5 MHz output at J4 for the rear 5 MHz output and at J2 for the front panel 5 MHz output. Additionally, Q3 output is rectified by CR2 and filtered by C11, R17, and C12 for a dc output to the 5 MHz position of the CIRCUIT CHECK meter. Bias voltage for all three amplifying stages is provided by Zener Diode CR1. Selected capacitances C7 and C8 provide tuning for T1 and T2 respectively. The +20 volt supply is decoupled by L1 and C1.

#### A13 MAINTENANCE

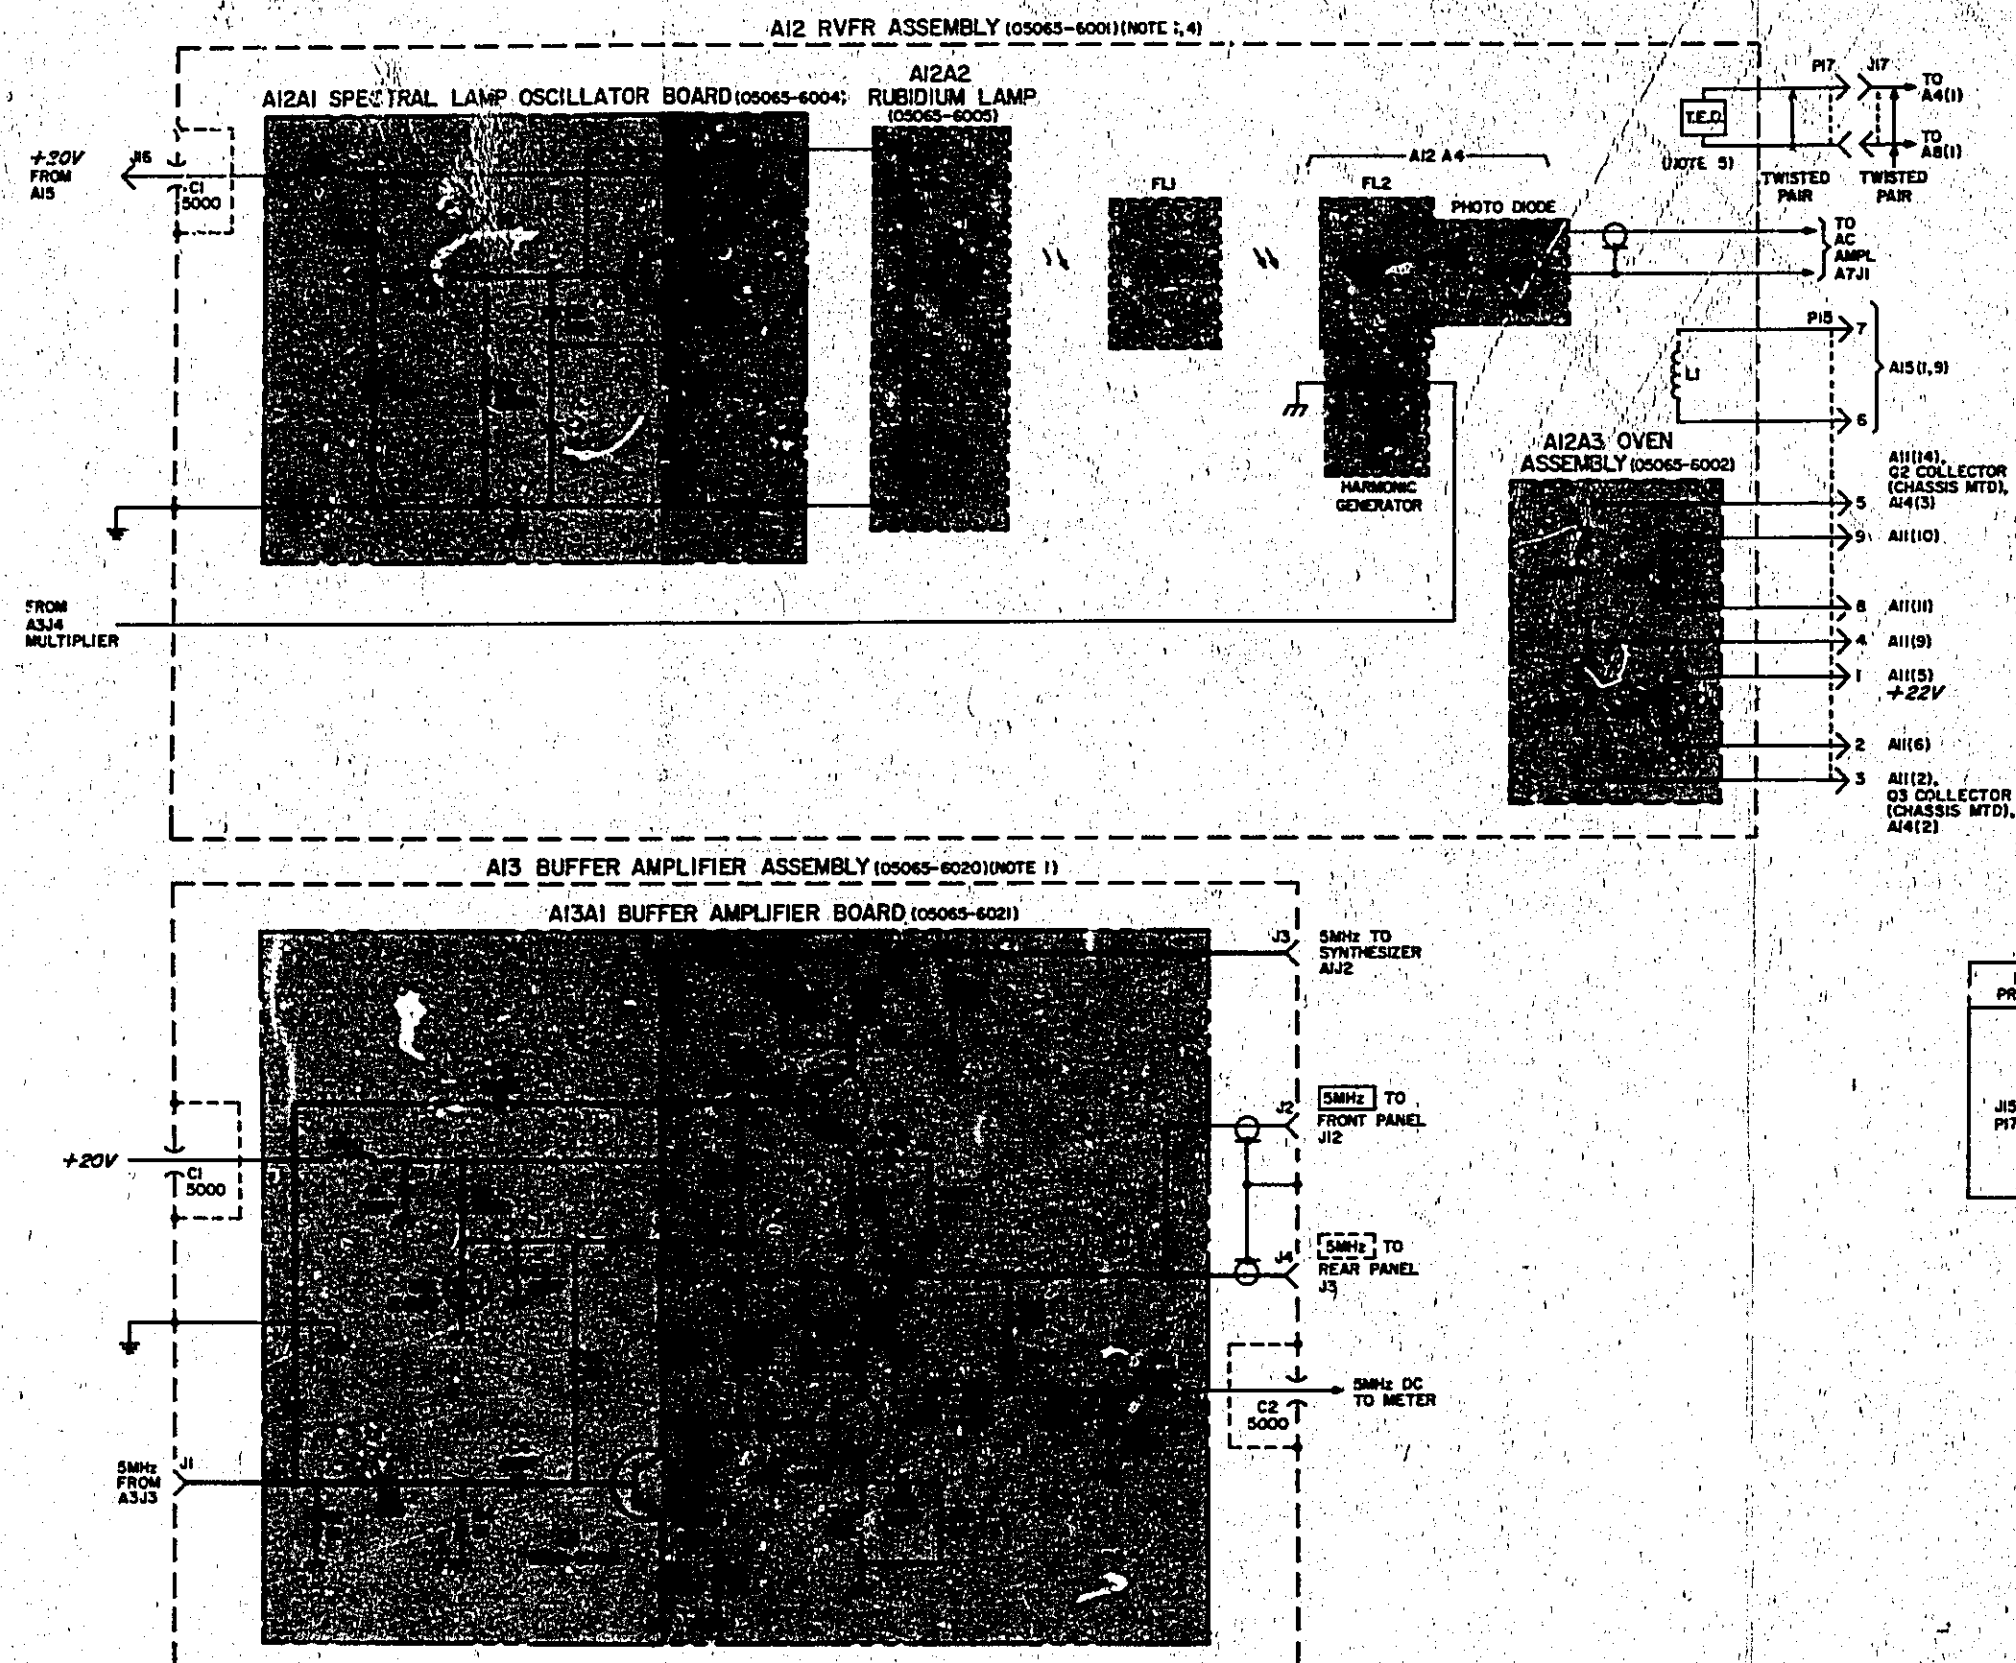
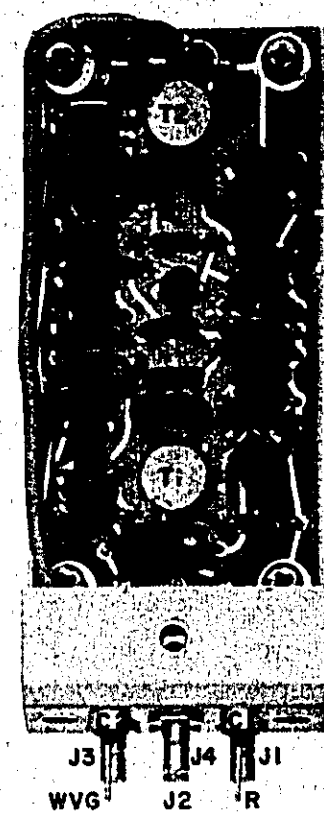
##### NORMAL OPERATION

- Input signal is 1V rms.
- Output at J3 is approximately 3V peak-to-peak into an open circuit.
- Output at J4 and J2 is 1V rms into a 50 ohm load.
- Output at C2 is approximately 90 to 120 $\mu$  a for operation of front panel meter.

No adjustments are provided.

##### ASSEMBLY REPLACEMENT

No adjustments are needed after repair or replacement of this assembly.



NOTES

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS; CAPACITANCE IN PICOFARADS; INDUCTANCE IN MICROHENRIES
3. ASTERISK (\*) INDICATES SELECTED COMPONENT, AVERAGE VALUES SHOWN
4. NOT FIELD REPAIRABLE.
5. T.E.D. = THERMO ELECTRIC DEVICE.

REFERENCE DESIGNATIONS

NO PREFIX	A12	A12A1	A12A2	A12A3	A12A4	A13	A13A1
	C1	C1-4 CR1	DS1		C2 CR1,2 FL.2	C1,2	C1-12 CR1-2
J15, J7 P17	J2 LI T.E.D.	L1-3 Q1 R1-3		HR1,2 RT1,2		J1-4	L1 Q1-3 R1-18 T1,2

DELETED:  
J2

Figure 8-22. A12 RVFR Assembly and Buffer A13 Amplifier Assembly

**LOGIC ASSEMBLY A14 THEORY**

Logic Assembly A14 monitors various circuits and controls front panel CONTINUOUS OPERATION and INTEGRATOR LIMIT lights. These two front-panel lights give a constant indication of instrument operation. A14 Functional Diagram is a diagram of the A14 Logic Circuits.

The separate logic functions fed to A14 are listed, together with the normal and abnormal conditions which control the CONTINUOUS OPERATION and INTEGRATOR LIMIT lights, in the table of A14 logic inputs.

With a normal "on frequency" condition, CR13 input is "H" with CR13 conducting, Q18 conducting, and the CONTINUOUS OPERATION light on. At this time, all stages connecting to CR13 input are nonconducting. When Q4, Q14, or Q7 conducts in response to a "no go" logic input, CR13 input goes "L" and stops conducting, Q18 turns off and the CONTINUOUS OPERATION light goes out.

Q14 is noninverting so that a "H" input in normal operation corresponds to a "H" at Q14 output which connects to CR13. Correspondingly, Q15 input is "L" for normal operation. Summarizing, the conducting transistors for a normal "on frequency" condition are: Q5, Q9, Q6, Q8, Q10, Q12, Q3, and Q18; CR13 also conducts. Nonconducting transistors for a normal "on frequency" condition are: Q16, Q4, Q15, Q14, Q2, and Q7.

The cell oven and lamp oven inputs are the voltages at the inputs to the cell and lamp oven heaters. Since these heaters are connected to the dc supply voltage (+22 to 30 volts) these inputs go "L" with an increase in heater current and "H" with no heater current.

With a cell oven "no heater" condition, the cell oven input is near zero volts and Q5 is turned off impressing an "H" signal on Q15 and the CONTINUOUS OPERATION light is turned off.

The lamp oven input works in a similar manner as the preceding for a "no-heater" condition with Q10 and Q12; and for an "over-heat" condition with Q9.

The 2nd Harmonic input to Q3 is a positive dc voltage when "on frequency" resulting in a normal "L" input to Q15. When the system is not operating correctly and 2nd harmonic drops out, Q3 input is "L" and a resulting "H" at Q15 input turns off the CONTINUOUS OPERATION lamp.

The Synthesizer lock signal input is only present when there is no phase lock in the Synthesizer Assembly and consequently the synthesizer output is "off" frequency. The Synthesizer "no go" input is "H" which causes Q16 to conduct, delivering a "L" input to Q14 and the CONTINUOUS OPERATION light is turned off.

The light disable function that comes from the FUNCTION switch is developed when the FUNCTION switch is placed in OPER connecting +20 volts to C2. The result is a short-duration positive pulse at Q4 input. Q4

A14 Functional Diagram



output is a negative spike which turns off CR13. If all inputs to A14 are "go" at this time, the LOGIC RESET pushbutton will cause CR13 to conduct when it is depressed. Q18 will then conduct turning on the CONTINUOUS OPERATION light. This circuit insures that the CONTINUOUS OPERATION light will not come on automatically when the FUNCTION switch is set at OPER.

At the fundamental error input, there is no 137 Hz signal when "on frequency" 137 Hz appears for an "off frequency" condition. After amplification by Q2, the 137 Hz input is rectified by CR1 and CR2 to provide an "H" input to Q7 which delivers a "L" input to CR13 to cut it off, thereby disabling the CONTINUOUS OPERATION light.

**A14 MAINTENANCE**

**NORMAL OPERATION**

The A14 Assembly monitors several voltages throughout the 5065A and either extinguishes the CONTINUOUS OPERATION light or enables the INTEGRATOR LIMIT light if these voltages should deviate from prescribed limits.

Loss of the continuous operation light means that the 5065A is probably off frequency. The light will not come back on by itself; the logic reset button must be pushed.

**NOTE**

If the A1 synthesizer thumbwheel setting are changed or service is performed on A14, allow 1 minute of recovery time before attempting to place in the continuous operation mode.

The table below summarizes the normal and abnormal voltages that operate the A14 Assembly.

**OPERATIONAL CHECK**

- a. Remove ac and dc power.
- b. Remove A11 Assembly and mount on extender board.
- c. Reapply power and wait a few minutes for instrument to stabilize. Press LOGIC RESET button. Continuous OPERATICN light will come on.
- d. Set meter to CELL OVEN.
- e. Momentarily short Q5 collector (case) to ground. The meter should fall to zero and the CONTINUOUS OPERATON light will go out.
- f. Push logic reset button. Momentarily short Q5 base to ground. Meter reading should increase and CONTINUOUS OPERATION light will go out.
- g. Press LOGIC RESFT button. Set meter to LAMP OVEN. Momentarily connect Q6 collector (case) to ground. Meter should drop to zero and CONTINUOUS OPERATION light will go out.
- h. Press logic reset button. Momentarily connect Q6 base to ground. Meter reading will increase and CONTINUOUS OPERATION light will go out.
- i. Remove ac and dc power and replace A11 in its socket. Restcre power.
- j. Perform checks of Paragraph 5-31(e).

A14 Operating Voltages

Pin No.	Signal Source	Normal Voltage	Voltage Required to Extinguish CONT. OP. Light		INTEGRATOR Limit Light On At
1	2nd Harmonic Signal Level	Approximately 8 Vdc	<1.1 Vdc		
2	Cell Oven Voltage	18 Vdc	<5 Vdc	1 Vdc Less than Pin 7	
3	Lamp Oven Voltage	15 Vdc	<5 Vdc	1 Vdc less than Pin 7	
5	Synthesizer Lock Alarm Circuit	<1.5 Vdc	5 Vdc		
9	Function Switch	20 Vdc	20 Vdc + Pulse		
11	137 Hz Error Signal	AC Noise	12V p-p		
15	Quartz Oscillator Contr.	-14 to +7 dc			+2.5 Vdc or -5 Vdc

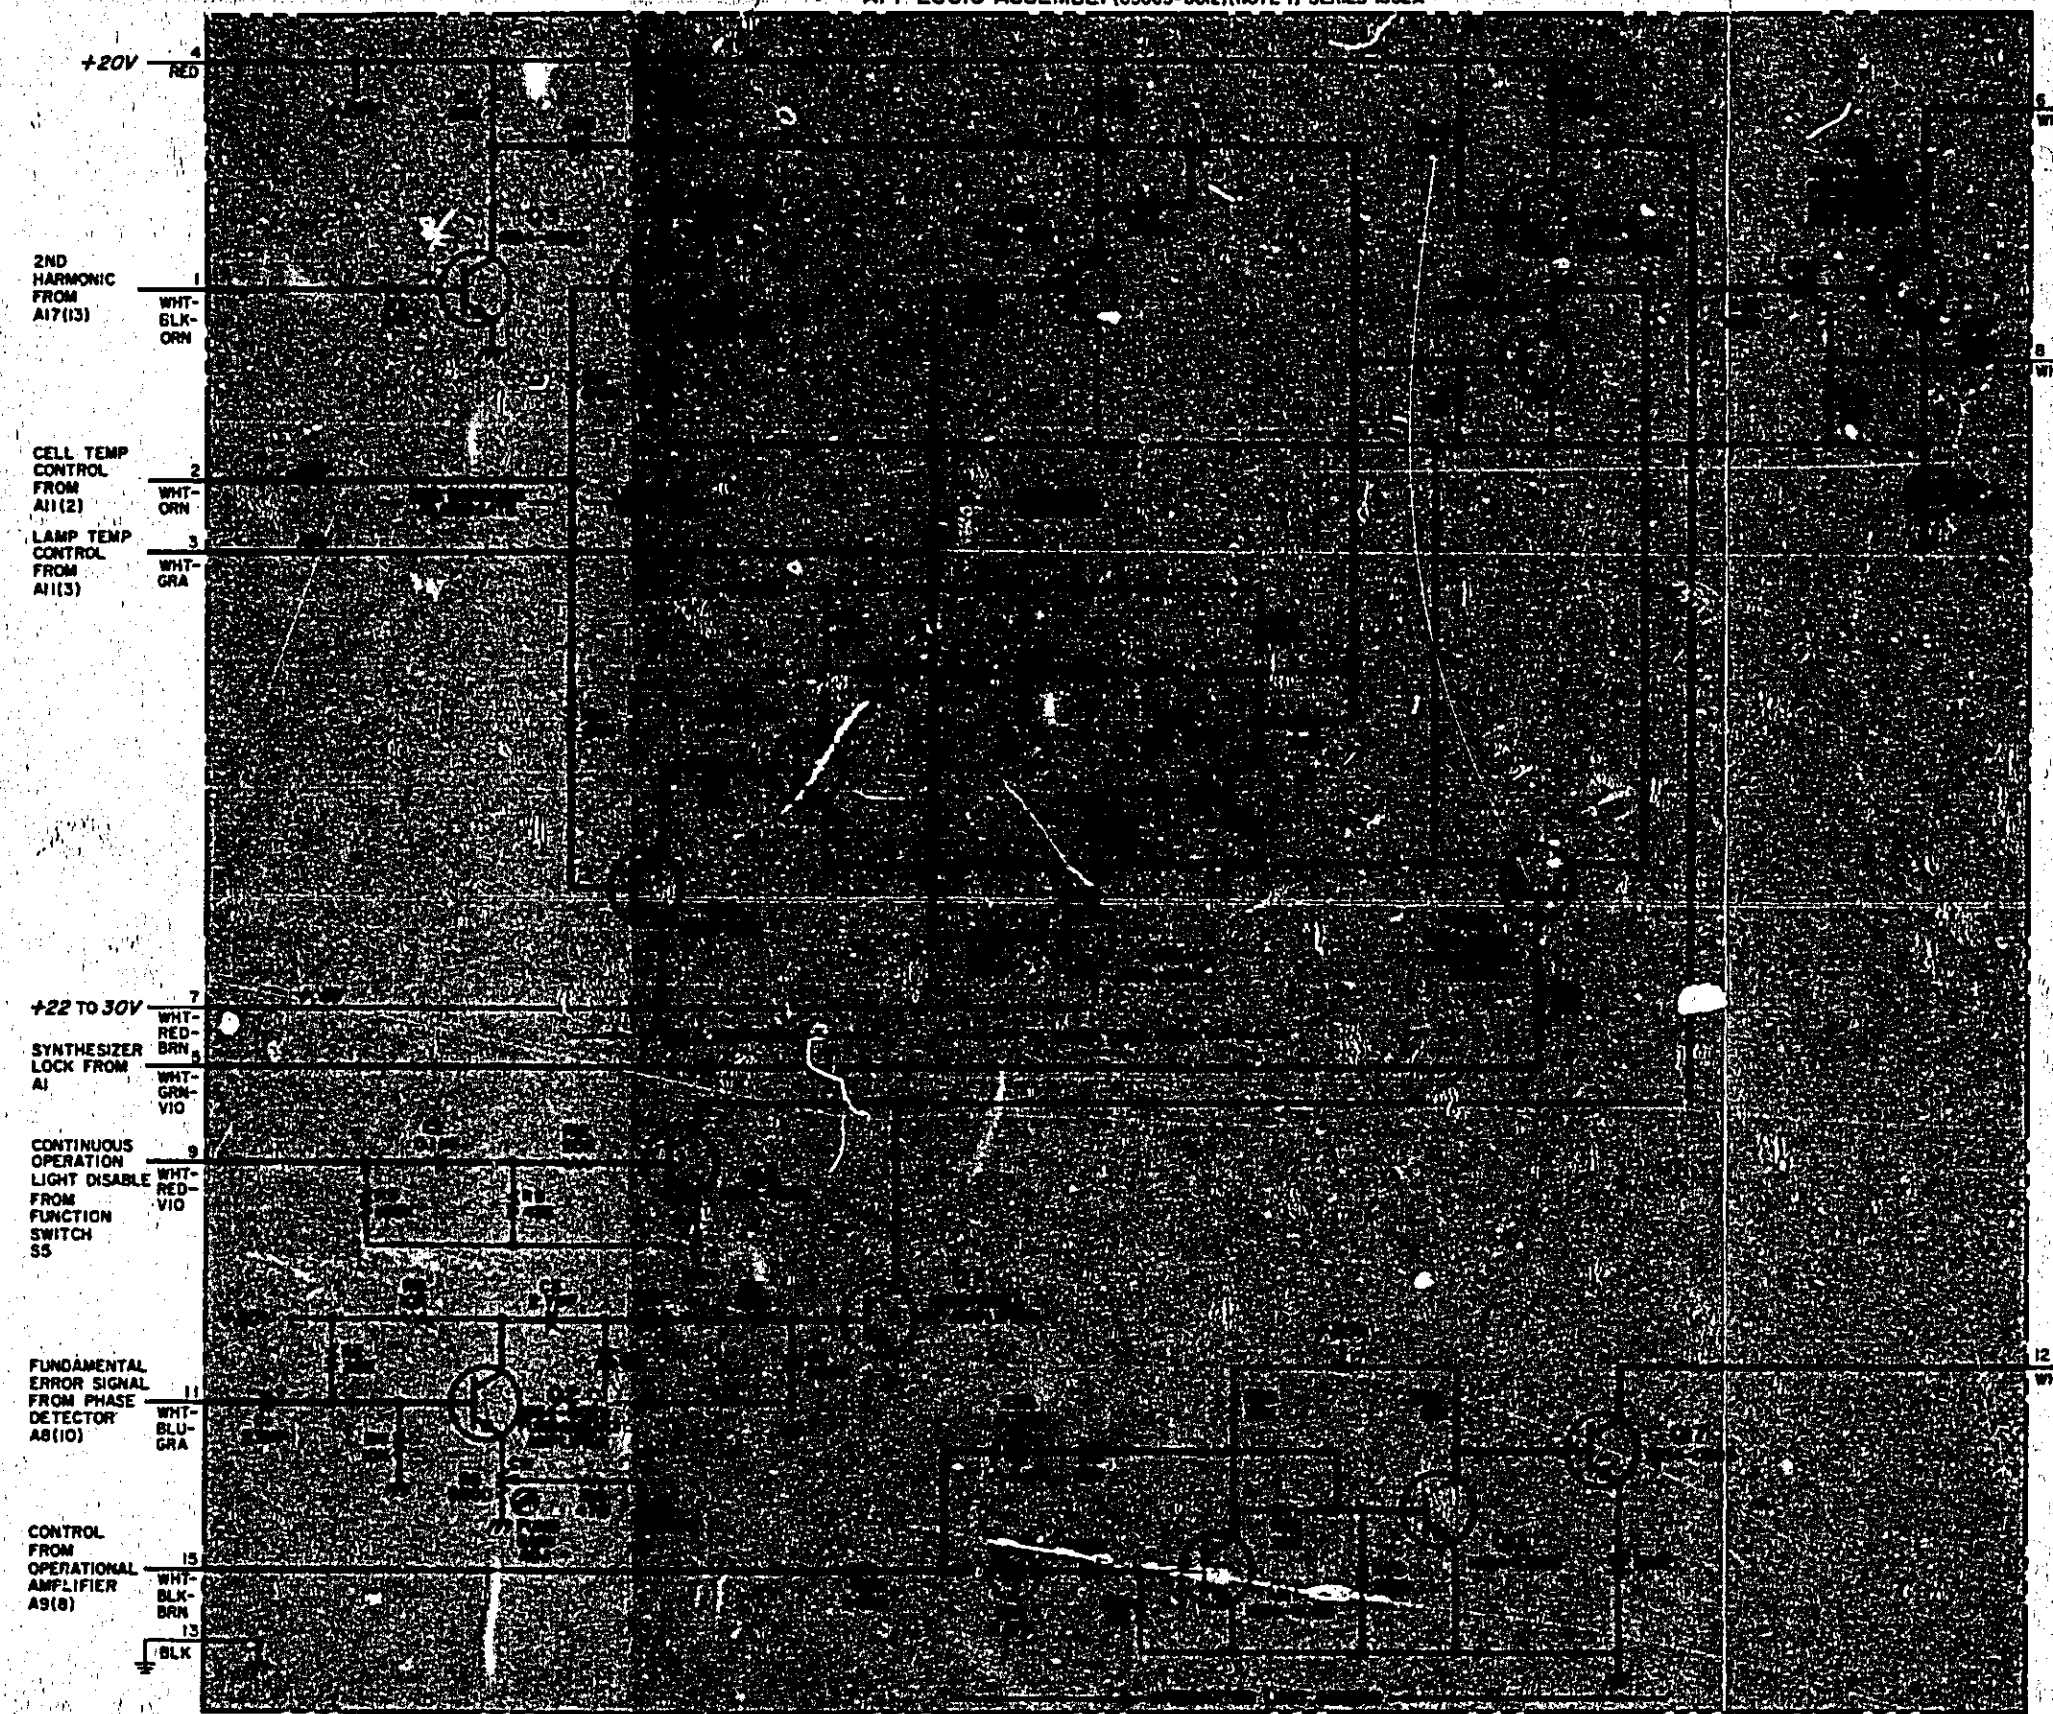
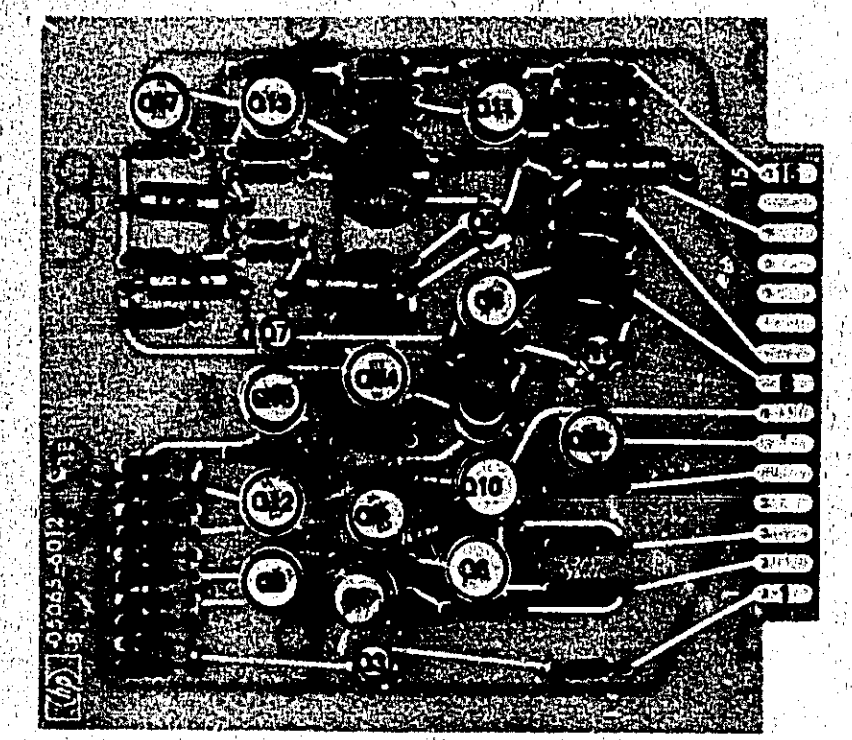


A14 Logic Table

Function	Normal Condition (Continuous Operation Light On)	Abnormal Condition (Causing Continuous Operation Light Off)
Cell Oven (Oven Off Signal)	Positive Voltage Approximately Halfway Between Ground and Dc Supply Voltage	"H"* causing Q6 to cut off and deliver an "H" input to Q15
Cell Oven (Oven Over-Heat Signal)	Same as above	"L"* causing Q5 to cut off and deliver an "H" input to Q15
Lamp Oven (Oven Off Signal)	Same as above	"H"* causing Q12 to cut off and deliver an "H" input to Q15
Lamp Oven (Oven Over-Heat Signal)	Same as above	"L"* causing Q12 to cut off and deliver an "H" input to Q15
2nd Harmonic Signal	"H" when "On Frequency"	"L" for absence of 2nd Harmonic when "off frequency"
Fundamental Error Signal (137 Hz)	"L" for minimum 137 Hz when "ON Frequency"	"H" for large amount of 137 Hz when "off frequency"
Synthesizer Lock Signal	"L" for absence of synthesizer logic input when "On Frequency"	"H" Synthesizer Lock Signal present indicating: (1) No Phase Lock (2) No 5.315...MHz
Light Disable Signal	When +20 volts connects to C2 in the OPER position of the FUNCTION switch, resulting positive spike is inverted by Q4 for a "no-go" negative spike which latches CR13 off and disables the CONTINUOUS OPERATION light until the LOGIC RESET pushbutton is depressed to turn on CR13	

\*With respect to normal voltages.

A14 LOGIC ASSEMBLY (05065-6012)(NOTE 1) SERIES 1532A



+20V RED 4

2ND HARMONIC FROM A17(13) 1 WHT-BLK-ORN

CELL TEMP CONTROL FROM A11(2) 2 WHT-ORN

LAMP TEMP CONTROL FROM A11(3) 3 WHT-GRN

+22 TO 30V 7 WHT-RED-BRN

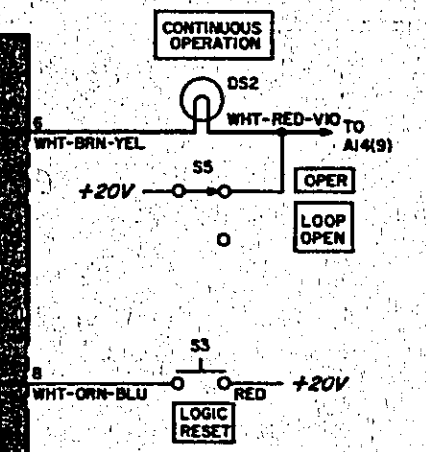
SYNTHESIZER LOCK FROM A1 8 WHT-GRN-VIO

CONTINUOUS OPERATION LIGHT DISABLE FROM FUNCTION SWITCH S5 9 WHT-RED-VIO

FUNDAMENTAL ERROR SIGNAL FROM PHASE DETECTOR A8(10) 11 WHT-BLU-GRN

CONTROL FROM OPERATIONAL AMPLIFIER A9(8) 15 WHT-BLK-BRN

13 BLK



- NOTES
1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
  2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS; CAPACITANCE IN PICOFARADS.

REFERENCE DESIGNATION

NO PREFIX	A14
C1-5	C1-5
C21-4	C21-4
DS1,2	DS1-2
R2-4	R2-4
S3,5	S3-5

05065-9-28

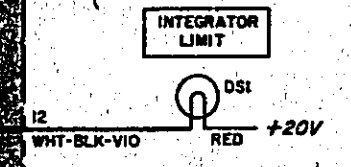


Figure 8-23. A14 Logic Assembly

### POWER SUPPLY AND REGULATOR CIRCUIT A15 THEORY

The A15 Power Supply and Regulator Assembly provides regulated +20 V.

In addition, there are three other power supply circuits in the A15 Assembly:

a. The full-wave bridge rectifier, energized by chassis-mounted T1, which delivers +24 to 32 volts to the LC filter consisting of chassis-mounted L1, C1, and C2.

b. The magnetic field regulator which supplies dc current for the magnetic field winding in A12 RVFR Assembly according to the setting of the MAGNETIC FIELD control on the front panel.

c. The -20 volt supply.

In the +20 volt regulator, +24 to 32 volts connects to chassis-mounted Q1 and through A14(4) to the +20 volt regulator circuit. Regulated +20 volts connects to the voltage adjustment R17 which controls Q5A bias. The other side of differential amplifier Q5A and B is stabilized by Zener diode CR5 to provide a 9 volt reference. Q5 output is amplified by FET Q4, used as a source follower, and A15Q1 to provide bias control of chassis-mounted transistor Q1. In this way, Q1 output is held at +20 volts. Overcurrent protection is provided by the voltage drop of R2 which biases Q3 to drive Q2 and Q1; this turns off Q1. Ripple in the output at A15(8) is minimized by L2 and C11.

Full-wave bridge rectifier CR1 through CR4 is part of a basic power supply which includes chassis-mounted input transformer T1, and LC filter C1, C2, L1 and C7. The 24 to 32 volt output connects through a blocking diode on A18 circuit board to the 24 and 32 volt input of the +20 volt regulator circuit.

The magnetic field regulator consists of differential amplifier Q6A and B and Q7 which drives the magnetic field winding in A12 RVFR Assembly. This circuit works with the front-panel MAGNETIC FIELD dial to produce linear control of the resonance frequency of A12 RVFR Assembly. Since the resonance frequency is not directly proportional to magnetic field control, fixed resistances R8 and R12 pad the MAGNETIC FIELD potentiometer (R6) to provide the required linearity. Series reference resistors R10 and R11 provide Q6B with voltage information proportional to magnetic field winding current. Q6 differential amplifier drives Q7 to equalize Q6A, B base voltages. In this way, Q7 collector current through the magnetic field winding is a direct function of the voltage impressed on Q6A base by the front-panel MAGNETIC FIELD control.

In the -20 volt supply, +20 volts energizes the saturable transformer inverter circuit of Q8, Q9, and T1. The approximate 2 kHz output of T1 is full-wave rectified by CR6 and 7. C9 provides filtering. -20 volts connects to the output at A15(11) through voltage regulator Q10, whose base is referenced at about -20 volts by CR9A and B, and CR8.

### A15 MAINTENANCE

#### NORMAL OPERATION

The A15 Assembly supplies the following voltages and currents to power the 5065A.

Pin No.	Voltage	Current
6	+20 V $\pm$ .2	700 mA
8	+20 V	130 mA
11	-20 V $\pm$ .2	25 mA
1,9 Adjustable	+2 to 4 1/2	2.5 to 8 mA

In addition, the A15 Assembly has over-current protection circuit in the +20 V line.

#### OPERATIONAL CHECK

a. Using a dc voltmeter, check voltages at pins 6, 8, and 11. They should be as shown in the above table.

b. Connect voltmeter to pin 1 and (see NOTE) adjust MAGNETIC FIELD dial from 9 to 100. Voltage should be approximately as shown in the table.

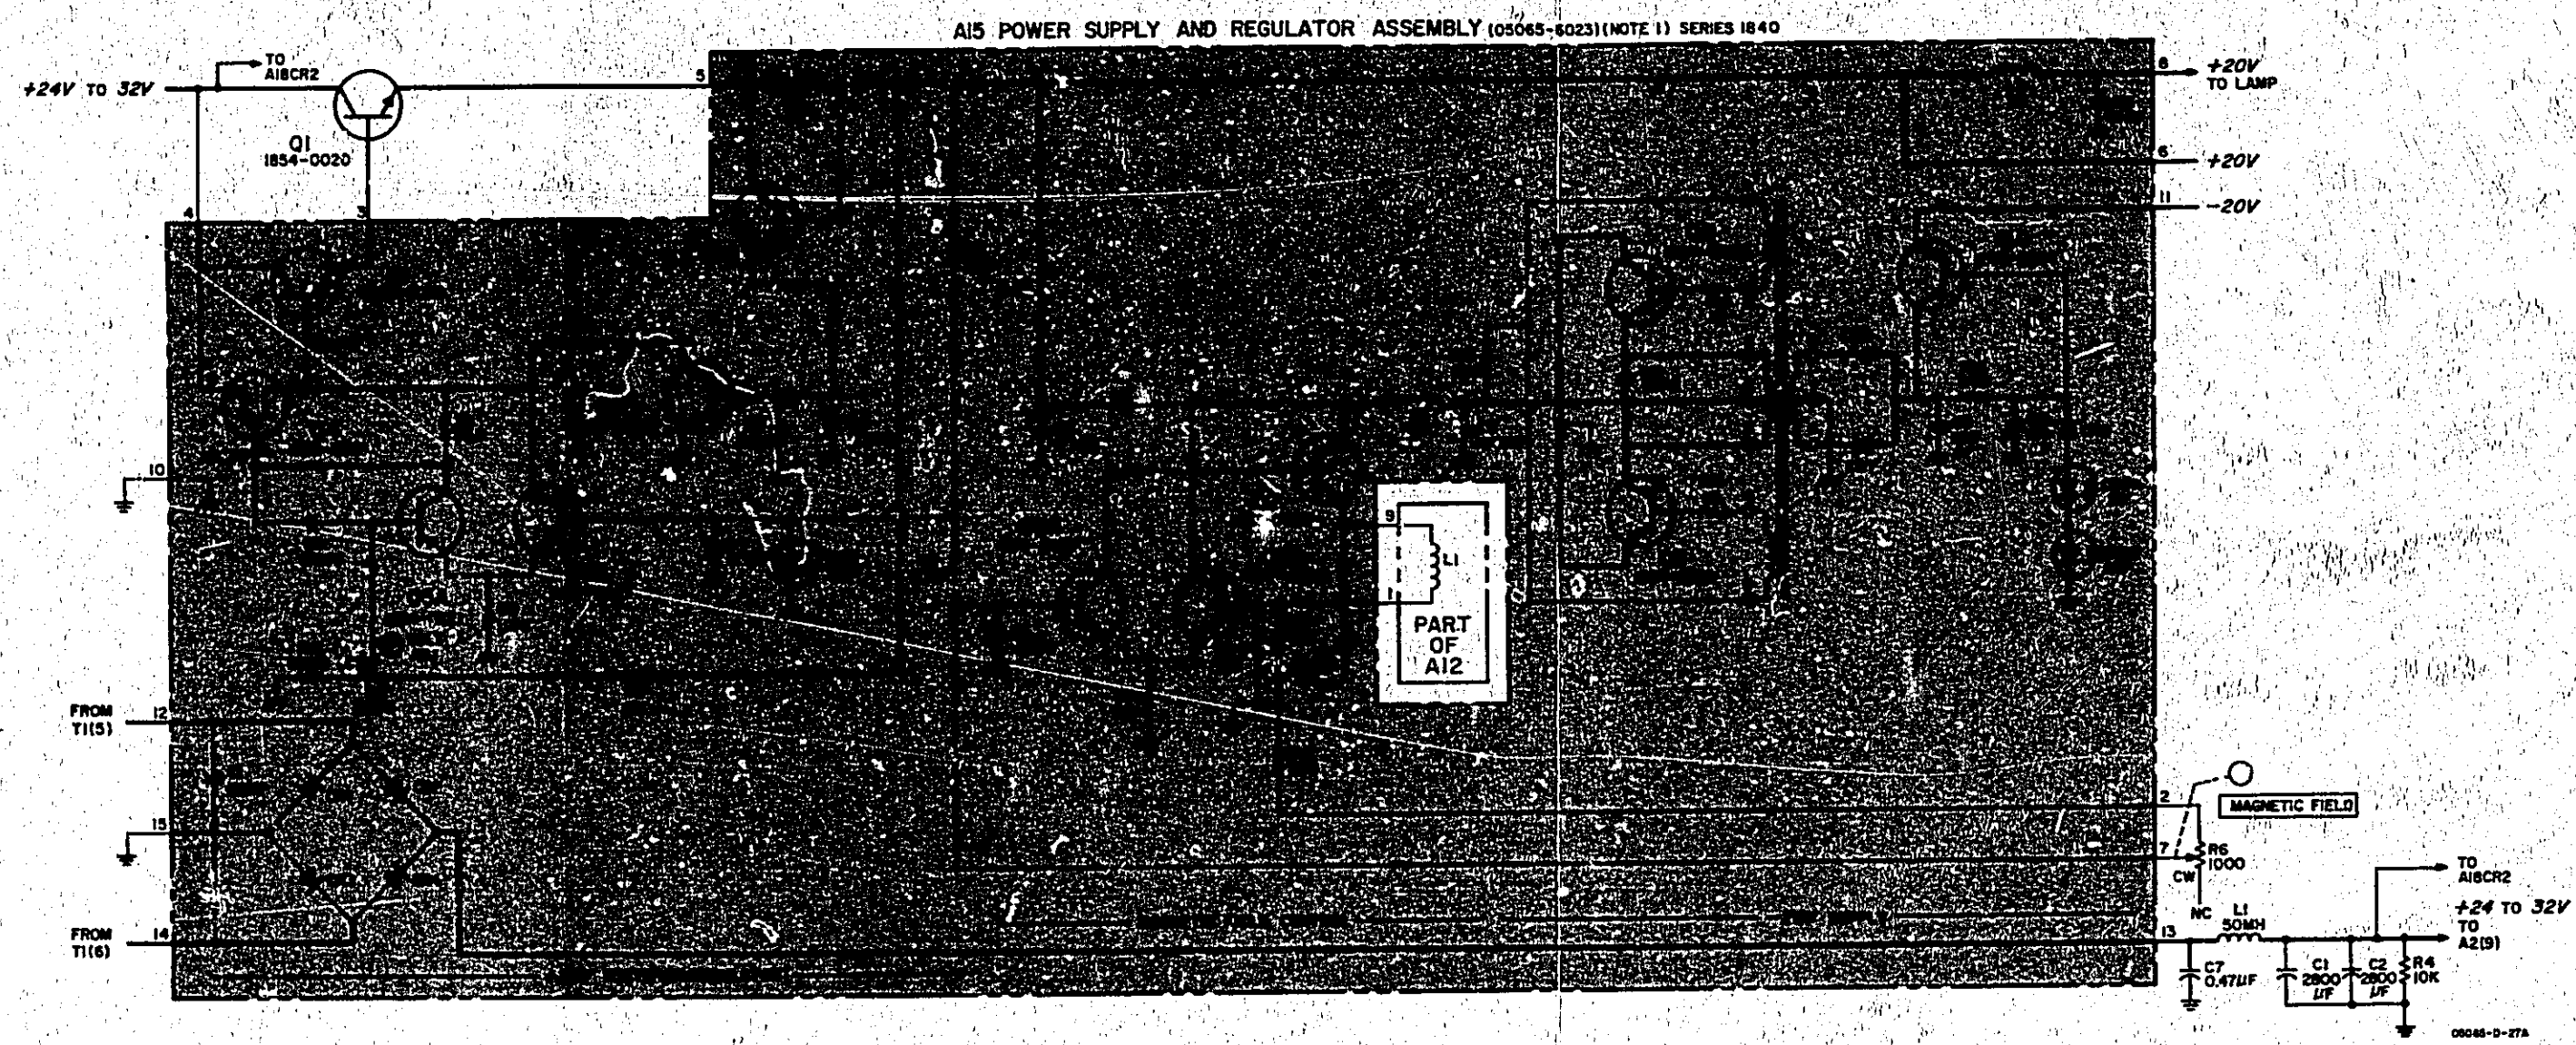
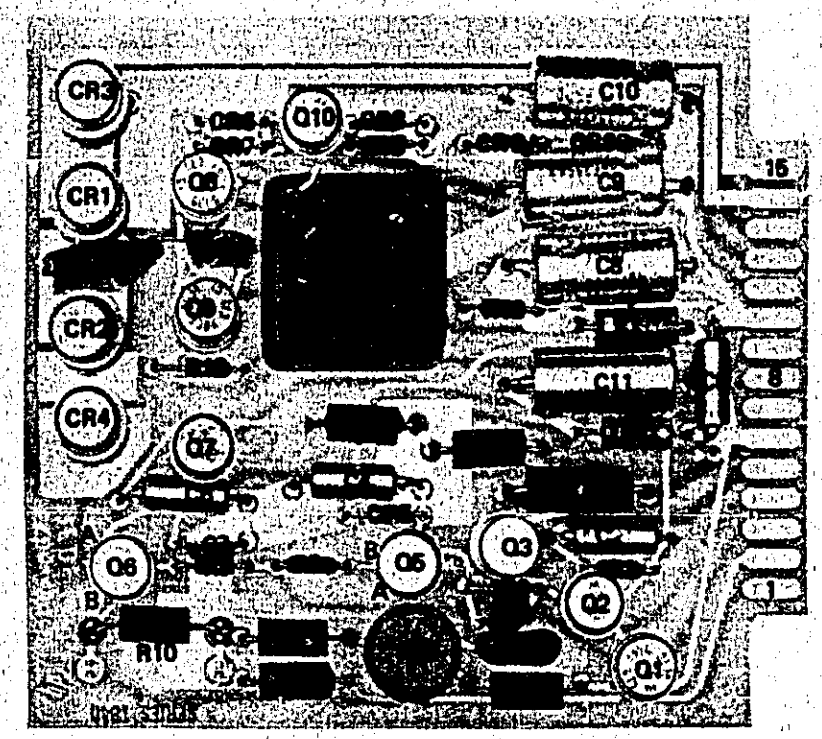
#### NOTE

Be sure to note setting of MAGNETIC FIELD dial before making this adjustment. The dial should be returned to that setting after this test.

#### REPAIR AND ASSEMBLY REPLACEMENT

After making repairs, A15R17 should be adjusted. To do this place the A15 Assembly on the extender board provided and adjust R17 so that the voltage at A15(8) is 20 V  $\pm$  .2 V.

When replacing A15 the output voltage should be adjusted as described above. In addition, A15R10 and R11 should be removed from the old board and installed on the new one. This will help maintain the same magnetic field calibration.



NOTES

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED:  
RESISTANCE IN OHMS;  
CAPACITANCE IN PICOFARADS;  
INDUCTANCE IN MICROHENRIES
3. ASTERISK (\*) INDICATES SELECTED COMPONENT, AVERAGE VALUES SHOWN

REFERENCE DESIGNATIONS

NO PREFIX	A12	A5
C1, 2, 7		C1-12
CR3		CR1-9
J17		
L1	L1	L1, 2
PT		Q1-10
Q1		R1-17
R4, 6		T1
	T.E.D.	

T1 OUTLINE

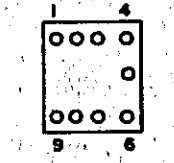


Figure 8-24. A15 Power Supply and Regulator Assembly

### DIGITAL DIVIDER POWER SUPPLY A16 THEORY

The A16 module has three basic circuits:

a. Inverter and regulated power supply that supplies a +4.2 V output, and a +13.3 V zener-stabilized and filtered output for use in A16 circuits.

b. Blocking oscillator and output amplifier that supplies the 1 PPS tick pulse to the 1 PPS output jack.

c. The clock movement amplifier that supplies a push-pull square wave output to energize the clock.

The saturable-transformer, inverter oscillator of Q1, Q2, and T1 is powered by +20 V that is filtered by L1 and C1. R1, C2, and CR1 are a start circuit. R2, R3, C4, and C5 provide fast response, but limit average base current to improve inverter efficiency. Inverter frequency is about 1 kHz. Inverter output to the +4.2 V regulator is +6.5 V, full-wave rectified by CR2 and CR3, and filtered by C6.

In the regulator circuit, differential amplifier Q4 and Q6 compares a reference voltage developed by voltage divider R5 and R6 with the feedback dc voltage at the movable tap of +4.2 V control R13. Thus, the differential amplifier derives an error voltage. This error output at Q4 collector controls Q5 through Q3 to hold the regulated output at +4.2 V. Bypass elements R7 and C10 at Q5 base prevent oscillations. Further filtering for large load surges is provided by C17 and C18, with C17 providing high frequency filtering.

The second output of T1 energizes full-wave bridge rectifier CR4, 5, 6, and 7 to supply a positive dc output which is filtered by C7 and zener-stabilized at +13.3 V by CR8. Several elements of RC and LC filtering provided circuit decoupling.

Input 1 PPS pulses to the output tick blocking oscillator couple through J2 from A5 Digital Clock. Diode CR15 at Q7 base blocks any negative component of the input pulse. Q7 drives blocking oscillator transformer T2 and feedback to Q8 provides the regenerative action.

Diode CR9 protects Q7 and Q8 collector junctions. In T1 output, CR1 provides isolation. Selectable resistor R15 determines the output pulse width. Output tick pulses are provided by emitter followers Q9 and Q10. Zener diodes CR11 and CR12 limit output pulses to 10 volts peak. Q10 output is not used. Q9 output feeds the 1 PPS output jack.

1 PPS drive pulses connect from A5 Digital Divider through J1 to IC1 of the clock movement amplifier. IC1 provides flip-flop action and furnishes a push-pull output to clock amplifiers Q11 and Q12. The push-pull output of power amplifiers Q11 and Q12 connects to the front panel clock and is limited to 10 V peak by zener diodes CR13 and CR14.

### A16 MAINTENANCE

#### NORMAL OPERATION

The one-shot multivibrator output from A5A4 provides triggering for the Blocking Oscillator. This output is amplified and appears at J3 and a 1 PPS, 20  $\mu$ s, +10 V pulse.

The power inverter provides +4.2 Vdc and +13.3 Vdc for A5 integrated circuits. Transistors Q1 and Q2 produce a 2 kHz pulse through T1 to the power supplies.

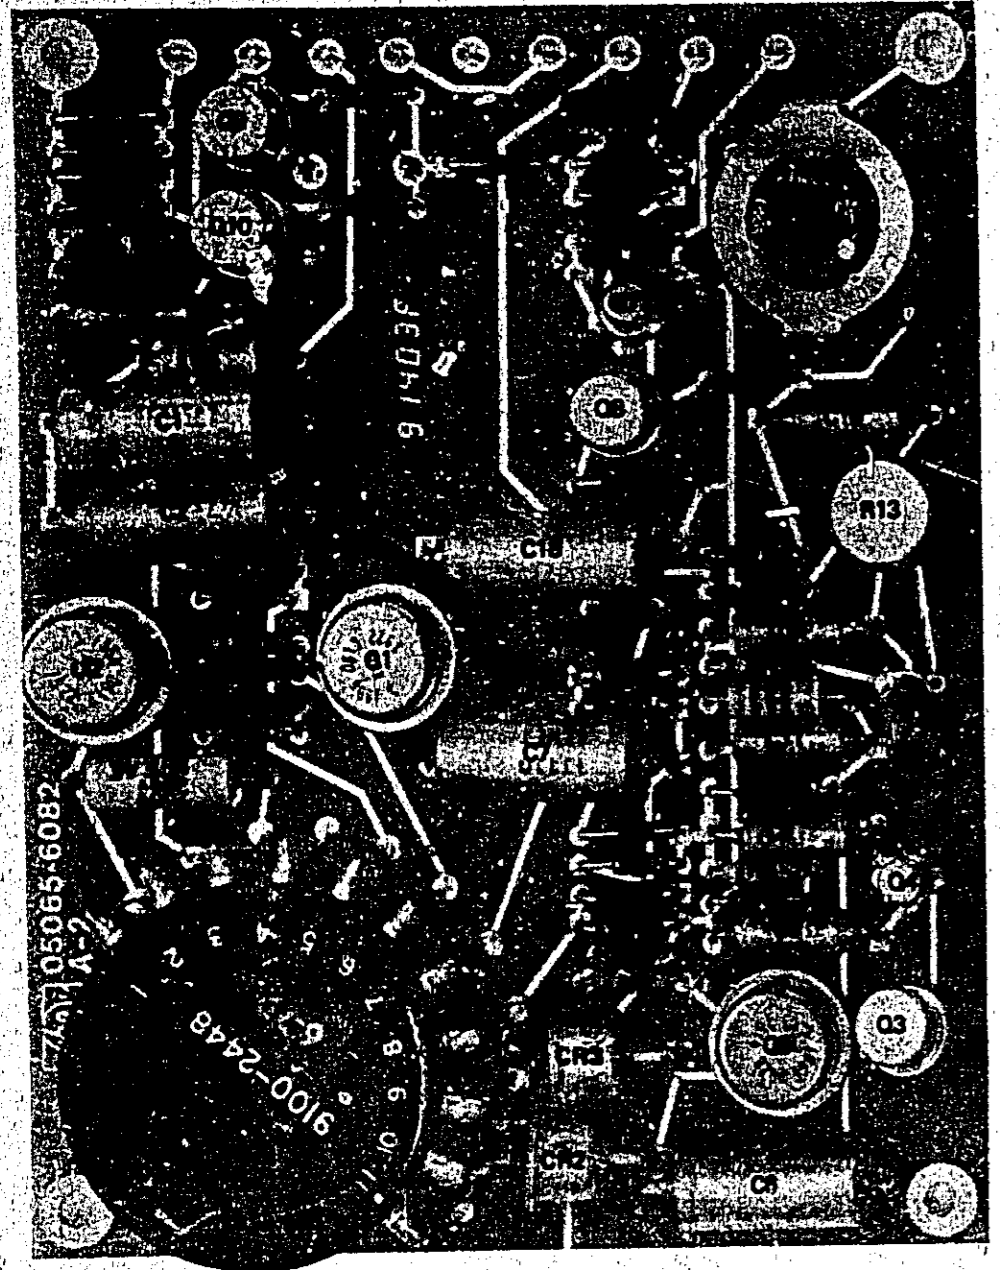
The output of A3Q15 is applied to clock movement flip-flop IC1. This flip-flop drives amplifier Q11 and Q12 which drives the clock movement.

#### OPERATIONAL CHECK


With unit power on, check with a dc voltmeter, for +4.2 V  $\pm$  .1 V across C17. Check for a +10 V, 20  $\mu$ sec pulse at A16J3.

#### TROUBLESHOOTING

Digital divider power supply common is isolated from instrument common. To observe waveforms and measure divider voltages, divider common may be connected to instrument common for troubleshooting with no adverse effects.



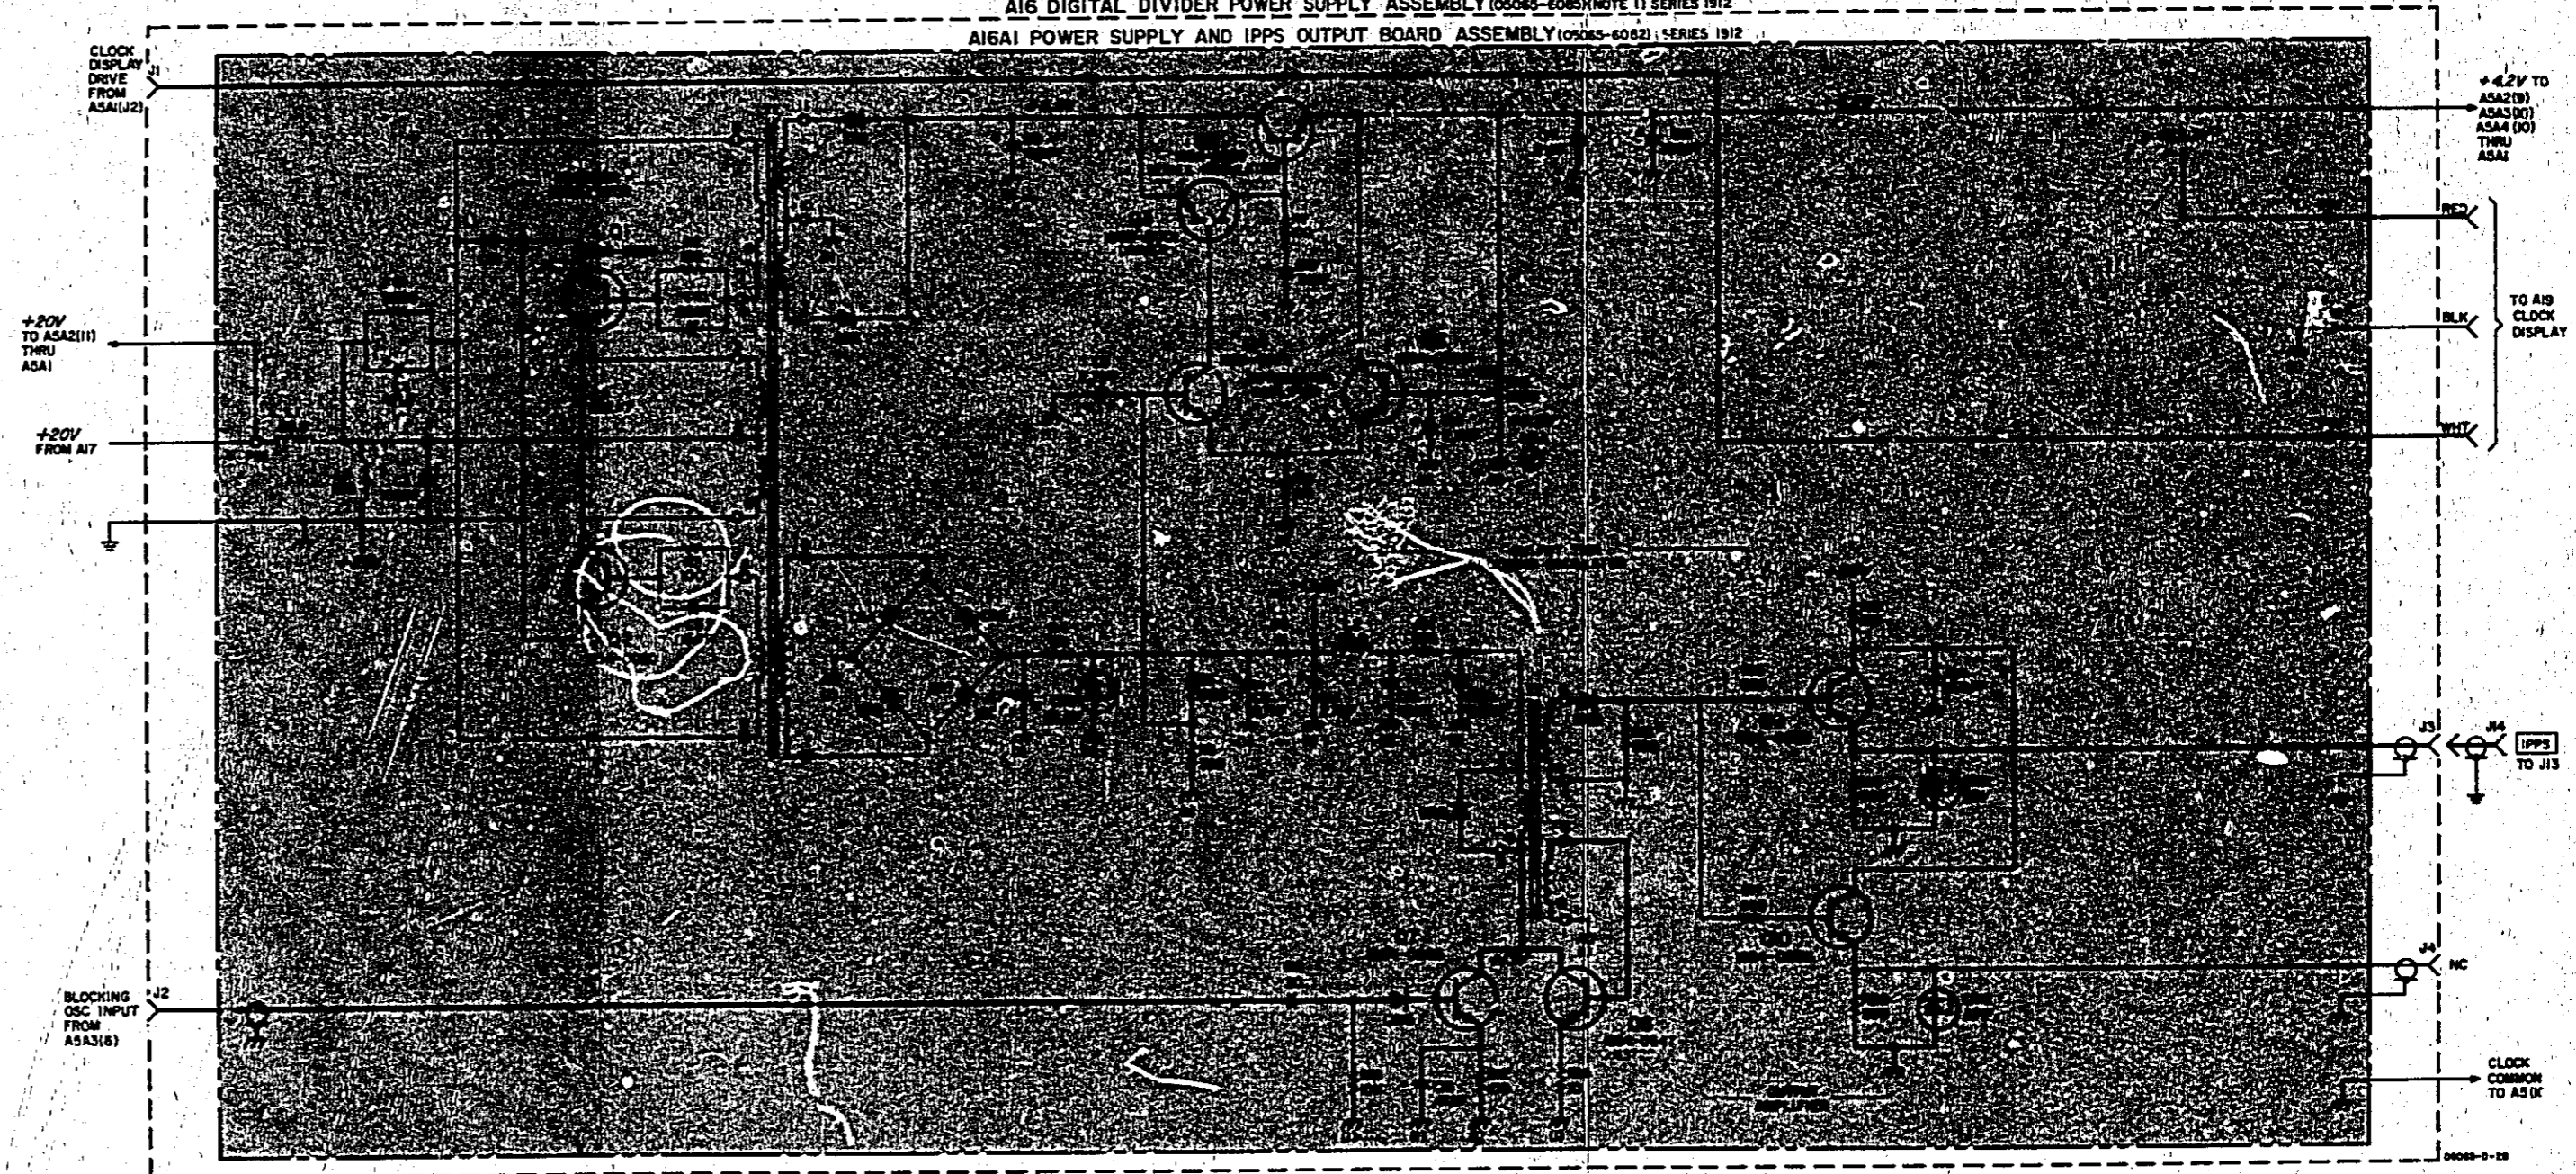A16 DIGITAL DIVIDER POWER SUPPLY ASSEMBLY (05065-6082) NOTE 1) SERIES 1912  
A16A1 POWER SUPPLY AND IPPS OUTPUT BOARD ASSEMBLY (05065-6082) SERIES 1912



NOTES

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED:  
RESISTANCE IN OHMS  
CAPACITANCE IN MICROFARADS  
INDUCTANCE IN MICROHENRIES
3. ASTERISK(\*) INDICATES SELECTED COMPONENT, AVERAGE VALUES SHOWN

REFERENCE DESIGNATIONS

NO PREFIX	A16	A16A1
J14	J1-4	CI-19 CR1-15 IC3 LI-3 Q1-12 RI-25 TI-2

Figure 8-25. A16 Digital Divider Power Supply Assembly

### CLOCK DISPLAY ASSEMBLY A19

The digital clock is a solid-state 24 hour clock with a seven segment LED (light emitting diode) display. It indicates time in hours, minutes, and seconds in synchronism with the 5065A generated 1 PPS signal. Time may be set and synchronized using the HOLD, SLOW/FAST, and SET switches.

The required inputs which enable the clock to operate are connected to the clock by five wires. These are:

1. Unregulated +28Vdc from the 5065A used to generate a regulated +5Vdc and used exclusively to drive the display.
2. Regulated +12Vdc from the A5 assembly used exclusively to operate the CMOS circuits in the display.
3. 1 PPS signal from the 5061A used to synchronize the clock and increment the display.
4. AC line sense signal from A2(9) turns off the display portion if instrument AC power fails or is removed. To display time when AC power is not available, the clock front-panel STANDBY READ must be pressed.
5. 1 PPS and 12Vdc common. Circuit ground connects to the chassis through the LED digital clock circuits.

Two circuit boards make up the A19 Clock Display: the A19A1, Regulator/Driver (located at the rear of the A19 Assembly), and the A19A2, Display board.

#### A19A1 REGULATOR/DRIVER, GENERAL

The A19A1 Assembly contains two separate circuits. The regulator portion takes the unregulated 28Vdc from the 5065A and regulates it down to +5Vdc to provide power for the display light-emitting diodes. The driver portion takes the 1 PPS signal from the 5065A and shapes it for use by the clock accumulator/driver ship on A19A2. These two separate circuits are described in the following paragraphs under appropriate headings.

The regulator portion of the A19A1 Assembly consists of U2, Q3, Q4 and associated components. U2 is a switching regulator circuit that contains the switching oscillator, voltage reference, and switching transistor drive circuitry. The +5V regulator output voltage is sampled through R13 at U2(1). This voltage is compared to the reference input at U2(2). U1 adjusts the amount of time Q3 conducts based on whether the output voltage (+5V) is too high or too low. C9, L1, and C10 form a filter to keep switching transients out of the 5065A power supply. R9 and C7 set the switching frequency of the regulator. U2 provides a regulated +5Vdc at pin 16. This voltage provides the reference as well as providing power for Q2. L2 keeps current flowing to the load when Q3 is off. C14 and C15 filter the +5Vdc output. The circuitry of Q2 turns off the power supply to conserve power when the 5065A is operating from battery power. Under normal operation, when ac power is applied, zener diode CR1 conducts turning on Q2. This allows U2 to operate normally. When ac power is lost, Q2 turns off, forward biasing CR2 which in turn prevents the power supply from operating.

Pressing the STANDBY READ switch enables power supply operation, lighting the display. Current limiting and over-voltage protection is provided by Q4 and CR3, respectively.

The Clock Driver portion of the A19A1 Assembly operates in the following manner. A short (150 nsec) low level pulse ( $\approx 1V$ ) is applied to the input of Q1 from A16A1 (WHT). This pulse is amplified (by Q1) and shaped by 555 timer U1. The output of U1 goes to A17A2 where it drives the clock accumulator/display IC. In normal operation U1 behaves like a one-shot multivibrator outputting one pulse for each input pulse. When the SET pushbutton is activated, U1 free-runs, and generates a signal whose frequency is set by the position of the SLOW/FAST switch. In SLOW, the frequency is approximately 60 Hz, 600 Hz in FAST. These two frequencies allow the hours, minutes, and seconds on the display to be easily set.

#### A19A2, CLOCK DISPLAY BOARD

The clock display board consists of a MOS clock chip, a transistor array, a buffer amplifier array, four driver transistors, and six LED displays. This assembly's function is to accumulate and display time-of-day in synchronism with the instrument's 1 PPS signal. Operation is as follows. The MOS circuit U1 normally operates from 50 or 60 Hz. It is enabled to operate by the 1 PPS signal from A19A1 by grounding the "slow set" line at U1 (17). U1 divides the 1 PPS input to form the hours, minutes, and seconds count. In addition, it formats the output so that this count may be displayed on a seven-segment strobed LED display.

The time display signals from U1 are composed of two parts:

1. The digit enable signal
2. The multiplexed seven-segment signal

The digit enable signals from U1 are:

- Pin 23: tens-of-hours.
- Pin 24: units-of-hours.
- Pin 25: tens-of-minutes.
- Pin 26: units-of-minutes.
- Pin 21: tens-of-seconds.
- Pin 22: units-of-seconds.

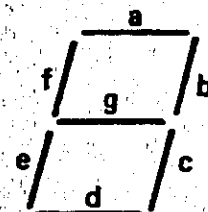
These signals enable the LED displays through U3 gates, and allow the multiplexed seven segment outputs to turn on the correct display, segment.

The "segment enabling signals" are buffered through U2 stages and applied to the LED displays. Thus, the segments of an individual number display are enabled by outputs from U1 (6 to 12) while the display itself is turned on by one of the U1 (21 to 26) outputs.

The multiplexed seven-segment signals from U1 are shown below.

Legend:

- Pin 6: for segment a.
- Pin 7: for segment b.
- Pin 8: for segment c.
- Pin 9: for segment d.
- Pin 10: for segment e.
- Pin 11: for segment f.
- Pin 12: for segment g.



## Repairs

Before attempting repairs, perform the following procedures:

### NOTE

Some of the circuits on the CLOCK DISPLAY assemblies are CMOS. Use high impedance test equipment when checking signals. Precautions should be taken when removing or replacing these circuits to prevent damage from static charges.

- a. Momentarily set front panel DIVIDER MODE switch to START.
- b. Check CIRCUIT CHECK meter in 1 MHz position for reading of approximately 40. If reading not present, troubleshoot A6 assembly.
- c. Check front panel 1 PPS output. If not present, troubleshoot A5 assembly.
- d. If the display is not lit, press STANDBY DISPLAY switch. If display lights and operates normally, the instrument is not operating from AC power. This condition is normal. If the display does not light when the STANDBY DISPLAY switch is pressed, perform troubleshooting procedures described below.
- e. Read A19A2 Clock Display Theory of Operation.

## A19 Assembly Removal

Prior to removing or reinstalling the Clock Display, turn off all operating power. Wire and cable length to the clock panel or clock rear board is sufficient to permit removal of the clock without disconnecting these wires or the cable. Place the clock on a pad or cloth to minimize scratch damage or shorting of circuit traces. Then, proceed as follows:

- a. Turn off all operating power.
- b. Remove the instrument top cover. In Option 003 disable the internal standby battery.
- c. Use a 5/16" spin-type wrench and remove three 5/16" nuts which secure the clock to the instrument front panel. Retain the nuts for reinstallation.
- d. Press at the bottom-rear then at the top-rear of the clock until it is loose.
- e. Carefully remove the clock. Gently pull the connected wires and cable forward and set the clock on the work surface.
- f. With clock assembly removed, connect a jumper, or clip lead between the clock chassis and the instrument chassis.
- g. Before applying operating power ensure that the exposed LED Clock boards and wires are not in contact with any metal objects or surfaces. Apply operating power.
- h. To reinstall the Clock Display, turn off all operating power. In Option 003, disable the internal standby battery.

- i. Perform steps b to e in reverse order. (See Note.)

### NOTE

While installing the clock into the instrument front panel, check that wires are not pinched by screws or metal work. Position the wires for a neat appearance after installation.

- j. When clock is reinstalled, apply power and set time as described in paragraph 3-28 of the 5065A Operating and Service Manual.

## Troubleshooting

### General

Procedures in this section describe fault isolation to the circuit board level, disassembly of the clock, and troubleshooting information for each of the three circuits.

### Clock System Troubleshooting

To perform the following tests, remove the clock from the instrument and connect as described in A16 ASSEMBLY REMOVAL.

### A19A1 Power Supply Check

### NOTE

All voltages measured with respect to instrument chassis.

- a. Measure voltages indicated below. Be sure to clock chassis is grounded to instrument chassis.

VOLTAGE	LOCATION
+26 ±4Vdc	A19A1P1(3)
+12 ±2Vdc	A19A1(R)
+5 ±.5Vdc	A19A1P1(4)

- b. If the +26 or +12 volt supplies are out of tolerance, troubleshoot the source of these voltages. If the +5V supply is out of tolerance, remove the A19A2 Assembly and measure the voltage again. If voltage now is correct, go to step b(2).

- (1) If voltage remains out of tolerance, troubleshoot A19A1, 5V regulator assembly.
- (2) If voltage is now correct it indicates a short or low impedance on 5V line or defective current-limit circuit; troubleshoot 5V line and circuits on A19A2 which use 5V. If these are OK, check current-limit circuit of A19A1.

### NOTE

An external 5V can be used in place of A19A1 output.

- c. Check for +1V, 150nsec, 1 PPS signal at A19A1(W). Be sure Clock Display chassis is grounded to instrument chassis. If pulse not present, troubleshoot A5 Digital Divider Assembly.

- d. Check for 12V, .3ms, 1 PPS signal at A19A1P1(5). If incorrect or not present, check circuit of A19A1U1.



**Model 5085A**  
**Circuit Diagrams, Theory, and Maintenance**


**A19A2 Clock Display Check**

a. If display is not lit go directly to "Display Not Lit" step  
b. If display is lit but not functioning correctly, proceed as follows:

1. Check for 1 PPS signal at A19A2U1(19). It should be as shown on schematic. If not, troubleshoot Driver Circuit of A19A1U2.
2. Check operation of digit and segment drivers U2, U3 and Q1 thru 6. If these check OK, replace U1. See Note 4 on Figure 8-26 for typical waveform.

**b. Display Not Lit**

1. Check voltage at A19A2(4). It should be  $5V \pm 5Vdc$ . If incorrect, troubleshoot circuit of A19A2U1.
2. Check +12V input at A19A2(5). It should be the same as measured at "R" terminal on A19A1. If not, check continuity of +12V line from A19A1 to A19A2.
3. Substitute a new LED in one of the display positions.
4. Trouble is in A19A2U1 or 2. Check for switching waveforms at U1 (6-12) and (21-26). Check for switching waveforms at U2 and U3 outputs. See Figure 8-26 for typical waveforms.

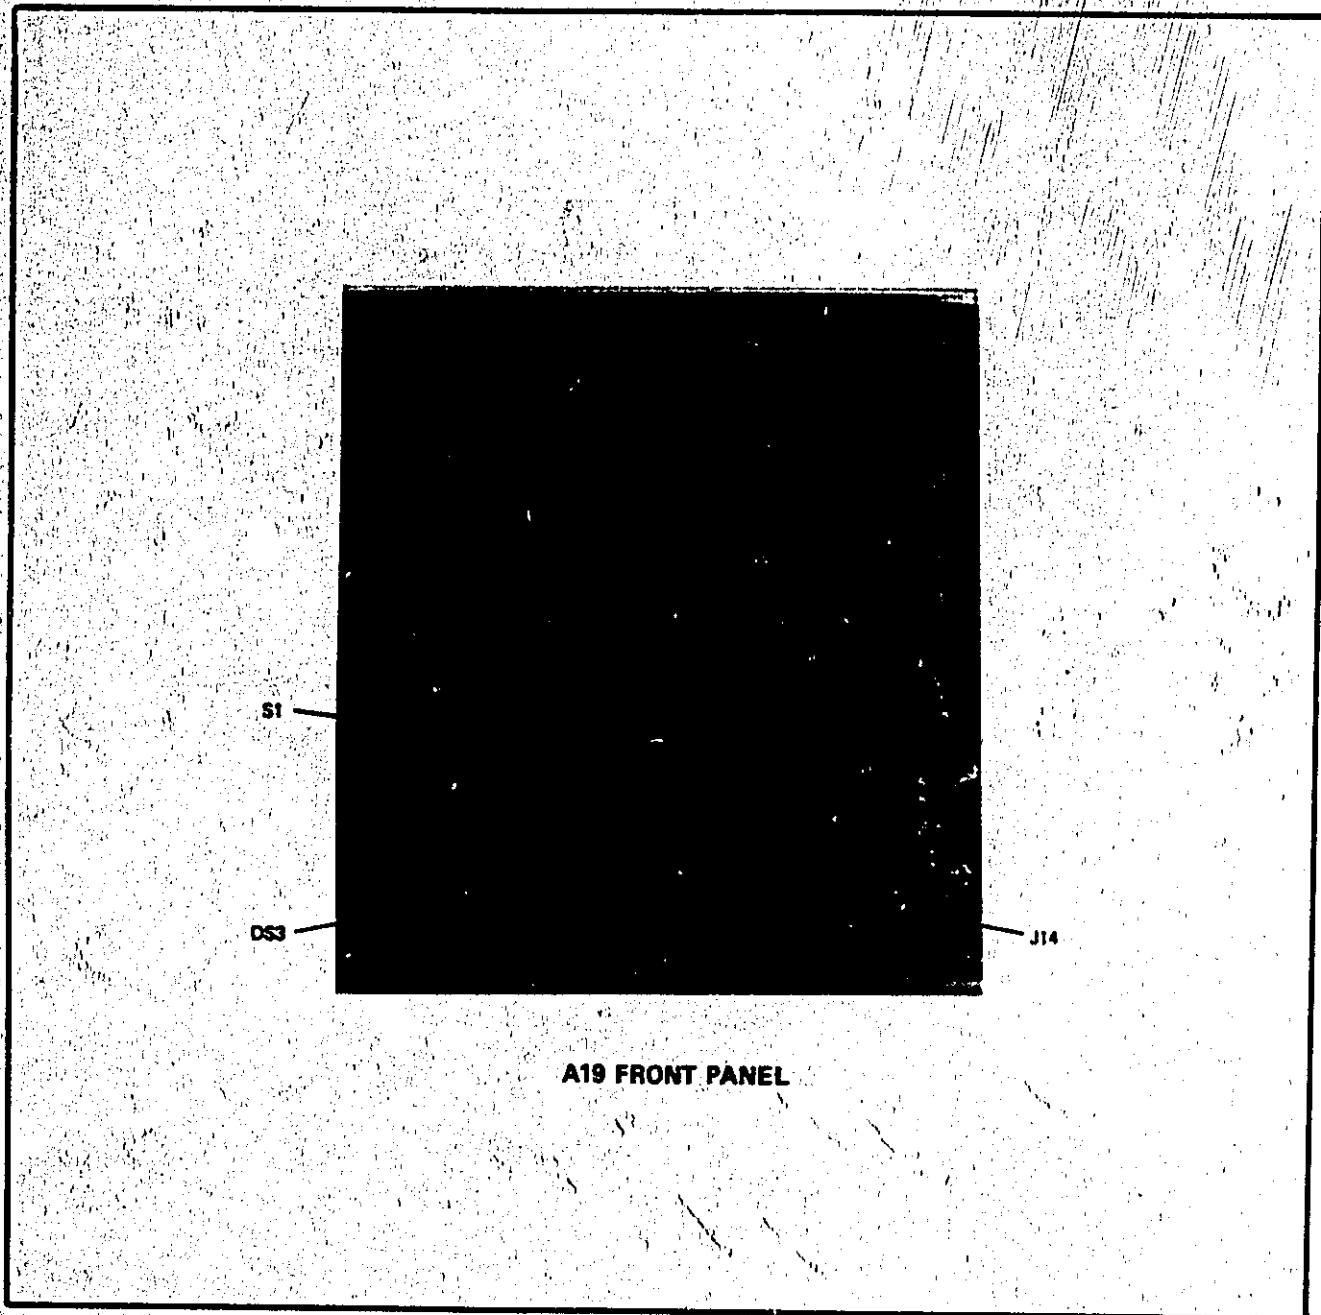

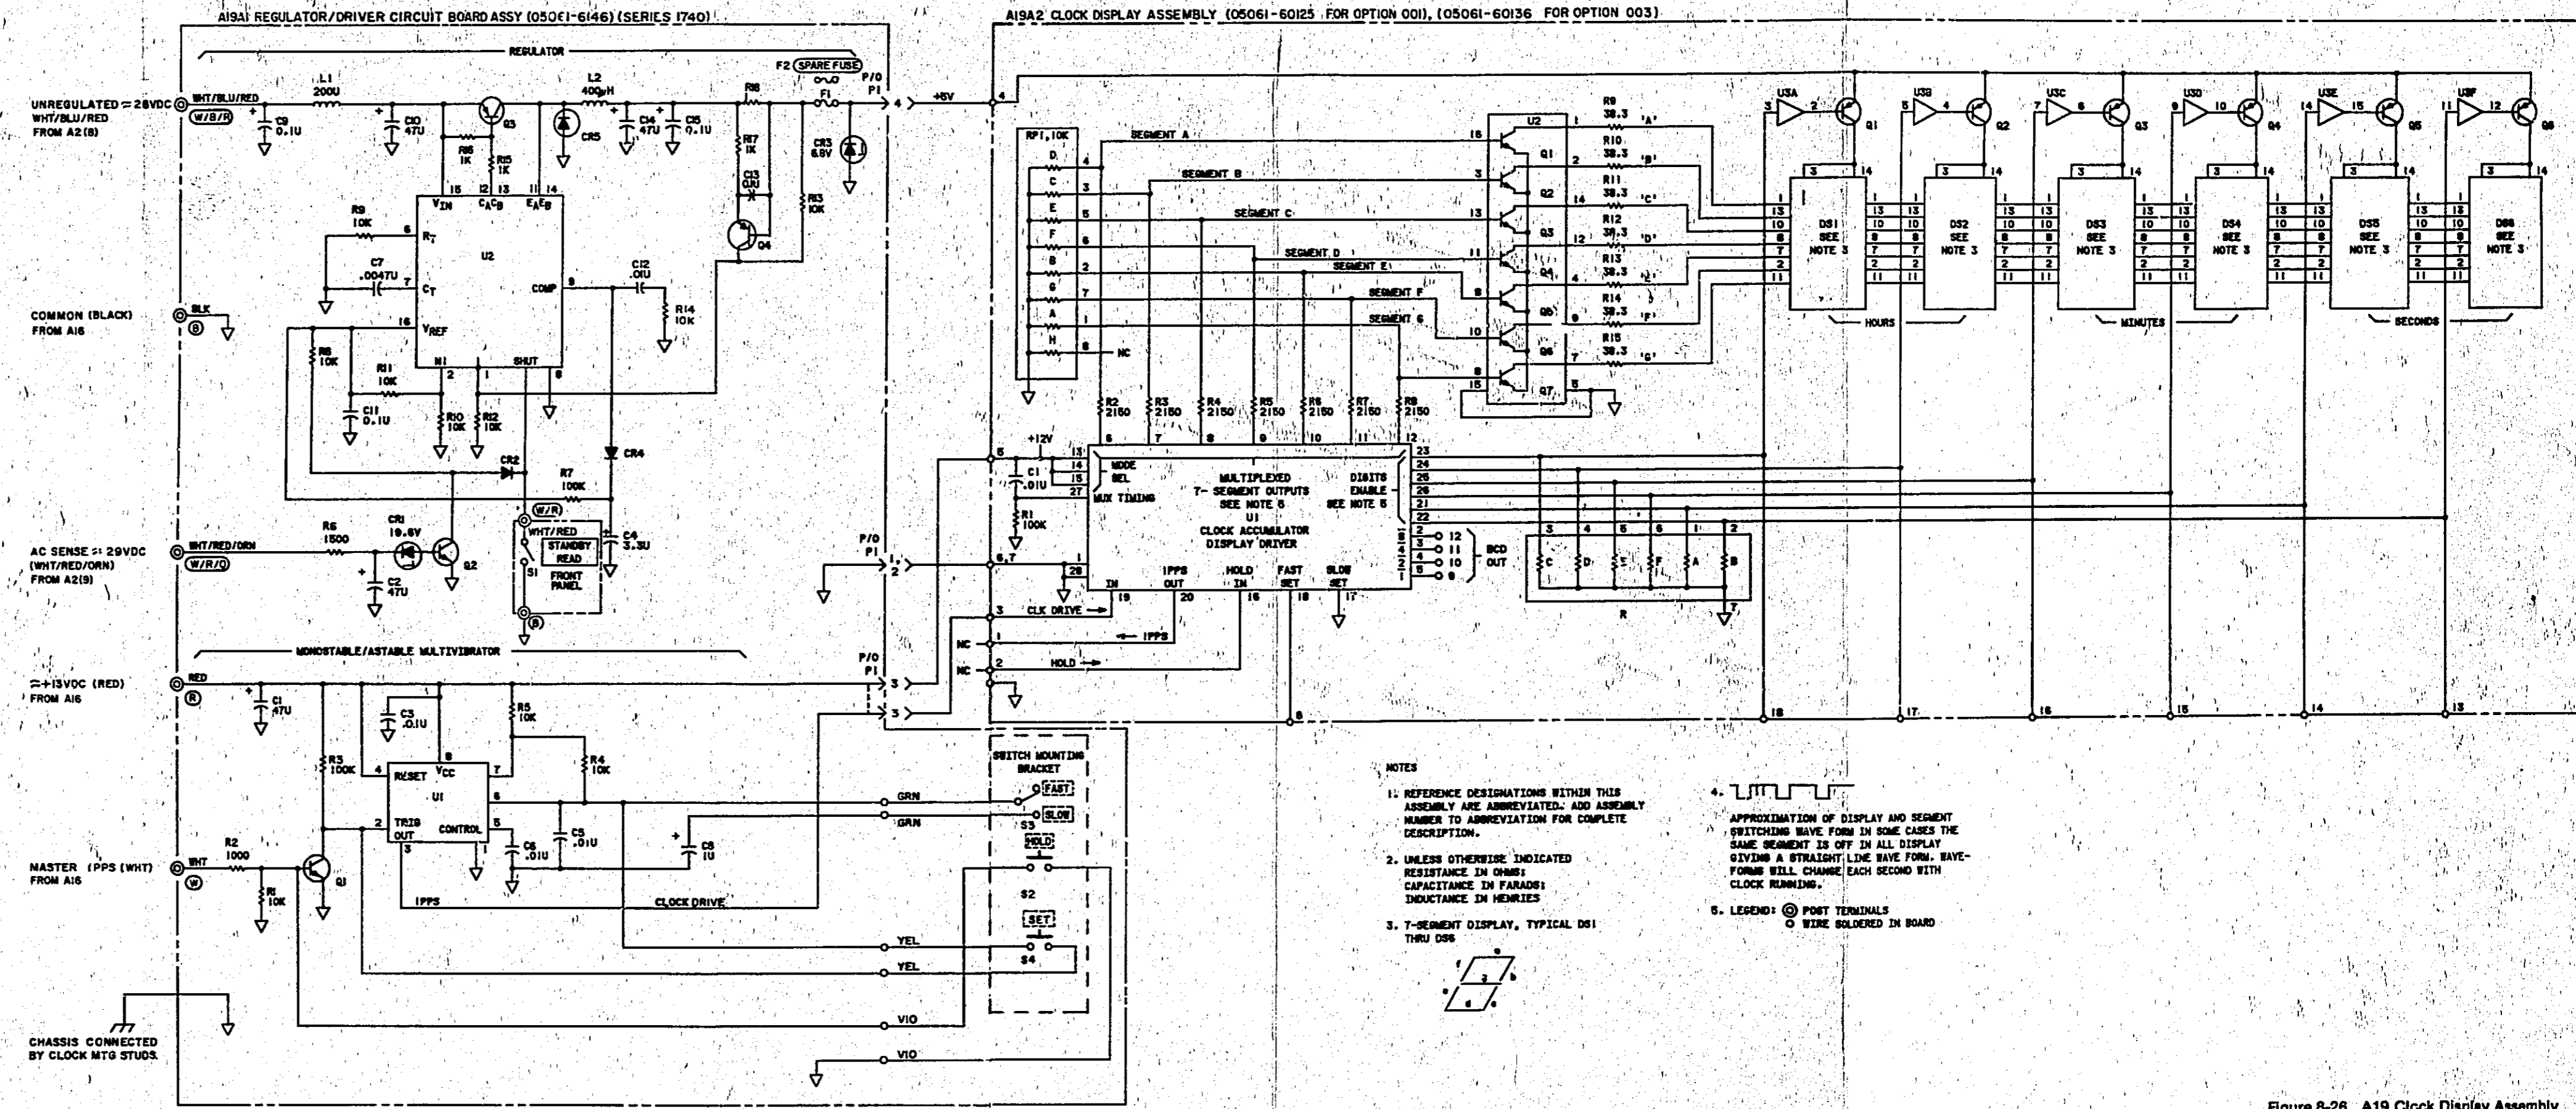
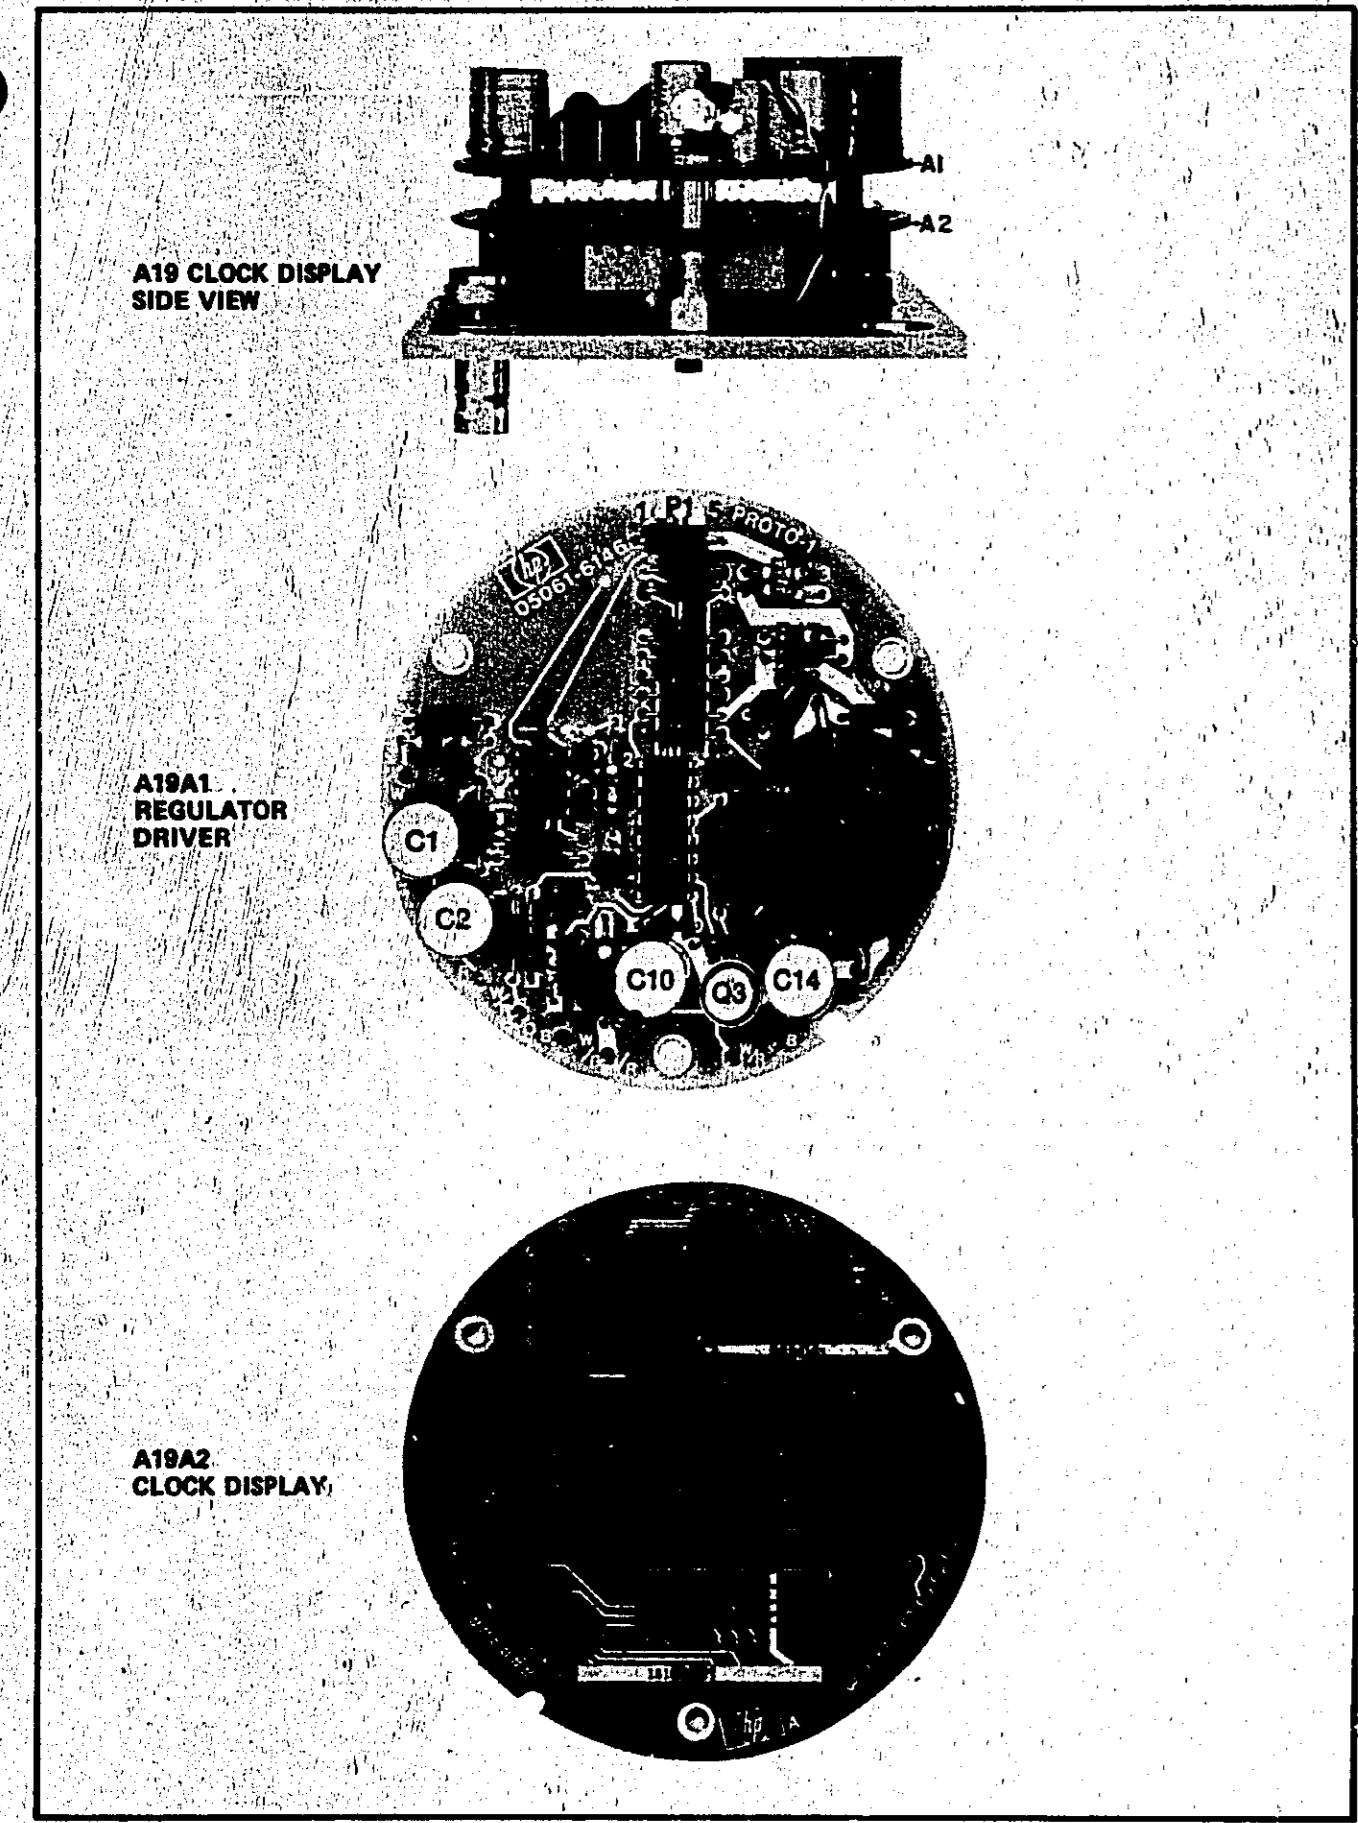


Figure 8-26. A19 Clock Display Assembly

13

# MANUAL CHANGES

**MANUAL UPDATING COVERAGE**  
\* \* \* \* \*  
\* This supplement adapts your manual  
\* to instruments with serial numbers  
\* prefixed through 2632A.  
\* \* \* \* \*

**MANUAL IDENTIFICATION**  
\* \* \* \* \*  
\* Instrument: Model 5065A  
\* Rubidium Vapor  
\* Frequency Standard  
\* Operating & Service  
\* Manual  
\* Manual Part No: 05065-9041  
\* Manual Microfiche: 05065-9042  
\* Manual Print Date: Feb 1979  
\* \* \* \* \*

**ABOUT THIS SUPPLEMENT**

The information in this supplement is provided to correct manual errors and to update the manual to instruments containing changes after the manual print date.

Change and correction information in this supplement is itemized by page numbers corresponding to the original manual pages. The pages in this supplement are organized in numerical order by manual page number.

**HOW TO USE THIS SUPPLEMENT**

Insert this title page in front of the title page in your manual.

Perform all changes specified for "All Serials", and all changes through the Series Prefix of your instrument or board.

Insert any complete replacement pages provided into your manual in the proper location.

If your manual has been updated according to the last edition of this supplement, you need only perform those changes pertaining to the new series prefix. See List of Effective Pages on the reverse side of this page. New information affecting "All Serials" will be indicated by a "\*" in front of the page number.

LIST OF EFFECTIVE PAGES

\*\*\*\*\*  
 \* SERIAL PREFIX OR \*  
 \* SERIAL NUMBER \* PAGES \*  
 \*\*\*\*\*

All Serials	ii, 1-4, 5-1/5-3, 6-2, 6-5, 6-6/6-8, 6-13, 6-15, 6-16, 6-17, 6-19, 6-20, 6-22, 6-24, 6-25, 8-9, 8-11, 8-21, 8-25, 8-33, 8-34, 8-35, 8-37, 8-41, 8-47, 8-49, 8-55, 8-63, 8-65, 8-66, 8-67, 8-71
1908A	The following instruments with Series Prefix 1908 have changes indicated for Series 2052: 1908A01021, 1908A01022, 1908A01023
2052A	5-1, 6-3, 6-4, 8-10, 8-11, 8-17, 8-19
2112A	6-18, 8-7, 8-9
2120A	5-1, 5-14, 6-13, 6-18, 8-3, 8-5, 8-50, 8-51
2144A	5-1, 6-18, 8-7, 8-9, 8-64, 8-65
2144A (A5)	6-23, 6-25, 8-33, 8-35, 8-37
2148A (A5)	6-27
2208A (A5)	6-23, 6-24, 8-35
2216A	1-4
2232A	6-5/6-8, 8-25
2308A (A5)	6-23, 6-24, 8-35, 8-37
2320A	6-5, 6-6, 6-7, 8-25
2340A	1-1, 1-4, 3-9, 3-12, 3-15, 4-2, 4-3, 5-1 5-5, 5-16, 6-11, 6-23/6-28, 8-3, 8-4, 8-9, 8-28/8-30
2432A	6-13, 8-53
2432A01339	6-6, 8-25
2624A	6-20
2632A	6-1, 5-14, 5-15, 6-13, 6-18, 8-5, 8-48, 8-49

-----  
 (5065A)2052=10772, 11242/2112=11235/2120=10776, 10779, 11193, 12018/2142=12733/  
 2144=12721/2144(A5)=11966/2208(A5)=11966, 12803/2148=12770/2216=13365/  
 2232=13996/2308(A5)14014, 14808/2320=14819/2340=15415, 14814, 15434/2432=16204/  
 2432A01339=16912/2624A=17914/2624A=17914

MANUAL CHANGES MODEL 5065A (05065-9041)

SERIAL PREFIX OR  
SERIES NUMBER

CHANGES

Page 11, Safety Considerations:

All Serials >Insert page 11, Safety Considerations, supplied in these manual changes.

Page 1-1. Circuit Diagrams, Theory, and Maintenance:

2340A Paragraph 1-5, Subparagraph a:  
>Change "1-microsecond" to "0.1 microsecond" in the 4th line.  
>Delete last sentence, "In addition..."

Page 1-4, Table 1-3. Specifications:

All Serials >Delete the following under STABILITY: As a function of Supply Voltage:  
"±5 X 10E-11 for 23 to 23 Vc reference, or for 115/230 Vac ±10%".

2216A >Change STABILITY: As a Function of Ambient Temperature to read:  
Frequency change is less than  $5 \times 10^{-9}$  total from 0 degrees to 50 degrees C.

2340A OPTION 001 TIME STANDARD, SYNCHRONIZATION  
>Delete "Manual adj to ±50ns." in second and third lines.  
>Change "Automatic to 10±1usec..." to read "Automatic to 100 nsec ±100 nsec..."

Page 3-9. Circuit Diagrams, Theory, and Maintenance:

2340A Paragraph 3-20:  
>Change "six" to "seven" in line six.  
>Change "1-micro" to "0.1 micro" in line seven.  
>Delete the last three lines of the paragraph.

Paragraph 3-25:  
>Delete subparagraph b, "Rotate..."

Paragraph 3-25, subparagraph c:  
>Delete second sentence, "However there is a 9-11..."

Paragraph 3-25, subparagraph e:  
>Delete "(plus the 9 to 11 microsecond built-in delay)" in the second sentence.  
>Delete the last sentence: "For more precise adjustment"

### SAFETY CONSIDERATIONS

The 5065A Frequency Standard is a Safety Class I instrument (provided with a protective earth terminal), designed and tested according to international safety standards. To ensure safe operation and to keep the instrument in safe condition, the user must follow the information, cautions, and warnings provided below and in the Operating & Service Manual.

```
*****  
*  
*   WARNING   *  
*  
*****
```

Before switching on this instrument, the protective earth terminal of the instrument must be connected to the protective conductor of the (mains) power cord. The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. The protective action must not be negated by the use of an extension cord (power cable) without a protective conductor (grounding).

Whenever it is likely that the protection has been impaired, the instrument must be made inoperative and be secured against any unintended operation.

All protective earth terminals, extension cords, autotransformers, and devices connected to this instrument should be connected to a protective earth-grounded socket outlet. Any interruption of the protective earth grounding will cause a potential shock hazard that could result in personal injury.

For continued protection against fire hazard, replace the line fuse only with a 250V fuse of the same current rating and type. do not use repaired fuses or short-circuited fuseholders.

Before switching on this instrument, make sure that it is adapted to the voltage of the ac power source.

Any maintenance or service requiring removal of protective covers should be performed by service-trained personnel who are aware of the hazard involved (for example, fire and electrical shock).

Capacitors inside the instrument may still be charged even if the instrument has been disconnected from its source of supply.

SERIAL PREFIX OR  
SERIES NUMBER

CHANGES

Page 3-9. Circuit Diagrams, Theory, Maintenance (Cont'd):

2340

Paragraph 3-25, subparagraph g:  
>Delete subparagraph g.

Paragraphs 3-26/3-27:

>Replace paragraphs 3-26 and 3-27 with paragraphs 3-26 and 3-27 supplied in this manual change.

Page 3-12. Circuit Diagrams, Theory, and Maintenance:

2340


>Replace Figure 3-7 with new Figure 3-7 supplied in this manual change.

>Delete Figure 3-8.

Page 3-15b, Figure 3-11. Top Operating Controls:

2340
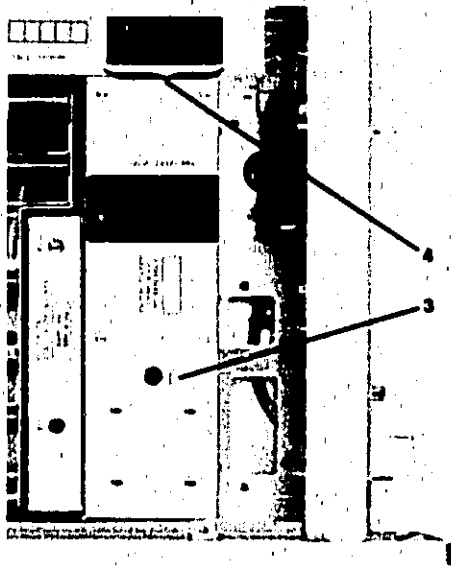
>Replace part of photograph with the following figure.  
>Delete reference 5 "0-1uSEC TIME DELAY..."



Page 4-2. Circuit Diagrams, Theory, and Maintenance:

2340

>Delete "A16 Digital Divider Power Supply" in second line.  
>Change "mechanical clock" in the third line to "digital clock".  
>Delete last sentence.



3-26. After automatic synchronization is finished (as described in paragraph 3-25 a,b,c, and d) the delay can be set to less than 100 nanoseconds,  $\pm 100$  ns. Use the following procedure to set the desired delay:

- a. Remove the HP 5065A top cover.
- b. Set the seven-thumbwheel switch to 000000.0.
- c. Connect a reference 1 pps pulse to the Hp 5065A rear panel SYNCH INPUT connector. (See Section I for reference pulse specifications.)
- d. Press the SYNCH pushbutton on the A5 digital divider inside the cabinet and hold it down for at least one second. The next tick of the 5065A will be synchronized to the SYNCH INPUT reference pulse and delayed by zero to 200 nanoseconds. Any additional delay desired may be selected with the A5 seven thumbwheel switches.
- e. Connect the HP 5065A and other equipment as shown in Figure 3-7 (11A in this change sheet).

**NOTE**

A 50-ohm resistive feedthrough termination should be connected in series with the 5065A 1 PPS output which is connected to the time interval counter to prevent ringing in the pulse.

- f. Set counter controls for best resolution to measure desired delay.
- g. Set the counter for time interval measurement, and set the counter to trigger on the leading edges of the two input pulses.
- h. Measure the time interval between the pulses from the 5065A and the reference source.

3-27. Two different examples of use of the synchronization feature are described here:

**SYNCHRONIZATION EXAMPLE ONE**

Figure A shows a delay after synchronization of 150 nanoseconds. As shown in the lower part of Figure A, the operator may set the A5 thumbwheel switches to 999999.9 and the delay will be 50 nanoseconds. This example shows the minimum delay that can be achieved.

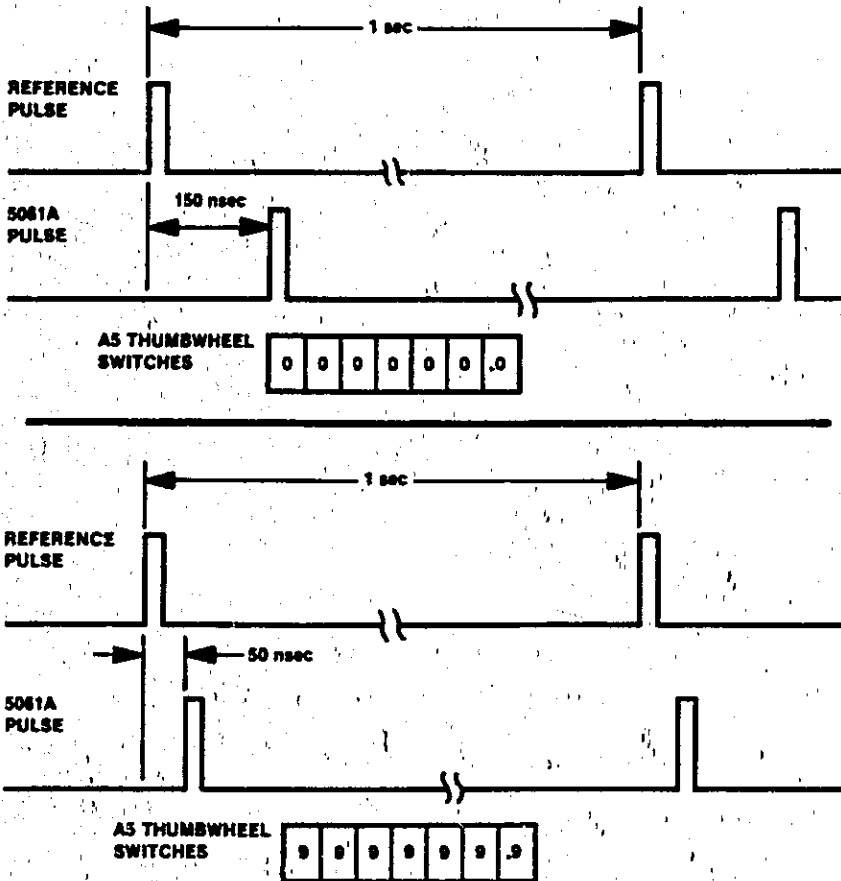


Figure A. Example 1

**SYNCHRONIZATION EXAMPLE TWO**

Figure B shows 190 nanoseconds delay measured after synchronization. As shown in the lower part of Figure A, the operator has set the A5 thumbwheel switches to 999999.9 and the delay will be 90 nanoseconds. If the right-hand thumbwheel is changed to 8, as shown in the lower part of Figure B, the delay will be 10 nanoseconds. In this example the minimum possible delay (offset) is 10 nanoseconds.

**NOTE**

Since the right-hand thumbwheel switch has the minimum 100 nanosecond steps, the minimum delay possible depends on the cumulative delays in the circuits of each different HP 5065A Cesium Standard. The settability of the delay is dependent on the resulting delay after synchronization.

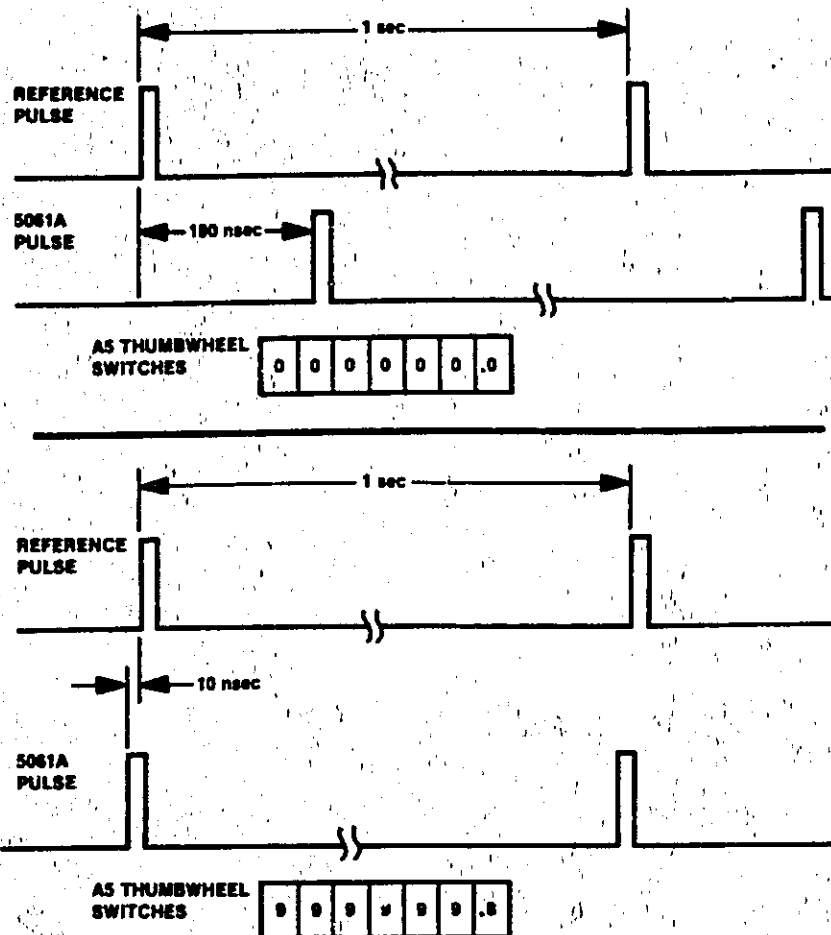


Figure B. Example 2

Model 5065A  
Circuit Diagrams, Theory, and Maintenance

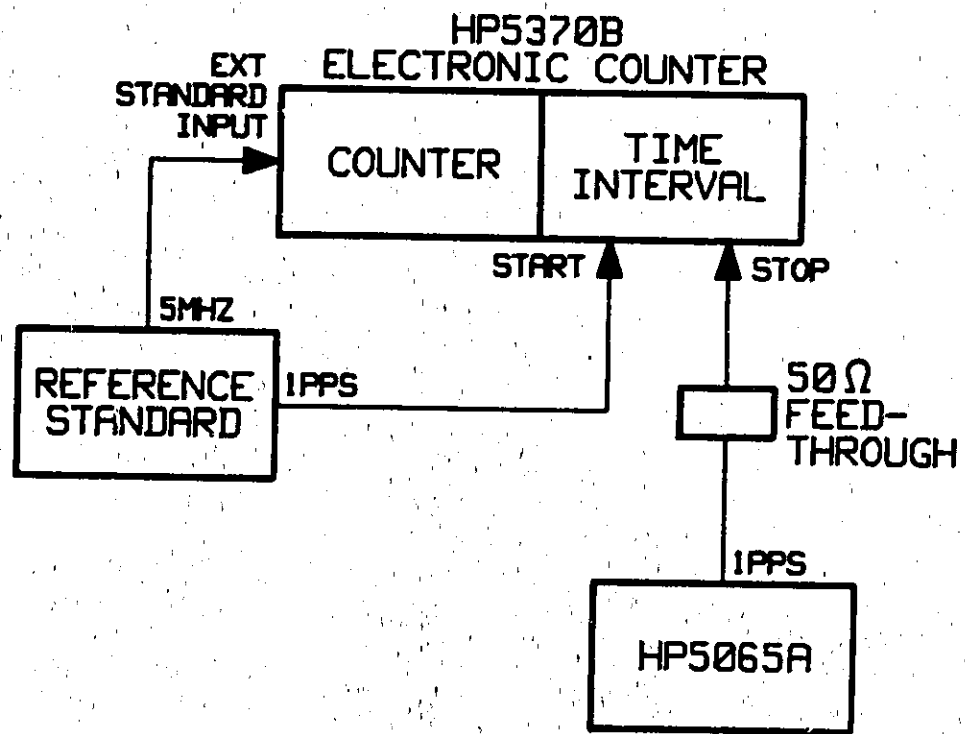


Figure 3-7. Internal Measurement with Automatic Synchronization

MANUAL CHANGES MODEL 5065A (05065-9041)

SERIAL PREFIX OR  
SERIES NUMBER

CHANGES

Page 4-3. Circuit Diagrams, Theory, and Maintenance:

2340A >Delete entire paragraph.

Page 5-1, Table 5-1. Assembly Designations:

All Serials >Change "05065-60125" to 05065-6125, under A18 Jumper Board;  
>and "05065-60136" to 05065-6136, under A19 Clock Display.

2052A >Change the A1 Synthesizer HP Part No. to 05065-6036.

2120A >Change part number for A10 Oscillator Assembly to  
05065-6094.

2144A >Change A15 part number to 05065-6100.

2340A >Change A5 part number to 05065-6092, SERIES 2340.  
>Delete all reference to A16 Power Supply.

2632A >Change A9 part number to 05065-6108, SERIES 2632.

Pages 5-2/5-3, Table 5-2. In-Cabinet Performance Check:

All Serials >Delete all references to "ALARM light off".

Page 5-5. Circuit Diagrams, Theory, and Maintenance:

2340A >Delete step 3, "Adjust 0-1us TIME DELAY..."

SERIAL PREFIX OR  
SERIES NUMBER

CHANGES

Page 5-14. Circuit Diagrams, Theory, and Maintenance:

2120A

>Replace adjustment procedure with the following:

**NOTE**

This procedure applies to those instruments with the 10811-60109 Oscillator and Oscillator Assembly for A10.

- a. Connect dc voltmeter to A8TP3.
- b. Set front controls as follows:  
FUNCTION . . . . . LOOP OPEN  
OSC FREQ ADJ FINE . . . 250
- c. Observe dc voltmeter and carefully adjust OSC FREQ ADJ COARSE for a meter indication of less than 50mV.
- e. Set OSC FREQ ADJ FINE to 300. Voltmeter should indicate  $-0.5\text{Vdc} \pm 0.1\text{Vdc}$ . If indication is outside this range, repeat steps a. thru e. to correct.
- f. Set OSC ADJ FINE to 250, lock the control and remove the dc voltmeter connections.

2632A

Paragraph 5-29. Phase Detector and Integrator Zero Adjustment  
>Replace Step g. with the following:

g. The voltage of the previous step will probably be drifting slightly. Adjust zero control A9R8 to stop this drift. To use the dc voltmeter on a lower range for finer adjustment, set FUNCTION switch to LOOP OPEN and then back to OPER. This will discharge the integrating capacitor and set the control voltage near zero. Observe the control voltage for a short period of time. If the drift exceeds 20mV/minute, repeat the zeroing adjustment.

Page 5-15. Circuit Diagrams, Theory, and Maintenance:

2632A

5-31. Logic Assembly (A14 Alignment)

>Replace e., Step 6 with the following:

- 6) Adjust OSC FREQ ADJ COARSE slowly ccw. INTEGRATOR LIMIT light should come on between +4 and +7 volts as read on the meter.

Page 5-16, Table 5-6. A5 Troubleshooting:

2340A

>Delete entire table.

MANUAL CHANGES MODEL 5065A (05065-9041)

SERIAL PREFIX OR  
SERIES NUMBER

CHANGES

Page 6-2, Figure 6-1. Modular Cabinet Parts:

- All Serials >Change HP part number of Item 2, Cover-Top to 05061-2059.  
>Change HP part number of Item 5, Panel-Rear to 05065-0047.

Pages 6-3/6-5. A1 Synthesizer Board Assembly Replaceable Parts:

- All Serials >Add A1A1R71 0757-0968 RESISTOR 68K 2% .125W F TC=0+-100;  
24546; C4-1/8-TO-7502-G.
- 2052A >Change A1 part number to 05065-6096 (SERIES 2052).  
>Change A1A1 part number to 05065-6095 (SERIES 2052).  
>Change the description for A1A1 to read: "For Replacement  
Order 05065-6096".  
>Change the A1A1IC4 to 1820-0261 IC MV TTL MONOSTBL  
(SN74121N).

Page 6-5, Table 6-2. A3 Multiplier Module Replaceable Parts:

- 2232A >Change A3 (05065-6078) SERIES to 2232.  
>Add E1 9170-0029 BEAD-CORE SHIELDING.
- 2320A >Change A3 (05065-6078) SERIES to 2320.  
>Add R42 0683-0275 RESISTOR 2.7 5% .25W CF TC=0-400.

Pages 6-6/6-8, Table 6-2. A3A1 Multiplier Board Replaceable Parts:

- All Serials >Change A3A1C42, C43 to 0160-3064 CAPACITOR-FXD 1000PF +-5%  
300VDC MICA.  
>Change A3A1C55, C60 to 0150-0050 CAPACITOR-FXD 1000PF  
+80-20% 1KVDC CER.  
>Add an asterisk (\*) to Reference Designations A3A1C3, C11,  
C26, and R34.  
>Change A3A1T1 HP and Mfr Part Numbers to 00105-8007.
- 2320A >Change A3A1 (05065-6009) SERIES from 2232 to 2320.  
>Change C16 from 0160-2020 to 0140-0224 CAPACITOR-FXD 280PF  
+-1% 300VDC MICA.  
>Change Q8 from 1855-0327 to 1855-0235 TRANSISTOR J-FET  
2N4416 N-CHAN D-MODE.
- 2432A01339 >Change A3A1L14 from 9100-1661 (2200 MH) to 9100-2569  
COIL, RF-CH-MLD 470uH 10% .161 DX .43 LG.

MANUAL CHANGES MODEL 5065A (05065-9041)

SERIAL PREFIX OR  
SERIES NUMBER

CHANGES

Page 6-11, Table 6-2. A7 (05065-6080) Replaceable Parts:

2340A >Change Q9 from 1854-0023 to 1854-0477 TRANSISTOR NPN  
2N2222A SI TO-18 PD=500MW.  
>Add E1 9170-0029 CORE-SHIELDING BEAD.

Page 6-13, Table 6-2. A9 Integrator Board Replaceable Parts:

All Serials >Change reference designator A9C1 to A9C2 and A9C2 to A9C1.  
2632A >Replace A9 (05065-6015) parts list with A9 (05065-6108)  
parts list (SERIES 2632) supplied in these manual changes.

Page 6-13, Table 6-2. A10 Oscillator Assembly Replaceable Parts:

2120A >Change A10 from 00105-6013 to 05065-6094 (SERIES 2120).  
>Add A10 replaceable parts lists supplied in this manual  
change sheet - pages 6-13a/6-13c.  
2142A >Change A10 (05065-6094) SERIES to 2134.  
>Change A10A3 SERIES to 2134.  
>Change A10A3R12 and R13 to 0698-0082 RESISTOR 464 1% .125W  
F TC=0+-100.  
2432A >Change A10A2 part number from 05061-6065 to 05061-6174,  
SERIES 2432  
>Change R11 to 0698-3452 RESISTOR 147K 1% .125W F  
TC=0+-100.

Page 6-15, Table 6-2. A13 Buffer Amplifier Module Replaceable Parts:

All Serials >Change A13A1Q1, Q2 to 1854-0005 TRANSISTOR-NPN SI PD=360MW;  
2N708.  
>Change A13A1Q3 to 1854-0019 TRANSISTOR-NPN SI PD=360MW.

Pages 6-15/6-16, Table 6-2. A14 Logic Board Replaceable Parts:

All Serials >Change A14CR13 to 1884-0070 THYRISTOR-SCS 3N81 VRRM=65;  
03508; 3N81.  
>Change A14R12 to 0757-0924; RESISTOR 1K 2% .125W F  
TC=0+-100.  
>Change A14R15 from "NOT ASSIGNED" TO 0757-0955 RESISTOR  
20K 2% .125W F TC=0+-100; 24546; C4-1/8-TO-2402-G.



Table 6-2. Replaceable Parts (Continued)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A9	05065-8108	1	1	BO AY - INTEGRATOR (SERIES 2632)	28480	05065-8108
A9C1	0180-0291	3	4	CAPACITOR, 1UF 35V	56189	150D105X9035A2
A9C2	0180-0291	3		CAPACITOR, 1UF 35V	56189	150D105X9035A2
A9C3	0180-0291	3		CAPACITOR, 1UF 35V	56189	150D105X9035A2
A9C4	0180-0291	3		CAPACITOR, 1UF 35V	56189	150D105X9035A2
A9C5	0180-3830	6		CAPACITOR, 50F 50V 10% POLYCARBON	28480	0160-0380
A9R1	0757-0199	3	4	RESISTOR-FXD 21.5K 1% .125W	24546	C4-1/8-T0-2152-F
A9R2	0757-0465	1		RESISTOR-FXD 100K 1% .125W F	00746	CRB14
A9R3	0757-0199	1		RESISTOR-FXD 21.5K 1% .125W	00746	CRB14
A9R4	0698-0084	1		RESISTOR-FXD 2.16K 1% .125W	00746	CRB14
A9R5	0757-0442	0	2	RESISTOR-FXD 10.0K 1% .125W	24546	C4-1/8-T0-1002-F
A9R6	0757-0442	8		RESISTOR-FXD 10.0K 1% .125W	24546	C4-1/8-T0-1002-F
A9R7	0757-0462	3	2	RESISTOR-FXD 75K 1% .125W	24546	C4-1/8-T0-7502-F
A9R8	2100-3161	6	1	RESISTOR-VAR 20K 17-TURN	02111	43P203
A9R9	0757-0462	3		RESISTOR-VAR 75K 1% .125W	24546	C4-1/8-T0-7502-F
ADU1	1826-0201	2	1	IC-VOLTAGE REG 78L15	04713	MC78L15ACP
ADU2	1826-0274	3	1	IC-VOLTAGE REG 78L15	04713	MC78L15ACP
ADU3	1813-0437	3	1	IC-LINEAR JPA1118M	28480	1813-0437
				MISCELLANEOUS PARTS		
	0340-0060	4	1	CLOVERLEAF, TEFLON	98201	011-8909-000 209
	0380-1882		3	TEST PIN	28480	0360-1882
	5000-8043	8	1	BOARD EXTRACTOR PIN	28480	5000-8043
	5040-8849	8	1	BOARD EXTRACTOR	28480	5040-8849

See Introduction to this section for ordering information  
\*Indicates factory selected value

Table 6-2. Replaceable Parts (Continued)

Reference Designation	HP Part Number	Description
A10A1	10811-60109	ASSEMBLY 10 MHZ OSCILLATOR (SERIES 2120)
A10A2	05061-6165	ASSEMBLY FREQ. DIVIDER/AMP. BD (SERIES 2120)
A10A3	05061-6166	ASSEMBLY POWER SUPPLY BD (SERIES 2120)
A10MP1	1460-1214	SPRING-COMPRESSION TUNING SHAFT
A10MP2	05065-6093	SHAFT-TUNING FIBER-GLASS
A10MP3	00105-2028	HOUSING-TUNING SHAFT
A10MP4	2950-0040	NUT-HEX MTG SHAFT HOUSING
A10MP5	05065-0062	BRACKET-MTG (FOR ENTIRE A10 ASSEMBLY)
A10MP6	05065-0063	BRACKET-SUPPORT (FOR A2 CIRCUIT BOARD)
A10U1	1826-0393 10811-90002	IC ADJ VOLT-REG 70-220 TYPE LM317T OPERATING AND SERVICE MANUAL FOR MODEL 10811AB QUARTZ CRYSTAL OSCILLATOR.
	0340-0468 0340-0864 2200-0107 2260-0009	A10U1 MISCELLANEOUS PARTS WASHER-EXTRUDED TRANSISTOR MOUNTING INSULATOR-TRANSISTOR MOUNTING SCREW-MACHINE 4-40/LOCKWASHER NUT-HEX 4-40
A10A2	05061-6165	ASSY, CIRCUIT BOARD: FREQ. DIVIDER/AMP. (SERIES 2120)
A10A2C1	0160-4835	CAPACITOR-FXD .1 UF 10% 50VDC CER
A10A2C2	0160-4835	CAPACITOR-FXD .1 UF 10% 50VDC CER
A10A2C3	0160-4835	CAPACITOR-FXD .1 UF 10% 50VDC CER
A10A2C4	0160-4511	CAPACITOR-FXD 220 PF 5% 200VDC CER
A10A2C5	0160-4835	CAPACITOR-FXD .1 UF 10% 50VDC CER
A10A2C6	0160-4835	CAPACITOR-FXD .1 UF 10% 50VDC CER
A10A2C7	0160-4835	CAPACITOR-FXD .1 UF 10% 50VDC CER
A10A2C8	0160-4511	CAPACITOR-FXD 220 PF 5% 200VDC CER
A10A2C9	0160-4835	CAPACITOR-FXD .1 UF 10% 50VDC CER
A10A2C10	0160-4835	CAPACITOR-FXD .1 UF 10% 50VDC CER
A10A2C11	0160-4835	CAPACITOR-FXD .1 UF 10% 50VDC CER
A10A2C12	0160-4387	CAPACITOR-FXD 47 PF 5% 200VDC CER
A10A2C13	0180-0161	CAPACITOR-FXD 3.3 UF 10% 35VDC TANT
A10A2CR1	1902-0033	DIODE BKDOWN 6.2V 5% DO-7 PD=.4W TYPE 1N823
A10A2CR2	1902-0787	DIODE BKDOWN 9.0V 5% DO-7 PD=.5W TYPE 1N938
A10A2J1-J4	1250-0257	CONNECTOR-RF SMB M PC 50-OHM COAXIAL
A10A2J5-J8	0360-0124	CONNECTOR-SGL CONT-PIN RND PUSH-ON
A10A2L1	9100-0566	COIL MOULDED 4.7UH 5% Q=45
A10A2L2	9100-2280	COIL MOULDED 220UH 10% Q=30
A10A2L3	9100-2280	COIL MOULDED 220UH 10% Q=30
A10A2L4	9100-0566	COIL MOULDED 4.7UH 5% Q=45

Table 6-2. Replaceable Parts (Continued)

Reference Designation	HP Part Number	Description
A10A2L5	9100-2280	COIL MOULDED 220UH 10% Q=30
A10A2L6	9100-2280	COIL MOULDED 220UH 10% Q=30
A70A2L7	9140-0604	COIL MOULDED 22UH
A1CA2Q1-Q4	1854-0215	TRANSISTOR-SI NPN PD=350MW TYPE 2N3904
A10A2R1	0698-0082	RESISTOR-FXD 464 1% .125W F TC=0+-100
A10A2R2	0698-0082	RESISTOR-FXD 464 1% .125W F TC=0+-100
A10A2R3	0757-0443	RESISTOR-FXD 11.0K 1% .125W F TC=0+-100
A10A2R4	0757-0180	RESISTOR-FXD 31.6 1% .125W F TC=0+-100
A10A2R5	0698-3447	RESISTOR-FXD 422 1% .250W F TC=0+-100
A10A2R6	0698-3442	RESISTOR-FXD 237 1% .250W F TC=0+-100
A10A2R7	0698-3132	RESISTOR-FXD 261 1% .250W F TC=0+-100
A10A2R8	2100-1788	RESISTOR-TRMR 500 30% CC TOP-ADJ 1-TRN
A10A2R9	0757-0280	RESISTOR-FXD 1.0K 1% .125W F TC=0+-100
A10A2R10	0698-3155	RESISTOR-FXD 4.64K 1% .250W F TC=0+-100
A10A2R11	0757-0279	RESISTOR-FXD 3.16K 1% .125W F TC=0+-100
A10A2R12	0757-0289	RESISTOR-FXD 13.3K 1% .125W F TC=0+-100
A10A2R13	0698-3155	RESISTOR-FXD 4.64K 1% .250W F TC=0+-100
A10A2R14	0757-0280	RESISTOR-FXD 1.0K 1% .125W F TC=0+-100
A10A2R15	0757-0416	RESISTOR-FXD 511 1% .125W F TC=0+-100
A10A2R16	0257-0278	RESISTOR-FXD 1.78K 1% .125W F TC=0+-100
A10A2R17	0757-0416	RESISTOR-FXD 511 1% .125W F TC=0+-100
A10A2R18	0757-0416	RESISTOR-FXD 511 1% .125W F TC=0+-100
A10A2TP1	0360-1682	TERMINAL-STUD SGL-TUR PRESS-MTG
A10A2U1	1820-0077	IC FF TTL DUAL POS-EDGE-TRIG TYPE SN7474N
A10A2MP1	0510-0568	BUTTON-PLASTIC INSULATOR PUSH-IN
A10A3	05061-6166	ASSY, CIRCUIT BOARD: POWER SUPPLY (SERIES 2120)
A10A3C1	0180-0230	CAPACITOR-FXD 1 UF 20% 50VDC TANT
A10A3C2	0180-0230	CAPACITOR-FXD 1 UF 20% 50VDC TANT
A10A3C3	0180-0116	CAPACITOR-FXD 6.8 UF 10% 35VDC TANT
A10A3C4	0180-0230	CAPACITOR-FXD 1 UF 20% 50VDC TANT
A10A3C5	0160-4521	CAPACITOR-FXD 12 PF 5% 200VDC CER TC=+/-30
A10A3C6	0180-0230	CAPACITOR-FXD 1 UF 20% 50VDC TANT
A10A3CR1	1902-0984	DIODE-BKDOWN 6.4V 2% DO-7 PD=.4W
A10A3CR2	1901-0050	DIODE-SWITCHING 80V 200 MA 2 NS DO-35
A10A3CR3	1901-0050	DIODE-SWITCHING 80V 200 MA 2 NS DO-35
A10A3J1	1251-2035	CONNECTOR-PC EDGE 2-ROWS 15-CONT/ROW
A10A3J2	1251-2035	CONNECTOR-PC EDGE 2-ROWS 15-CONT/ROW
A10A3L1	9140-0604	COIL-MOULDED 22UH
A10A3Q1	1854-0831	TRANSISTOR-SI NPN PD=625MW TYPE 2N6429A
A10A3Q2	1854-0215	TRANSISTOR-SI NPN PD=350MW TYPE 2N3904

Table 6-2. Replaceable Parts (Continued)

Reference Designation	HP Part Number	Description
A10A3R1	0757-0279	RESISTOR-FXD 3.16K 1% .125W F TC=0+-100
A10A3R2	0698-3442	RESISTOR-FXD 237 1% .125W F TC=0+-100
A10A3R3	0757-0424	RESISTOR-FXD 1.1K 1% .125W F TC=0+-100
A10A3R4	0757-0200	RESISTOR-FXD 5.62K 1% .125W F TC=0+-100
A10A3R5	-----	NOT ASSIGNED
A10A3R6	0757-0200	RESISTOR-FXD 5.62K 1% .125W F TC=0+-100
A10A3R7	0757-0199	RESISTOR-FXD 21.5K 1% .125W F TC=0+-100
A10A3R8	0757-0442	RESISTOR-FXD 10.0K 1% .125W F TC=0+-100
A10A3R9	0698-3457	RESISTOR-FXD 316K 1% .125W F TC=0+-100
A10A3R10	0698-3457	RESISTOR-FXD 316K 1% .125W F TC=0+-100
A10A3R11*	0698-3454	RESISTOR-FXD 215K 1% .125W F TC=0+-100 *FACTORY SELECTED VALUE; AVG VALUE SHOWN.
A10A3R12	0757-0419	RESISTOR-FXD 681 1% .125W F TC=0+-100
A10A3R13	0757-0419	RESISTOR-FXD 681 1% .125W F TC=0+-100
A10A3TP1	0360-1682	TERMINAL-STUD SGL-TUR PRESS-MTG
A10A3U1	1826-0275	IC VOLTAGE REGULATOR TO-92 TYPE MC78L12ACP
		A10A3 MISCELLANEOUS PARTS
	0360-0065	TERMINAL-STUD FORKED-TUR SWGFRM-MTG (R11 MTG)

REPLACEABLE CHASSIS PARTS FOR 05065-6094 OSCILLATOR ASSEMBLY

R8 0698-3156 RESISTOR-FXD 14.7K 1% .125W F TC=0+-100

NOTE--RESISTOR R8 IS ADDED AS SHOWN IN THE ATTACHED SCHEMATIC DIAGRAM. THIS RESISTOR REPLACES CHASSIS MOUNTED RESISTORS R1 (7.5K) AND R2 (17.8K).

MANUAL CHANGES MODEL 5065A (05065-9041)

SERIAL PREFIX OR  
SERIES NUMBER

CHANGES

Pages 6-16/1-17, Table 6-2. A15 Voltage Regulator Replaceable Parts:

- All Serials >Change A15C6 Reference Designator to A15C11, and A15C11 to A15C6.  
>Change A15Q7 to 1853-0012 TRANSISTOR PNP 2N2904A SI TO-39 PD=600MW.
- 2144A >Change A15 from 05065-6023 to 05065-6100, SERIES 2144.  
>Delete A15CR1 through CR4, 1901-0200 DIODE RECTIFIERS.

Pages 6-18/6-20, Table 6-2. Replaceable Chassis Parts:

- All Serials >Change Description of W6 to CABLE ASSEMBLY-REAR PANEL TO A9.  
>Change Description of W11 to CABLE ASSEMBLY-FRONT PANEL TO A6.
- 2052A >Delete C5A, C5B, 0160-3611 Dual Capacitor.  
>Add C8, C9 0160-4355 CAPACITOR-FXD .01UF +-10% 250VAC(RMS).
- 2120A >Delete resistors R1 (7500 ohms) and R2 (17.8K).  
>Add resistor R8 0698-3156 RESISTOR-FXD 14.7K 1% .125W F TC=0+-100. (See new A10 schematic diagram. R8 replaces R1, R2.)
- 2144A >Add C10 0150-0052 CAPACITOR-FXD .05UF +-20% 400VDC CER.  
>Add CR4 1906-0079 DIODE-FW BRDG 100V 10A.
- 2624A >Change 05060-2083 to 05061-2094 COVER-C FIELD.
- 2632A >Delete R5 (0757-0972, 100K).

Page 6-20, Table 6-2. Replaceable Cabinet Parts:

- All Serials >Change 05065-0009 to 05065-0047.  
>Change 05065-2041 to 05061-2059.

Pages 6-21/6-22, Table 6-3. Option 002 & 003 Replaceable Parts:

- All Serials >Add BT1 Reference Designation to battery (Part No. 1420-0066).  
>Delete BT1 Reference Designation for battery cable assembly 05065-6062.

MANUAL CHANGES MODEL 5065A (05065-9041)

SERIAL PREFIX OR  
SERIES NUMBER

CHANGES

Page 6-23, Table 6-4. Option 001 (A5) Replaceable Parts:

2144A >Change A5 SERIES to 2144.  
2208A >Change A5 SERIES to 2208.  
2308A >Change A5 SERIES to 2308.  
2340A >Replace A5 Replaceable Parts list with new A5 Parts List, SERIES 2340, supplied in this manual change.

Page 6-23, Table 6-4. Option 001 (A5A1) Replaceable Parts:

2340A >Replace A5A1 Replaceable Parts list with new A5 Parts List, SERIES 2340, supplied in this manual change.

Pages 6-24/6-25, Table 6-4. Option 001 (A5A2) Replaceable Parts:

All Serials >Change A5A2CR4 through CR11 to 1901-0040 DIODE-SWITCHING 30V 50MA 2NS.  
>Change A5A2IC1 through IC3 to 1820-0580 IC MVB MONOSTBL; 28480.  
>Add A5A2L1 9100-1630 COIL 51UH 5% Q=55; 28480.  
>Change A5A2L3 to 9100-1630 COIL 51US 5% Q=55; 28480.  
2208A >Change A5A2 SERIES to 2208.  
>Change IC1 thru IC3 to 1820-0315 IC MV DTL MONOSTBL.  
2308A >Change A5A2 SERIES to 2308.  
>Change R16 to 0757-0288 RESISTOR-FXD 9.09K 1% .125W.  
>Change IC1 to 1820-0261 IC-TTL 74121.  
>Delete IC2, IC3.  
>Add IC15 1820-1437 IC-TTL 74221.  
2340A >Replace A5A3 Replaceable Parts List with new A5A3 Parts List, SERIES 2340, supplied in this manual change.

MANUAL CHANGES MODEL 5065A (05065-9041)

Table 6-4. AS Digital Divider Option 001 Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
AS	05065-6072	A	1	DIGITAL DIVIDER - SERIES 2340	20400	05065-6072
	0300-1075	B	8	SPACER-RND 1-IN-LG .114-IN-ID .134-IN-OD	20400	0300-1075
	0300-0445	C	8	SPACER-RND .542-IN-LG .114-IN-ID	20400	0300-0445
	0500-0100	7	6	SCREW-WASH 2-56 .25-IN-LG PAN-HD-POZI	00000	ORDER BY DESCRIPTION
	0540-0001	7	4	NUT-HEX-DBL-CHAN 5-40-THD .094-IN-THK	20400	0540-0001
	2190-0014	1	6	WASHER-LK INTL T NO. 2 .609-IN-ID	20400	2190-0014
	2190-0020	9	4	WASHER-LK HCL NO. 5 .120-IN-ID	20400	2190-0020
	2190-0060	7	1	WASHER-LK INTL T 1/4 IN .254-IN-ID	20400	2190-0060
	2200-0107	6	6	SCREW-WASH 4-40 .375-IN-LG PAN-HD-POZI	00000	ORDER BY DESCRIPTION
	2200-0569	4	4	SCREW-WASH 4-40 3.5-IN-LG PAN-HD-BLT STL	00000	ORDER BY DESCRIPTION
	2700-0006	3	1	NUT-HEX-DBL-CHAN 1/4-32-THD .094-IN-THK	00000	ORDER BY DESCRIPTION
	3101-1159	1	1	SWITCH-PB SPDT MOM .25A BLK-BTN	02309	963
	05061-0013	0	1	BKT-DIG DIV	20400	05061-0013
	05065-0020	0	1	BKT-SU MTC	20400	05065-0020
	05065-0060	3	1	COV-DIG DIV	20400	05065-0060
	05065-0064	0	1	CHASSIS-DIG DIV	20400	05065-0064
	05065-2006	1	2	PLY-EMB DIG DIV	20400	05065-2006
AS41	05065-6091	4	1	DD AY-10MHZ MULT	20400	05065-6091
AS42	05061-6100	4	1	DD AY-SU PWR	20400	05061-6100
AS43	05061-6103	2	1	DD AY-19PS, DELAY	20400	05061-6103
AS44	05061-6106	0	1	DD AY-INTERCONN	20400	05061-6106

See introduction to this section for ordering information  
 \*Indicates factory selected value

MANUAL CHANGES MODEL 5065A (05065-9041)

Table 6. ASA1 10 MHz Multiplier Option 001 Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
ASA1	05065-6091	4	1	10MHZ MULTIPLIER - SERIES 2340	20480	05065-6091
ASA1C1	0160-8576	5	7	CAPACITOR-FXD .1UF +-20% 50VDC CER	20400	0160-8576
ASA1C2	0160-3079	7	2	CAPACITOR-FXD .01UF +-20% 100VDC CER	20480	0160-3079
ASA1C3	0160-8576	5	5	CAPACITOR-FXD .1UF +-20% 50VDC CER	20480	0160-8576
ASA1C4	0160-4511	6	2	CAPACITOR-FXD 220PF +-5% 200VDC CER	20480	0160-4511
ASA1C5	0160-8576	5	5	CAPACITOR-FXD .1UF +-20% 50VDC CER	20480	0160-8576
ASA1C7	0160-3079	7		CAPACITOR-FXD .01UF +-20% 100VDC CER	20480	0160-3079
ASA1C9	0160-4511	6		CAPACITOR-FXD 220PF +-5% 200VDC CER	20480	0160-4511
ASA1C10	0160-8576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	20480	0160-8576
ASA1C11	0160-4307	6	1	CAPACITOR-FXD 100PF +-5PF 200VDC CER	20400	0160-4307
ASA1C12	0180-0897	7	1	CAPACITOR-FXD 47UF+-10% 35VDC TA	54209	150D476X903502
ASA1C13	0160-1746	5	1	CAPACITOR-FXD 15UF+-10% 20VDC TA	56209	150D156X9020V2
ASA1C14	0160-8576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	20480	0160-8576
ASA1C15	0160-8576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	20480	0160-8576
ASA1C16	0180-1735	2	1	CAPACITOR-FXD 22UF+-10% 35VDC TA	54209	150D224X9035A2
ASA1C17	0160-8576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	20480	0160-8576
ASA1CR1	1901-0050	3	5	DIODE-SWITCHING 80V 200MA 2MS DO-35	20400	1901-0050
ASA1CR2	1902-0074	3	1	DIODE-ZNR 7.15V 5X DO-35 PD=.4W	20480	1902-0074
ASA1CR3	1902-3171	7	1	DIODE-ZNR 11V 5X DO-35 PD=.4W TC=+.062X	20400	1902-3171
ASA1CR4	1901-0050	3		DIODE-SWITCHING 80V 200MA 2MS DO-35	20400	1901-0050
ASA1CR5	1901-0050	3		DIODE-SWITCHING 80V 200MA 2MS DO-35	20400	1901-0050
ASA1CR6	1901-0050	3		DIODE-SWITCHING 80V 200MA 2MS DO-35	20400	1901-0050
ASA1CR7	1901-0050	3		DIODE-SWITCHING 80V 200MA 2MS DO-35	20400	1901-0050
ASA1J1	1250-0257	1	3	CONNECTOR-RF GNB H PC 50-OHM	20400	1250-0257
ASA1J2	1250-0257	1		CONNECTOR-RF GNB H PC 50-OHM	20400	1250-0257
ASA1J3	1250-0257	1		CONNECTOR-RF GNB H PC 50-OHM	20400	1250-0257
ASA1L1	9140-0125	7	2	COIL VAR. R.F.	20400	9140-0125
ASA1L2	9140-0562	6	2	33MH 5X IDC130MA	20400	9140-0562
ASA1L3	9140-0125	7		COIL VAR. R.F.	20400	9140-0125
ASA1L4	9140-0562	6		33MH 5X IDC130MA	20400	9140-0562
ASA1Q1	1053-0405	9	7	TRANSISTOR PNP SI PD=300MW FT=050MHZ	04713	2N4209
ASA1Q2	1053-0405	9		TRANSISTOR PNP SI PD=300MW FT=050MHZ	04713	2N4209
ASA1Q3	1054-0019	3	3	TRANSISTOR NPN SI TO-18 PD=360MW	20400	1054-0019
ASA1Q4	1053-0405	9		TRANSISTOR PNP SI PD=300MW FT=050MHZ	04713	2N4209
ASA1Q5	1053-0405	9		TRANSISTOR PNP SI PD=300MW FT=050MHZ	04713	2N4209
ASA1Q6	1053-0405	9		TRANSISTOR PNP SI PD=300MW FT=050MHZ	04713	2N4209
ASA1Q7	1053-0405	9		TRANSISTOR PNP SI PD=300MW FT=050MHZ	04713	2N4209
ASA1Q8	1054-0019	3		TRANSISTOR NPN SI TO-18 PD=360MW	20400	1054-0019
ASA1Q9	1053-0405	9		TRANSISTOR PNP SI PD=300MW FT=050MHZ	04713	2N4209
ASA1Q10	1054-0019	3		TRANSISTOR NPN SI TO-18 PD=360MW	20400	1054-0019
ASA1Q11	1054-0233	3	1	TRANSISTOR NPN 2N3866 SI TO-39 PD=1W	3L505	2N3866
ASA1R1	0757-0200	3	7	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-10-1001-F
ASA1R2	0757-0200	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-10-1001-F
ASA1R3	0757-0200	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-10-1001-F
ASA1R4	0757-0200	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-10-1001-F
ASA1R5	0757-0200	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-10-1001-F
ASA1R6	0757-0401	0	3	RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-10-101-F
ASA1R7	0690-4002	9	3	RESISTOR 5K 1% .125W F TC=0+-100	24546	C4-1/8-10-5001-F
ASA1R8	0757-0200	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-10-1001-F
ASA1R9	0690-4002	9		RESISTOR 5K 1% .125W F TC=0+-100	24546	C4-1/8-10-5001-F
ASA1R10	0757-0200	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-10-1001-F
ASA1R11	0690-4002	9		RESISTOR 5K 1% .125W F TC=0+-100	24546	C4-1/8-10-5001-F
ASA1R12	0690-3445	2	1	RESISTOR 340 1% .125W F TC=0+-100	24546	C4-1/8-10-340R-F
ASA1R13	0757-1100	5	1	RESISTOR 300 1% .125W F TC=0+-100	24546	C4-1/8-10-300-F
ASA1R14	0757-1093	0	1	RESISTOR 3K 1% .125W F TC=0+-100	24546	C4-1/8-10-3001-F
ASA1R15	0757-0421	4	1	RESISTOR 825 1% .125W F TC=0+-100	24546	C4-1/8-10-025R-F
ASA1R16	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-10-101-F
ASA1R17	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-10-101-F
ASA1R18	0757-0407	6	1	RESISTOR 200 1% .125W F TC=0+-100	24546	C4-1/8-10-201-F
ASA1R19	0757-0394	0	1	RESISTOR 51.1 1% .125W F TC=0+-100	24546	C4-1/8-10-51R1-F
ASA1R20	0757-0442	9	3	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-10-1002-F
ASA1R21	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-10-1002-F
ASA1R22	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-10-1002-F
ASA1R23	0690-5052	9	1	RESISTOR 500 1% .125W F TC=0+-100	24546	C4-1/8-10-500R-F
ASA1R24	0690-5000	5	1	RESISTOR 4K 1% .125W F TC=0+-100	24546	C4-1/8-10-4001-F
ASA1U1	1026-0430	1	1	IC V RCLTR TO-39	27014	LM3401AH-12
	9170-0029	3	2	INDUC FXD BEAD	20480	9170-0029

See introduction to this section for ordering information  
 \*Indicates factory selected value



MANUAL CHANGES MODEL 5065A (05065-9041)

SERIAL PREFIX OR  
SERIES NUMBER

CHANGES

Pages 6-25/6-26, Table 6-4, Option 001 (A5A3) Replaceable Parts:

- All Serials >Change A5A3IC13, IC15, and IC16 to 1820-0580 IC MVB MONOSTBL;28480.
- 2144A >Replace A5A3 (05061-6013) Replaceable Parts List with new Replaceable Parts List (05061-6167, SERIES 2144) supplied in this manual change.
- 2208A >Change A5A3 (05061-6167) SERIES to 2208.  
>Change IC13,15, and 16 to 1820-0315 IC MV DTL MONOSTBL.
- 2308A >Change A5A3 (05061-6167) SERIES to 2308.  
>Change R4 to 0757-0444 RESISTOR 12.1K 1% .125W.  
>Change R15 to 0698-3156 RESISTOR 14.7K 1% .125W.  
>Change R46 to 0757-0440 RESISTOR 7.5K 1% .125W.  
>Change IC13 to 1820-0261 IC-TTL 74121.  
>Add IC17 1820-1423 IC-TTL 74LS123.  
>Delete IC15 and IC16.
- 2340A >Replace A5A3 Replaceable Parts List with new A5A3 Parts List, SERIES 2340, supplied in this manual change.

Pages 6-27/6-28, Table 6-5, A16 Clock Power Supply Module - OPTS 001, 003.

- 2148A >Change A16, A16A1 SERIES to 2148.  
>Change Q9, Q10 to 1854-0916 TRANSISTOR-NPN 2N3053 TO-39 PD=SW.
- 2340A >Delete Table 6-5, Options 001, 003 Replaceable Parts.

Page 8-3, Figure 8-2. BLOCK DIAGRAM:

- 2120A >Change connections for FINE OSC FREQ ADJ control (R3) to agree with connectios and changes shown in A10 schematic diagram (SERIES 2120).
- 2340A >Delete A16 Block from diagram on left side.

MANUAL CHANGES MODEL 5065A (05065-9041)

Table 6. A5A2 5-Volt Regulator Option 001 Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A5A2	05061-6155	6	1	5 VOLT REGULATOR - SERIES 2340	28480	05061-6155
A5A2C1	0168-0576	5	1	CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0168-0576
A5A2C2	0100-0097	7	2	CAPACITOR-FXD 47UF +-10% 35VDC TA	56289	158D476X93582
A5A2C3	0100-0139	2	2	CAPACITOR-FXD 220UF +-20% 10VDC TA	56289	158D227X001852
A5A2C4	0168-0157	0	1	CAPACITOR-FXD 4700PF +-10% 200VDC POLYE	28480	0168-0157
A5A2C5	0168-3878	6	1	CAPACITOR-FXD 1000PF +-20% 150VDC CER	28480	0168-3878
A5A2C6	0100-0210	6	1	CAPACITOR-FXD 3.3UF +-20% 15VDC TA	56289	158D335X0015A2
A5A2C7	0168-3877	5	1	CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0168-3877
A5A2C8	0100-0097	7	2	CAPACITOR-FXD 47UF +-10% 35VDC TA	56289	158D476X93582
A5A2C9	0100-0119	2	2	CAPACITOR-FXD 220UF +-20% 10VDC TA	56289	158D227X001852
A5A2C10	0100-0116	1	1	CAPACITOR-FXD 6.0UF +-10% 35VDC TA	56289	158D603X93582
A5A2C11	1901-0734	0	1	DIODE-PWR RECT 1N5818 30V 1A	04713	1N5818
A5A2C13	1901-0950	3	1	DIODE-SWITCHING 80V 200MA 200 SO-35	28480	1901-0950
A5A2L1	9100-0537	1	1	INDUCTOR 400UH 15% 1.125	28480	9100-0537
A5A2L2	9100-3139	5	2	INDUCTOR 70UH 15% .50X.075LC	28480	9100-3139
A5A2L3	9100-3139	5	5	INDUCTOR 70UH 15% .50X.075LC	28480	9100-3139
A5A2R1	1054-0510	7	1	TRANSISTOR NPN 2N5077 SI TO-3 PD=150W	04713	2N5077
A5A2R2	1054-0281	9	1	TRANSISTOR PNP 2N2987A SI TO-18 PD=400mW	04713	2N2987A
A5A2R3	0012-0017	2	1	RESISTOR .25 5% 3W PW TC=0+-70	28480	0012-0017
A5A2R4	0690-0002	9	2	RESISTOR 500 1% .125W F TC=0+-100	24546	C4-1/B-T0-5000-F
A5A2R5	0757-0442	9	3	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/B-T0-1002-F
A5A2R6	0690-0002	9	9	RESISTOR 500 1% .125W F TC=0+-100	24546	C4-1/B-T0-5000-F
A5A2R7	0757-0472	0	1	RESISTOR 200K 1% .125W F TC=0+-100	24546	C4-1/B-T0-2000-F
A5A2R8	0757-0401	0	1	RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/D-T0-101-F
A5A2R9	0757-0442	9	1	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/B-T0-1002-F
A5A2R10	0757-0200	3	1	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/B-T0-1001-F
A5A2R11	0757-0203	6	1	RESISTOR 2K 1% .125W F TC=0+-100	24546	C4-1/B-T0-2001-F
A5A2R12	0690-0162	0	1	RESISTOR 46.4K 1% .125W F TC=0+-100	24546	C4-1/B-T0-4642-F
A5A2R13	0757-0445	6	1	RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/B-T0-1003-F
A5A2R14	0690-0002	9	1	RESISTOR 500 1% .125W F TC=0+-100	24546	C4-1/B-T0-5001-F
A5A2R15	0757-0430	3	1	RESISTOR 5.1K 1% .125W F TC=0+-100	24546	C4-1/B-T0-5111-F
A5A2R16	0757-0442	9	1	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/B-T0-1002-F
A5A2R17	0690-0002	0	1	RESISTOR 2.61K 1% .125W F TC=0+-100	24546	C4-1/B-T0-2611-F
A5A2U1	1026-0592	0	1	IC OP AMP GP BUAL TO-99 PRC	27014	LM358A
A5A2U2	1026-0420	9	1	IC 3224 MODULATOR 16-DIP-C	01295	SG3224J
A5A2U3	1026-0544	0	1	V REF 0-DIP-C	04713	MC1403J
	0340-0596	1	1	INSULATOR-XSTR THRM-CHCCT	28480	0340-0596
	0340-1682	0	2	TERMINAL-STUD GCL-TUN PRESS-NTC	28480	0340-1682
	2200-0107	6	3	SCREEN-MACH 4-40 .375-IN-LE PAN-H0-POZI	00000	ORDER BY DESCRIPTION
	2200-0009	3	2	NUT-HEX-W/LNMR 4-40-THD .094-IN-THK	00000	ORDER BY DESCRIPTION

See introduction to this section for ordering information  
 \*Indicates factory selected value

MANUAL CHANGES MODEL 5065A (05056-9041)

Table 6. A5A3 IPPS & Delay Gen. Option 001 Replaceable Parts

Reference Designation	HP Part Number	CD	Qty	Description	Mfr Code	Mfr Part Number
A5A3	05061-6153	2	1	IPPS & DELAY GEN - SERIES 2340	20480	05061-6153
A5A3C1	0160-0576	5	7	CAPACITOR-FXD .1UF +-20% 50VDC CER	20400	0160-0576
A5A3C2	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	20400	0160-0576
A5A3C3	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	20400	0160-0576
A5A3C4	0160-3874	5	1	CAPACITOR-FXD 10PF +-50% 200VDC CER	20400	0160-3874
A5A3C5	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	20400	0160-0576
A5A3C6	0160-4040	4	1	CAPACITOR-FXD 1000PF +-5% 100VDC CER	20400	0160-4040
A5A3C7	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	20400	0160-0576
A5A3C8	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	20400	0160-0576
A5A3C9	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	20400	0160-0576
A5A3CR1	1901-0050	3	2	DIODE-SWITCHING 80V 200MA 2WS DO-35	20400	1901-0050
A5A3CR2	1901-0050	3		DIODE-SWITCHING 80V 200MA 2WS DO-35	20400	1901-0050
A5A3WP1	1251-2317	0	7	CONNECTOR-PC EDGE CONN-6PL PUMP, 12 COND	20400	1251-2317
A5A3WP2	1251-2317	0		CONNECTOR-PC EDGE CONN-6PL PUMP, 12 COND	20400	1251-2317
A5A3WP3	1251-2317	0		CONNECTOR-PC EDGE CONN-6PL PUMP, 12 COND	20400	1251-2317
A5A3WP4	1251-2317	0		CONNECTOR-PC EDGE CONN-6PL PUMP, 12 COND	20400	1251-2317
A5A3WP5	1251-2317	0		CONNECTOR-PC EDGE CONN-6PL PUMP, 12 COND	20400	1251-2317
A5A3WP6	1251-2317	0		CONNECTOR-PC EDGE CONN-6PL PUMP, 12 COND	20400	1251-2317
A5A3WP7	1251-2317	0		CONNECTOR-PC EDGE CONN-6PL PUMP, 12 COND	20400	1251-2317
A5A3Q1	1053-0405	9	1	TRANSISTOR PNP 01 PD-300MHZ FT-050MHZ	04713	20400
A5A3Q2	1054-0019	3	1	TRANSISTOR NPN 01 TD-10 PD-300MHZ	20400	1054-0019
A5A3R1	0757-0200	3	4	RESISTOR 1K 1% .125W F TC-0+-100	24546	C4 1/8 10-1001 F
A5A3R2	0690-0002	9	1	RESISTOR 500 1% .125W F TC-0+-100	24546	C4 1/8 10-5001 F
A5A3R3	0757-0200	3		RESISTOR 1K 1% .125W F TC-0+-100	24546	C4 1/8 10-1001 F
A5A3R4	0757-0200	3		RESISTOR 1K 1% .125W F TC-0+-100	24546	C4 1/8 10-1001 F
A5A3R5	0757-0442	9	3	RESISTOR 10K 1% .125W F TC-0+-100	24546	C4 1/8 10-1002 F
A5A3R6	0757-0401	0	3	RESISTOR 100 1% .125W F TC-0+-100	24546	C4 1/8 10-101 F
A5A3R7	0757-0442	9		RESISTOR 10K 1% .125W F TC-0+-100	24546	C4 1/8 10-1002 F
A5A3R8	0690-0002	5	1	RESISTOR 40K 1% .125W F TC-0+-100	24546	C4 1/8 10-4001 F
A5A3R9	0757-0401	0		RESISTOR 100 1% .125W F TC-0+-100	24546	C4 1/8 10-101 F
A5A3R10	0757-0401	0		RESISTOR 100 1% .125W F TC-0+-100	24546	C4 1/8 10-101 F
A5A3R11	0757-0200	3		RESISTOR 1K 1% .125W F TC-0+-100	24546	C4 1/8 10-1001 F
A5A3R12	0757-0442	9		RESISTOR 10K 1% .125W F TC-0+-100	24546	C4 1/8 10-1002 F
A5A3R13	0690-0002	9	7	RESISTOR 5K 1% .125W F TC-0+-100	24546	C4 1/8 10-5001 F
A5A3R14	0690-0002	9		RESISTOR 5K 1% .125W F TC-0+-100	24546	C4 1/8 10-5001 F
A5A3R15	0690-0002	9		RESISTOR 5K 1% .125W F TC-0+-100	24546	C4 1/8 10-5001 F
A5A3R16	0690-0002	9		RESISTOR 5K 1% .125W F TC-0+-100	24546	C4 1/8 10-5001 F
A5A3R17	0690-0002	9		RESISTOR 5K 1% .125W F TC-0+-100	24546	C4 1/8 10-5001 F
A5A3R18	0690-0002	9		RESISTOR 5K 1% .125W F TC-0+-100	24546	C4 1/8 10-5001 F
A5A3R19	0690-0002	9		RESISTOR 5K 1% .125W F TC-0+-100	24546	C4 1/8 10-5001 F
A5A3S1	3100-3225	4	1	SWITCH THUMBWHEEL 7 HCD; DCD 0-9	20400	3100-3225
A5A3U1	1020-1215	2	7	IC GATE TTL LS EXCL-OR QUAD 2-IMP	01295	01295
A5A3U2	1020-1215	2		IC GATE TTL LS EXCL-OR QUAD 2-IMP	01295	01295
A5A3U3	1020-1215	2		IC GATE TTL LS EXCL-OR QUAD 2-IMP	01295	01295
A5A3U4	1020-1215	2		IC GATE TTL LS EXCL-OR QUAD 2-IMP	01295	01295
A5A3U5	1020-1215	2		IC GATE TTL LS EXCL-OR QUAD 2-IMP	01295	01295
A5A3U6	1020-1215	2		IC GATE TTL LS EXCL-OR QUAD 2-IMP	01295	01295
A5A3U7	1020-1215	2		IC GATE TTL LS EXCL-OR QUAD 2-IMP	01295	01295
A5A3U8	1020-1431	4	7	IC CNTR TTL LS DECD SYNCHRO	01295	01295
A5A3U9	1020-1431	4		IC CNTR TTL LS DECD SYNCHRO	01295	01295
A5A3U10	1020-1431	4		IC CNTR TTL LS DECD SYNCHRO	01295	01295
A5A3U11	1020-1431	4		IC CNTR TTL LS DECD SYNCHRO	01295	01295
A5A3U12	1020-1431	4		IC CNTR TTL LS DECD SYNCHRO	01295	01295
A5A3U13	1020-1431	4		IC CNTR TTL LS DECD SYNCHRO	01295	01295
A5A3U14	1020-1431	4		IC CNTR TTL LS DECD SYNCHRO	01295	01295
A5A3U15	1020-0494	9	1	IC GATE TTL 6 EXCL-OR QUAD 2-IMP	01295	01295
A5A3U16	1020-0493	0	2	IC FF TTL 6 D-TYPE POS-EDGE-TRIC	01295	01295
A5A3U17	1020-1112	0	1	IC FF TTL 6 D-TYPE POS-EDGE-TRIC	01295	01295
A5A3U18	1020-0493	0		IC FF TTL 6 D-TYPE POS-EDGE-TRIC	01295	01295
A5A3U19	1020-1177	9	1	IC GATE TTL 6 NAND QUAD 2-IMP	01295	01295
A5A3U20	1020-1437	0	1	IC MV TTL 6 MONOSTBL DUAL	01295	01295
A5A3U21	1020-1450	7	1	IC 9FR TTL 6 NAND QUAD 2-IMP	01295	01295

See introduction to this section for ordering information  
 \*Indicates factory selected value

TABLE 6-4. A5A3 (05061-6167) PRESET CLOCK ASSY OPTION 001 REPLACEABLE PARTS

Reference Designation	HP Part Number	Description
A5A3	05061-6167	ASSY, CKT BD: FREQ. DIVIDER/AMP. (SERIES 2144)
A5A3C1	0140-0198	CAPACITOR-FXD 200 PF 5% 300VDC MICA
A5A3C2	0140-0191	CAPACITOR-FXD 56 PF 1% 300VDC MICA
A5A3C3	0140-0198	CAPACITOR-FXD 200 PF 5% 300VDC MICA
A5A3CR1-CR16	1910-0016	DIODE-GE 60 WIV
A5A3CR17	1901-0040	DIODE-SI 30 WIV SWITCHING
A5A3CR18	1901-0040	DIODE-SI 30 WIV SWITCHING
A5A3CR19-CR26	1910-0016	DIODE-GE 60 WIV
A5A3IC1	1820-0094	IC-DTL QUAD 2-INPUT NAND-GATE
A5A3IC2	1820-0094	IC-DTL QUAD 2-INPUT NAND-GATE
A5A3IC3	1820-0329	IC-TTL DECADE COUNTER
A5A3IC4	1820-0329	IC-TTL DECADE COUNTER
A5A3IC5	1820-0329	IC-TTL DECADE COUNTER
A5A3IC6	1820-0329	IC-TTL DECADE COUNTER
A5A3IC7	1820-0329	IC-TTL DECADE COUNTER
A5A3IC8	1820-0329	IC-TTL DECADE COUNTER
A5A3IC9	1820-0328	IC-TTL QUAD 2-INPUT NOR-GATE
A5A3IC10	1820-0328	IC-TTL QUAD 2-INPUT NOR-GATE
A5A3IC11	-----	NOT ASSIGNED
A5A3IC12	1820-0086	IC-DTL DUAL 4-INPUT (EXPANDABLE)
A5A3IC13	1820-0580	IC-DIGITAL
A5A3IC14	-----	NOT ASSIGNED
A5A3IC15	1820-0580	IC-DIGITAL
A5A3IC16	1820-0580	IC-DIGITAL
A5A3Q1	1854-0009	TRANSISTOR-SI NPN TYPE 2N709
A5A3Q2	1854-0003	TRANSISTOR-SI NPN TYPE 2N709
A5A3Q3	1854-0009	TRANSISTOR-SI NPN TYPE 2N709
A5A3Q4	1854-0009	TRANSISTOR-SI NPN TYPE 2N709
A5A3Q5	1854-0009	TRANSISTOR-SI NPN TYPE 2N709
A5A3Q6	1854-0009	TRANSISTOR-SI NPN TYPE 2N709
A5A3Q7	1854-0009	TRANSISTOR-SI NPN TYPE 2N709
A5A3Q8	1854-0018	TRANSISTOR-SI NPN PD=300MW
A5A3Q9	1854-0009	TRANSISTOR-SI NPN TYPE 2N709
A5A3Q10	1854-0018	TRANSISTOR-SI NPN PD=300MW
A5A3Q11	1854-0009	TRANSISTOR-SI NPN TYPE 2N709
A5A3Q12	1854-0018	TRANSISTOR-SI NPN PD=300MW
A5A3Q13	1854-0009	TRANSISTOR-SI NPN TYPE 2N709
A5A3Q14	1854-0003	TRANSISTOR-SI NPN PD=800MW
A5A3Q15	1854-0009	TRANSISTOR-SI NPN TYPE 2N709
A5A3R1	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R2	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R3	0757-0917	RESISTOR-FXD 510 2% .125W F TC=+-100
A5A3R4	0757-0948	RESISTOR-FXD 10K 2% .125W F TC=0+-100
A5A3R5	0757-0935	RESISTOR-FXD 3000 2% .125W F TC=0+-100

Table 5. A5A3 (05061-6167) PRESET CLOCK ASSY OP.001 REPLACEABLE PARTS (Cont'd)

Reference Designation	HP Part Number	Description
A5A3R6	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R7	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R8	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R9	0757-0924	RESISTOR-FXD 1000 2% .125W F TC=0+-100
A5A3R10	0757-0924	RESISTOR-FXD 1000 2% .125W F TC=0+-100
A5A3R11	0757-0935	RESISTOR-FXD 3000 2% .125W F TC=0+-100
A5A3R12	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R13	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R14	0757-0931	RESISTOR-FDX 2000 2% .125W F TC=0+-100
A5A3R15	0757-0948	RESISTOR-FXD 10K 2% .125W F TC=0+-100
A5A3R16	0757-0924	RESISTOR-FXD 1000 2% .125W F TC=0+-100
A5A3R17	0757-0935	RESISTOR-FXD 3000 2% .125W F TC=0+-100
A5A3R18	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R19	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R20	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R21	0757-0924	RESISTOR-FXD 1000 2% .125W F TC=0+-100
A5A3R22	0757-0924	RESISTOR-FXD 1000 2% .125W F TC=0+-100
A5A3R23	0757-0935	RESISTOR-FXD 3000 2% .125W F TC=0+-100
A5A3R24	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R25	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R26	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R27	0757-0917	RESISTOR-FXD 510 2% .125W F TC=0+-100
A5A3R28	0757-0924	RESISTOR-FXD 1000 2% .125W F TC=0+-100
A5A3R29	0757-0935	RESISTOR-FXD 3000 2% .125W F TC=0+-100
A5A3R30	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R31	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R32	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R33	0757-0924	RESISTOR-FXD 1000 2% .125W F TC=0+-100
A5A3R34	0757-0924	RESISTOR-FXD 1000 2% .125W F TC=0+-100
A5A3R35	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R36	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R37	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R38	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R39	0757-0924	RESISTOR-FXD 1000 2% .125W F TC=0+-100
A5A3R40	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R41	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3R42	0757-0924	RESISTOR-FXD 1000 2% .125W F TC=0+-100
A5A3R43	0757-0917	RESISTOR-FXD 510 2% .125W F TC=0+-100
A5A3R44	0757-0924	RESISTOR-FXD 1000 2% .125W F TC=0+-100
A5A3R45	0757-0924	RESISTOR-FXD 1000 2% .125W F TC=0+-100
A5A3R46	0757-0948	RESISTOR-FXD 10K 2% .125W F TC=0+-100
A5A3R47	0757-0924	RESISTOR-FXD 1000 2% .125W F TC=0+-100
A5A3R48	0757-0938	RESISTOR-FXD 3900 2% .125W F TC=0+-100
A5A3R49	0757-0931	RESISTOR-FXD 2000 2% .125W F TC=0+-100
A5A3S1	3100-2061	SWITCH-THUMBWHEEL 6-SECTION 1-2-4-8
A5A3XS1	05061-2024	CONNECTOR-PC BOARD 6-TERMINAL DUAL-IN-LINE

MANUAL CHANGES MODEL 5065A (05065-9041)


SERIAL PREFIX OR  
SERIES NUMBER

CHANGES

Page 8-4, Figure 8-3. Front and Rear Panel and Top Internal Views:

2340A
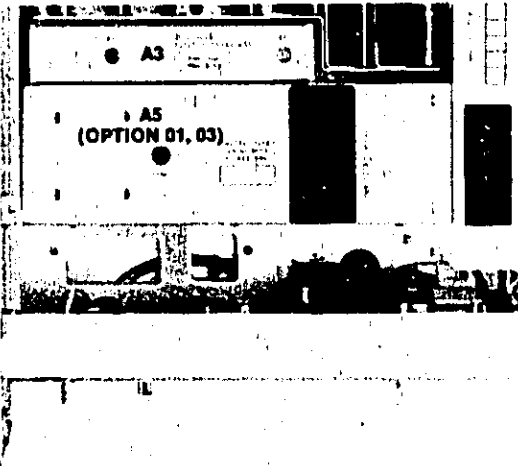
>Replace part of top view with attached partial view.



Page 8-5. WIRING DIAGRAM:

2120A

>Change connections for FINE OSC FREQ ADJ control (R3) to agree with connections and changes shown in A10 schematic diagram (SERIES, 2120).

>Delete A10 connection to 115V AC by twisted pair of wht-yel-gra and gra wires.

2632A

>Delete R5, 100K, from wiring diagram. It is located between pins 5 and 7 of A9 Integrator.

SERIAL PREFIX OR  
SERIES NUMBER


CHANGES

Page 8-7, Figure 8-6. Wiring Diagram (Sheet 2 of 3):

- 2112 >Change C5A, C5B to C8, C9 (.01uF), respectively.
- 2144 >Disconnect connections to A15 Power Supply terminals 12, 13, 14, and 15.  
>Add C10 (.05uF) between power transformer (T1) terminals 5 and 6.  
>Draw a full-wave diode bridge rectifier (CR4) in the diagram near terminals 5 and 6 of power transformer T1.  
>Connect white wires from T1(5,6) to CR4 ac input terminals.  
>Connect CR4 negative terminal (-) to chassis ground.  
>Connect CR4 positive terminal (+) to the junction of C7 and L1 with a wht-brn-yel wire. CR4 provides the +24V to 32V rectified dc output formerly obtained from A15.

Page 8-9, Figure 8-7. Wiring Diagram (Sheet 3 of 3):

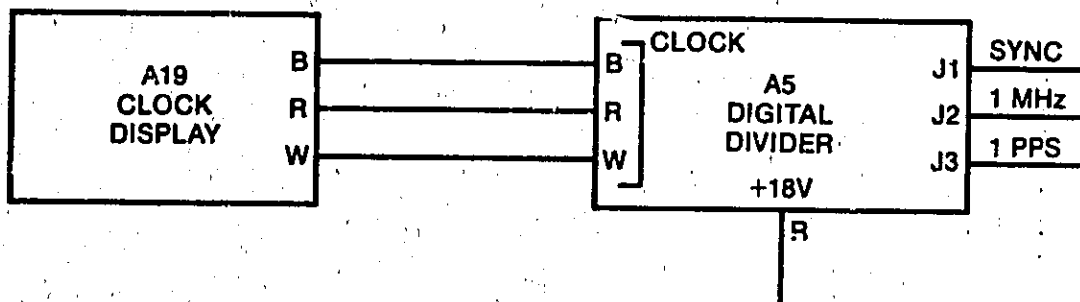- All Serials >Delete W25 reference designation on cable between A5J1 and A16.  
>Add W25 reference designation on cable between A5J1 and A4(2).  
>Change W26 reference designation on cable between A5J2 and A16J1 to W27.  
>Change W27 reference designation on cable between A5J3 and A16J2 to W26.
- 2112 >Change C5A, C5B to C8, C9 (.01uF), respectively.
- 2340 >Replace dashed line box that has A5, A16 and A19, with the following figure:



SERIAL PREFIX OR  
SERIES NUMBER

CHANGES


Page 8-10. Circuit Diagrams, Theory, and Maintenance:

- 2052                      Synthesizer Assembly Timing Diagram:  
 >Change IC4(10) to IC4(6).  
 >Change IC4(7) to IC4(1).  
 >Change IC4(7) to IC4(1), eighth line, under Synthesizer  
 Timing Diagram.

Page 8-11, Figure 8-8. Synthesizer Assembly A1 Block Diagram Digital Section:


- All Serials              >Change reference designator J3 to J2.

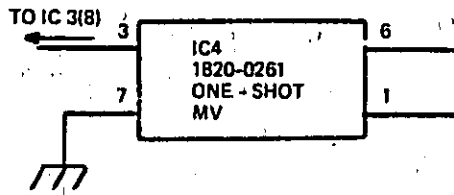- 2052                      >Change IC4 pin numbers and part number as shown in the  
 following figure.



Page 8-17, Figure 8-9. Synthesizer Assembly A1 Digital Section:

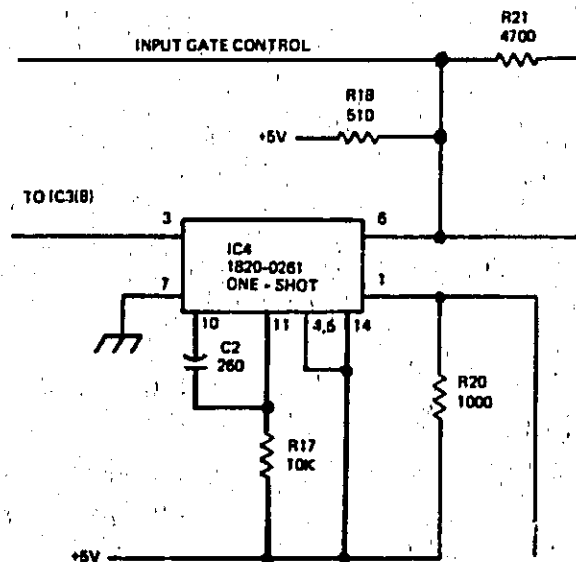- 2052                      >Change A1 Synthesizer Assembly to 05065-6096 (SERIES 2052).  
 >Change A1A1 Synthesizer Assy to 05065-6095 (SERIES 2052).  
 >Change IC4 pin numbers and part number as shown in the  
 following figure:





MANUAL CHANGES MODEL 5065A (05065-9041)

SERIAL PREFIX OR  
SERIES NUMBER

CHANGES

**Page 8-19, Figure 8-9. Synthesizer Assembly A1 Phase-Locked Oscillator Section (Sheet 2 of 2):**

2052A >Change A1 Synthesizer Assembly to 05065-6096 (SERIES 2052).  
>Change A1A1 Synthesizer Assy to 05065-6095 (SERIES 2052).

**Page 8-21, Figure 8-10. A2 Battery Charge Assembly (Option 002 and 003):**

All Serials >Replace A2 component locator with new A2 component locator supplied in this manual change.

**Page 8-25, Figure 8-11. A3 Multiplier Assembly Schematic Diagram:**

All Serials >Change A3A1R34\* from 1K to 13K.

2232A >Change A3 (05065-6078) SERIES to 2232.  
>Add a ferrite bead on Q7 emitter of A3A1 60 MHz Frequency board.

2320A >Change A3 (05065-6078) SERIES to 2320.  
>Add R42 (2.7 ohm) between J4 and C59-L25.

>Change A3A1 (05065-6009) SERIES to 2320.  
>Change the value of C16 from 910PF to 280PF.

2342A01339 >Change A3A1L14 value from 2.2MH to 270uH.

**Pages 8-28/8-30. DIGITAL DIVIDER A5 THEORY:**

2340A >Replace A5 Digital Divider Theory pages 8-28/8-30b supplied in this manual change.

**Page 8-33, Figure 8-13. A5 Digital Divider Assembly (Option 001)(Sheet 1):**

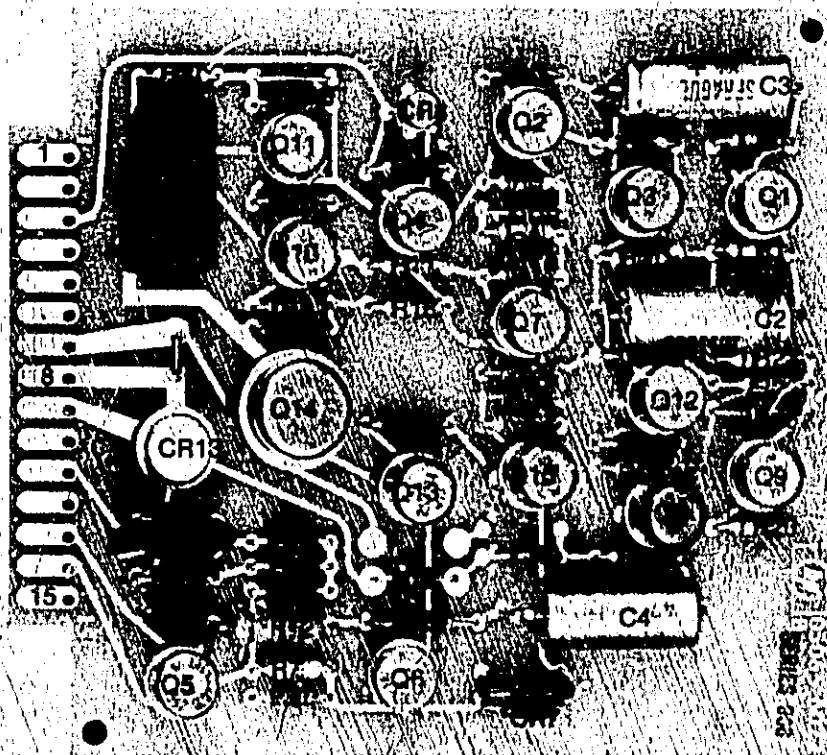
All Serials >Change label at A5A1J1, left side of diagram to, "1MHz FROM FREQ DIV A4(2)".  
>Change label at A5A1J2 to "CLOCK DRIVE TO A16".  
>Change pin numbers 4 and 6 for A5A5XA3 and A5A4XA4; pin 6 should be "4" and pin 4 should be "6" on both sockets.

REFERENCE DESIGNATIONS table:

>Change S1-3 to S2, under A5.  
>Change C1,2 and R1-3 to C1 and R1-4 (respectively) under A5A4.

2144A >Change A5 SERIES to 2144.  
>Change A5A3 from 05061-6013 to 05061-6167, SERIES 2144.

2208A >Change A5 SERIES to 2208.



Part of Figure 8-10.  
A2 Battery Charge Assembly (Option 002 and 003)  
Component Locator

## DIGITAL DIVIDER A5 THEORY - SERIES 2340

### GENERAL DESCRIPTION (Option 001)

The A5 Digital Divider provides a one pulse-per-second signal for a front and rear panel output signal, and to drive the A16 clock. The 1 pps output can be synchronized to an external 1 pps signal with selectable time delay difference from the external synchronizing 1 pps.

A5 has four subassemblies. A5A1 Multiplier and Amplifier. A5A2 Voltage Regulator. A5A3 10 MHz to 1 pulse-per-second divider and digital pulse delay. A5A4 interconnect. The four subassemblies are described in following paragraphs.

### A5A1 Multiplier-Amplifier (05065-6091)

The A5A1 Multiplier and Amplifier has three separate parts: a 1-to-10 MHz multiplier, an amplifier, and a drive for the A19 clock.

The multiplier section provides a 10 MHz output signal from the 1 MHz input signal supplied by A6. The 1 MHz signal which comes in on the J4 RF connector is coupled through C1 to the base of Q1 which is part of the differential amplifier Q1-Q2 which acts as a switch. The input signal is switched through L2, to generate a 1 MHz harmonics; and CR1 prevents ringing in the signal which could damage Q2 and Q3. The output of Q2 is connected to Q3 which is a tuned amplifier at the resonant frequency of L1 and C4. The output of Q3 is applied to another amplifier, Q4-Q5, which is tuned to 10 MHz by L3. At this point a good 10 MHz sine wave has been generated. The output of Q5 is coupled through C10 to the input of the sine wave-to-TTL converter, Q6-Q7. When the signal is above the dc bias on Q6, it switches Q6 off, which switches Q7 on. This generates a TTL high pulse at A5A1(12) which follows the 10 MHz sine wave from Q5. Diode CR2 produces the dc bias voltage for Q1, Q2, Q4, Q5, Q6, & Q7.

The amplifier section of A5A1 has an amplifier which converts the 1 pps signal from A5A3 to TTL for the front panel 1 PPS output connectors. Transistors Q8, Q9, and Q11 comprise the amplifier.

The third section of A5A1 has a single transistor amplifier, Q14, which drives the A19 clock display with the 1 pps signal from A5A3. U1 is a regulator that transforms an input of 18 volts to +12 volt power for the A16 clock.

This board is a connection point for signals from the HP 5065A to be available for external use. Connector J4 has the 1 MHz input sine wave, about one volt rms, which is applied to a 10 MHz multiplier. The 10 MHz signal at A5A1(12) is connected through A5A4 to A5A3(12). The SYNCH signal from J12 on the HP 5065A rear panel is connected through A5A1 to A5A4 and then to A5A3(1) the 1 PPS signal from A5A3 is synchronized with the SYNCH signal from the HP 5065A rear panel. The other RF connector, J1, is a 1 PPS output. The 1 pps from A5A1J1 is connected to J13 on the HP 5065A front panel. There are four terminals on A5A1. Terminal 4 is the +18 volt input terminal which has a red wire connected to it. Terminals

DIGITAL DIVIDER THEORY A5 - SERIES 2340

**A5A1 Multiplier-Amplifier (05065-6091) (Cont'd)**

1, 2, and 3 are outputs to the A19 Clock Display. Pin 1 is common (ground). Pin 2 is the +12 volt power. Pin 3 is the 1 pps signal to drive the front panel clock display.

**A5A2 5-Volt Regulator (05061-6155)**

The A5A2 board receives the +18 volt power from A5A1 and regulates it to +5 volts for A5A1 and A5A3. There are three basic circuits in A5A2:

- a. voltage reference
- b. switching regulator
- c. short-circuit current protection

U3 is a voltage reference which supplies 2.5-volt reference to the non-inverting input, U2(2), of the switching regulator. Feedback from the regulator output to U2(1) through voltage divider R12/R13 drives U2(1) to the same voltage as U2(2), 2.5 volts. So the output must be 5 volts because R12 and R13 are almost equal.

The U2 regulator oscillates at about 25 kHz. This signal, which is set by R7 and C4 switches Q2-Q1 on and off. When Q1 is on, current is forced through L1 because CR1 is reverse-biased; when Q1 switches off, the polarity of L1 reverses to keep current from flowing from ground, through CR1 and L1 to the load. The output voltage is regulated by U2 which adjusts the time that Q1 is switched on for every cycle. In normal operation, the duty cycle is about 35 percent. A soft start is provided by C6, R11 and CR3; and C5 and R10 provide compensation for the internal U2 operational amplifiers.

Short circuit protection is provided by U1. In normal operation the voltage at U1(2) is greater than the voltage at U1(3), (about 5.08 volts and 4.95 volts). So the output of U1 is low. When the load current through R1 is more than 950 milliamperes, the voltage at U1(2) is less than the voltage at U1(3). So the output of U1 goes up to about 3 volts and switches U2 off through R14. U1 will keep U2 switched off while the short circuit condition continues.

**A5A3 10 MHz to 1 PPS Divider and Delay (05061-6153)**

The A5A3 board generates a one-pulse-per second signal which provides the front panel 1 pps output. The 1 pps is synchronized to an external signal from the rear panel SYNCHINPUT connector. The 10 MHz from A5A1 is applied to all of the decade counters, U8 through U14. ENABLE P AND ENABLE T (Pins 7 and 10) of U11 are always enabled (always held high). So every time the clock pulse occurs, that counter changes state. The least significant bit in this counter chain is pin 14 of U11. If this point is monitored with an oscilloscope, a 10 MHz signal is displayed. U11 pin 13 has a 5 MHz signal, and pin 11 has a 1 MHz signal. Pin 15, the ripple carry output of U11, also has 1 MHz. The U11(15) output is not a square wave. It is an approxi-

**A5A3 10 MHz to 1 PPS Divider and Delay (05065-6153) - SERIES 2340 (Cont'd)**

ately 100 nanosecond pulse which occurs every microsecond. At the time that U1(15) is high, for that one clock period, it will enable U14(10 & 7); which will clock U14 one time during that period. Then the ripple carry output of U11 will go low again which will disable U14. Later clock pulses will not change it (U14) until the ripple carry output of U11 once again goes high after ten more cycles. This occurs all the way up the chain to U8 which has the most significant bits, and U8(11) is actually pulsing at a 1 Hz rate. The signal from U8(11) is used to generate the non-delayed 1 pps. This signal is not used in A5; it is only used for factory testing.

**TIME DELAY Switches and Dividers Operation (A5A3)**

The A5A3 Digital Divider has seven thumbwheel switches to allow the delay to be set in 100 nanosecond steps. When all thumbwheels are set to zero, the delay between the reference pulse and the delayed pulse is 100 nanoseconds plus or minus 100 nanoseconds. An example of how this circuit works is demonstrated by looking at switch S1 which is compared to the outputs of U11. If S1(10) were low and S1(11) were high, and pin 7 were low, and pin 2 were high; then when U11(14) went high while S1(10) was low, then those two have different states and the output of U7(3) would go high (U7 is an exclusive or gate). In the same way if all of the outputs of U8-U14 were opposite to what they are being compared to then all outputs of the exclusive or gates would go high simultaneously. That is if U11(14) was in the opposite state or complementary state of S1(10) and if U11(13) were in the complementary state of S1(11) and that condition was the same all the way through this set of exclusive OR gates (U1-U7), there would not be any open collector outputs that are pulled low and so a pulse would be sent to U18B. This will happen once every second when the output state of U8-U14 is exactly the opposite in the absolute sense of the switch settings. This will generate the delay that the operator desires.

**A5A4 Interconnect (05061-6156)**

The A5A4 interconnect board provides electrical connections between the A5A1, A5A2, and A5A3 subassemblies of the A5 Digital Divider. There are no active circuits on A5A4.

## A5 DIGITAL DIVIDER MAINTENANCE (OPTION 001) - SERIES 2340

The A5 digital divider provides one pulse-per-second output signals at the HP 5065A front panel, and to the front panel digital clock. A one MHz signal from the A4 frequency divider is the input signal to A5.

### A5 Preparation for Troubleshooting and Adjustments

The A5 Digital Divider can be removed from the chassis for servicing. Extender Board (HP part number 05061-6073), supplied with HP 5065A, can make circuit parts accessible for testing. Use the following procedure to remove A5 from the chassis for troubleshooting and adjustment:

#### NOTE

A5 can be removed from the chassis with the power still applied to the HP 5065A. Be careful of the high-voltage terminals inside the HP 5065A cabinet. Extender board (HP part number 05061-6073, in accessory kit) makes A5 components accessible.

- a. Remove the cabinet top and bottom covers.
- b. Disconnect the three coaxial connectors (J1, J2, & J3) from the A5 module at the bottom of the chassis. Disconnect the four single wires (B, R, W, and R) from the A5 module at the bottom of the chassis.
- c. Remove the screws that hold the A5 module in the chassis, and carefully remove the A5 from the chassis.
- d. Remove the screws that hold the A5 module shield cover, and remove the cover.
- e. Reconnect cables and wires to supply power signal connections to A5.
- f. Keep the A5 assembly in a position so no electrical connections are short circuited.
- g. After repairs and adjustments are complete, replace the A5 Divider in its normal position in the HP 5065A chassis.

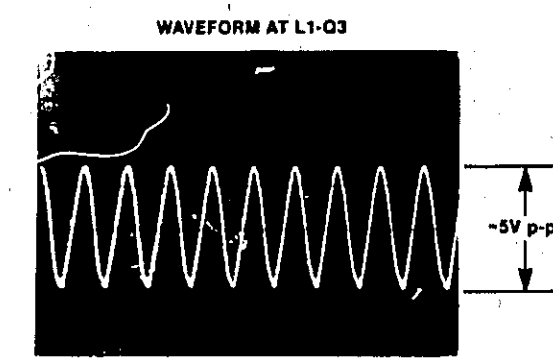
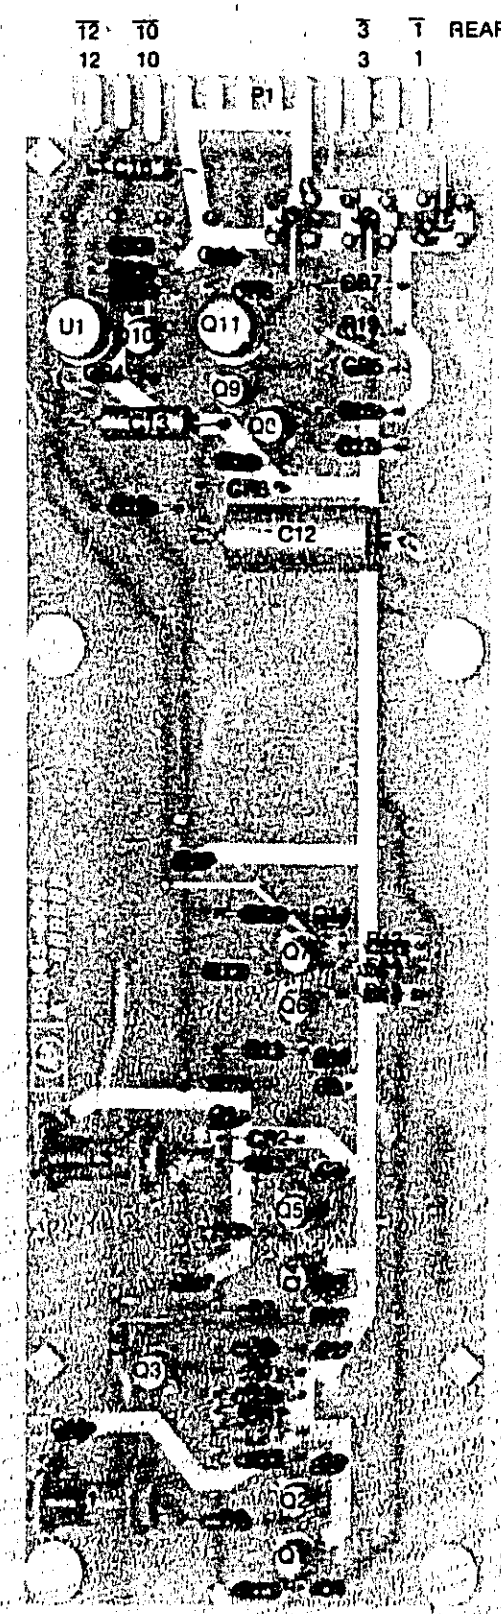
### A5 Adjustments (Tuning)

Use the following procedure to check and adjust the A5 Divider after repair or replacement with a new unit:


- a. With the A5 Divider out of the chassis and set up for maintenance, connect the vertical input of an oscilloscope to the junction of A5A1L1 and A5A1Q3. The oscilloscope display should be a 10 MHz sine wave signal with ten cycles that decay from about 3 to 4 volts peak-to-peak to some small amplitude, and then the decaying waveform repeats continuously.

**A5 Adjustments (Tuning) (Cont'd):**


- b. Adjust L1 with a nonmetallic tool for maximum signal on the oscilloscope.
- c. Connect the oscilloscope to the junction of A5A1L3 and A5A1Q5. The oscilloscope display should be a 10 MHz sine wave signal at about 5 to 6 volts peak-to-peak.
- d. Adjust L3 with a nonmetallic tool for a maximum signal on the oscilloscope.
- e. The preceding two adjustments are the only adjustments in A5.



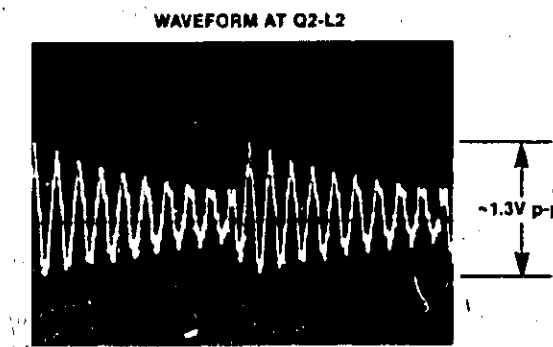OSCILLOSCOPE SETTINGS  
 VERTICAL SCALE 2V/DIV  
 TIME/DIV 0.1 μSEC  
 DC COUPLED (WAVEFORM RIDES ON ZERO VOLTS)




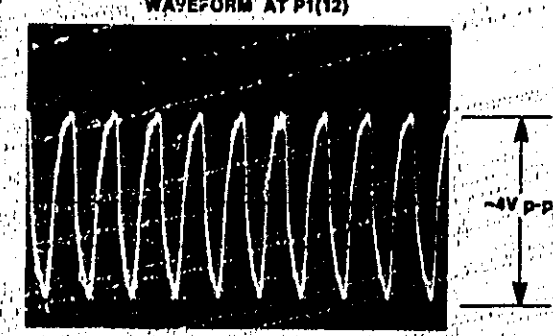OSCILLOSCOPE SETTINGS  
 VERTICAL SCALE .5V/DIV  
 TIME/DIV 0.2 μSEC  
 AC COUPLED (WAVEFORM RIDES ON +12V)



OSCILLOSCOPE SETTINGS  
 VERTICAL SCALE 1.0V/DIV  
 TIME/DIV 0.1 μSEC  
 AC COUPLED

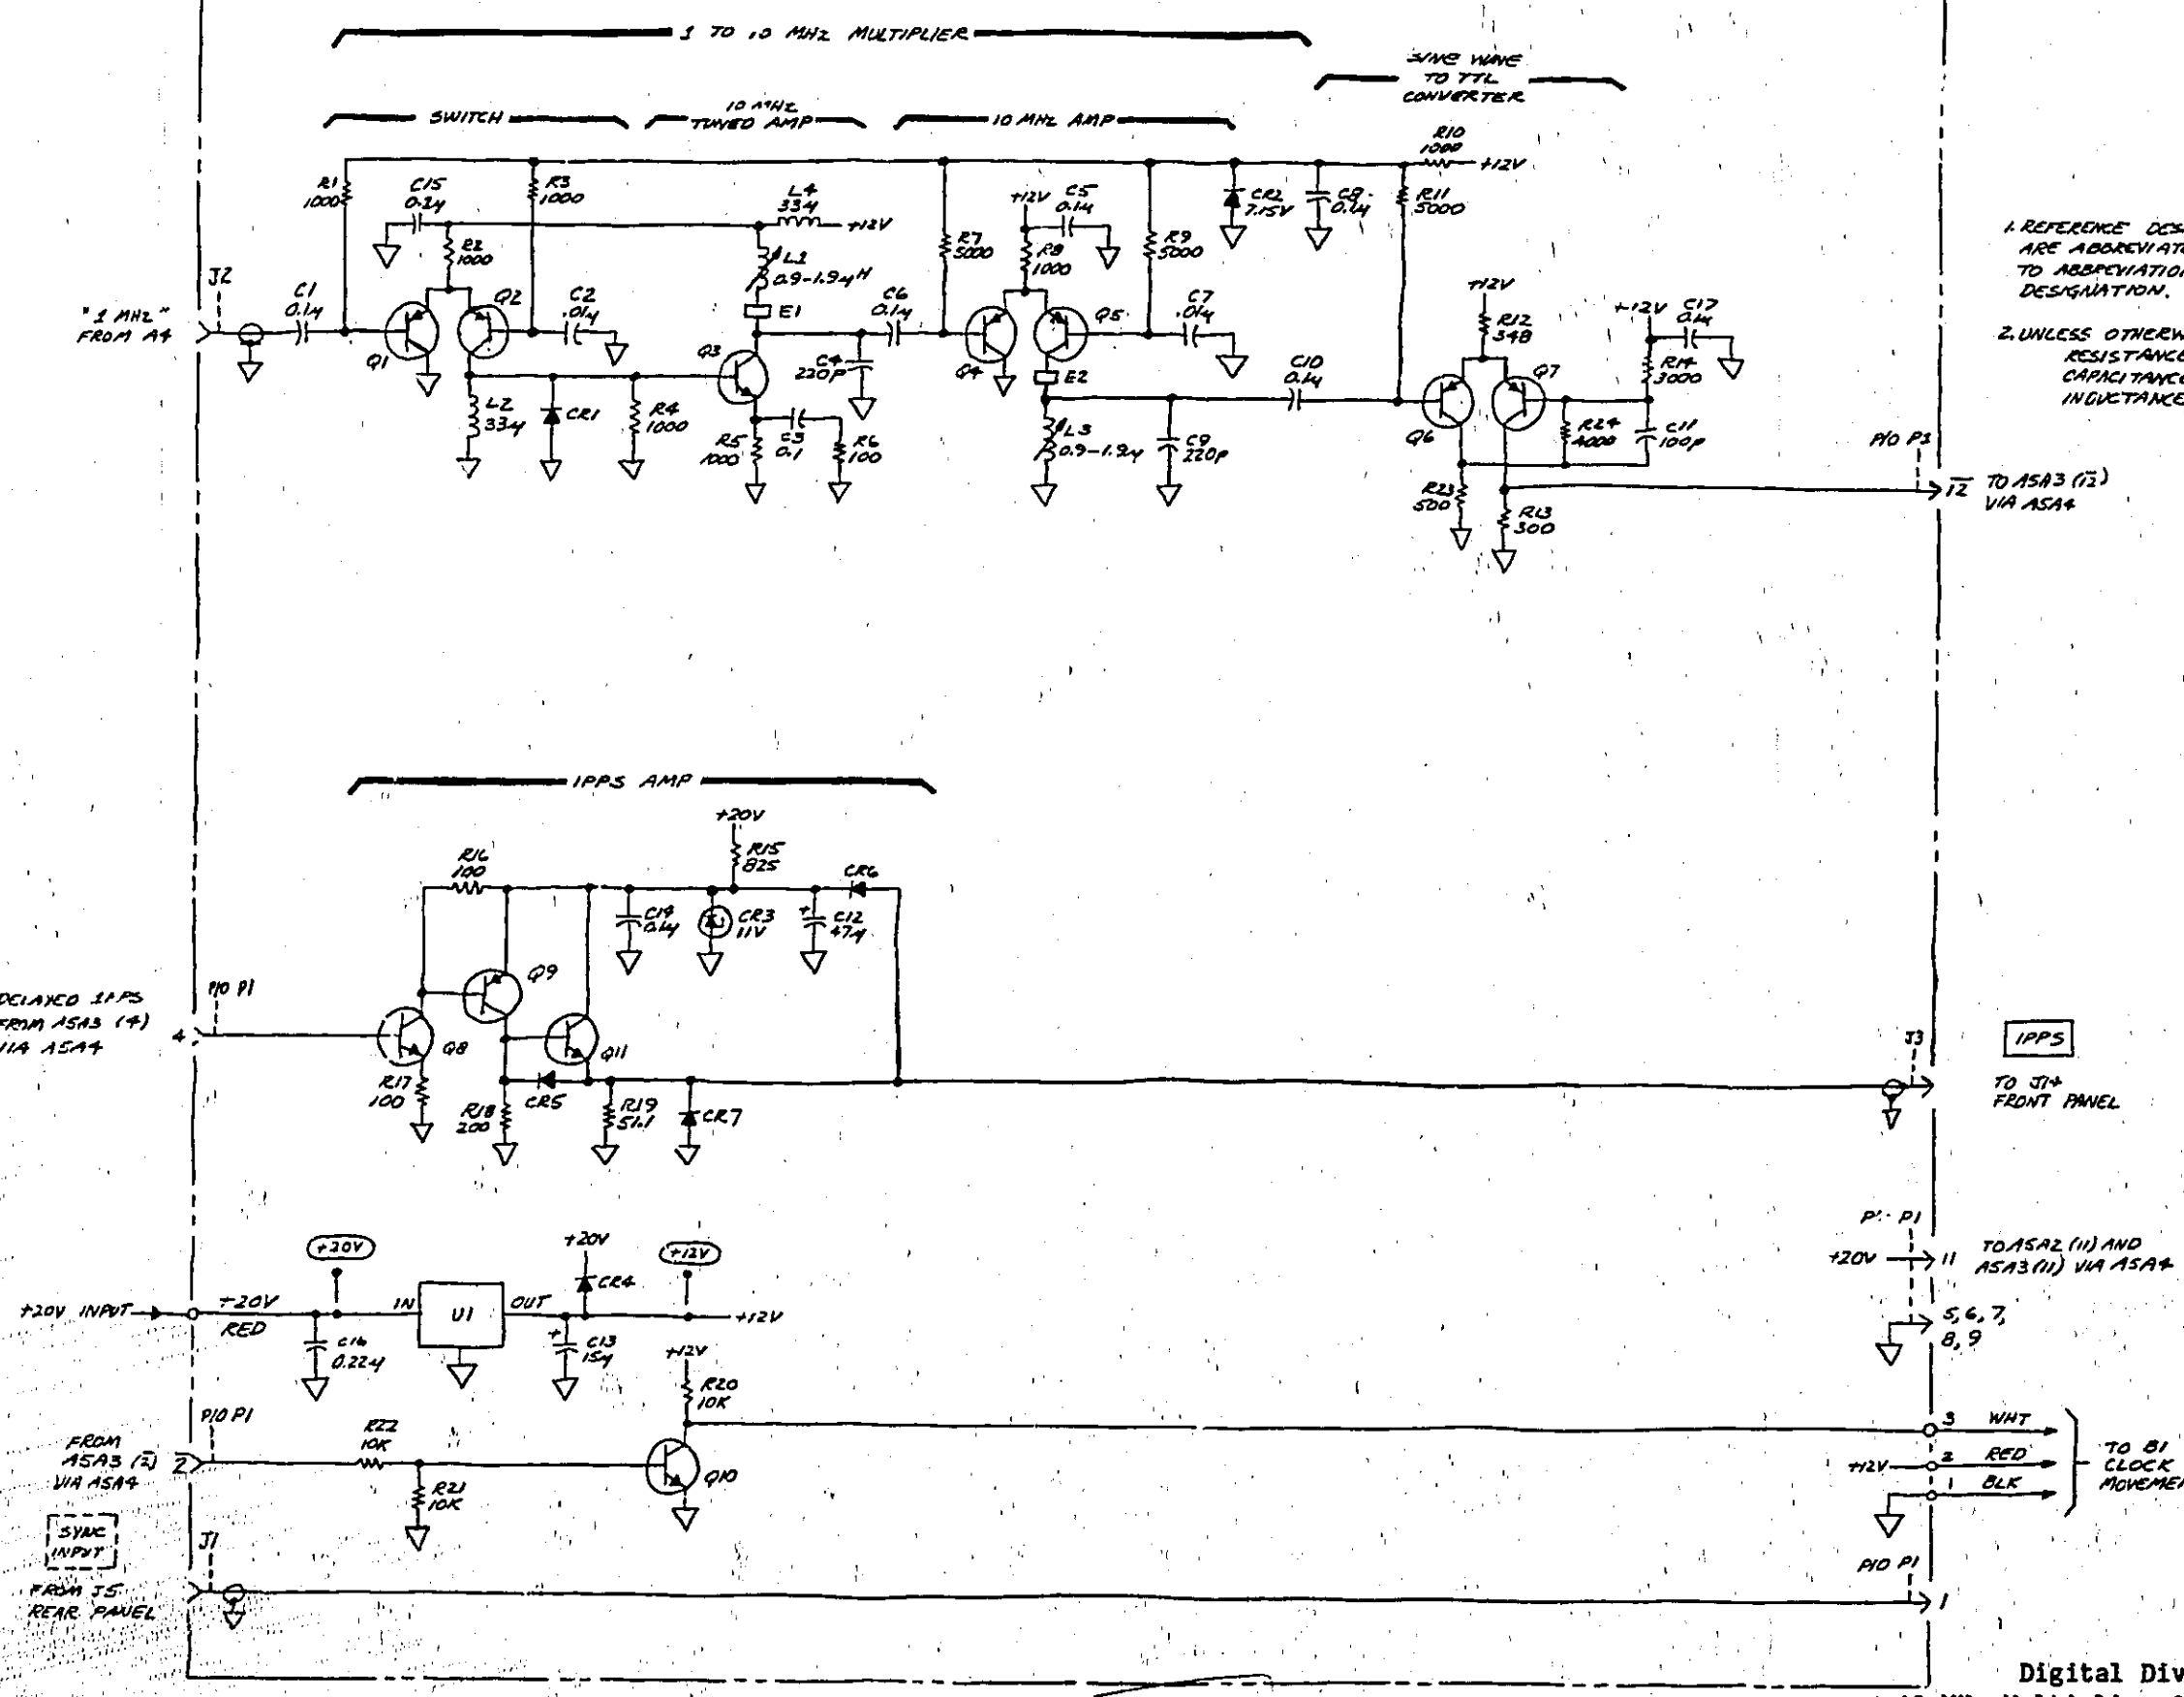ASA1 10MHZ MULTIPLIER 1PPS OUTPUT AMPLIFIER (05065-6091)



- NOTES
1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED; ADD ASSEMBLY NUMBER TO ABBREVIATION FOR A COMPLETE REFERENCE DESIGNATION.
  2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS, CAPACITANCE IN PICO FARADS, INDUCTANCE IN MICROHENRIES

REFERENCE DESIGNATIONS
C1-17
CR1-7
E1, 2
J1-4
L1-4
P1
Q1-11
R1-24
U1

Figure 8-13a  
 Digital Divider Assembly A5A1  
 10 MHz Multiplier & 1 PPS Output Amps  
 (05065-6091 SERIES 2340)  
 Page 8-33a



MANUAL CHANGES MODEL 5065A (05065-9041)

SERIAL PREFIX OR  
SERIES NUMBER

CHANGES

Page 8-35, Figure 8-14. A5A2 Master Clock Board (Option 001) (Sheet 2 of 3):

- |             |  |
|-------------|--|
| All Serials | >Change Reference Designator for resistor R48 to R42.<br>>Change Reference Designator for resistor R42 to R43.<br>>Change A5A2IC1, IC2, and IC3 part numbers to 1820-0580. |
| 2144A       | >Change A5A2 SERIES to 2144.   |
| 2208A       | >Change A5A2 SERIES to 2208.   |
| 2308A       | >Replace A5A2 schematic, component locator, and tables with new page 8-35 (SERIES 2308) supplied in this manual change.  |

Page 8-37, Figure 8-15. A5A3 Preset Clock Board (Option 001) (Sheet 3 of 3):

- |             |   |
|-------------|---|
| All Serials | >Change label at A5A3 pin 6 by deleting "OUTPUT, TICK, BLOCKING & OSCILLATOR".<br>>Change "A5A1(3)" at label for A5A3 pin 7 to A5A1(8).<br>>Change A5A3IC13, IC15, and IC16 part numbers to 1820-0580.<br>>Change the value of A5A2 L1 and L3 to 51 microhenries. |
| 2144A       | >Replace A5A3 (05061-6013) schematic, component locator, and tables with new A5A3 (05061-6167, SERIES 2144) schematic, component locator and tables supplied in this manual change.   |
| 2208A       | >Change A5A3 SERIES to 2208.  |
| 2308A       | >Replace A5A3 schematic, component locator, and tables with new page 8-37 (SERIES 2308) supplied in this manual change.   |

Page 8-41, Figure 8-16. A6 1MHz Frequency Divider Assembly:

- |             |   |
|-------------|---|
| All Serials | Component Locator:<br>>Change reference designation of capacitor in lower left corner from Q6 to C26. |
|-------------|---|

Page 8-47, Figure 8-18. A8 Phase Detector Assembly:

- |             |   |
|-------------|---|
| All Serials | >Add ferrite beads E1, E2, E3 at bases of Q8, Q9, and Q10 respectively. |
|-------------|---|

MANUAL CHANGES MODEL 5065A (05065-9041)

SERIAL PREFIX OR  
SERIES NUMBER

CHANGES

Page 8-48. Circuit Diagrams, Theory, and Maintenance:

2632A >Replace all of Operational Amplifier A9 Theory with the Operational Amplifier A9 Theory in these manual changes.

A9 MAINTENANCE:

>Replace all of NORMAL OPERATION; replace paragraphs c., e., and g. of OPERATIONAL CHECK, and all of ASSEMBLY REPAIR AND REPLACEMENT paragraphs supplied in these manual changes.

Page 8-49, Figure 8-19. A9 Integrator Assy Component Locator/Schematic Diagram:

All Serials >Change reference designation of resistor marked C24 (top left center) to R24.  
>Add R5 for top left unmarked resistor shown below AMP1.  
>Add R2 for resistor directly to the right of R5.  
>Add R8 for resistor directly below R11.

2632A >Replace A9 (05065-6015) component locator/schematic diagram with A9 (05065-6108) component locator/schematic diagram supplied in these manual changes.

Page 8-50. Circuit Diagrams, Theory, and Maintenance:

2120A Quartz Crystal Oscillator Assembly, A10 Theory  
>Replace A10 theory with the new pages 8-50/8-52 supplied in this manual change.

Page 8-53, Figure 8-20. A10 Oscillator Assembly Block Diagram:

2120A >Replace A10 block diagram with A10 schematic diagram supplied in this manual change.

2142A >Change A10 (05065-6094) SERIES to 2134.  
>Change A10, A10A3 component locator SERIES to 2134.  
>Change A10A3R12, R13 to 464 ohms.

2432A >Change A10A2 part number from 05061-6165 to 05061-6174, SERIES 2432.  
>Change A10A2R11 value to 147K.  
>Replace A10A2 (05061-6165) component locator with new A10A2 (05061-6174) component locator, SERIES 2432, supplied in this manual change.

**MANUAL  
CHANGES**

**CON'T**



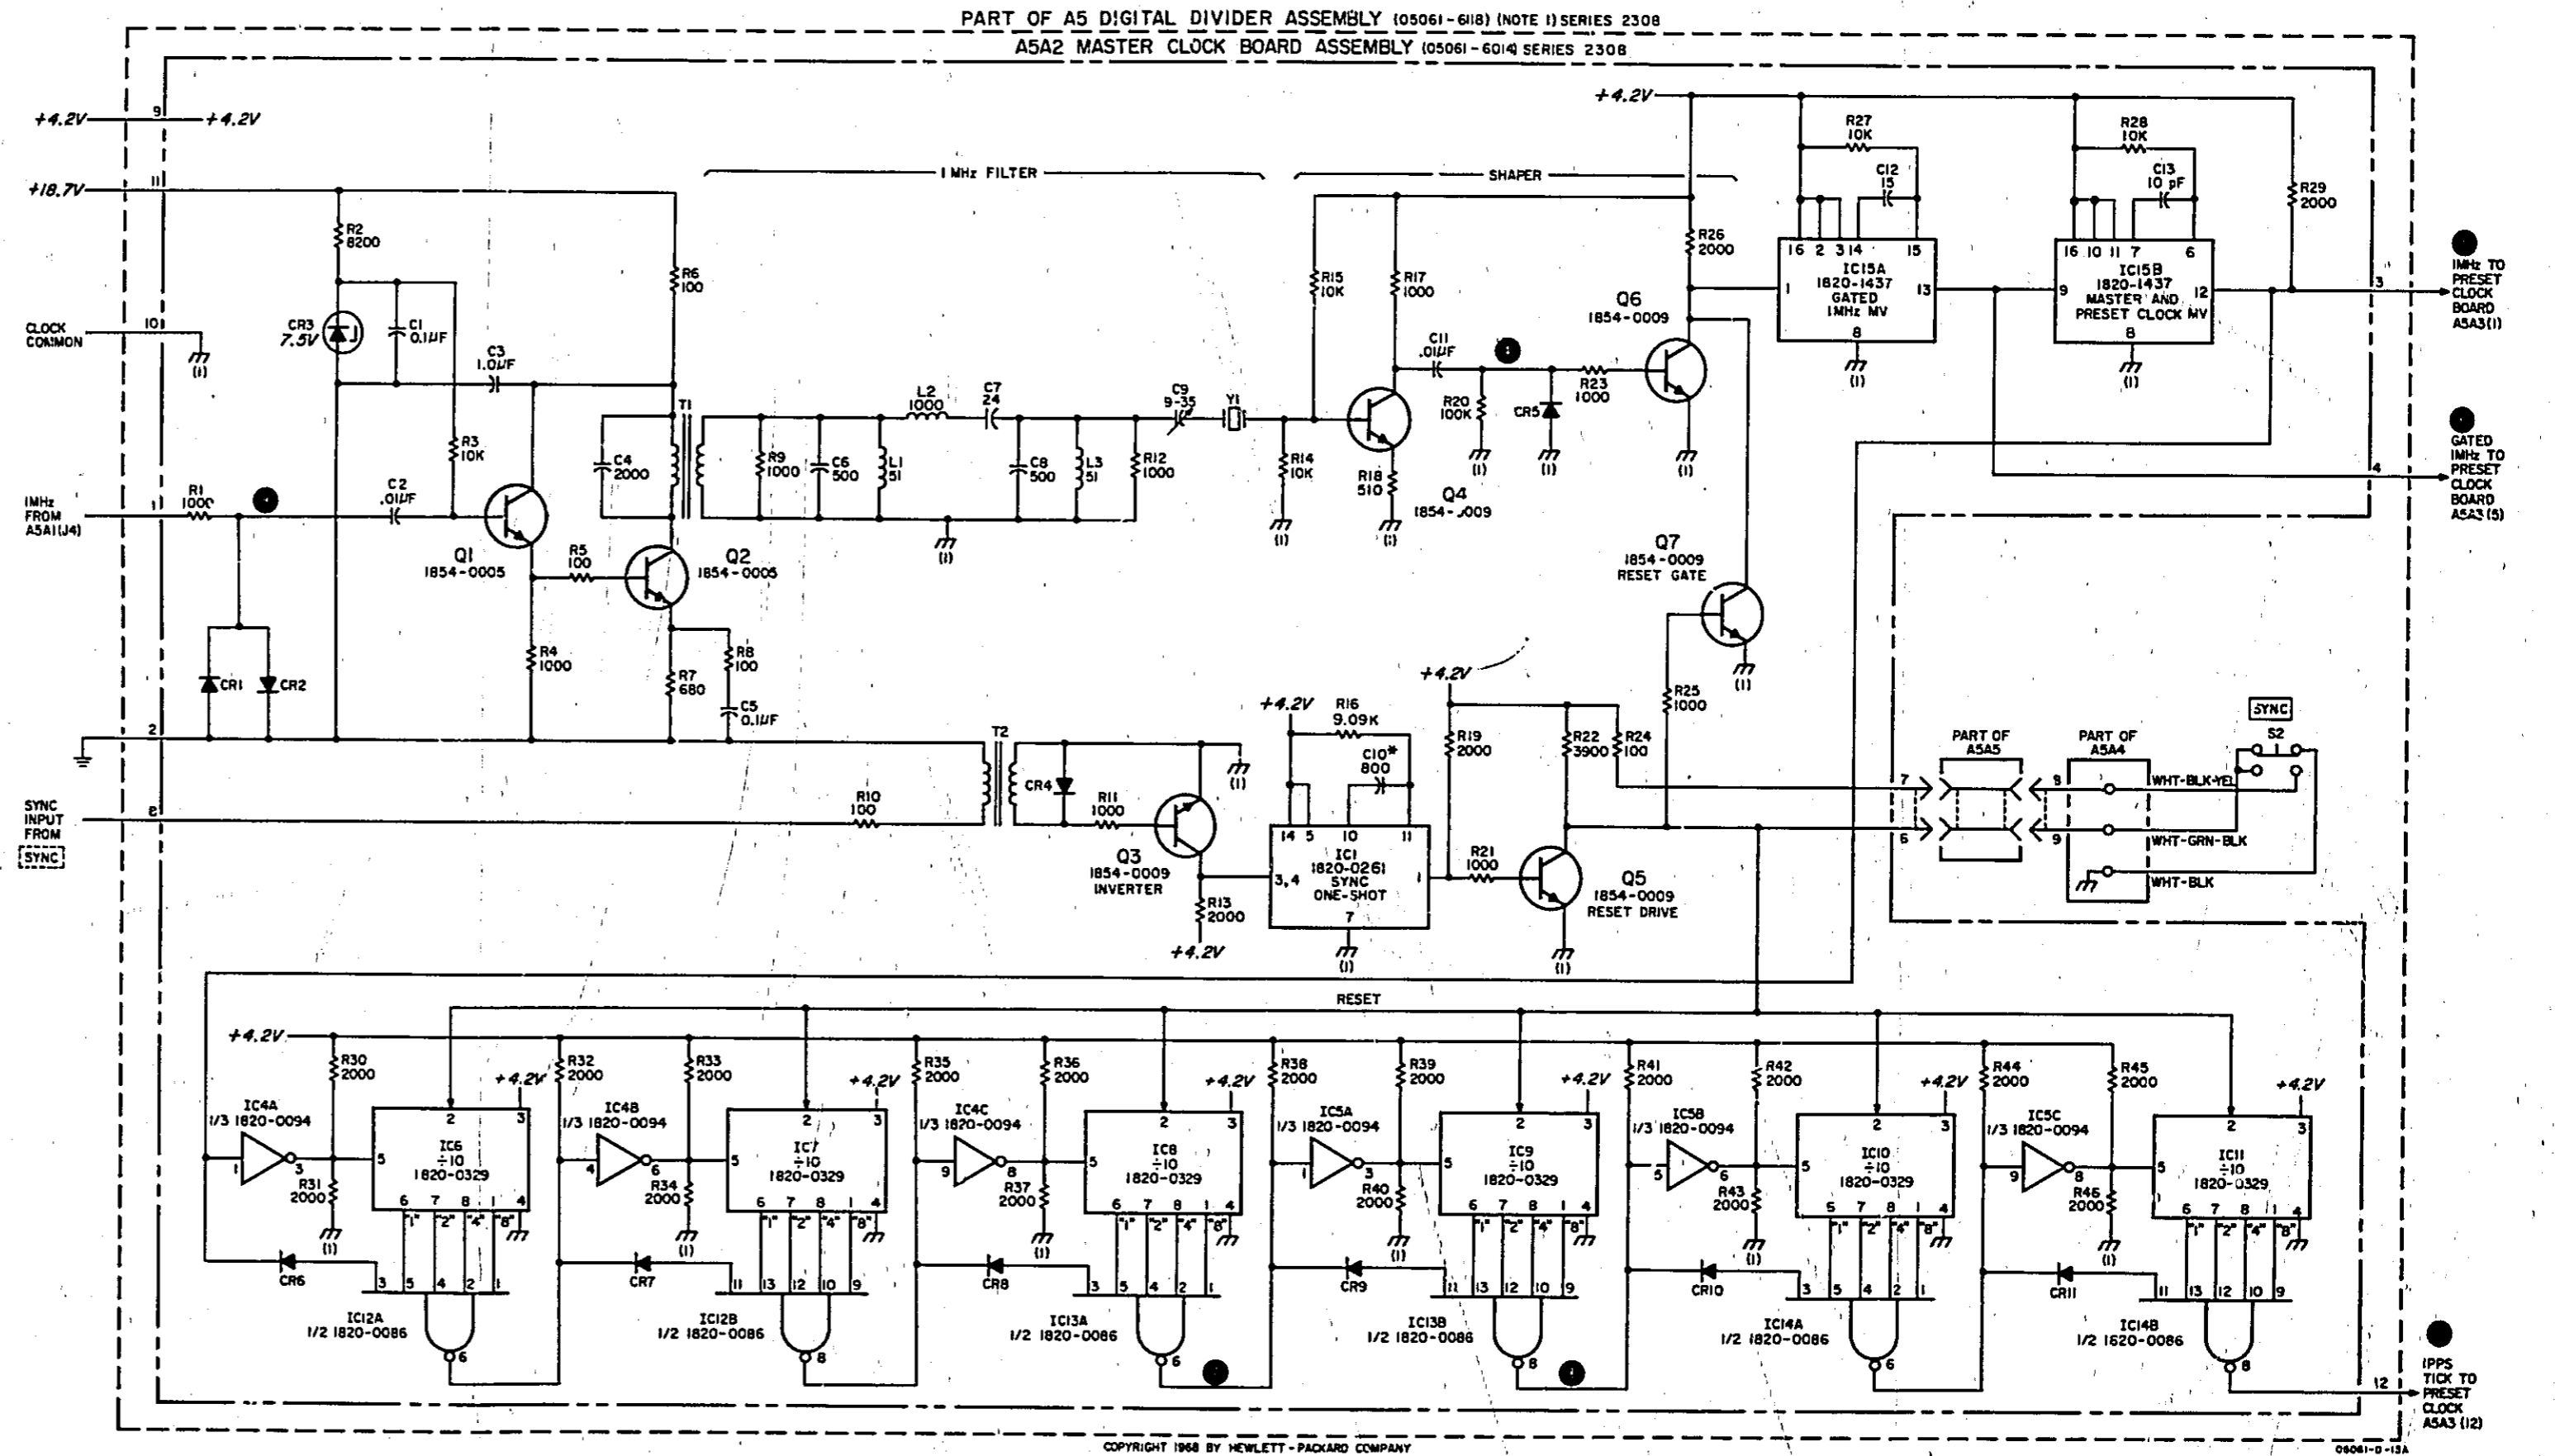
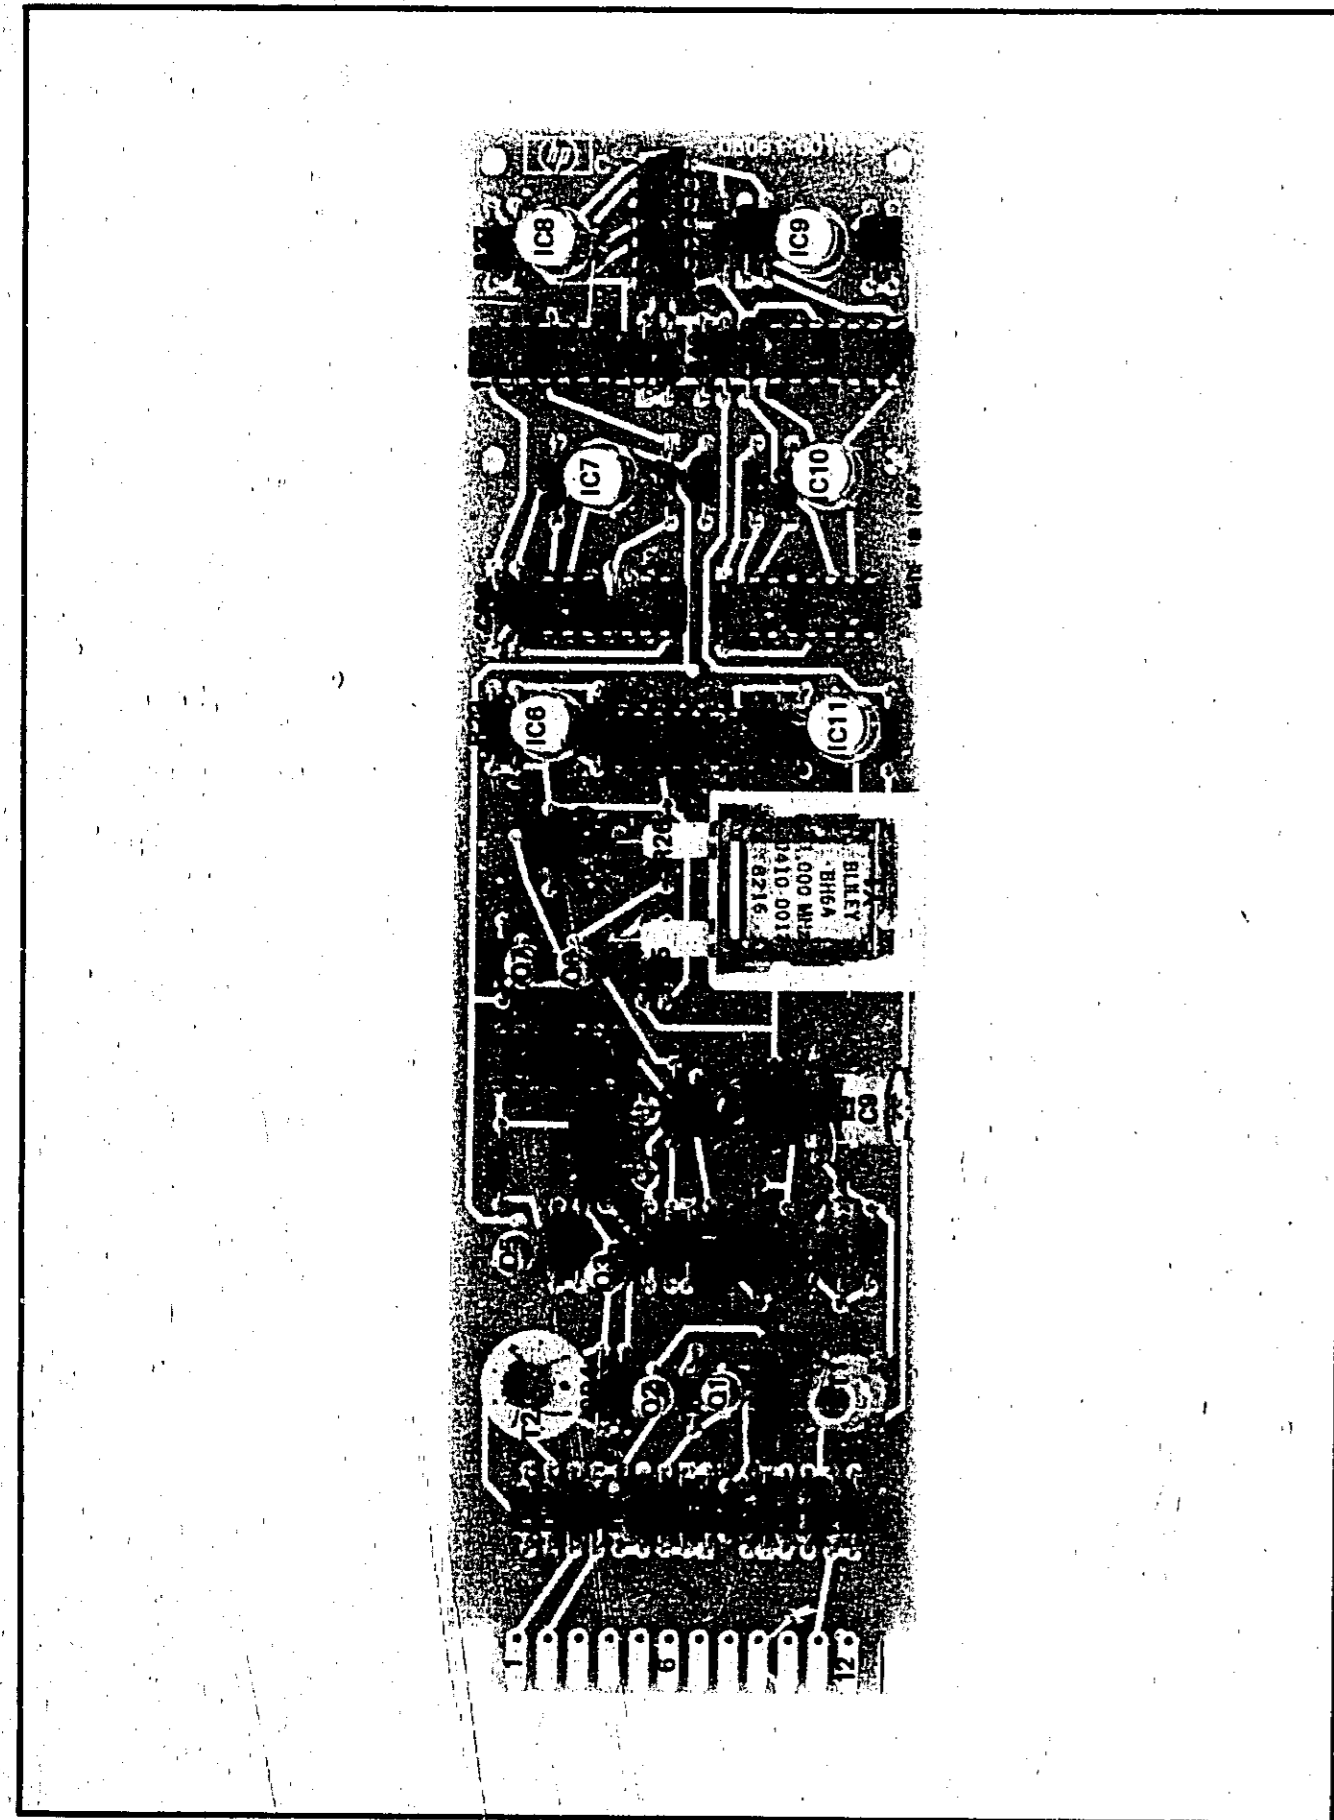
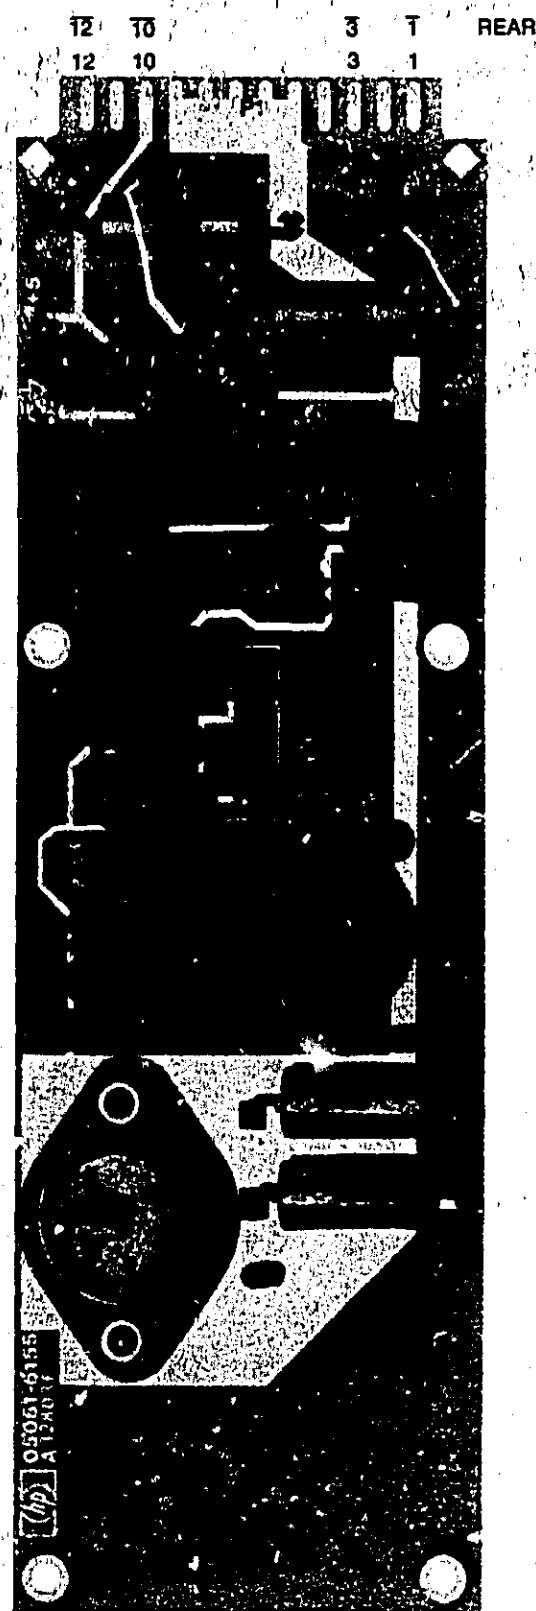


Figure 8-14  
A5A2 Master Clock Board (Opt 001)  
(05061-6014) SERIES 2308  
Page 8-35

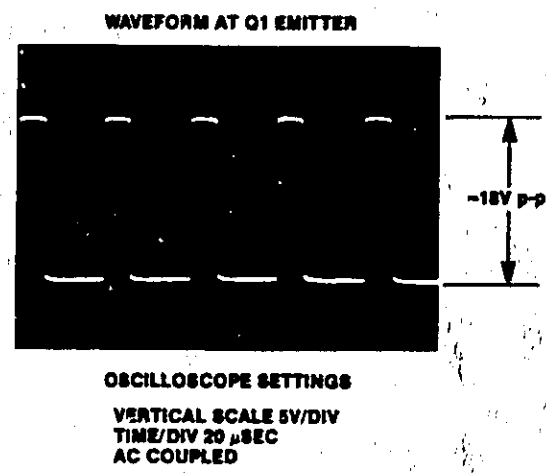

AS42 5V REGULATOR (05061-6155)

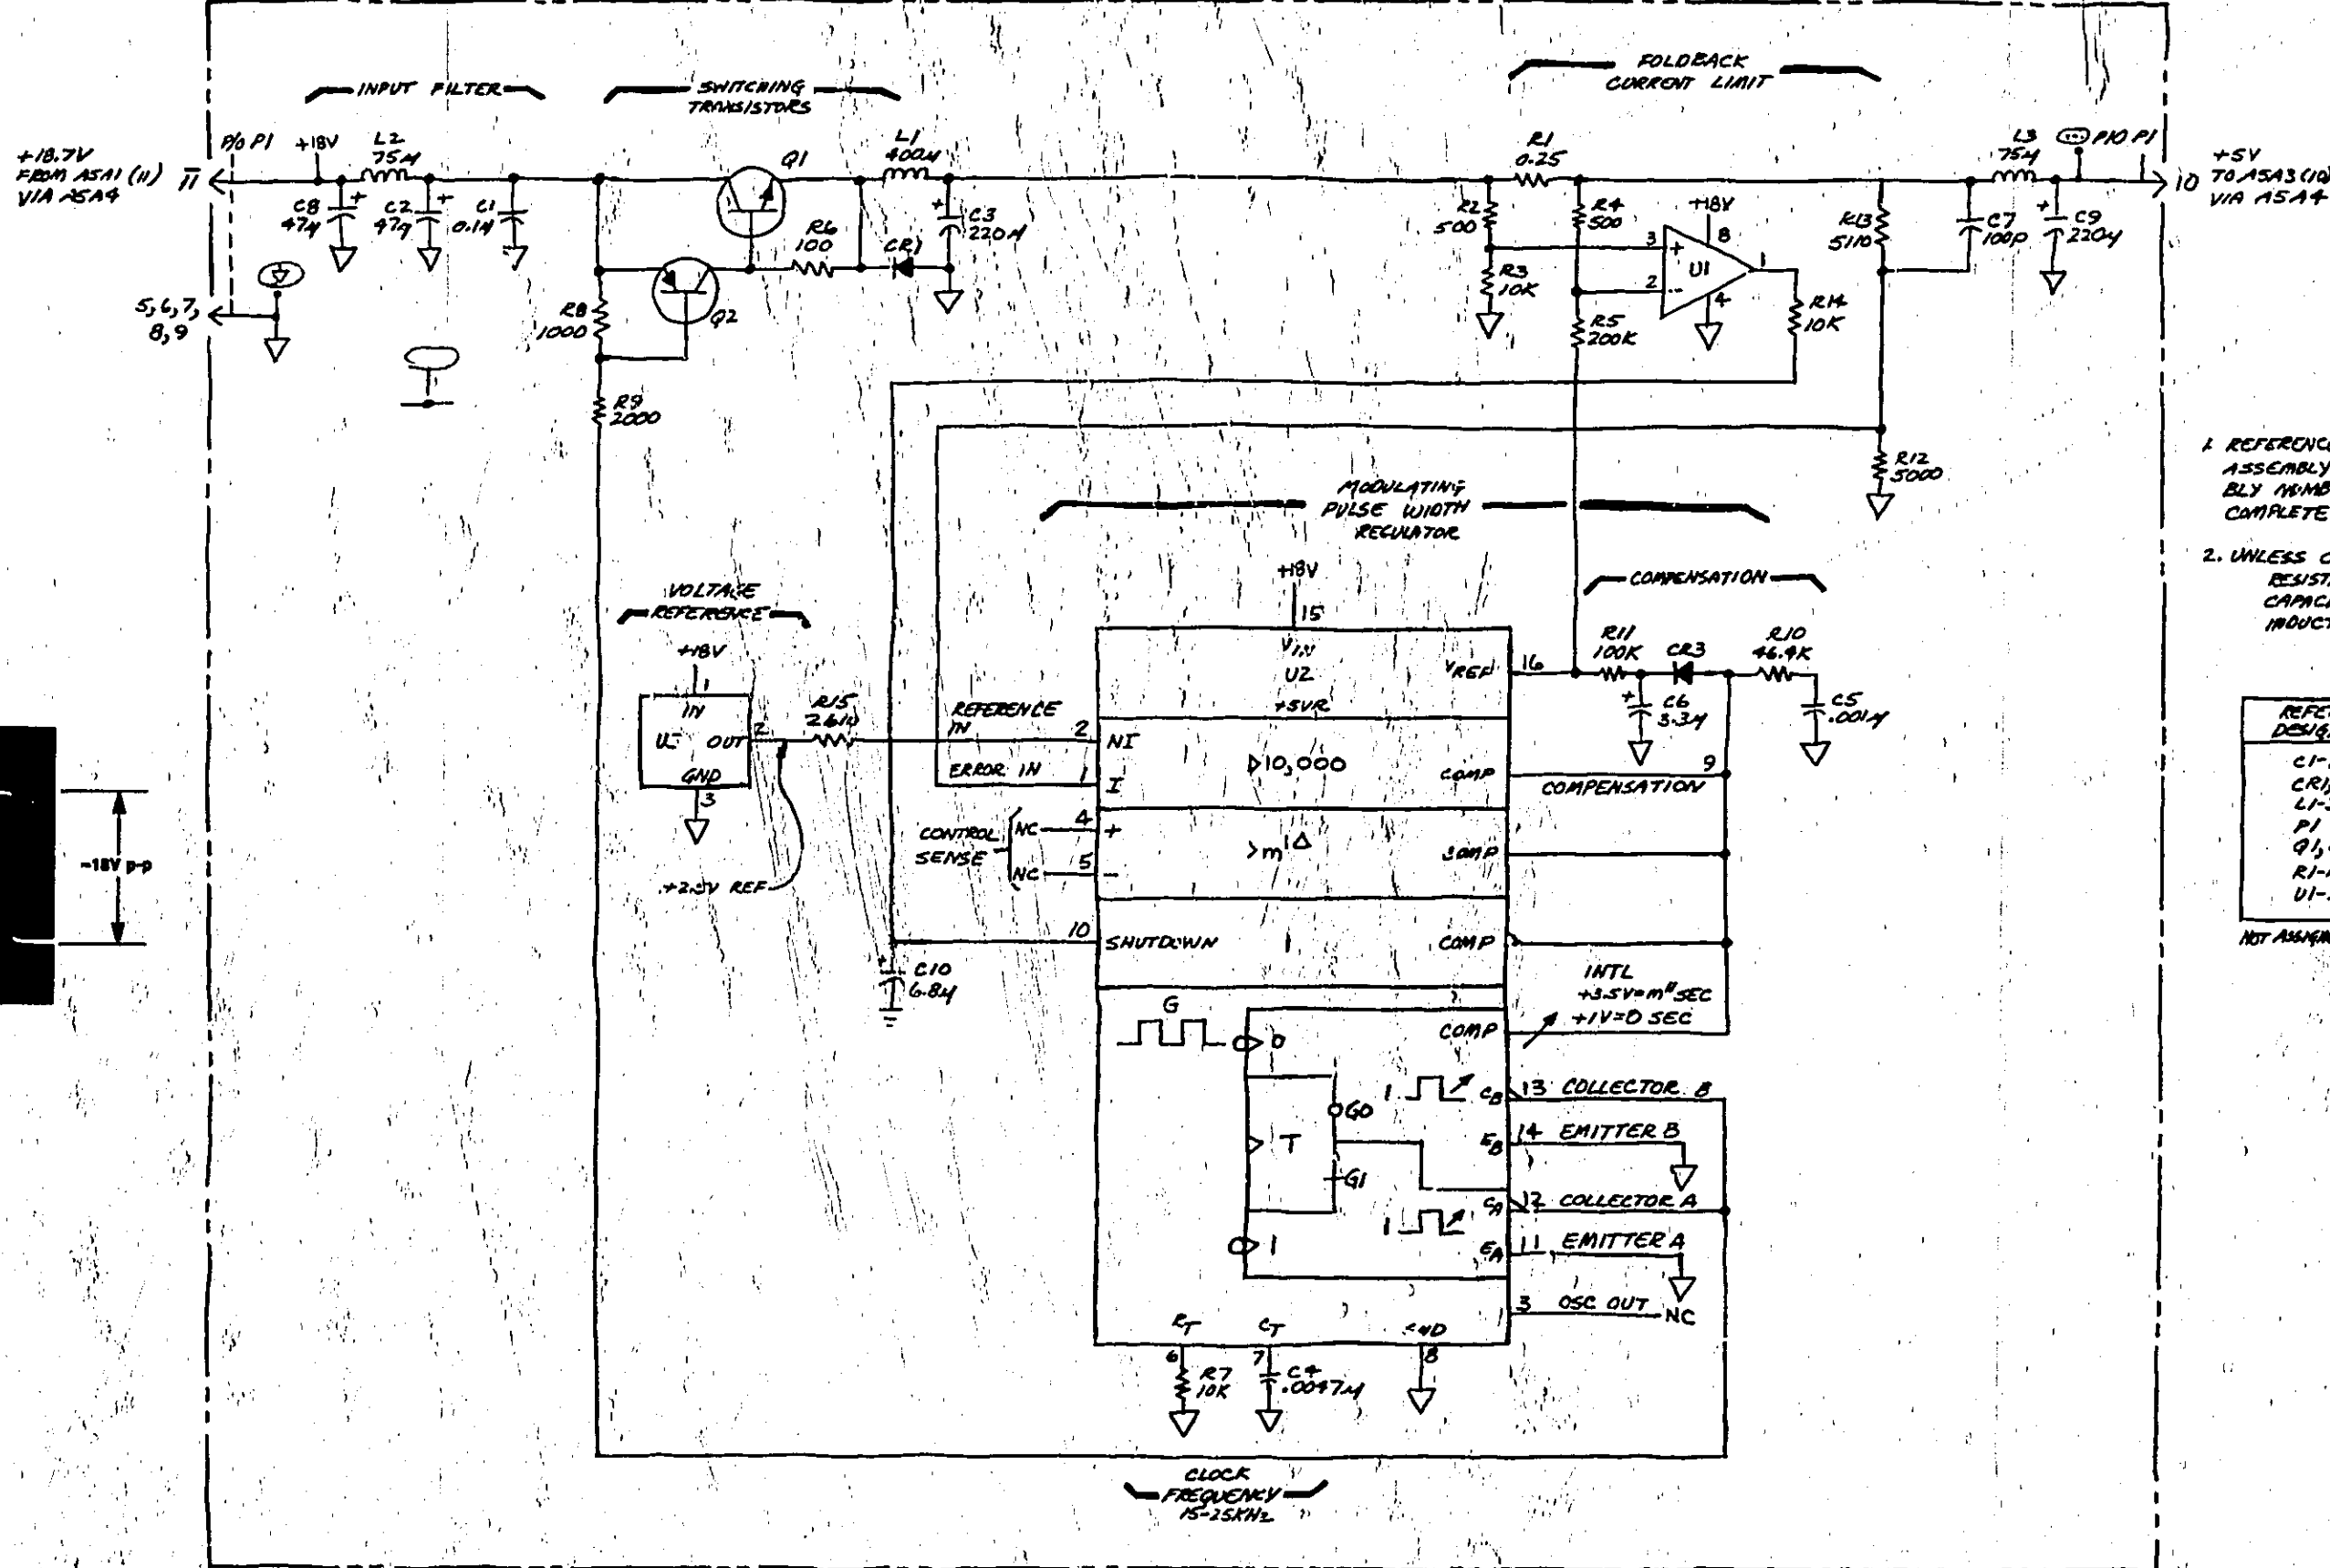


- NOTES
1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR A COMPLETE REFERENCE DESIGNATION.
  2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS, CAPACITANCE IN FARADS, INDUCTANCE IN HOURS.


REFERENCE DESIGNATIONS
C1-10
CR1-3
L1-3
P1
Q1,2
R1-15
U1-3

NOT ARRANGED: AS42CR2

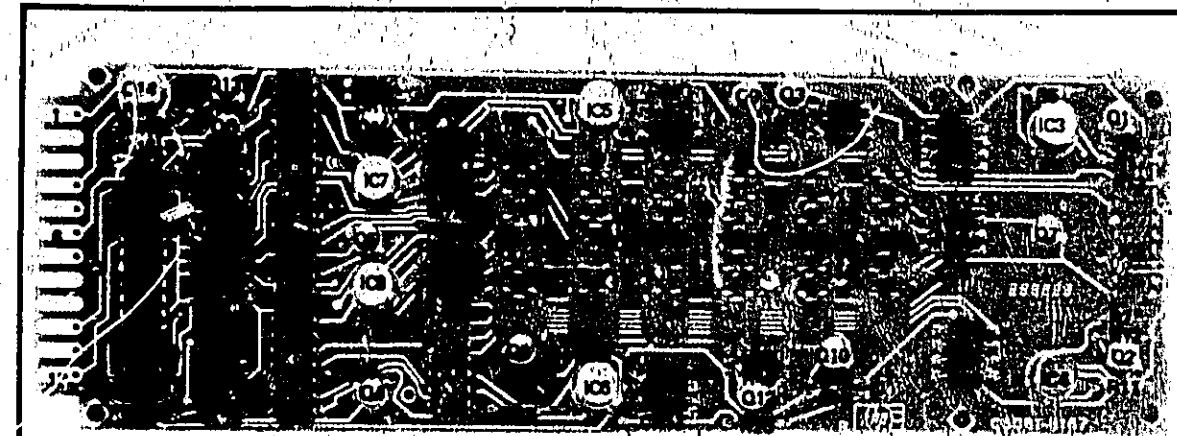Figure 8-14  
 AS42 Master Clock Board (Opt 001)  
 (05061-6155 - SERIES 2340)  
 Page 8-35







ASA3 COMPONENT LOCATIONS (LESS ASA3S1)

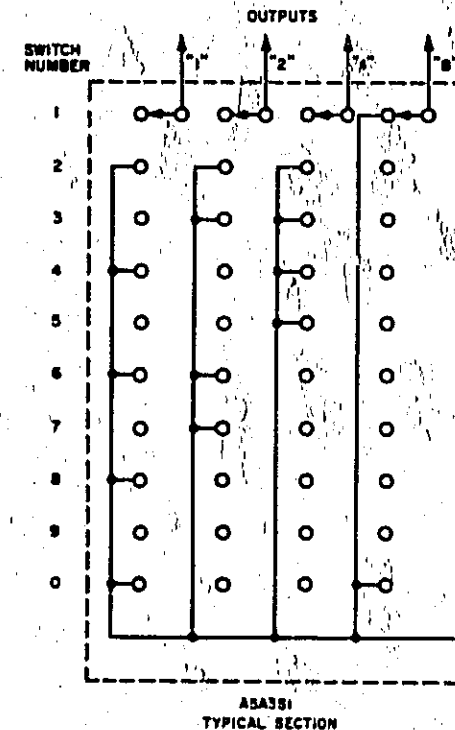

- NOTES**
1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
  2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS; CAPACITANCE IN PICOFARADS.

**REFERENCE DESIGNATIONS**

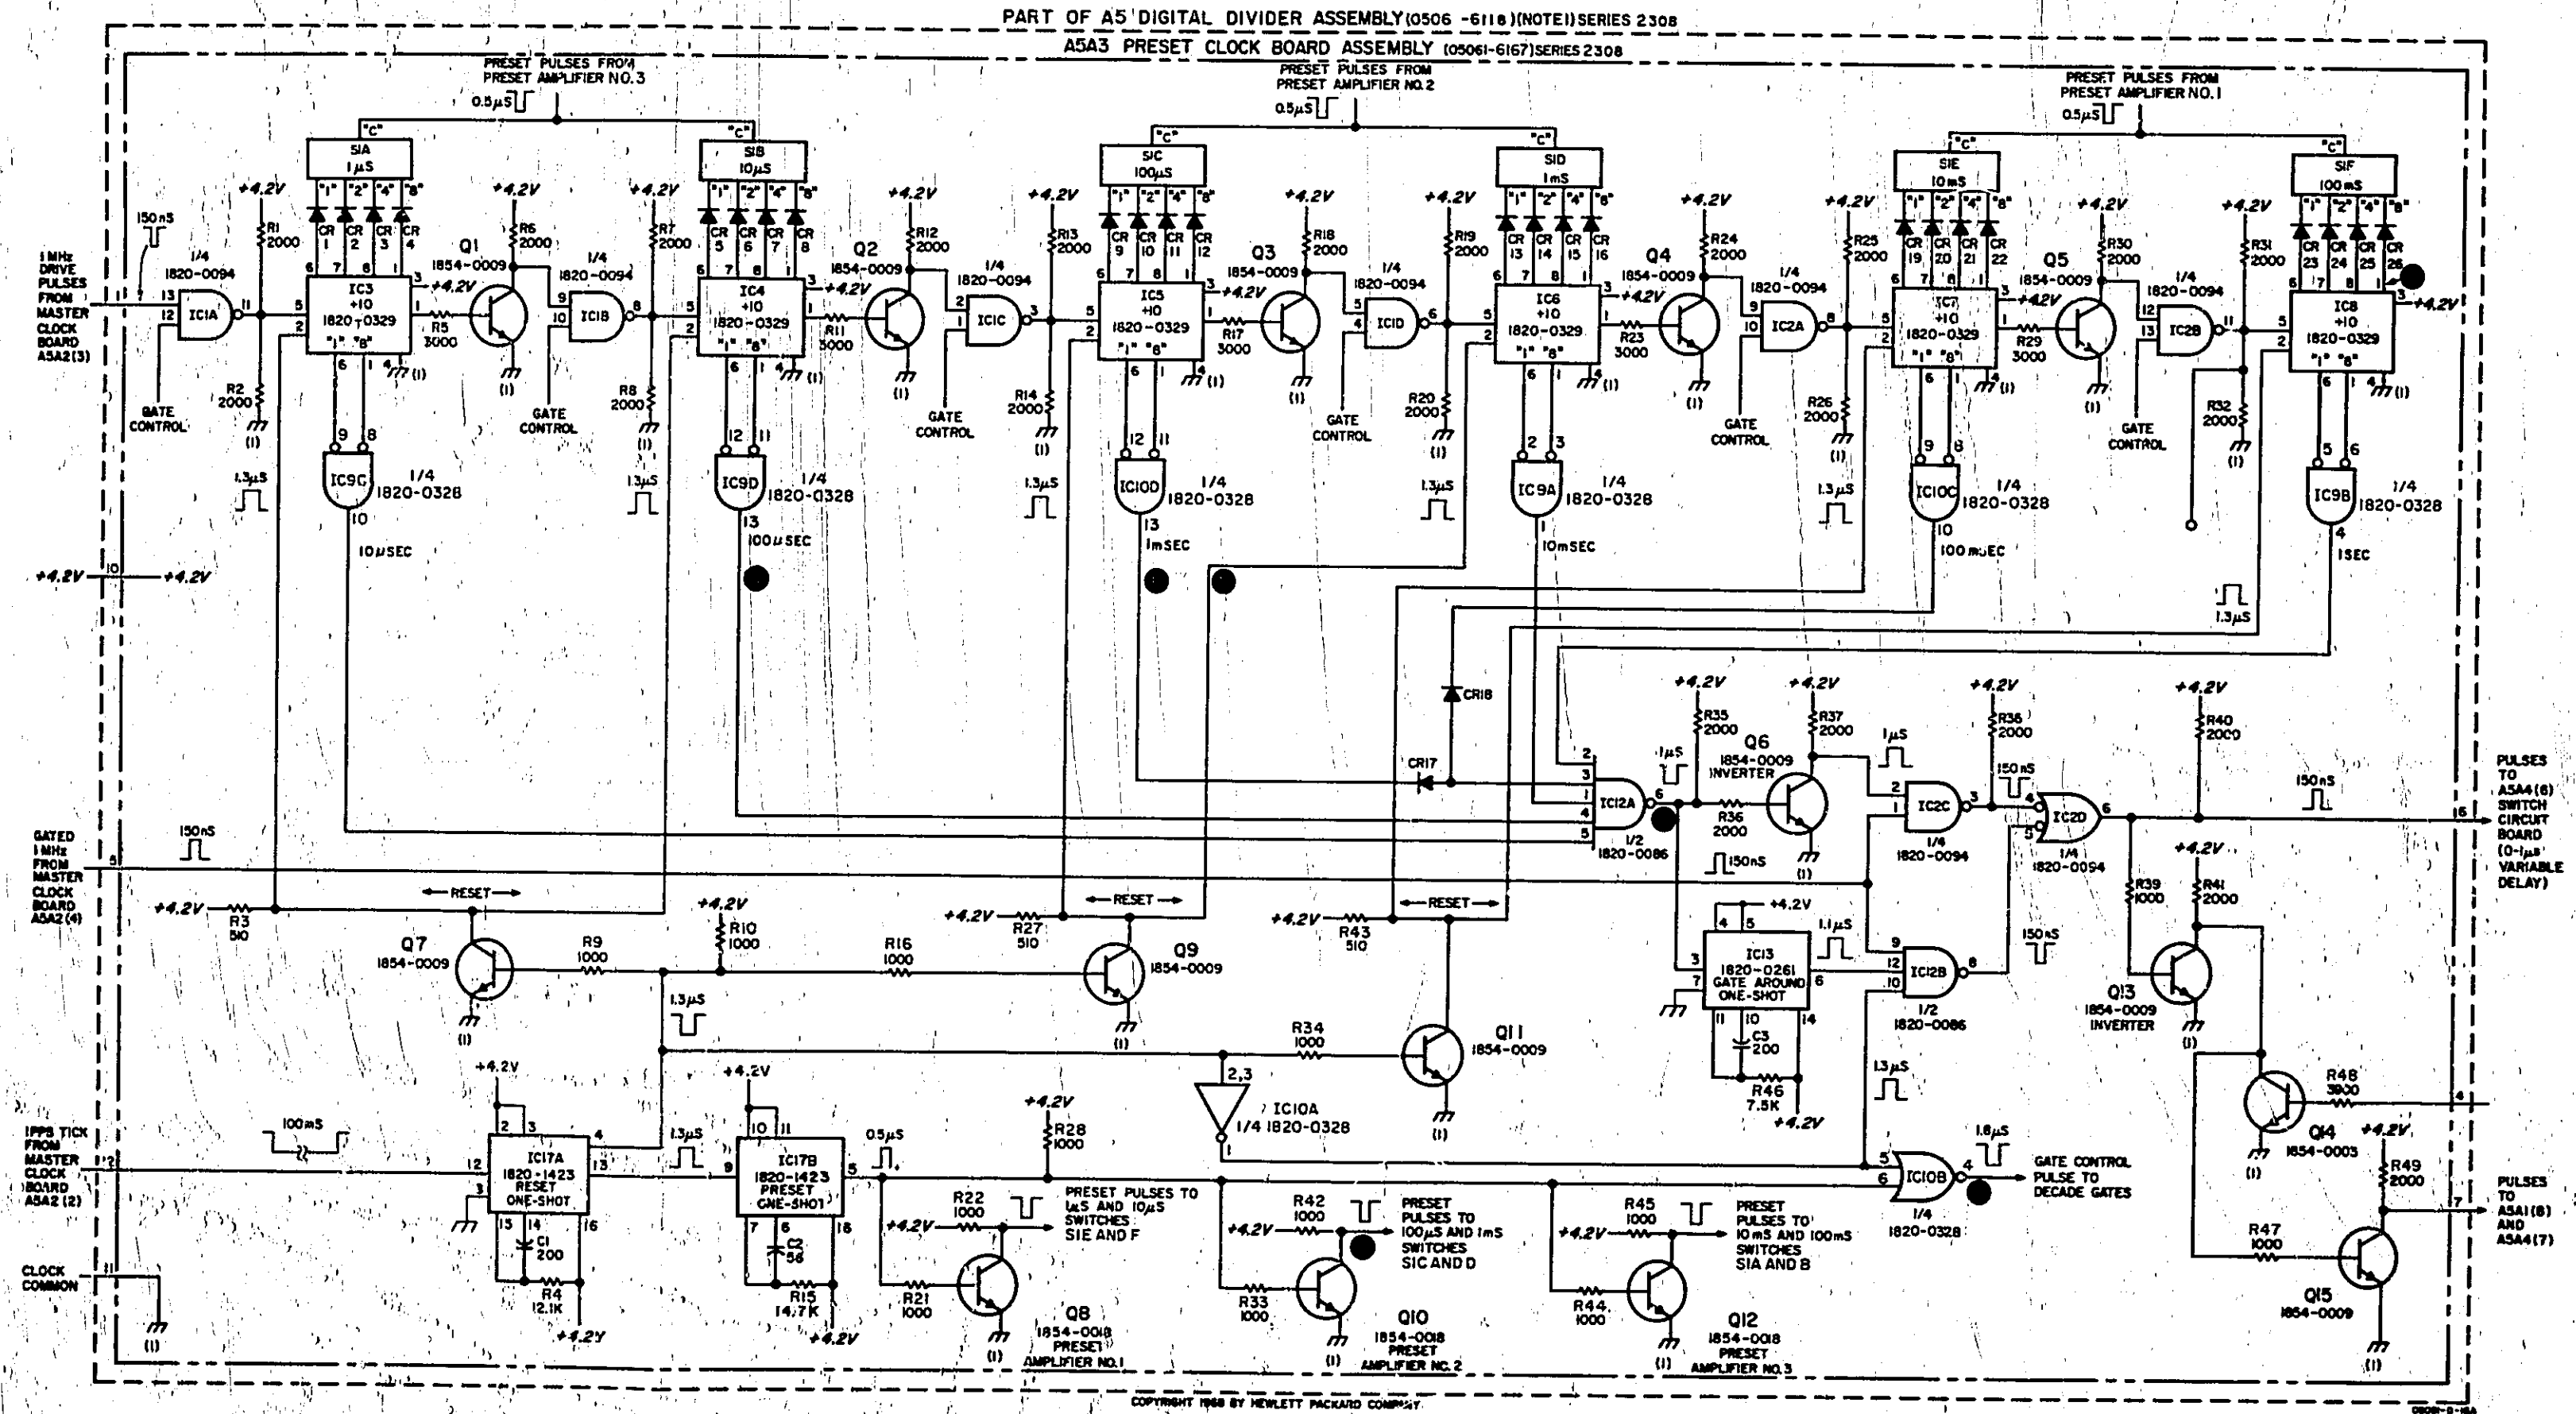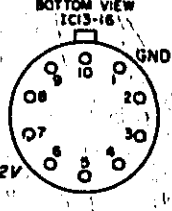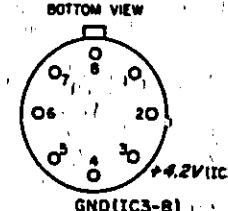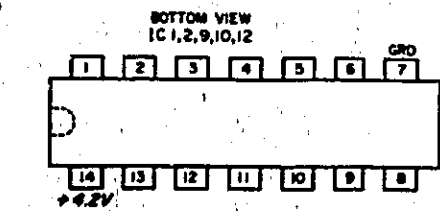ASA3
CI-3
CR1-26
IC1,16
Q1-9
RS1
NOT ASSIGNED: IC14,11



COPYRIGHT 1968 BY HEWLETT PACKARD COMPANY.

Figure 8-15  
 ASA3 Preset Clock Board Assembly  
 (05061-6167) SERIES 2308  
 Page 8-37



AS44 INTERCONNECT BOARD (05061-6156)

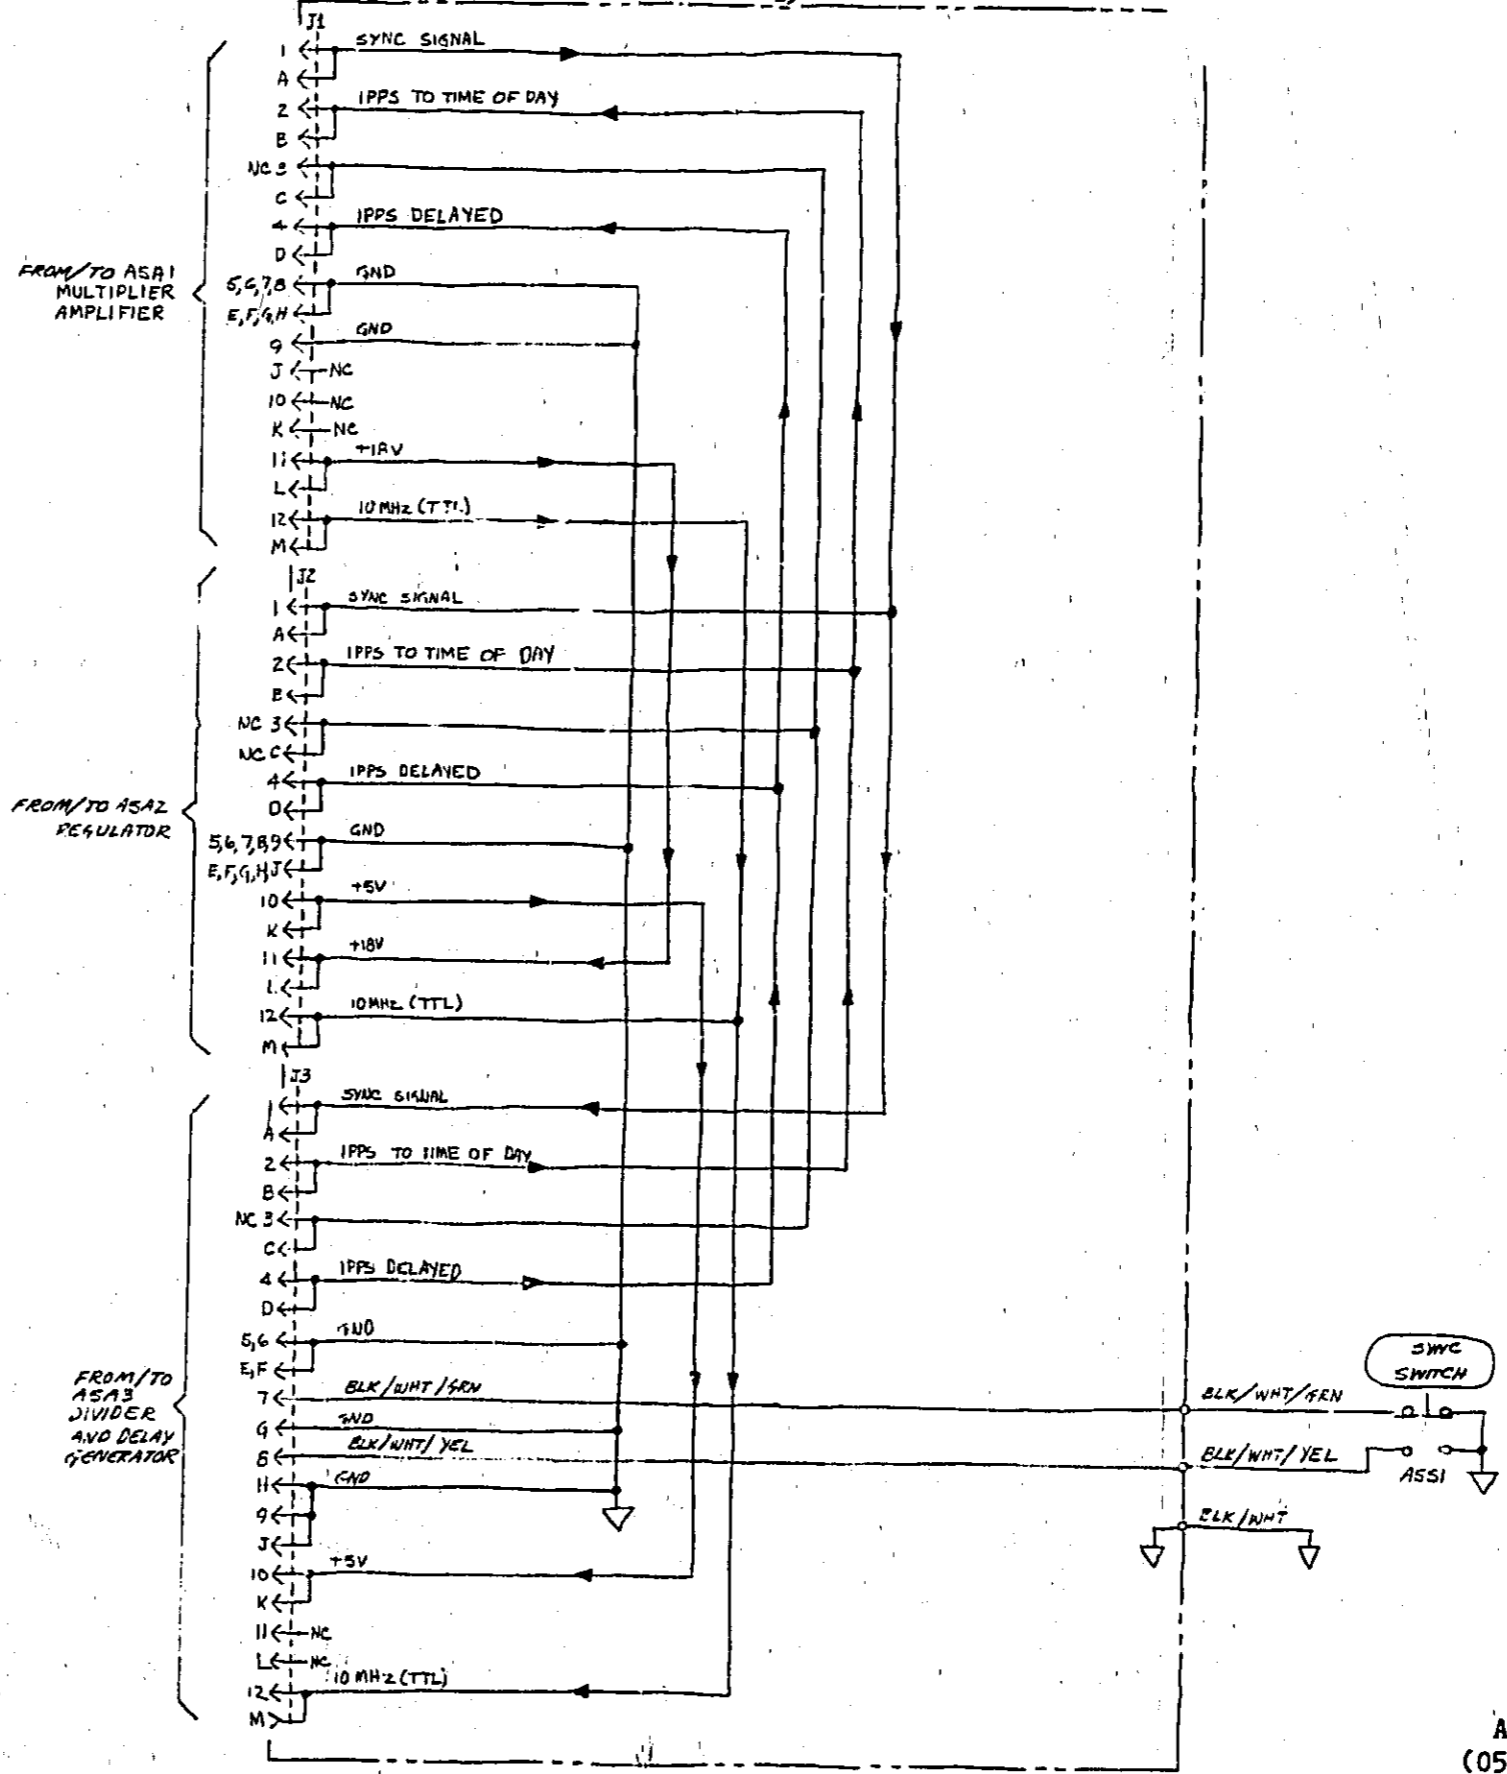


Figure 8-15a  
 AS44 Interconnect Board  
 (05061-6156 SERIES 2340)  
 Page 8-37a



### OPERATIONAL AMPLIFIER A9 THEORY

The A9 Assembly amplifies and integrates the output of the A8 Phase Detector and provides a dc error signal for controlling the quartz oscillator in the A10 Assembly. The front panel FUNCTION switch provides a means of opening the control loop by shorting the A9 output to its input and placing a large resistance in series with the output.

DC error signals from the A8 Phase Detector connect through pin 14 to the input of U3. U3 is a high-impedance, low-noise, precision FET input operational amplifier. It has extremely low input bias current and low input offset voltage. The integrating function is provided by C5 with the integrating time constant being set by the combination of C5 and R5. Initial integrator drift is minimized by zeroing the input offset voltage of U3 using potentiometer R8.

The output of U3 connects to the A14 Logic Assembly as one logic input and to the CONTROL position of the front panel CIRCUIT CHECK switch. The front panel FUNCTION switch has two uses:

- a. In the OPER position, the output of U3 feeds through R3 to the A10 Oscillator Assembly and through R1 to the rear panel CONTROL jack.
- b. In the LOOP OPEN position, the output of U3 connects back to the input, disabling the integrator. Additionally, a 100K resistor is placed in series with the U3 output and the A10 Oscillator Assembly input. This resistance helps isolate the A10 Assembly from the A8 Phase Detector Assembly.

### A9 MAINTENANCE

#### NORMAL OPERATION

The integrating amplifier uses the error signal from the phase detector as an input and provides the control voltage for the Quartz Oscillator Assembly A10. The output voltage swing is limited by the operational amplifier to  $\pm 12$  Vdc.

Model 5065A  
Circuit Diagrams, Theory, and Maintenance

OPERATIONAL CHECK

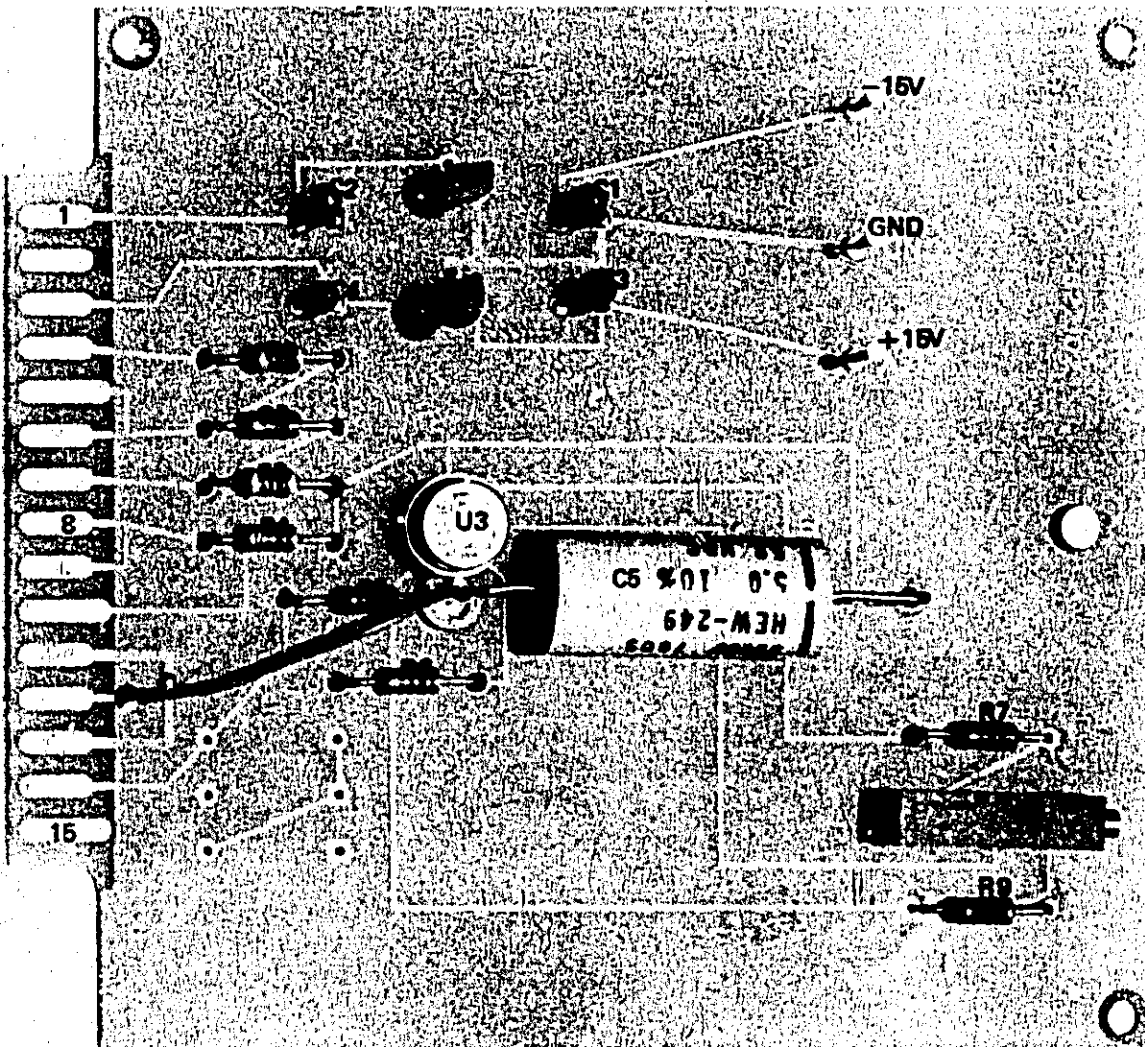
c. Set FUNCTION switch to LOOP OPEN and then to OPER. Measure voltage on dc meter. This voltage may be drifting caused by the integrator circuit integrating the operational amplifier's input offset voltage. If voltage drift exceeds 20 mV/minute, A9R8 should be adjusted for minimum drift.

e. Set dc voltmeter to 30V range. Observing dc voltmeter, set FUNCTION switch to OPER. The voltage will increase at the rate of about 1V/second to about -12V.

g. Set voltmeter to read positive voltages. Set FUNCTION switch to OPER and observe voltmeter reading. Reading should increase at a rate of about 1V per second to a final reading of approximately +12 V.


ASSEMBLY REPAIR AND REPLACEMENT

After repair or replacement of A9 Assembly, A9R8 should be adjusted as described in OPERATIONAL CHECK, Steps a, b, and c.



Part of Figure 8-19  
 A9 INTEGRATOR ASSEMBLY COMPONENT LOCATOR  
 (05065-6108, SERIES 2632)

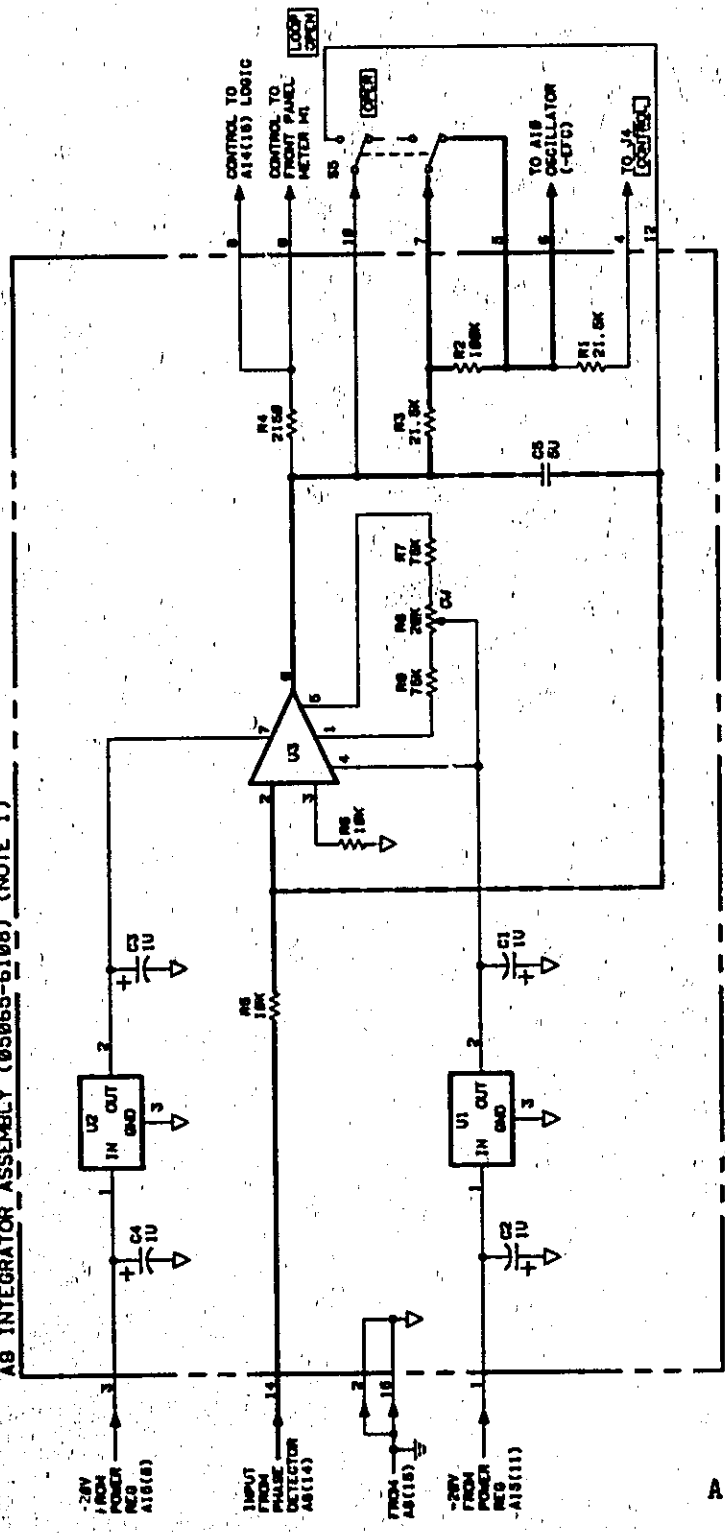A8 INTEGRATOR ASSEMBLY (05065-6108) (NOTE 1)




- NOTES**
1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
  2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS; CAPACITANCE IN PFD; INDUCTANCE IN HENRIES.

**REFERENCE DESIGNATIONS**

AS ASSY	NO PREFIX
C1-C5	58
R1-R8	58
U1-U3	58

**TABLE OF ACTIVE ELEMENTS**

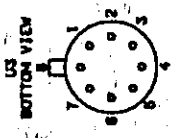REFERENCE DESIGNATOR	HP PART NO.	MFO PART NO.
U1	1828-2281	REV/ELI/LOP
U2	1828-2274	ACT/ELI/LOP
U3	1813-2557	OP/111/EM



**HP HEWLETT PACKARD**

DIRECT/DRAWING NAME	5065A_CSH/SCAS_Y1
HP PART NUMBER	65665_6108
INSTRUMENT NUMBER	5065A
DATE DRAWN	21/JUL/86
WRITER/ILLUSTRATOR	LAURA/DOO
REVISOR DATE	24/JUL/86
FIGURE NUMBER	
PRINTER/REDUCTION	

Figure 8-19  
A9 Integrator Assembly Schematic Diagram  
(05065-6108, SERIES 2632)

Model 5065A  
Circuit Diagrams, Theory, and Maintenance

**QUARTZ CRYSTAL OSCILLATOR ASSEMBLY**  
**A10 THEORY - SERIES 2120**

**GENERAL THEORY**

The A10 Oscillator/Divider Assembly (HP Part No. 05065-6094) provides a stable, high-quality 5MHz signal at an output level of at least 1Vrms into 50 ohms. This assembly consists of three subassemblies; A10A1 precision 10MHz quartz oscillator; A10A3 power supply assembly; and A10A2 frequency divider/amplifier assembly to divide the 10MHz to 5MHz and provide the proper output levels. Electronic Frequency Control (EFC) inputs enable the oscillator frequency to be adjusted electronically as part of a servo loop, or by a potentiometer. The entire A10 assembly is designed to replace the 00105-6013 oscillator formerly used in this instrument.

The oscillator assembly is covered by the enclosed 10811A/B Operating and Service Manual. Circuit board operation follows:

The 10MHz output from oscillator assembly A10A1 passes through 10MHz band-pass filter L1 and C5 on power supply assembly A3; then through J1 to edge triggered D-type flip-flop (A2U1) which divides the 10MHz signal by two. The 5 MHz TTL output at U1(5) passes through 5MHz bandpass filter L7 and C12. The 5MHz signal is amplified and filtered by emitter-coupled switch (Q1, Q4), and cascade amplifier Q2.

Potentiometer R8, in the emitter circuit of Q1 and Q4, sets the level at the "5MHz 1V" output to 1.1Vrms into 50-ohms. The impedance transforming circuit consisting of C8 and L4 allows Q3 to efficiently drive a 50-ohm external load. Choke L3 provides dc to the collector of Q3; C9 blocks dc to the 5MHz output, and L6 provides a dc return for the external load.

Resistive divider R5, R4 provides a low-level signal to "5MHz DIV" output. Nominal voltage at this point is 70mVrms into 1000-ohms.

A 15V reference power supply consists of CR1, CR2 and associated parts. This supply provides a stable reference source for external circuitry connected to the + or - EFC inputs.

The A10A3 power supply assembly has two inputs; "20V" and "24V". The "24V" input operates from a voltage range of 21 to 30Vdc from the parent instrument. U1 regulates this voltage down to 18Vdc used by oscillator A10A1 oven heater. The 18Vdc is further regulated to 12Vdc by A3U1 for use in oscillator signal circuits. CR1, Q1 and associated components regulate the 12Vdc to 5Vdc for use by the TTL divider on A10A2.

Inverting amplifier Q2 is driven by the "oven monitor" circuit in oscillator assembly A10A1. It provides an output signal to drive the OSC. OVEN meter, or monitor in the parent instrument.

Electronic frequency control (EFC) signals from the parent instrument are summed by R9, R10, R11 and sent to the EFC input of the oscillator assembly. Factory-selected resistor R11 matches the A10A1 oscillator assembly to the parent instrument. If the A10A3 power supply assembly or A10A1 oscillator assembly are changed, a new value for Resistor R11 must be selected. In addition, if certain repairs are made in A10A1, resistor R11 must also be adjusted. See the enclosed 10811A/B Operating and Service Manual for details concerning A10A1.

**A10 MAINTENANCE - SERIES 2120**

**GENERAL.**

Assembly A10 consists of a selected 10811A 10MHz oscillator (HP Part No. 10811-60109) and two circuit board assemblies to provide 5MHz outputs for use by the parent instrument. The oscillator is field repairable as covered in the 10811A/B Operating and Service Manual. Assembly A10A2 divides the 10MHz signal by two and provides two 5MHz output signals. All input and output connections are on A10A2. Power supply assembly A10A3 provides an interface between the parent instrument power supplies and the circuits in assembly A10.

Input and output connections to A10 are as follows:

CONNECTOR NAME	IN OR OUT	SIGNAL CHARACTERISTIC
+24	INPUT	22V to 30Vdc primarily for oven heater power (about 160mA is normal; with about 450mA during warm-up).
+20	INPUT	18V to 22Vdc for oscillator and output circuits (50mA nominal)
+EFC OR -EFC	INPUT	Voltages to control A10 output frequency.
1V	OUTPUT	5MHz sine wave output. At least 1.0Vrms into a 50-ohm load.
DIV	OUTPUT	5MHz sine wave output. Nominal 50mV to 150mVrms into 1000-ohm load.
+15	OUTPUT	14.0V to 15.8Vdc for fine frequency control (OSC FREQ FINE)
M	OUTPUT	To OSC OVEN position of CIRCUIT CHECK METER via A17 terminal board.

**OPERATIONAL CHECKS.**

**OVEN OPERATION.**

- a. Turn 5065A on and allow at least 1/2 hour warm-up period; set CIRCUIT CHECK METER to OSC OVEN.
- b. Meter indication should be as indicated in Table 3-1. Failure of this test indicates failure of 10MHz oscillator A10A1, or circuit of A10A3Q2.

**15V REFERENCE SUPPLY CHECK.**

- a. Measure voltage at "+15" jack on A10A2. Voltage should be from +14.0 to +15.8 volts dc.

Model 5065A  
Circuit Diagrams, Theory, and Maintenance

**A10 MAINTENANCE - SERIES 2120 (Cont'd)**

**OUTPUT AMPLITUDE AND DISTORTION.**

Output amplitude at the "1V" jack should be at least 1.0Vrms into 50-ohms. Output harmonics of 5MHz at the "1V" jack should be at least 30dB below the 5MHz output. Output at "DIV" jack should be from 50mV to 150mVrms.

- a. Disconnect cable at "1V" jack on A10 oscillator assembly.
- b. Use a miniature-coax-to-BNC test cable and a 50-ohm feedthrough to connect "1V" jack to the vertical input of an oscilloscope. The displayed waveform should be a sine wave of at least 2.8V p-p. This level can be adjusted with A10A2R8.
- c. Remove 50-ohm feedthrough and connect signal to spectrum analyzer. Check spectrum from 5MHz to 20MHz. All 5MHz harmonics should be more than 30dB below the 5MHz output.
- d. Disconnect spectrum analyzer and reattach 5065A cable on "1V" jack.
- e. Use high impedance oscilloscope probe to measure voltage at "DIV" output on circuit side of A10A2 circuit board. Oscilloscope should indicate 140 to 420mVp-p (50 to 150mVrms).

**SHORT TERM STABILITY.**

- a. Allow 5065A to operate at least one hour. Set FUNCTION to LOOP OPEN.
- b. Disconnect cable from A10 "1V" connector and connect cable to a HP Model 5390A Frequency Stability Analyzer.
- c. Perform short term stability test of Table 5-2. Performance Test step 8. NOTE: This is a test of the oscillator assembly so the analyzer must be connected to the "1V" output on A10 rather than the 5MHz front panel output. All other test conditions remain the same.

Measured stability should be equal to or better than  $5 \times 10^{-12}$  for a one second averaging time. Failure of this test indicates a problem in A10A2 divider amplifier assembly, or A10A1 oscillator. A10A1 may be checked independently. Refer to 10811A/B Operating and Service Manual for procedure.

**EFC CHECK.**

This test checks operation of Electronic Frequency Control input to A10.

- a. Set CIRCUIT CHECK switch to 2ND HARMONIC and MODE to LOOP OPEN. Turn OSC FREQUENCY FINE control maximum counterclockwise, maximum clockwise, and then back to 250. The CIRCUIT CHECK meter should respond to control movement.

Model 5065A  
Circuit Diagrams, Theory, and Maintenance

A10 MAINTENANCE - SERIES 2120 (Cont'd)

OUTPUT AMPLITUDE AND DISTORTION.

Output amplitude at the "1V" jack should be at least 1.0Vrms into 50-ohms. Output harmonics of 5MHz at the "1V" jack should be at least 30dB below the 5MHz output. Output at "DIV" jack should be from 50mV to 150mVrms.

- a. Disconnect cable at "1V" jack on A10 oscillator assembly.
- b. Use a miniature-coax-to-BNC test cable and a 50-ohm feedthrough to connect "1V" jack to the vertical input of an oscilloscope. The displayed waveform should be a sine wave of at least 2.8V p-p. This level can be adjusted with A10A2R8.
- c. Remove 50-ohm feedthrough and connect signal to spectrum analyzer. Check spectrum from 5MHz to 20MHz. All 5MHz harmonics should be more than 30dB below the 5MHz output.
- d. Disconnect spectrum analyzer and reattach 5065A cable on "1V" jack.
- e. Use high impedance oscilloscope probe to measure voltage at "DIV" output on circuit side of A10A2 circuit board. Oscilloscope should indicate 140 to 420mVp-p (50 to 150mVrms).

SHORT TERM STABILITY.

- a. Allow 5065A to operate at least one hour. Set FUNCTION to LOOP OPEN.
- b. Disconnect cable from A10 "1V" connector and connect cable to a HP Model 5390A Frequency Stability Analyzer.
- c. Perform short term stability test of Table 5-2. Performance Test step 8. NOTE: This is a test of the oscillator assembly so the analyzer must be connected to the "1V" output on A10 rather than the 5MHz front panel output. All other test conditions remain the same.

Measured stability should be equal to or better than  $5 \times 10^{-12}$  for a one second averaging time. Failure of this test indicates a problem in A10A2 divider amplifier assembly, or A10A1 oscillator. A10A1 may be checked independently. Refer to 10811A/B Operating and Service Manual for procedure.

EFC CHECK.

This test checks operation of Electronic Frequency Control input to A10.

- a. Set CIRCUIT CHECK switch to 2ND HARMONIC and MODE to LOOP OPEN. Turn OSC FREQUENCY FINE control maximum counterclockwise, maximum clockwise, and then back to 250. The CIRCUIT CHECK meter should respond to control movement.



## A10 MAINTENANCE - SERIES 2120 (Cont'd)

### EFC CHECK

- b. Disconnect cable from "-EFC" jack on A10. Connect dc power supply minus (-) lead to "-EFC" jack and power supply (+) to chassis. Slowly adjust power supply from 0 to 5V. CIRCUIT CHECK METER should respond to power supply adjustment. Remove supply and reconnect cable to "-EFC" jack.

### A10 REPAIR.

If repair or adjustment of A10 is needed, the assembly must be removed from the parent instrument. Once removed, the A10 assembly can be operated independently by connecting two power supplies. Set one power supply for 22 to 30Vdc (450ma maximum current) and connect to the "+24" input. Set the other supply to 20Vdc (approximately 50ma) and connect to "+20" input. Power supply (-) terminals are connected to A10 chassis.

An alternate method is to obtain power from the 5065A. Using clip leads, connect the A10 chassis to the 5065A chassis. Connect the "+24" terminal on A10 to XA15(4), and the "+20" terminal to XA15(6).

With A10 removed and operating outside the instrument, troubleshooting is relatively easy. Power supply voltages can be measured on A10A3 sockets. If power supply is defective, remove oscillator assembly A10A1 to gain access to power supply assembly A10A3. A10A3 will operate normally with A10A1 removed. If fault is in A10A1, it can be removed and operated independent of A10. See 10811A/B Operating and Service Manual for details.

### ADJUSTMENTS, GENERAL.

There are four adjustments in the A10 assembly: A10A1 output amplitude, frequency, EFC gain, and A10 output level. Assembly A10A1 output amplitude adjustment is covered in the 10811A/B Operating and Service Manual. Frequency adjustment is covered as part of the 5061A operating procedure. A10 output amplitude and EFC gain adjustments are covered below.

### OUTPUT AMPLITUDE ADJUSTMENT.

- a. With A10 operating outside the 5065A as previously described, connect A10 "1V" output through a 50-ohm feedthrough to an oscilloscope vertical input.
- b. Adjust A10A3R8 for an oscilloscope display of 3.1Vp-p (1.1Vrms).
- c. Remove connections to A10 and replace in parent instrument.

**A10 MAINTENANCE - SERIES 2120 (Cont'd)**

**SELECTION PROCEDURE FOR A10A3R11 EFC GAIN RESISTOR.**

Resistor A10A3R11 needs changing under two conditions: First, if A10A1 oscillator assembly is changed; Second, if Y1, CR1 or C1 inside A10A1 is changed. If A10A1 is changed, the proper value for A10A3R11 is supplied with the replacement unit (the resistor value is shown on the A10A1 label). This resistor should be installed for A10A3R11 before the new A10A1 oscillator is installed. If Y1, CR1, or C1 inside A10A1 is changed for a repair, a new value must be selected for A10A3R11 by means of the following procedure:

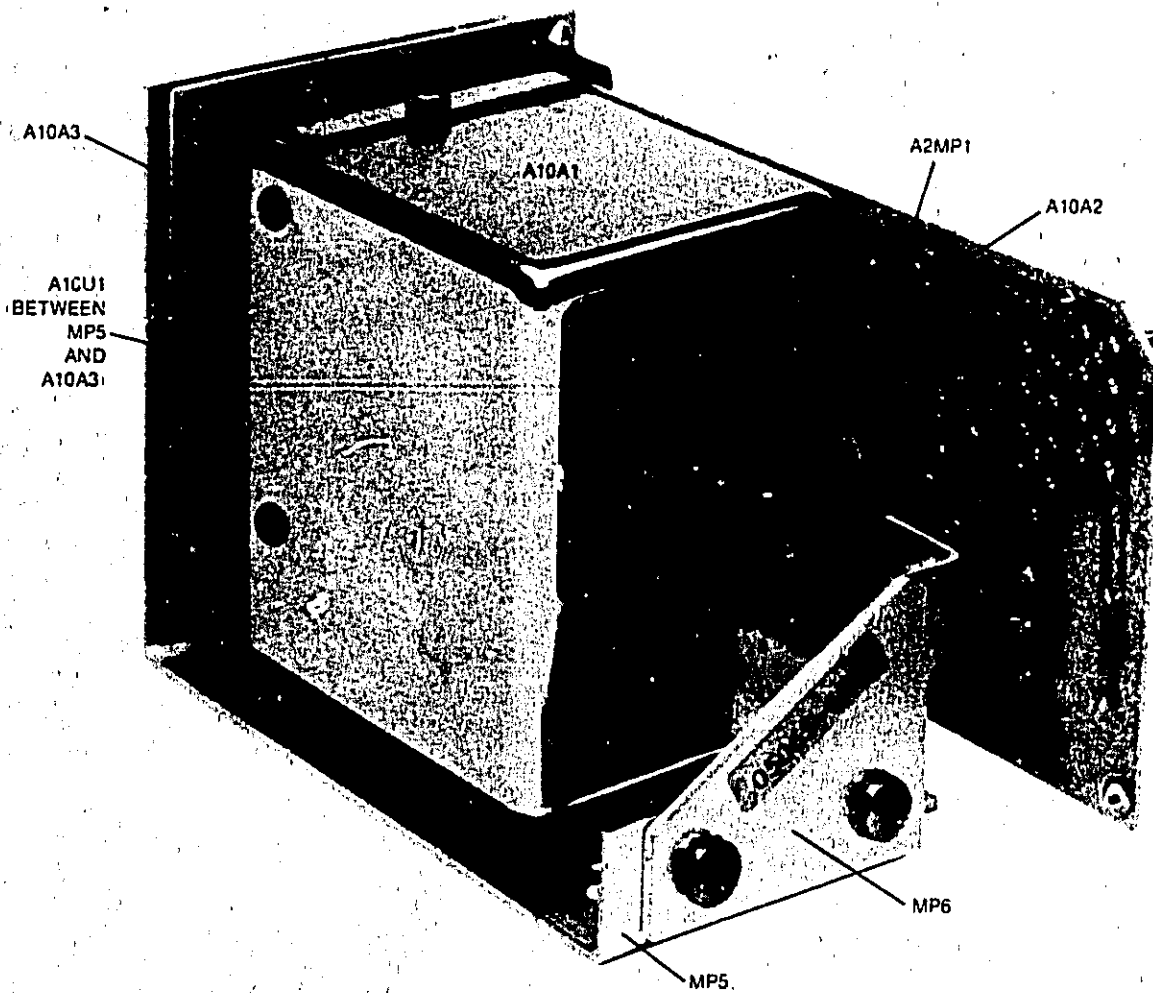
- a. Connect A10 for operation outside the 5065A as previously described. Allow instrument to warm up for at least one hour.
- b. Obtain a high resolution frequency counter such as HP Models 5345A or 5335A/Option 010). Allow counter to warm up and stabilize for several hours before continuing.
- c. Set a power supply for 5.0Vdc. Connect negative (-) side of supply to the A10 chassis and positive (+) side to A10A3J2 (10 MHz oscillator assembly socket) pin 6. Make connection on circuit side of A10A3. Double check before connecting supply to be sure you have the correct pin.
- d. Connect frequency counter to "1V" output, and set it to measure frequency with a measurement time (gate time) of one second. The counter reading should be quite stable.
- e. Adjust A10 oscillator output to 5MHz  $\pm$ 0.1Hz. Record counter indication within a 0.01Hz resolution.
- f. Remove power supply connection from A10A3J2(6). Connect A10A3J2(6) to A10 chassis.
- g. Again record frequency reading from counter in Hz (.01Hz resolution).
- h. Subtract the first reading recorded in step e from the second reading recorded in step g. The result is DELTA F in Hz.
- i. The new value of A10A3R11 can be found in the table below opposite the value of DELTA F (computed in step h).
- j. Remove A10 power connections and remove A10A1 to expose A10A3R11. Install newly selected resistor for R11 to complete the procedure. Special solder terminals on A10A3 simplify resistor replacement. All resistors are 1% 0.125W Film TC=0 $\pm$ 100 with values expressed in K-ohms.

**A10 MAINTENANCE - SERIES 2120 (Cont'd)**


DELTA F (Hz)	A10A3R11HP	PART NO.	DELTA F (Hz)	A10A3R11HP	PART NO.
0.49 or less	562.0 K	0698-8824	1.05 to 1.23	82.5 K	0757-0463
0.50 to 0.59	316.0 K	0698-3457	1.24 to 1.42	68.1 K	0757-0461
0.60 to 0.71	215.0 K	0698-3454	1.43 to 1.65	56.2 K	0757-0459
0.72 to 0.86	147.0 K	0698-3452	1.66 to 1.93	46.4 K	0698-3162
0.87 to 1.04	110.0 K	0757-0466	1.94 or more	38.3 K	0698-3161

**A10 ASSEMBLY REPLACEMENT.**


The 5065A does not require internal adjustments following replacement of oscillator assembly A10. After installation is completed, follow the Turn-On procedure in Figure 3-2 of the Operating and Service Manual.



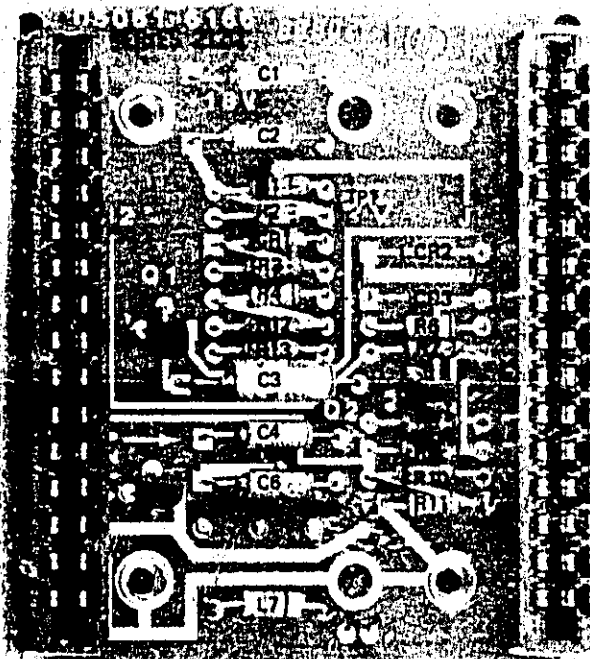
A10 OSCILLATOR ASSEMBLY (05065-6094 SERIES 2120)



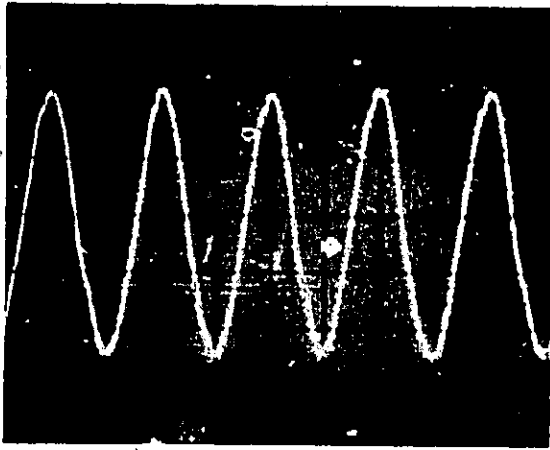
A10A3 POWER SUPPLY ASSEMBLY (05061-6166 SERIES 2120)




① Vert = .5V/div.  
Horiz = 50 ns/div.

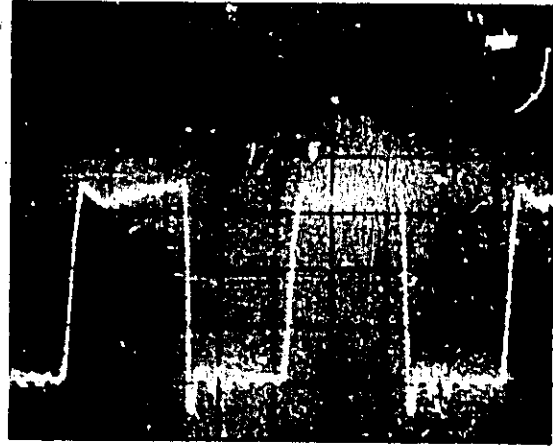


② Vert = 1V/div.  
Horiz = 50 ns/div.

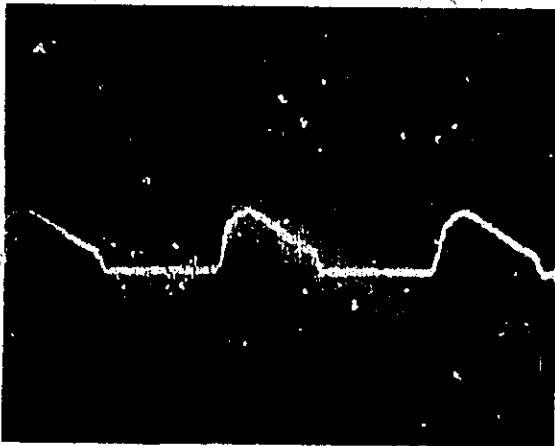


③ Vert = 2V/div.  
Horiz = 50 ns/div.

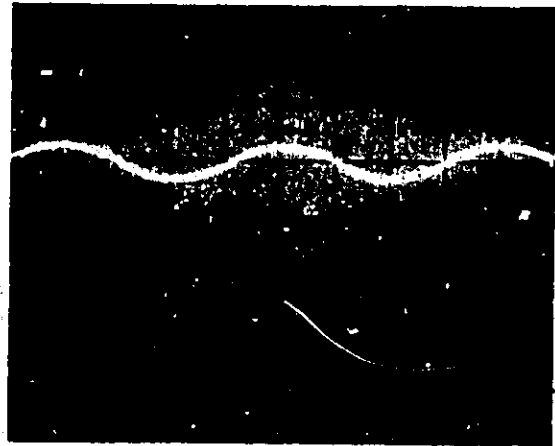

④ Vert = 5V/div.  
Horiz = 50 ns/div.

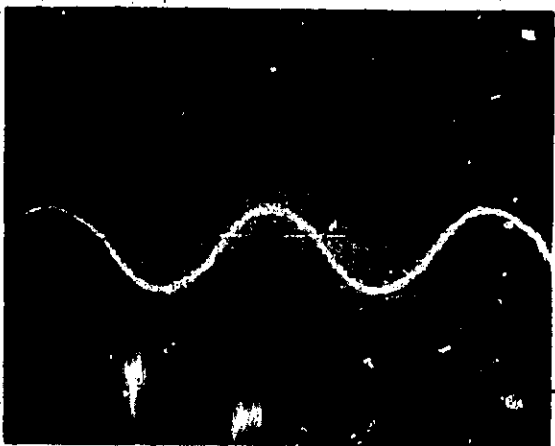


⑤ Vert = 2V/div.  
Horiz = 50 ns/div.

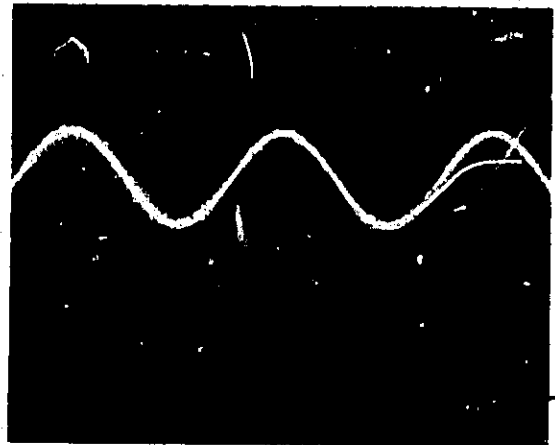


⑥ Vert = 5V/div.  
Horiz = 50 ns/div.

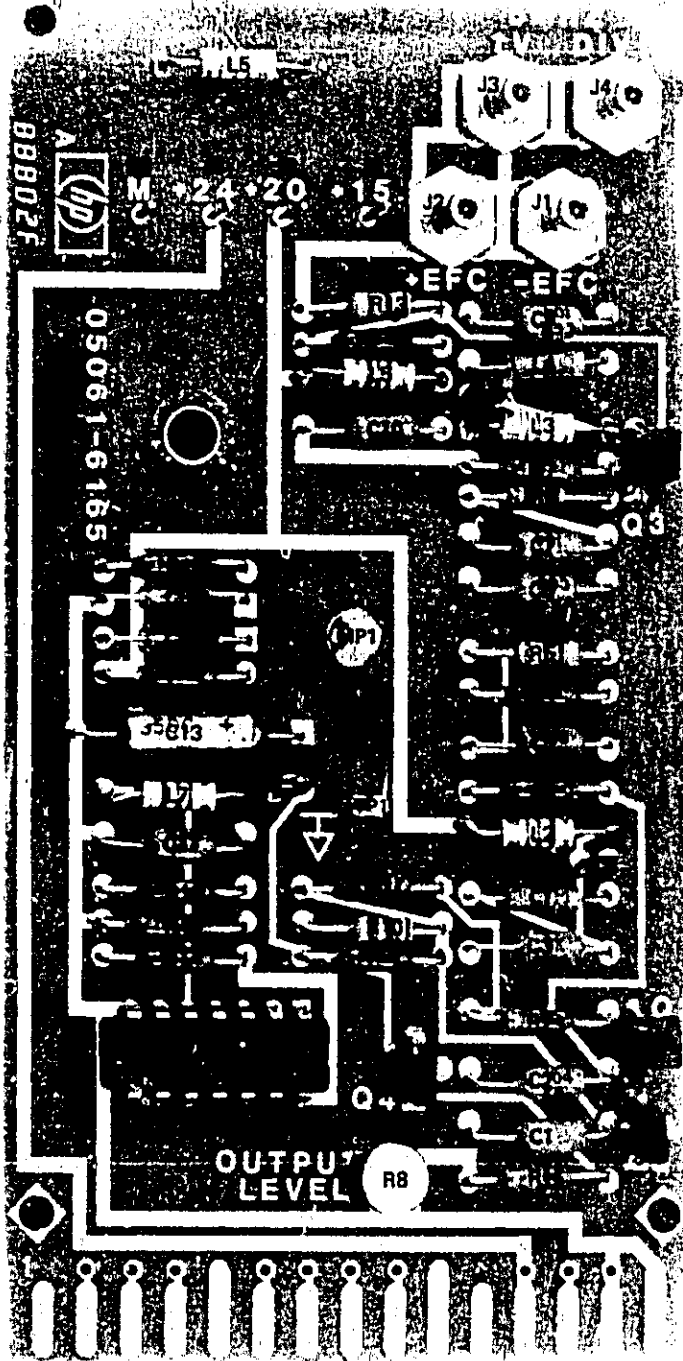WAVEFORMS FOR A10A2 FREQUENCY DIVIDER/AMPLIFIER ASSEMBLY  
(05061-6165 SERIES 2120)




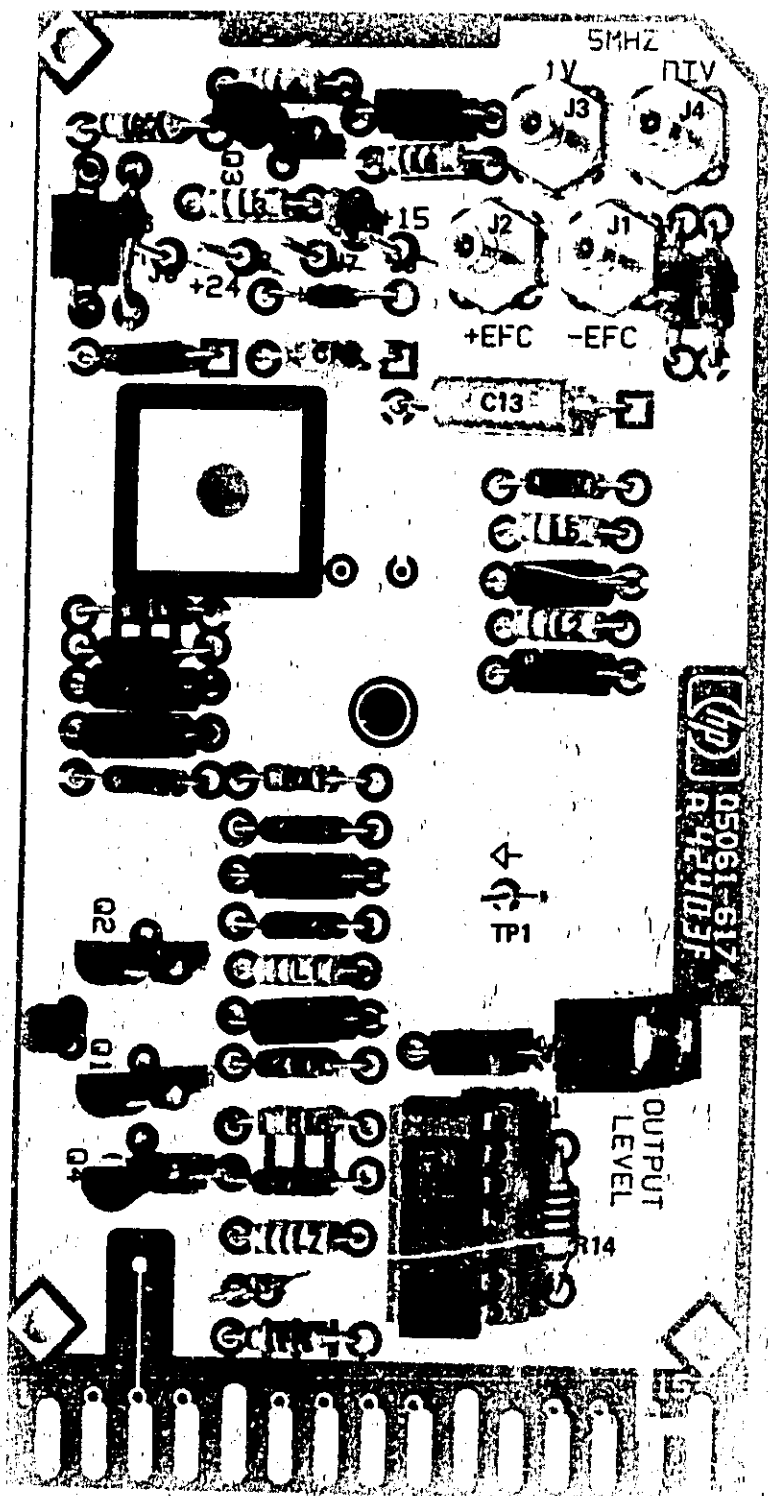A10A2 FREQUENCY DIVIDER/AMPLIFIER ASSEMBLY  
 (05061-6165 SERIES 2120)



A10A2 Frequency Divider/Amplifier Assembly  
 Component Locator  
 (05061-6174 SERIES 2432)

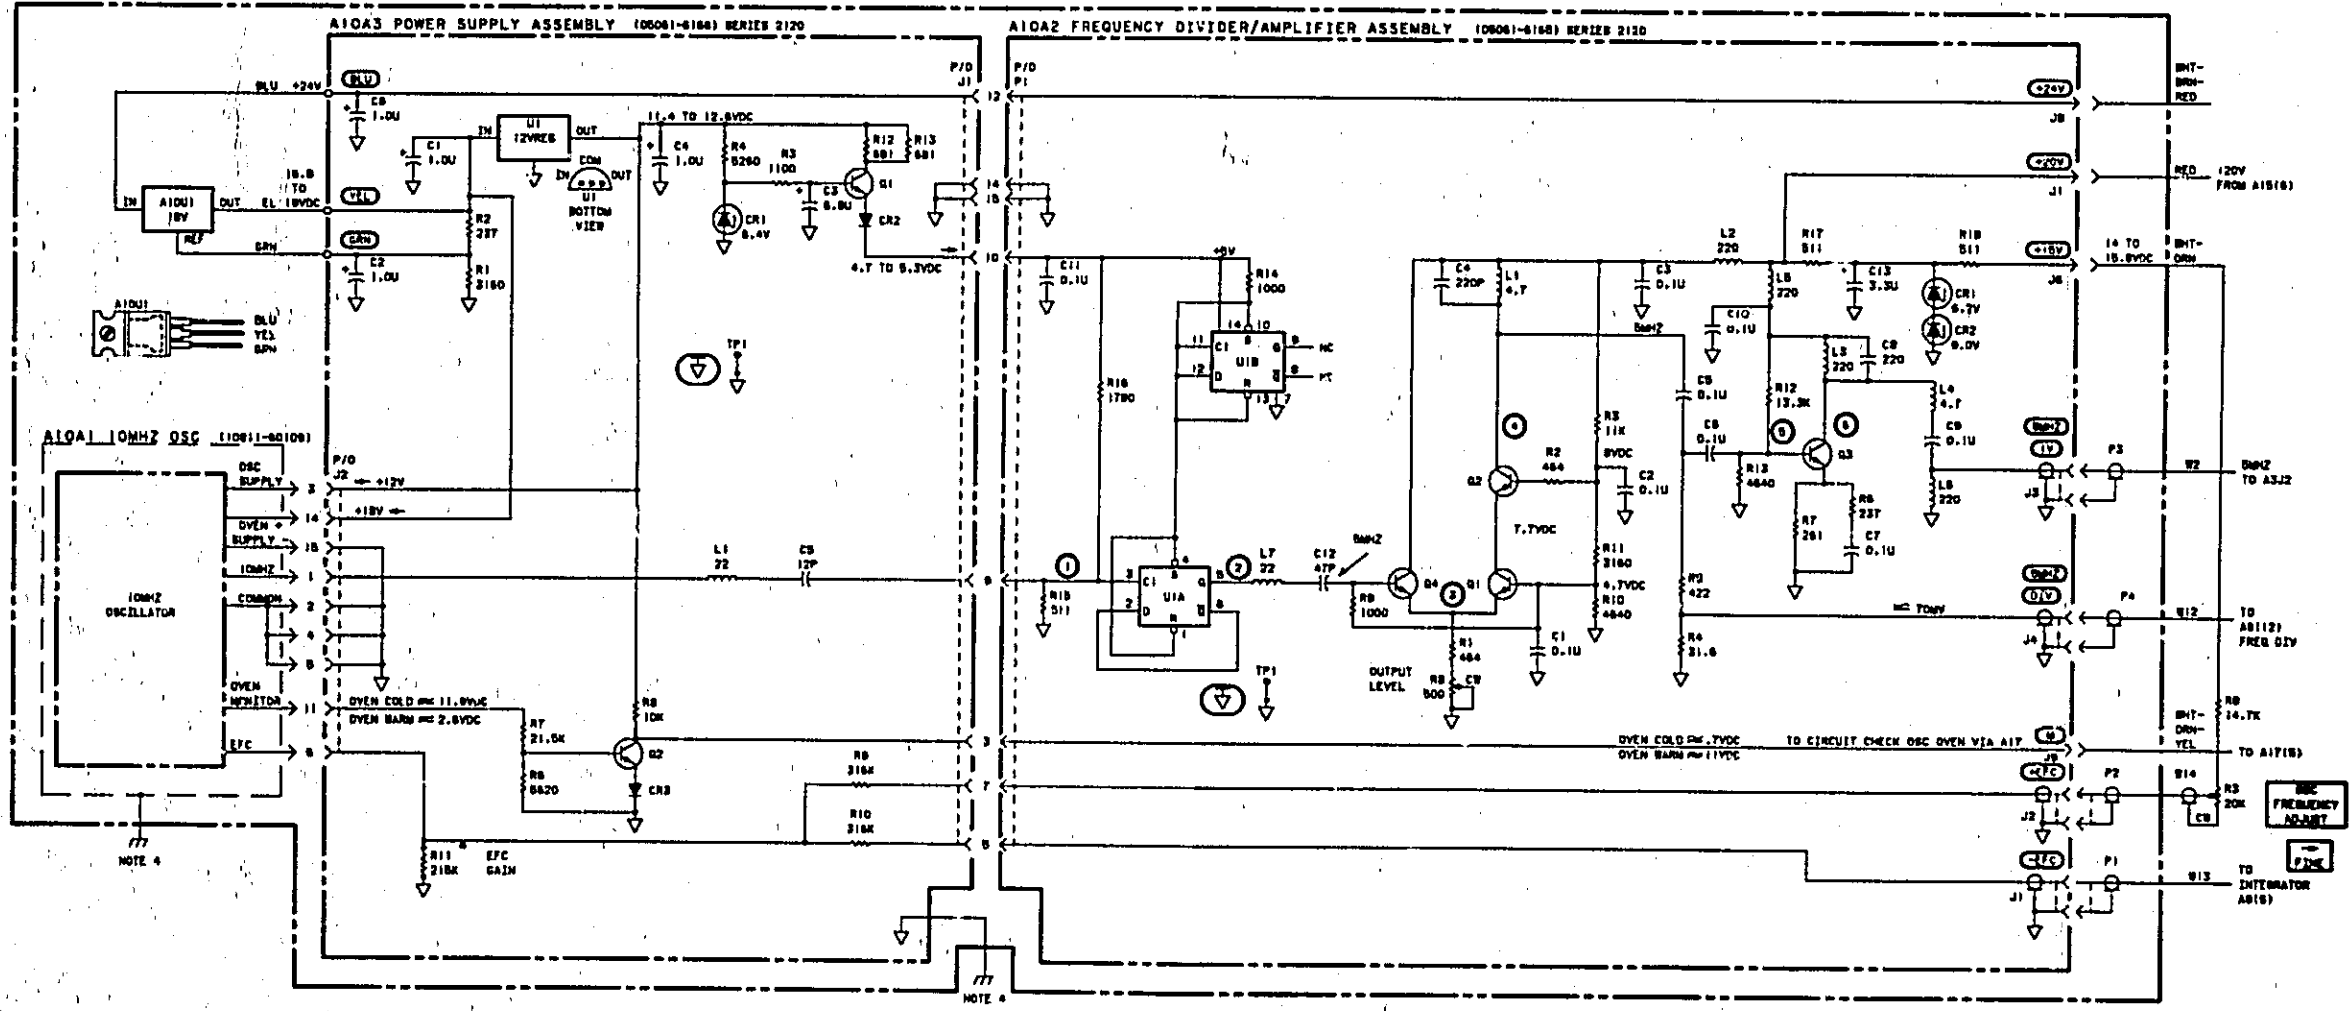A10 OSCILLATOR ASSEMBLY (05065-6094) SERIES 2120



- NOTES:
1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE APPROXIMATED. ADD ASSEMBLY NUMBER TO APPROXIMATION FOR COMPLETE DESCRIPTION.
  2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS; CAPACITANCE IN FARADS; INDUCTANCE IN MICRORHEIMS.
  3. \* INDICATES FACTORY SELECTED VALUE.
  4. CHASSIS CONNECTIONS MADE BY A10 MOUNTING SCREWS.
  5. ALL VOLTAGES AND WAVEFORMS TAKEN WITH 20VDC INPUT TO "20V" TERMINAL (J1) AND OUTPUT LEVEL SET TO 1.1V RMS INTO 50 OHMS AT "50MHZ IV" TERMINAL (J8).

REFERENCE DESIGNATIONS

NO. PREFIX	A10A1	A10A2	A10A3
		C1-18	C1-6
		CR1,2	CR1-3
		J1-8	J1,2
		L1-7	L1
		Q1-6	Q1,2
		R1-18	R1-4, 6-15
		TP1	TP1
		U1	U1

NOT ASSIGNED: A10A3M

TABLE OF ACTIVE ELEMENTS

CIRCUIT NO.	1HP AND 50V PART NO.
A10A1	1002-0000 (100177)
A10A2CR1	1002-0000 (10023)
A10A2CR2	1002-0707 (10030)
A10A2R1-04	1004-0216 (100304)
A10A2U1	1002-0077 (1007104)
A10A3R1	1002-0004
A10A3CR2, CR3	1002-0000
A10A3R1	1004-0216 (1004204)
A10A3R2	1004-0216 (100304)

NOTE: ALL TRANSISTORS ARE 50V 50, 100M

Figure 8-20  
A10 Oscillator Assembly  
(05065-6094) SERIES 2120  
Page 8-53



MANUAL CHANGES MODEL 5065A (05065-9041)

SERIAL PREFIX OR  
SERIES NUMBER

CHANGES

Page 8-55, Figure 8-21. A11 RVFR Temperature Controller Assembly:

All Serials >Replace A11 component locator with new A11 component locator supplied in these manual changes.

Page 8-63, Figure 8-23. A14 Logic Assembly:

All Serials >Change the value of R12 (20K) to 1000 ohms.  
>Add R15 (20K) between circuit board common and junction of CR2 and R16.

Page 8-64, Circuit Diagrams, Theory, and Maintenance:

2144A Power Supply and Regulator Circuit A15 Theory:  
>Add the following to paragraph a:  
"Starting with the A15 (Part No. 05065-6100, SERIES 2144) the bridge rectifier diodes on A15 are replaced by chassis-mounted bridge rectifier CR4."

Page 8-65, Figure 8-24. A15 Power Supply and Regulator Assembly:

All Serials >Change part number of Q7 from 1853-0006 to 1853-0012.  
>Add reference designation (C12) to disc capacitor located directly below resistor R14, in A15 component locator.

2144A >Change A15 from 05065-6023 to 05065-6100, SERIES 2144.  
>Delete all connections to A15 terminals 12, 13, 14, and 15.  
>Delete C1 and diodes CR1-CR4 in component locator and schematic diagram.  
>Add a connection by a wht-brn-yel wire (CR4(+)) to the junction of C7 and L1 and mark the wire "+24V-32V FROM CR4".

MANUAL CHANGES MODEL 5065A (05065-9041)

SERIAL PREFIX OR  
SERIES NUMBER

CHANGES

Page 8-66. Circuit Diagrams, Theory, and Maintenance:

- All Serials      DIGITAL DIVIDER POWER SUPPLY A16 THEORY
- >Change first line to read, "The A16 module has two basic circuits".
  - >Delete paragraph "c".
  - >Change second sentence in first paragraph at top of column to: "In T2 output, CR10 provides isolation."
  - >Replace second paragraph in column two with the following:  
"The 1 PPS pulses from A5 Digital Divider output connector (J1) are input as MASTER 1 PPS pulses at terminal W on Clock Display Assembly A19."
  - >Delete third paragraph under "A16 MAINTENANCE".

Page 8-67, Figure 8-25. Figure 8-25. A16 Digital Divider Power Supply Assembly:

- All Serials      >Change reference designation of diode CR13 to CR12, located between R19 and R20 (upper left corner).
- >Change reference designation of diode directly to the left of R10 (top center) from R15 to CR10.
  - >Add resistor R15 between the two terminal posts just above R17.

Reference Designator Table

- >Change CR1-15 to CR1-12, 15.
- >Change Q1-12 to Q1-10.
- >Change R1-26 to R1-20.

2148A


- >Change A16, A16A1 SERIES to 2148.
- >Add to NOTES:
  4. Transistor 1854-0916 is a preferred part. A16 and A16A1 SERIES 2148, which use the 1854-0916 transistor for Q9, Q10, are directly interchangeable with prior series. These assemblies are used in Opt 001 and 003 only. Option series changes do not affect the serial prefix in this instrument.

Table of Active Components

- >Change Q9, Q10 to 1854-0916.

Page 8-71, Figure 8-26. A19 Clock Display Assembly:

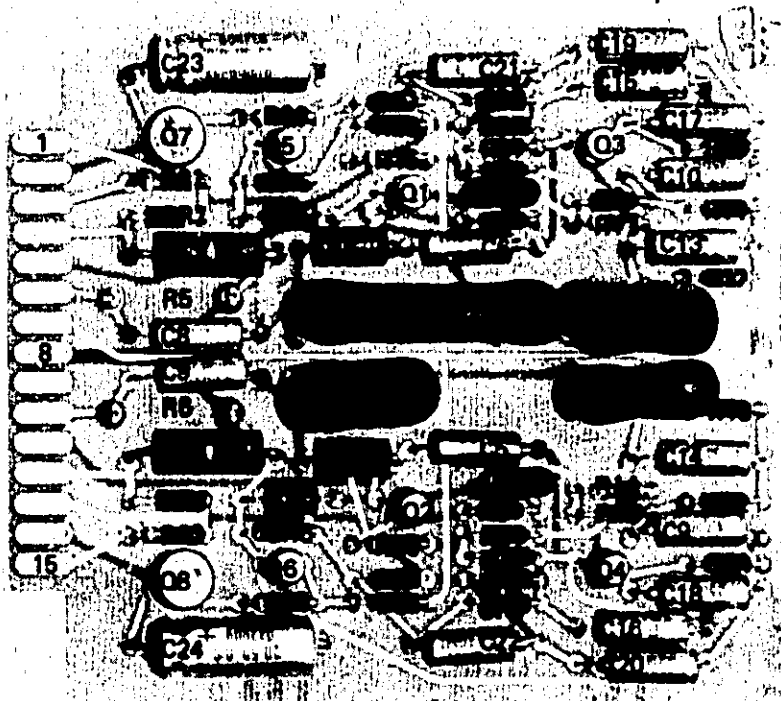- All Serials      >Change part numbers at top of A19A2 schematic to (05061-6125 for OPTION 001) and (05061-6136 for OPTION 003).
- >Delete connection between collector of A19A1Q3 and A19A1U2 pins 11 and 14.
  - >Connect A19A1U2 pins 11 and 14 to board common.



Part of Figure 8-21. A11 RVFR Temperature Controller Assembly  
(05065-6024, SERIES 1840)